


A B C D E F G

D TACT SWITCH P.C.B. (REPX0269B)

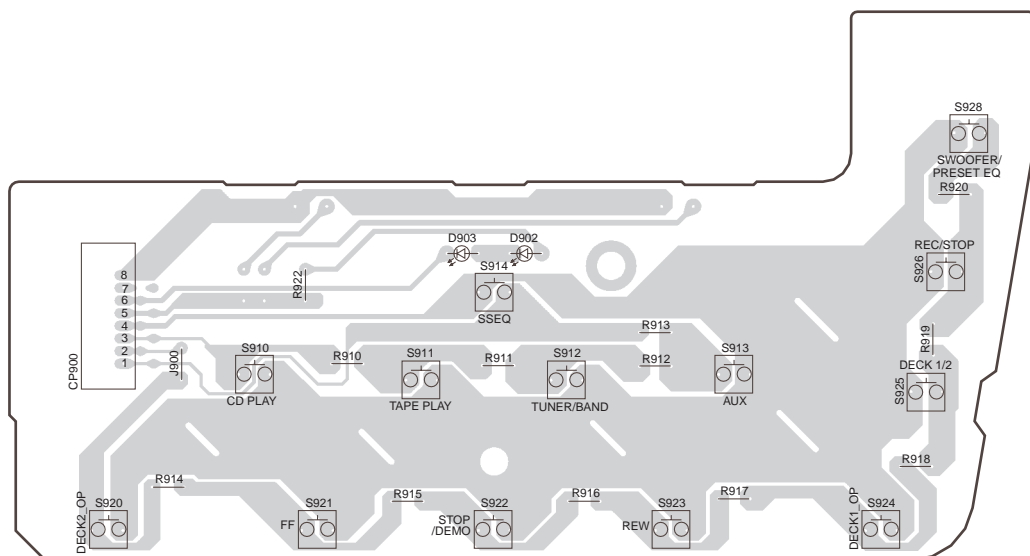

I SPEAKER TERMINAL P.C.B. (REPX0272B)

