


SCHEMATIC DIAGRAM - 17

— : +B SIGNAL LINE - - : -B SIGNAL LINE ≡ : MAIN SIGNAL LINE


F DVDREG CIRCUIT

TO B
DVD MODULE
(2)CIRCUIT
(FP4202) ON
SCHEMATIC
DIAGRAM-11

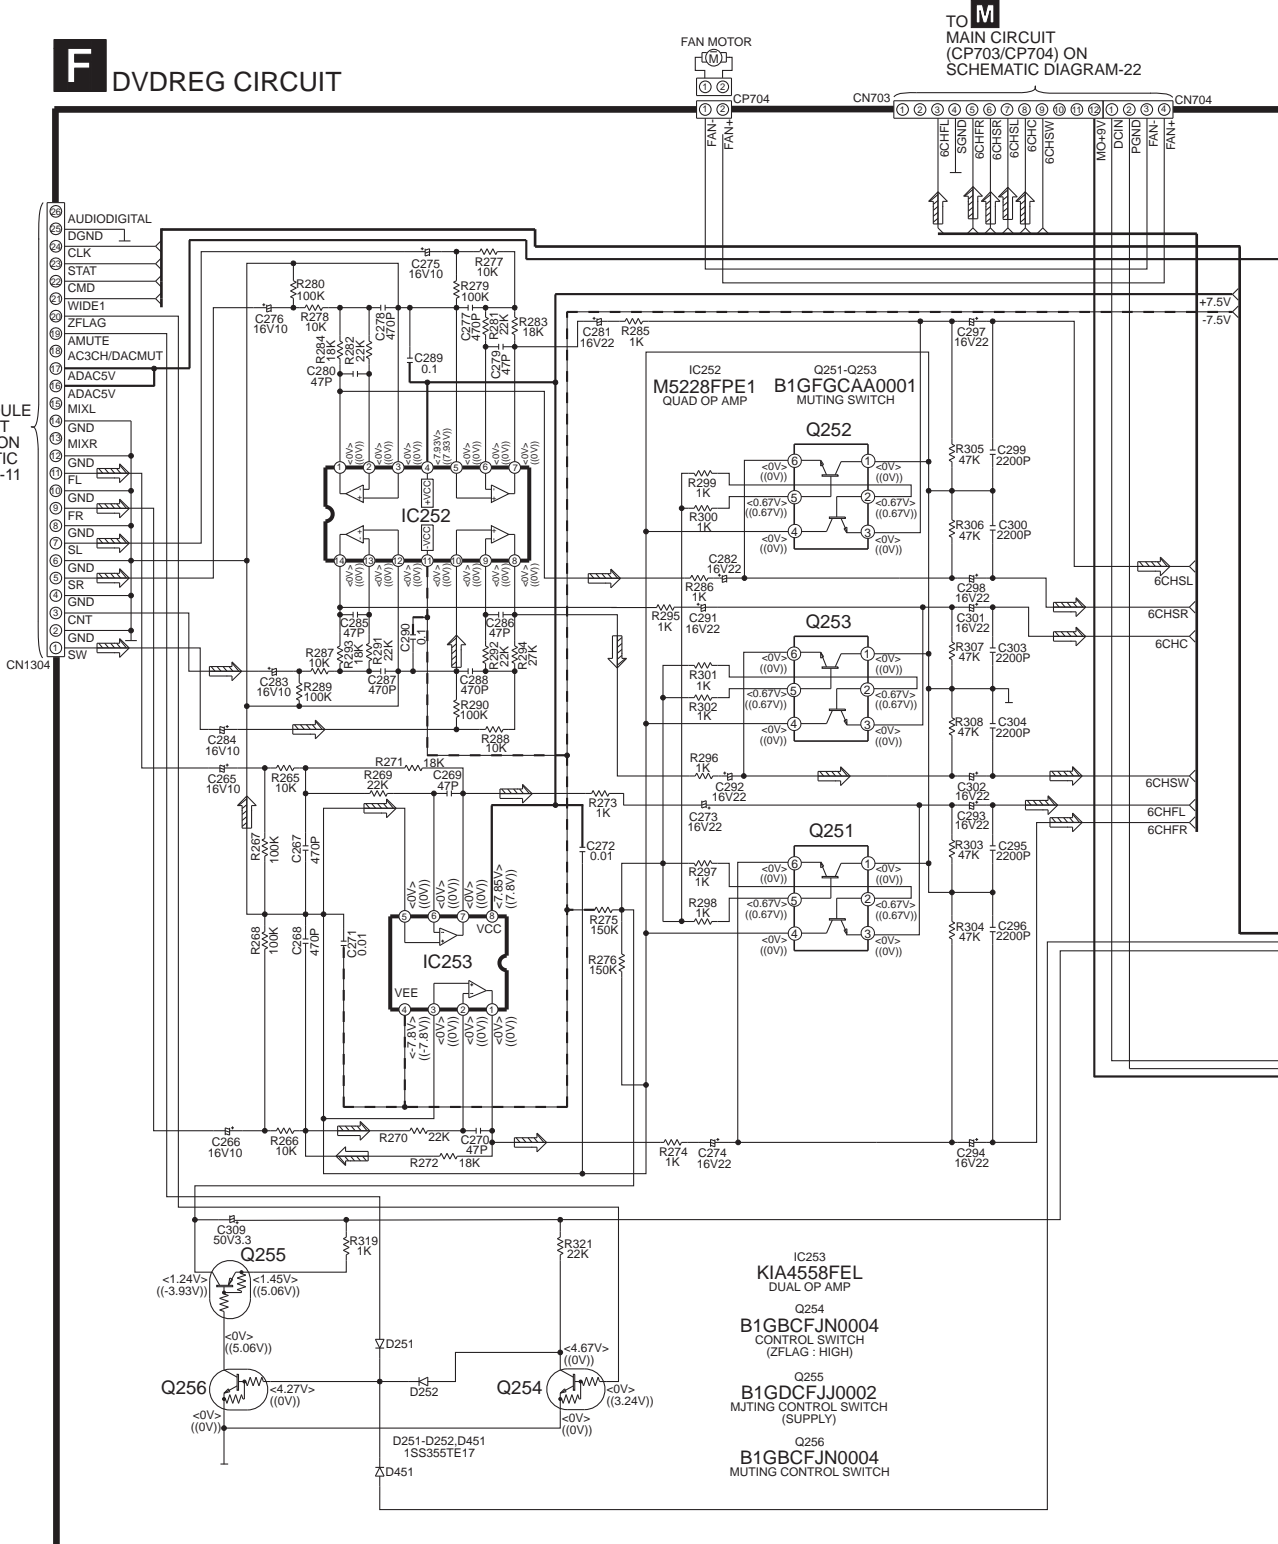

F DVDREG CIRCUIT

TO **B**
DVD MODULE(2) CIRCUIT (FP3202)
ON SCHEMATIC DIAGRAM-12

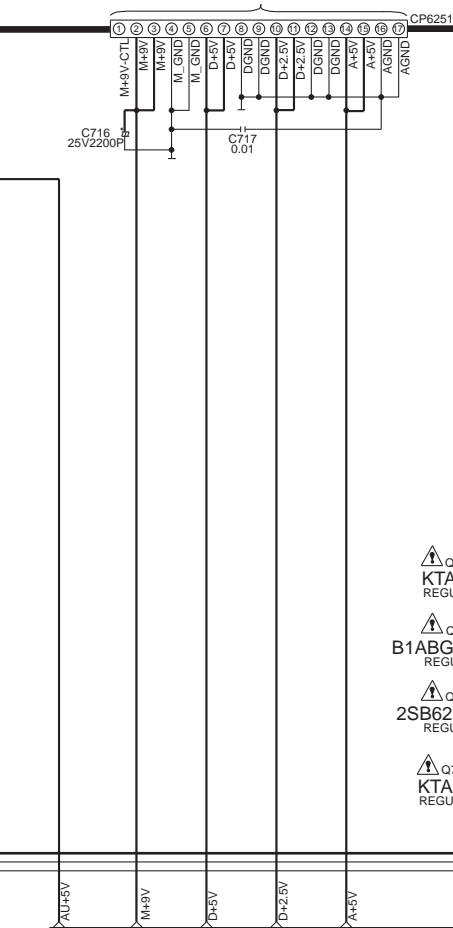

 Q708
KTA1046
REGULATOR

 Q709
B1ABGC000001
REGULATOR

 Q710
2SB621ARSTA
REGULATOR

 Q703
KTA1046
REGULATOR


Q711
B1ABCF000011
REGULATOR

 Q712
2SB621ARSTA
REGULATOR


 Q713
B1ABCF000011
REGULATOR

 Q704
B1ABCF000011
REGULATOR

GC CD LOADING CIRCUIT

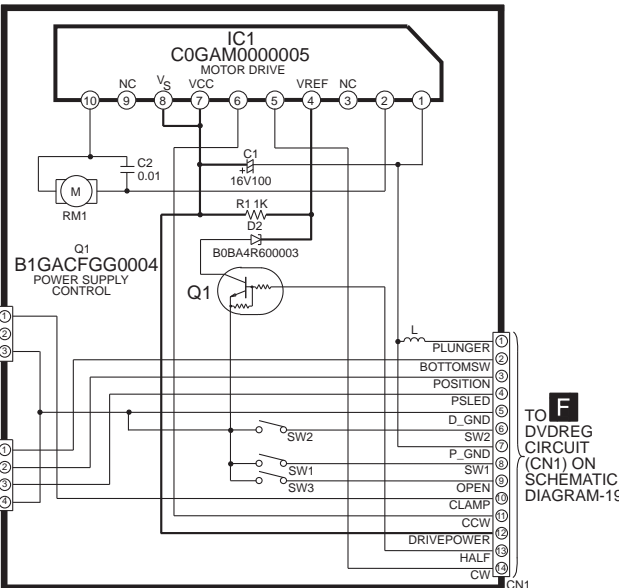

TO **F**
DVDREG
CIRCUIT
(CN1) ON
SCHEMATIC
DIAGRAM-19

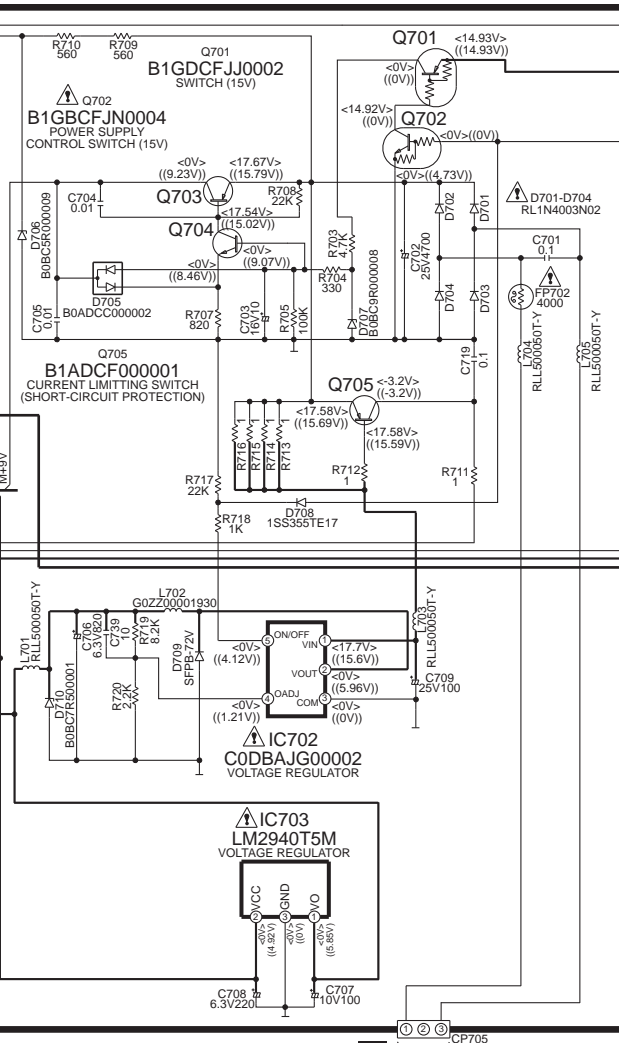

TO **N** CP705
SUB-TRANSFORMER
CIRCUIT (W705) ON
SCHEMATIC DIAGRAM-24

— : +B SIGNAL LINE - - : -B SIGNAL LINE

