

## 2FX TEST POINT LIST

TEST POINT # 1 INPUT SIGNAL  
2 ECHO ENCODE SIGNAL  
3 ECHO ENCODE OFFSET  
4 NOT USED  
5 ECHO CLOCK  
6 FLANGE/CHORUS DECODE SIGNAL  
7 ECHO DECODE SIGNAL  
8 NOT USED  
9 ECHO DECODE OFFSET  
10 FLANGE/CHORUS ENCODE SIGNAL  
11 FLANGE/CHORUS CLOCK  
12 FLANGE/CHORUS ENCODE OFFSET  
13 FLANGE/CHORUS DECODE OFFSET  
14 OUTPUT SIGNAL  
15 FLANGE/CHORUS LFO  
16 FRONT PANEL SWITCHING THRESHOLDS  
17 -15V SUPPLY  
18 +15V SUPPLY  
19 +5V SUPPLY  
20 GROUND  
\*U37-1 -7.5V SUPPLY  
\*U37-7 -7.5V SUPPLY

