

1.7 EMERGENCY DISPLAY FUNCTION

This product has the function to store the last two previous emergency faults which can be displayed in the FDP (HR-J642U/VP644U/VP646U) or LED (HR-VP648U) when servicing.

1.7.1 How to display record of an emergency faults

- (1) Press "N" button of the presetting unit More than 2 seconds and the two previous emergency faults are shown in the LED or FDP.
- (2) Press "N" button of the presetting unit again to return to the normal mode.

1.7.4 Detail of emergency faults

EMG DATA	Symptom	Detect mode	Resulting mode
E 00	No EMERGENCY		
E 01	Loading motor rotates for more than 8 Sec without shift to next mode.	Loading	POWER OFF
E 02	Loading motor rotates for more than 8 Sec without shift to next mode.	Unloading	POWER OFF
E 03	TU or SUP REEL FG input is absent. (for more than 4 Sec)	REC/PLAY/FF/REW SEARCH FF/SEARCH REW	STOP → POWER OFF
E 04	DRUM FF input is absent. (for more than 3 Sec)	REC/PLAY/FF/REW SEARCH FF/SEARCH REW	STOP
E 06	CAPSTAN FG input is absent. (for more than 1 Sec)	REC/PLAY/FF/REW SEARCH FF/SEARCH REW	STOP → POWER OFF
E 07	No SWD5V/12V	POWER ON	POWER OFF

Table 1-7-1 EMERGENCY FAULTS-1

(HR-VP648U only)

EMG DATA	STAND BY LED (RED)	OPERATE LED (GREEN)	REC LED (RED)		PLAY LED (GREEN)
E 00	L	Blink	H	L	Blink
E 01	L	L	H	L	L
E 02	L	L	H	L	H
E 03	H	L	H	L	L
E 04	H	L	H	L	H
E 06	L	H	H	L	L
E 07	L	H	H	L	H

Emergency fault of the last time. →

← Emergency fault before last.

H : Light on L : Light off

1.7.2 How to change the emergency record (HR-VP648U only)

Press the PAUSE button on the remote controller in the emergency record display mode, the emergency record indication is changed from the last time to before last alternately.

1.7.3 How to clear emergency record

Press the COUNTER RESET (HR-J642U/VP644U/VP646U) or TV/VTR (HR-VP648U) button on the remote controller in the emergency record display mode, and the record of the emergency fault(s) is cleared.