


B DVD MODULE(2) CIRCUIT

 : CD/DVD (AUDIO) SIGNAL LINE

⬢⬢⬢⬢ : DVD (VIDEO) SIGNAL LINE

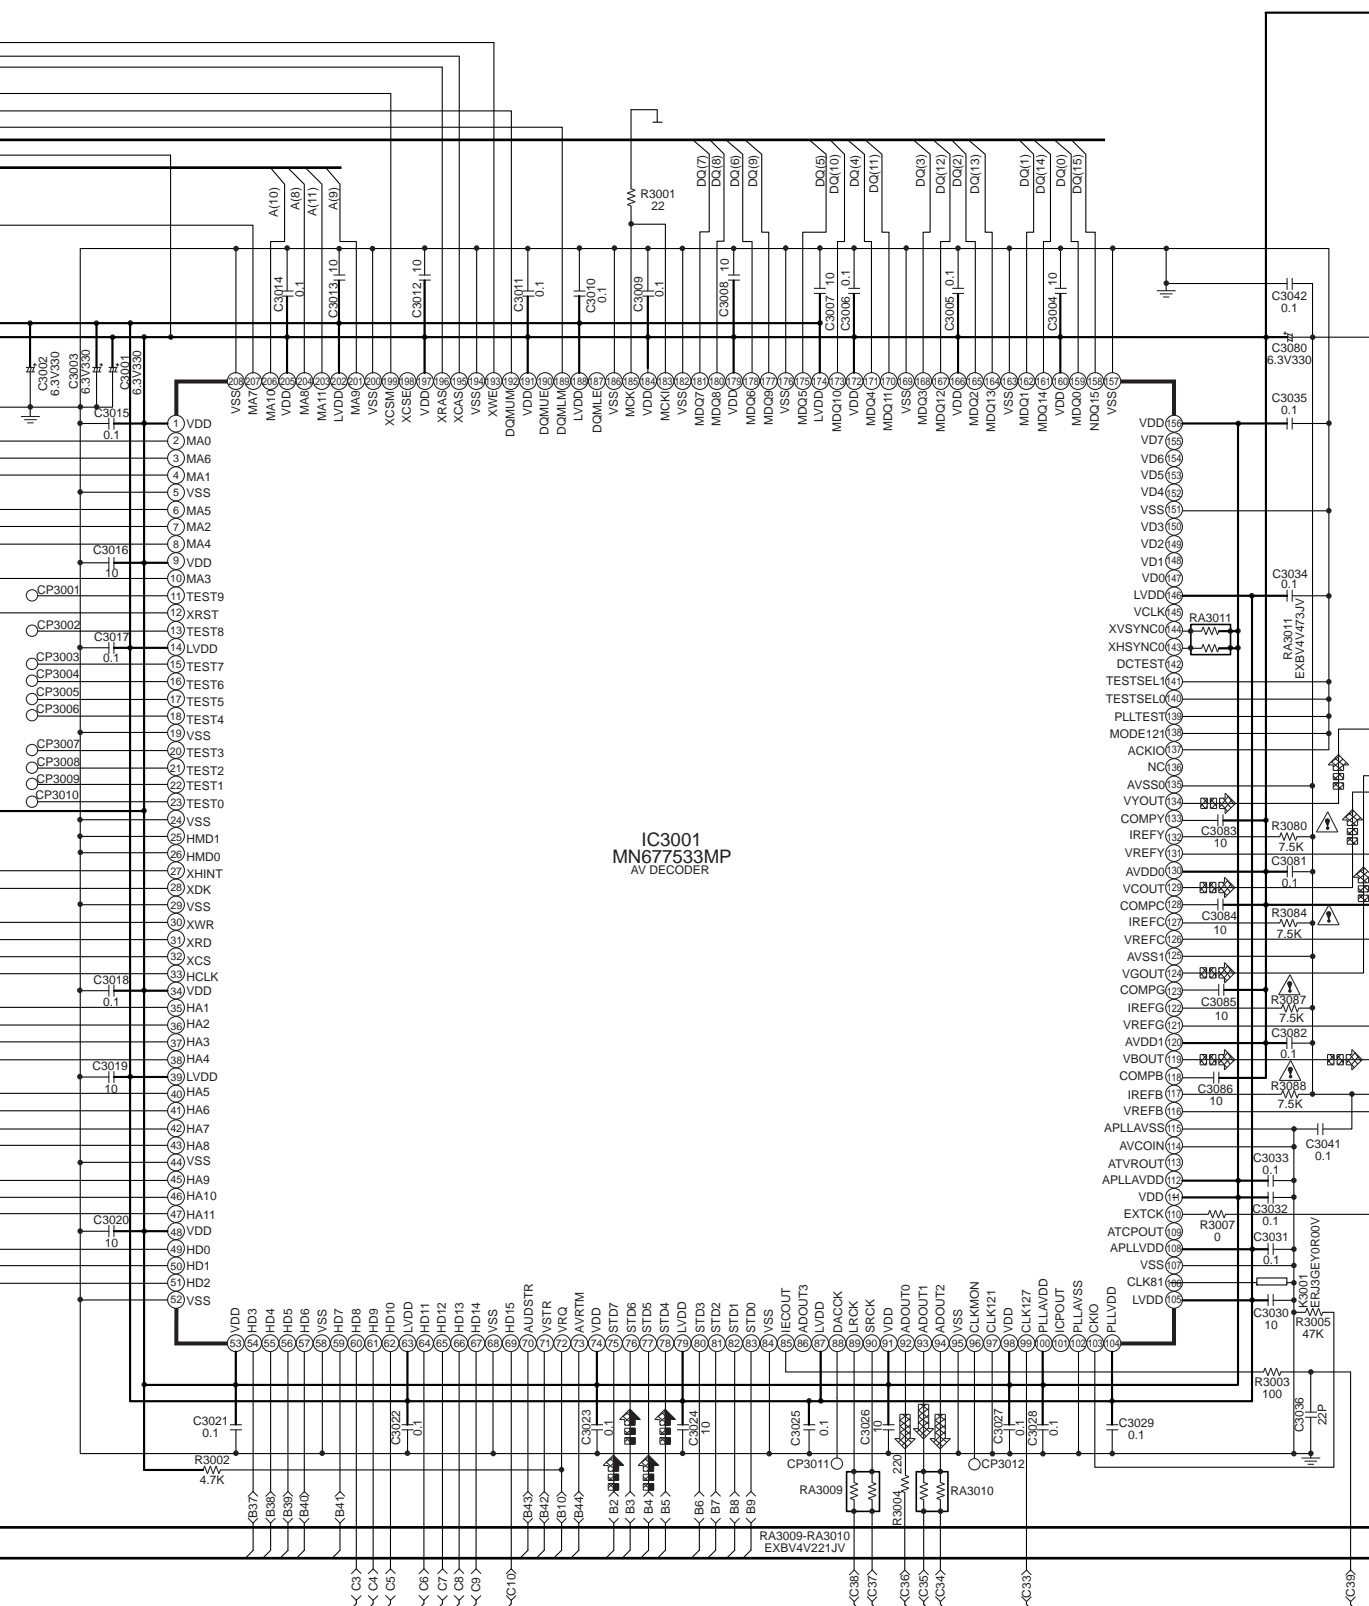


 
SCHEMATIC DIAGRAM - 11

B DVD MODULE(2) CIRCUIT

— : +B SIGNAL LINE

⬢⬢⬢ : DVD (VIDEO) SIGNAL LINE

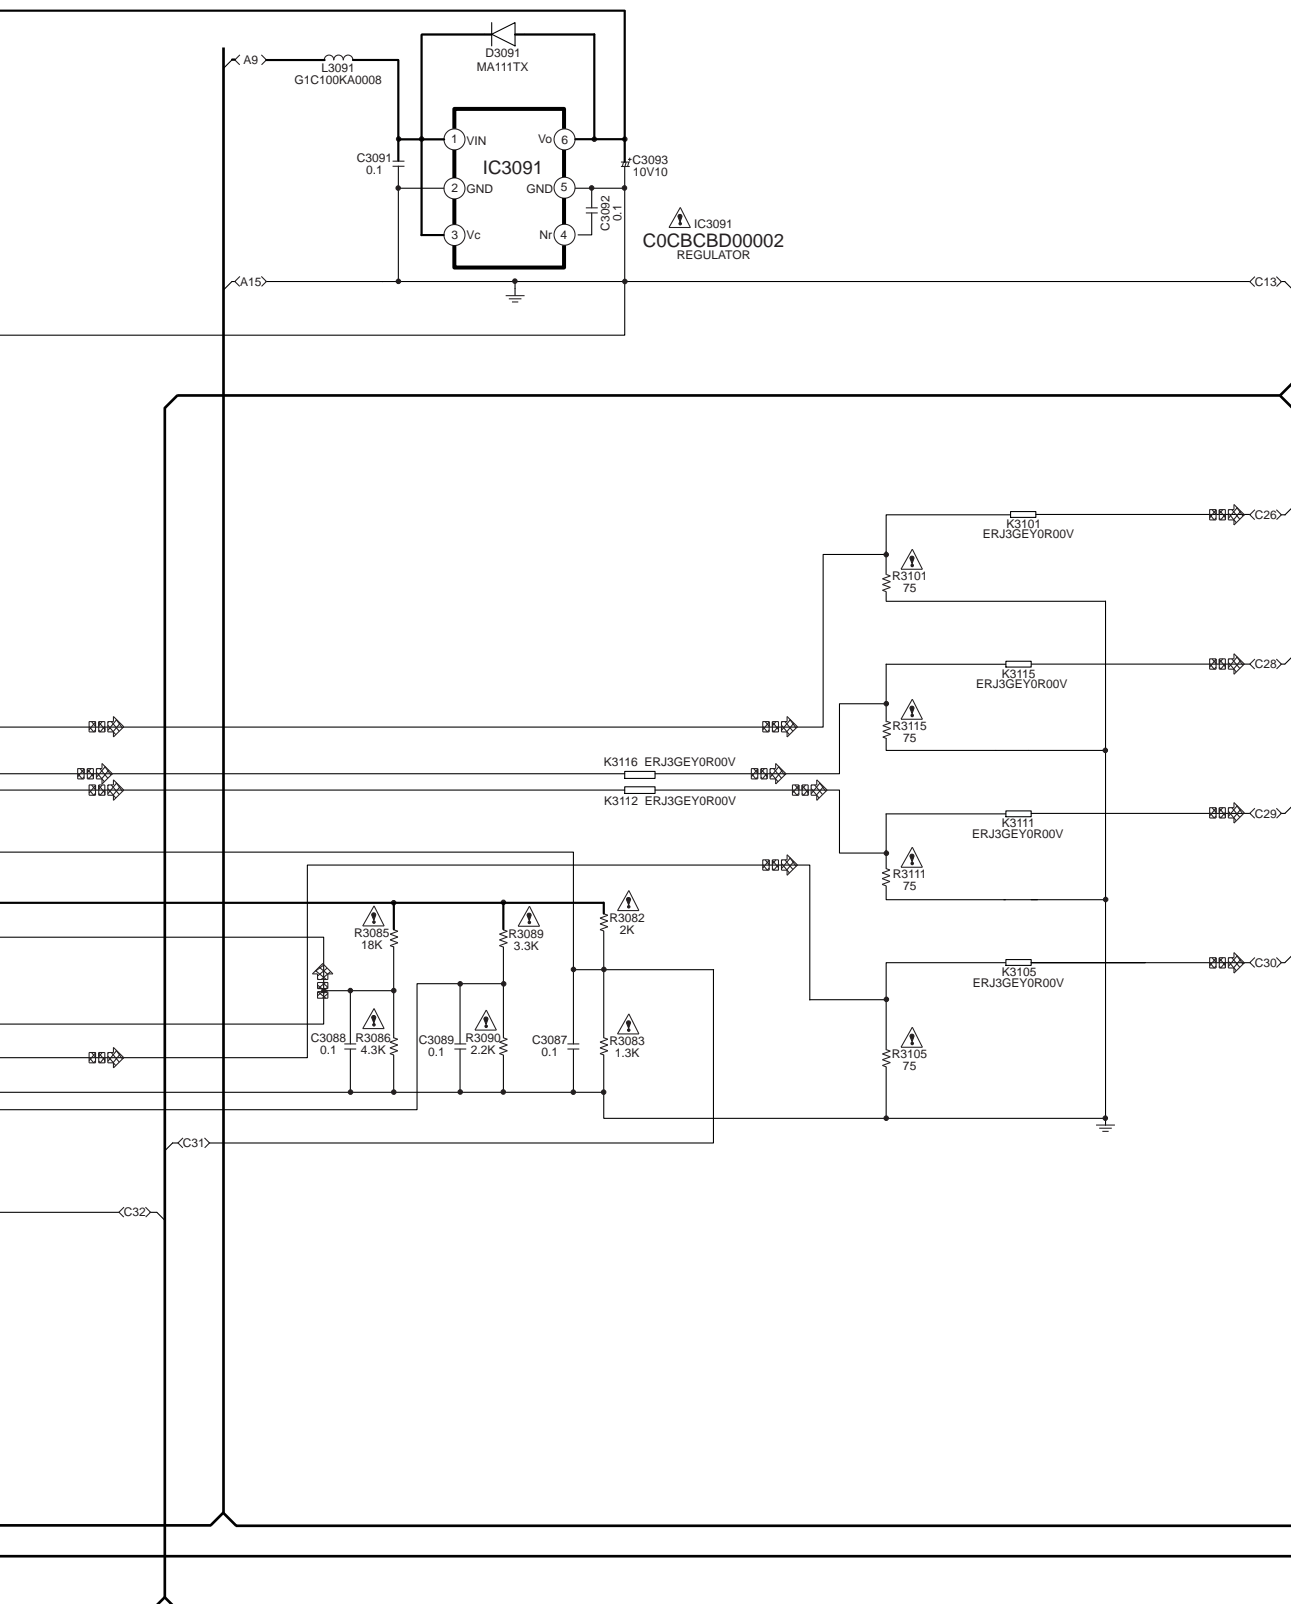



B DVD MODULE(2) CIRCUIT

 : DVD (VIDEO) SIGNAL LINE



TO **F**
DVDREG CIRCUIT (CP6251) ON
SCHEMATIC DIAGRAM-21


SCHEMATIC DIAGRAM - 14

B DVD MODULE(2) CIRCUIT

— : +B SIGNAL LINE

⊞ : CD/DVD (AUDIO) SIGNAL LINE


⇒ : MAIN SIGNAL LINE

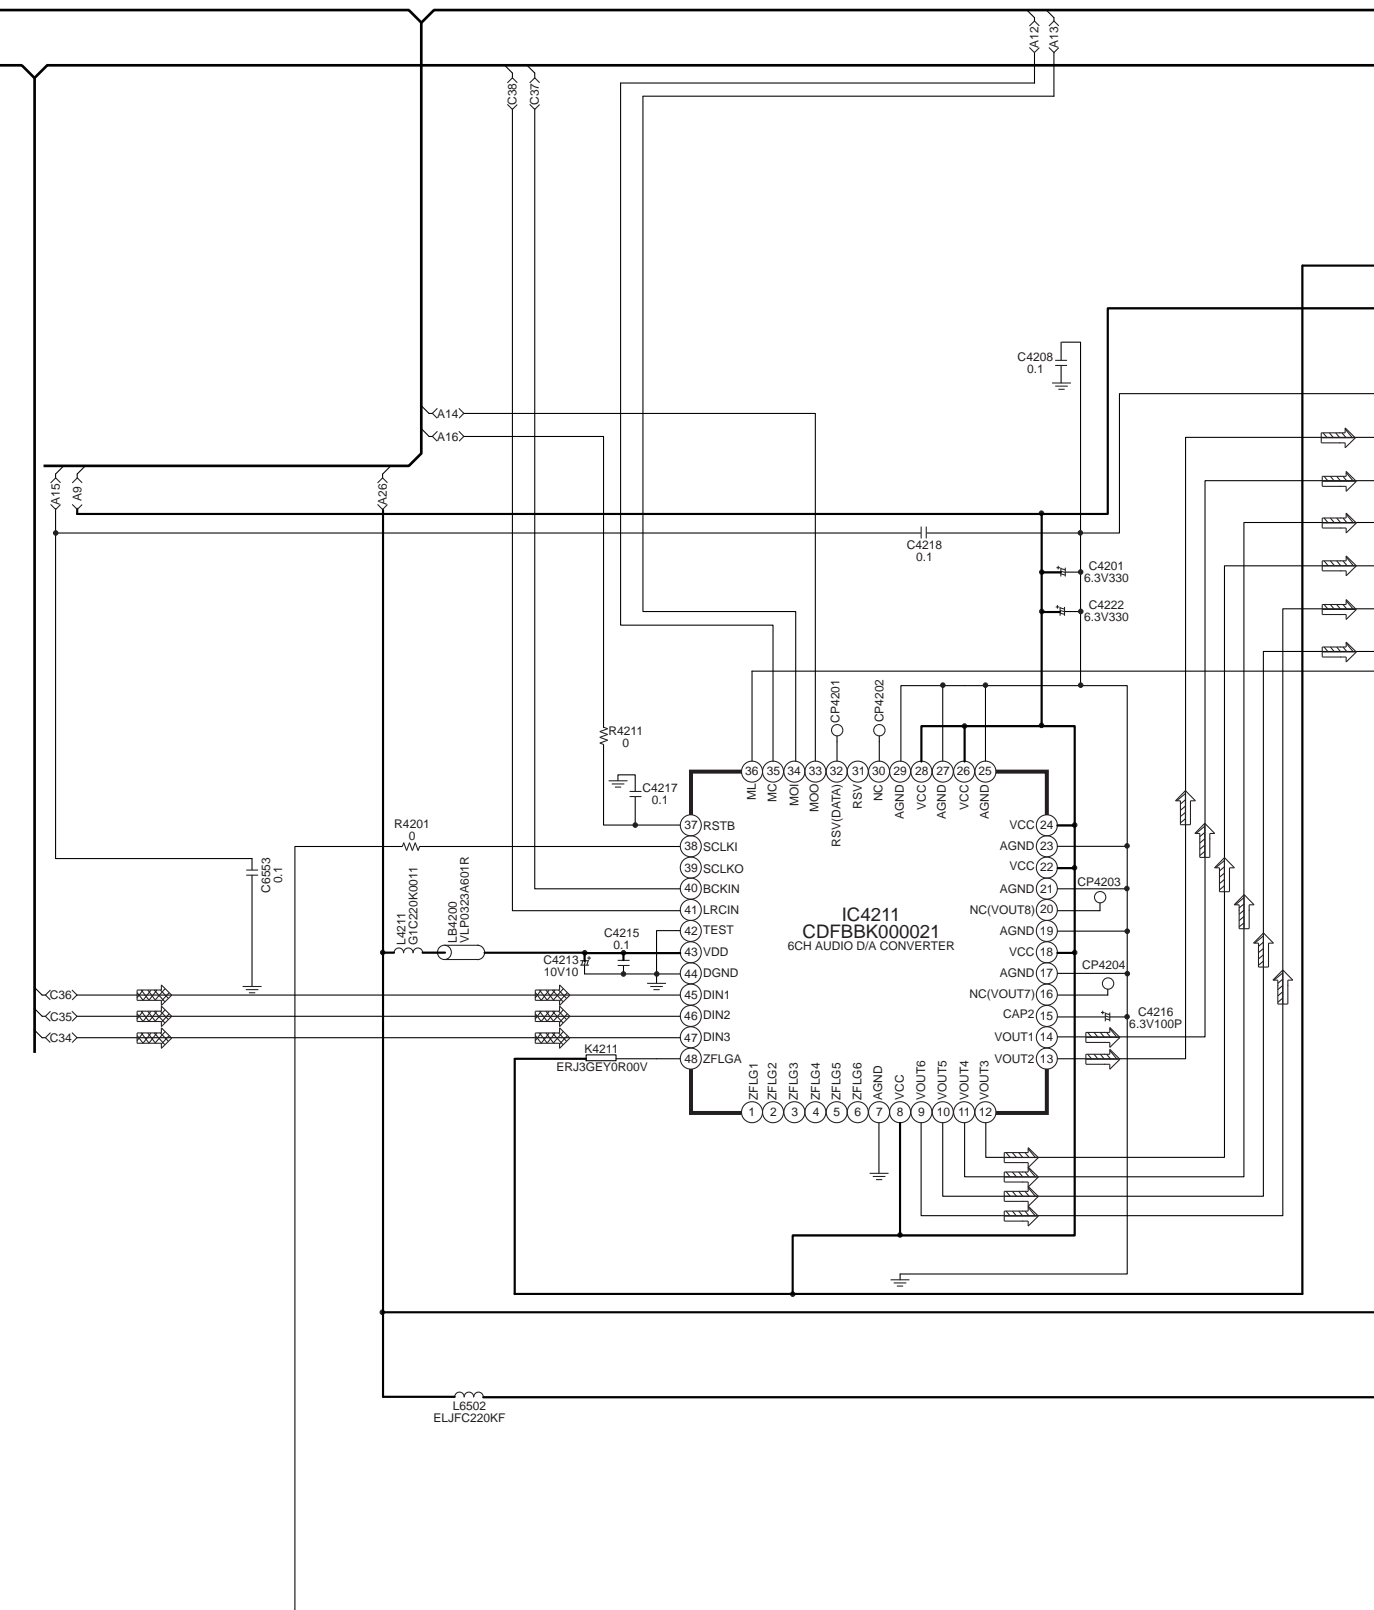

SCHEMATIC DIAGRAM - 15

B DVD MODULE(2) CIRCUIT

— : +B SIGNAL LINE ⇨ : MAIN SIGNAL LINE

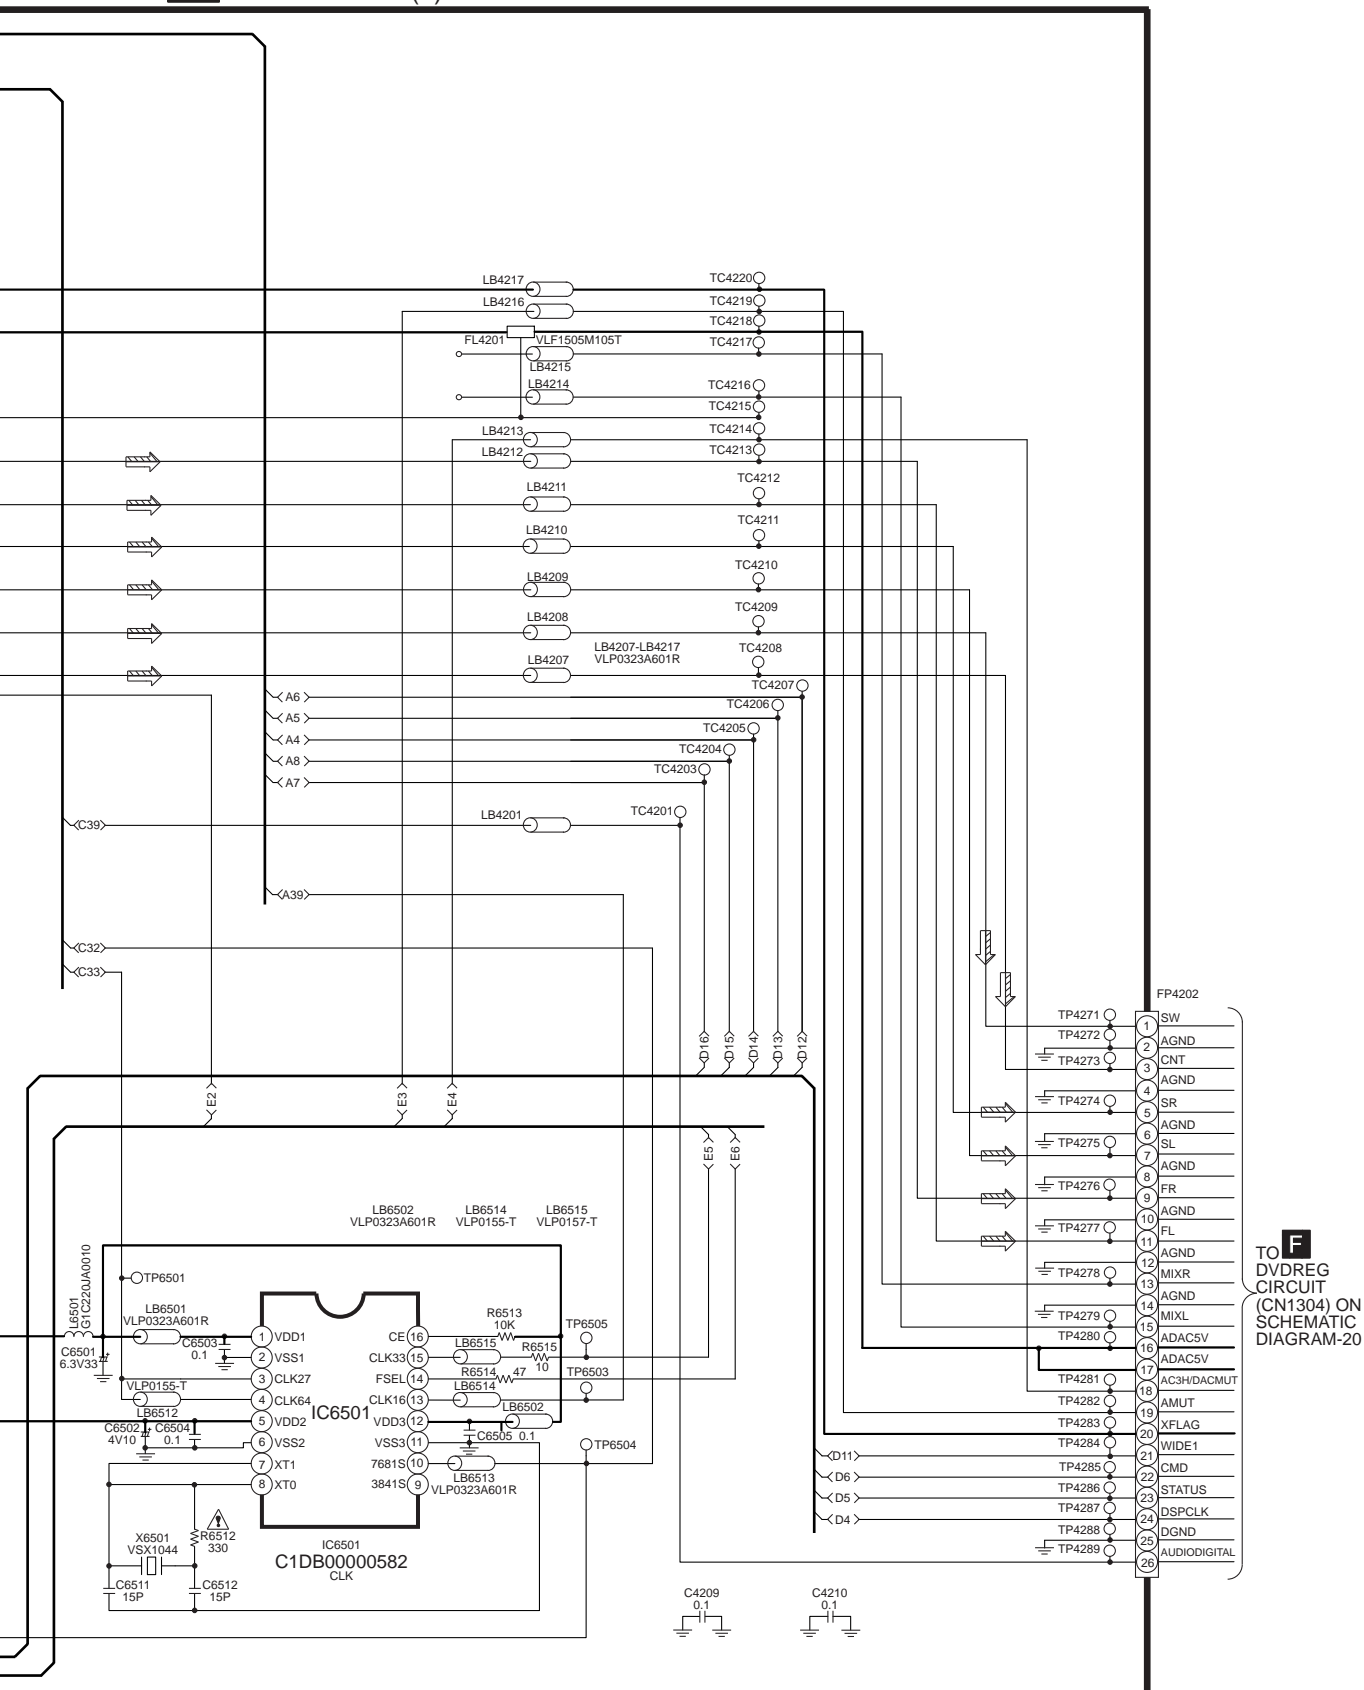

F TO DVD REG CIRCUIT (CN1304) ON SCHEMATIC DIAGRAM-20