

SCHEMATIC DIAGRAM - 4

— : +B SIGNAL LINE

➡ : FM/AM SIGNAL LINE

⏏ : AUX SIGNAL LINE

⏏ : CD SIGNAL LINE

➡ : MAIN SIGNAL LINE

⏏ : PLAYBACK SIGNAL LINE

⏏ : RECORD SIGNAL LINE

TO **C**
PANEL CIRCUIT
(CP601) ON
SCHEMATIC DIAGRAM-9


B MAIN CIRCUIT

TO **B**
TUNER CIRCUIT
(1B) ON
SCHEMATIC
DIAGRAM-3

TO **B**
TUNER CIRCUIT
(1A) ON
SCHEMATIC
DIAGRAM-3

TO **E**
DECK CIRCUIT
(H1001/
W1001) ON
SCHEMATIC
DIAGRAM-11


TO **K**
CD LOADING
CIRCUIT
(CN1) ON
SCHEMATIC
DIAGRAM-13

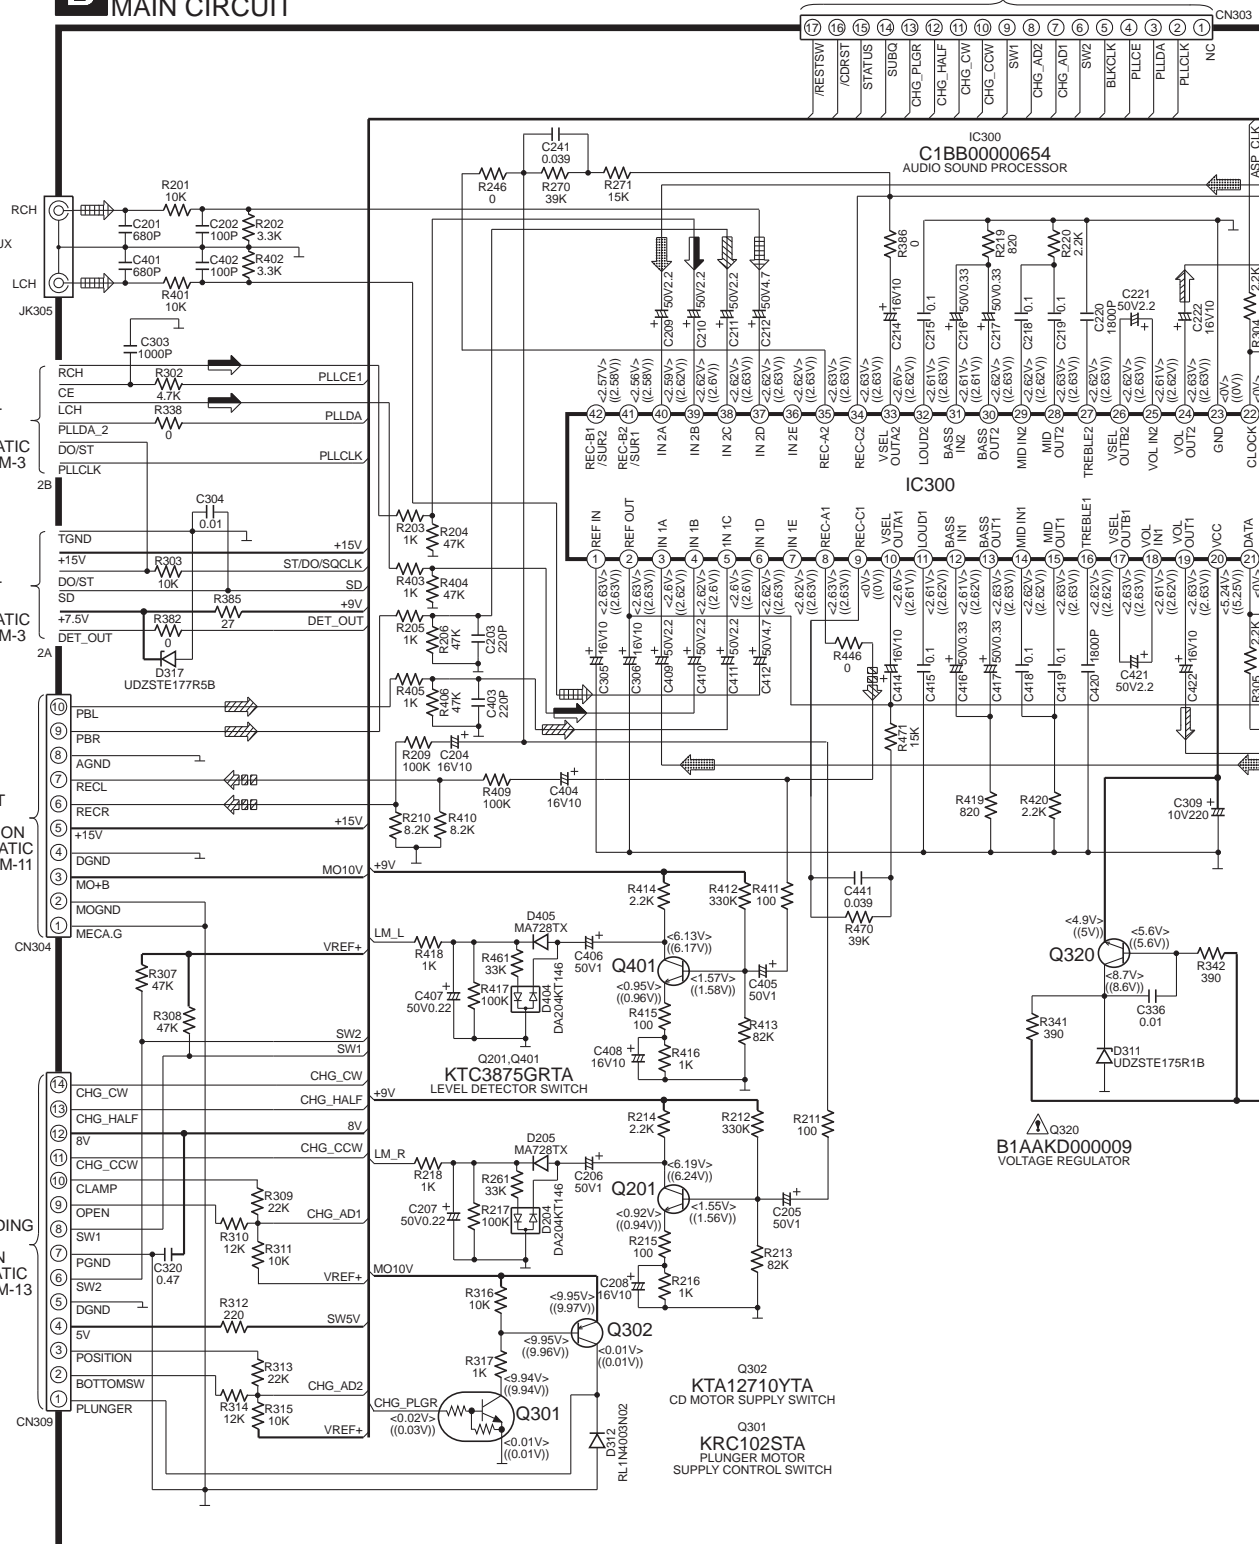

B MAIN CIRCUIT

 : MAIN SIGNAL LINE

TO **C**
PANEL CIRCUIT
(CP600) ON
SCHEMATIC DIAGRAM-9

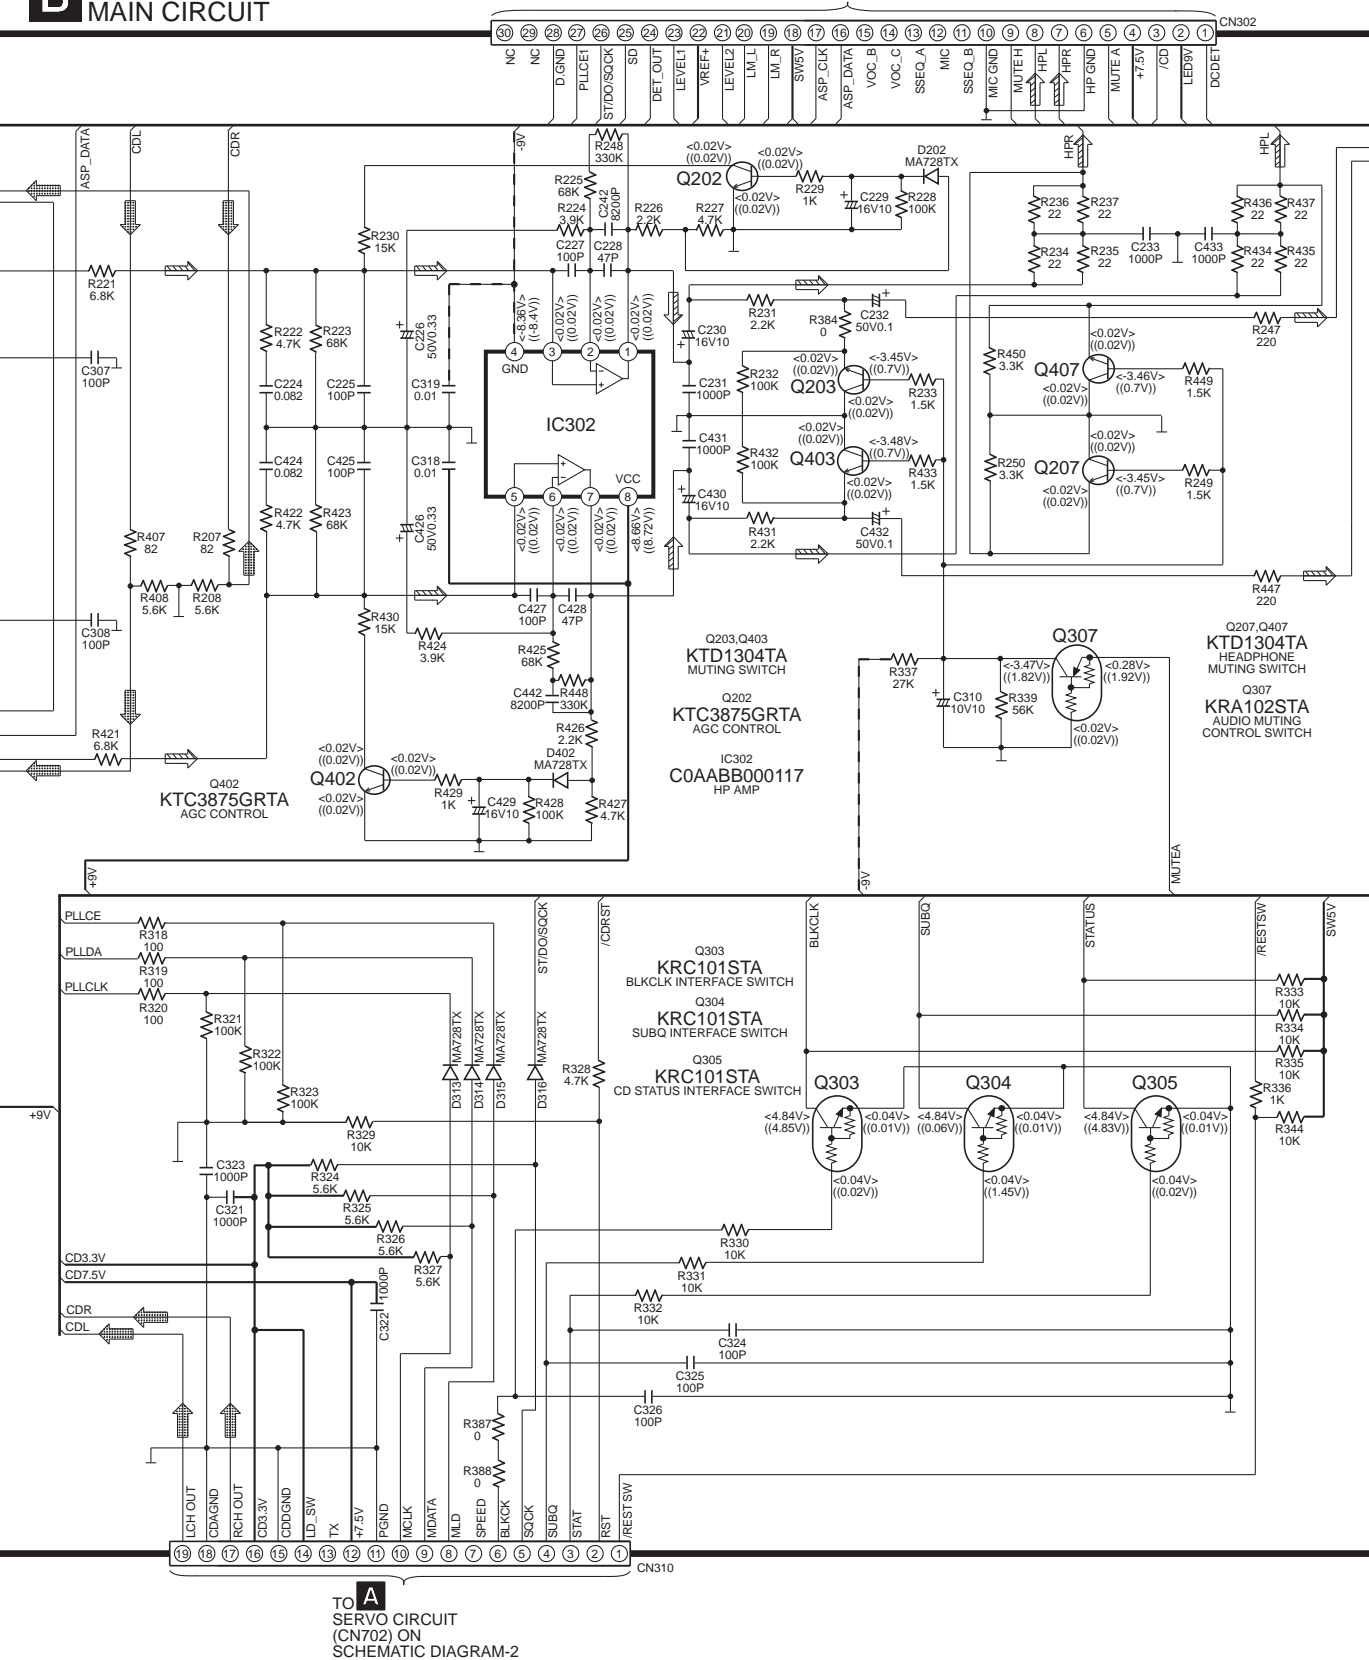

B MAIN CIRCUIT

B MAIN CIRCUIT

