


TROUBLE SHOOTING GUIDE

TROUBLE SHOOTING GUIDE SUBINDEX

	Page Number
1. NO POWER	4-2
2. NO PICTURE	4-3
3. NO SOUND	4-4/4-5
4. CH DONT STOP	4-6
5. NO COLOR.....	4-7
6. NO VERTICAL DEFLECTION	4-7
7. NO ON-SCREEN DISPLY	4-8
8. REMOTE CONTROL DOES NOT OPERATE	4-8

TROUBLESHOOTING GUIDE



1. NO POWER

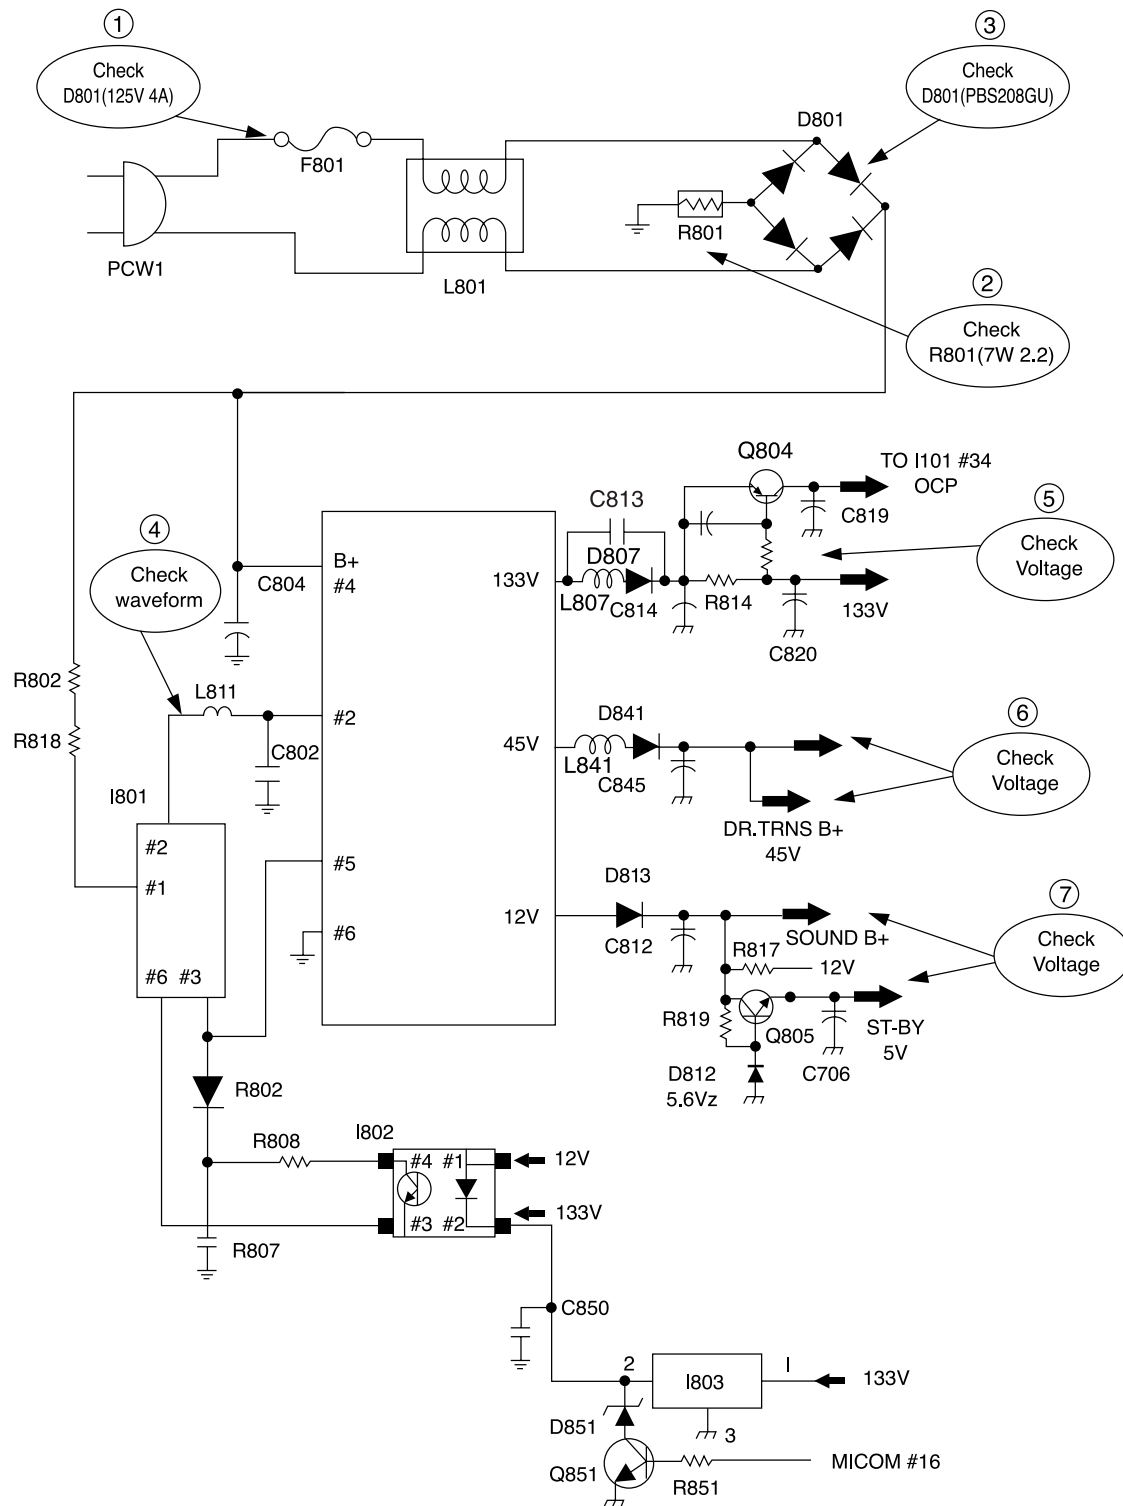

TROUBLESHOOTING GUIDE (Continued)

2. NO PICTURE

Check the waveform of I101 #46	NG: GO to the figure ㉓
	OK: Go the figure ㉔

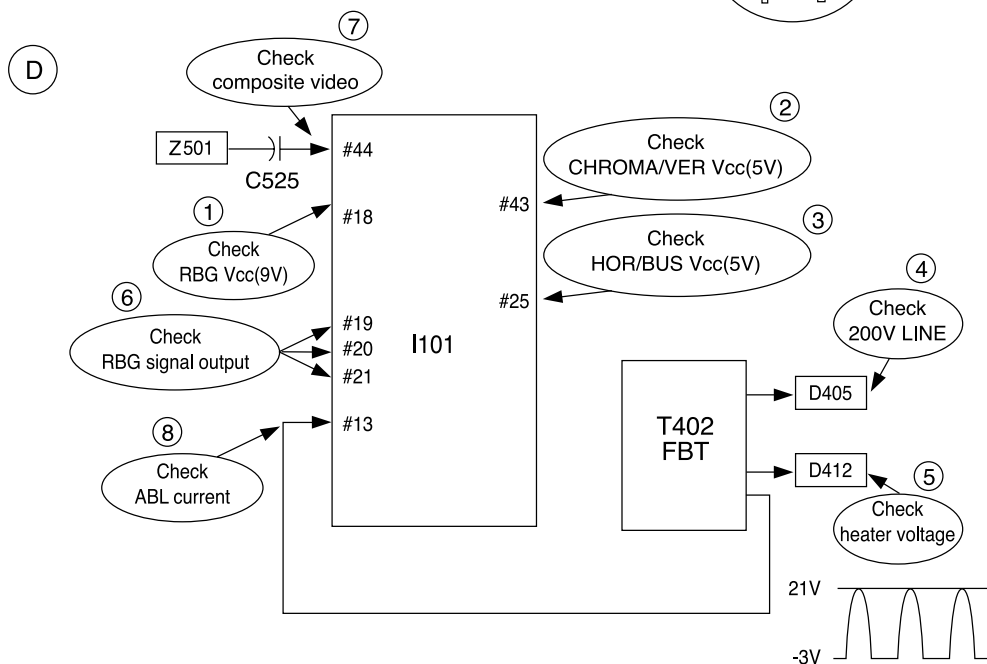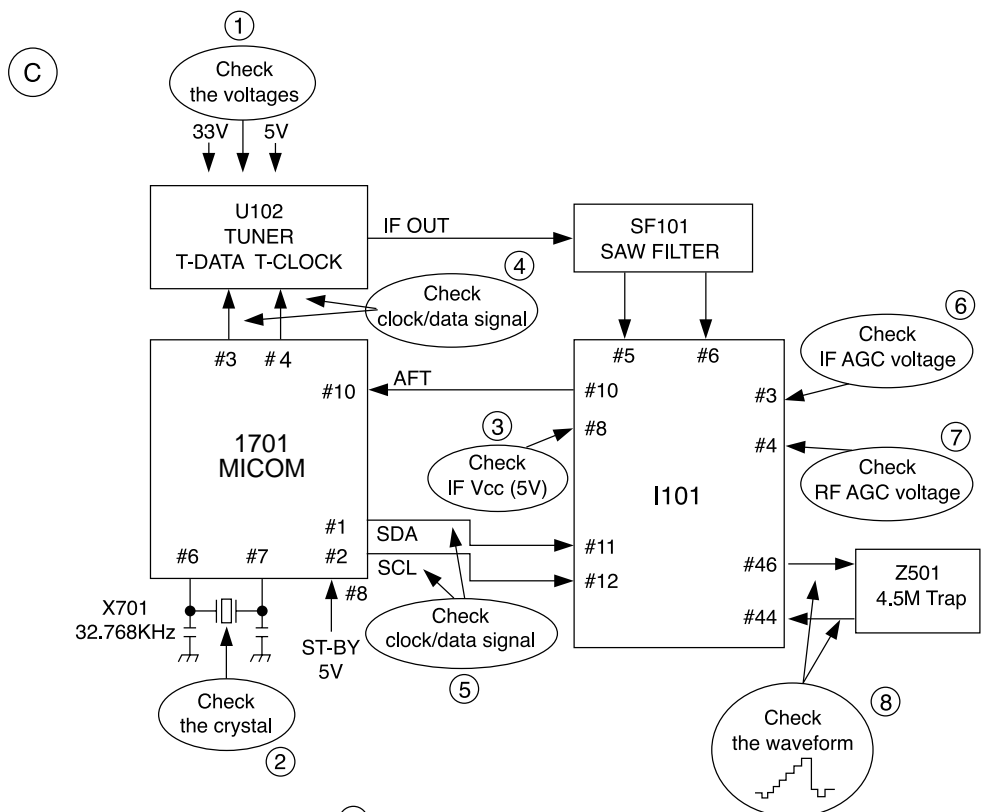


TROUBLESHOOTING GUIDE (Continued)

2. NO SOUND


Check audio output signal of I101 #1	NG: Go to the figure ⑤
	OK: go to the figure ⑥/⑦

⑤

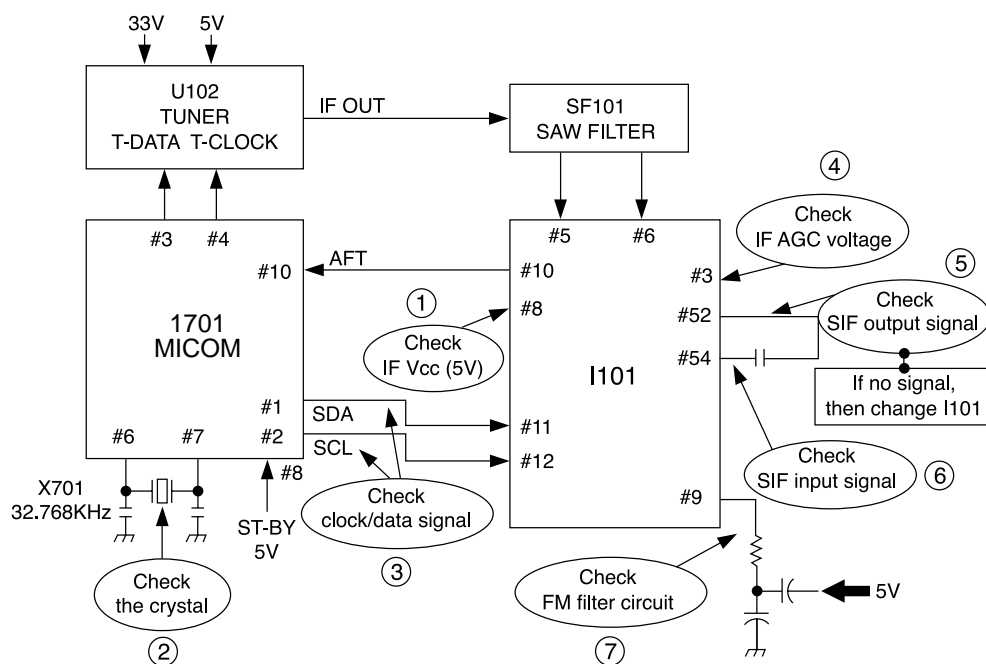


⑥

(MONO ONLY)

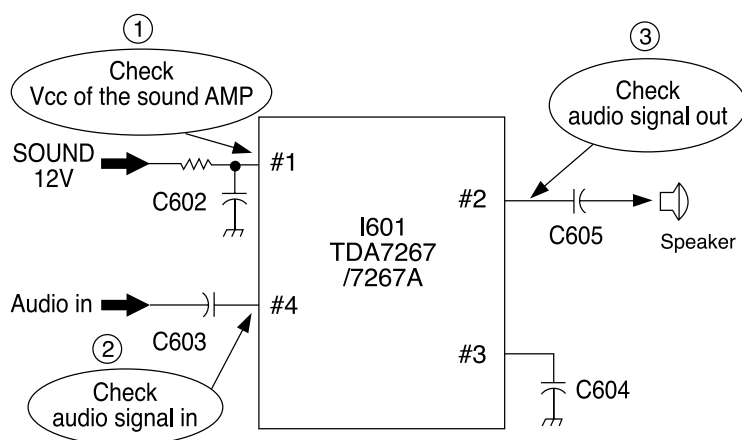

G

(STEREO ONLY)

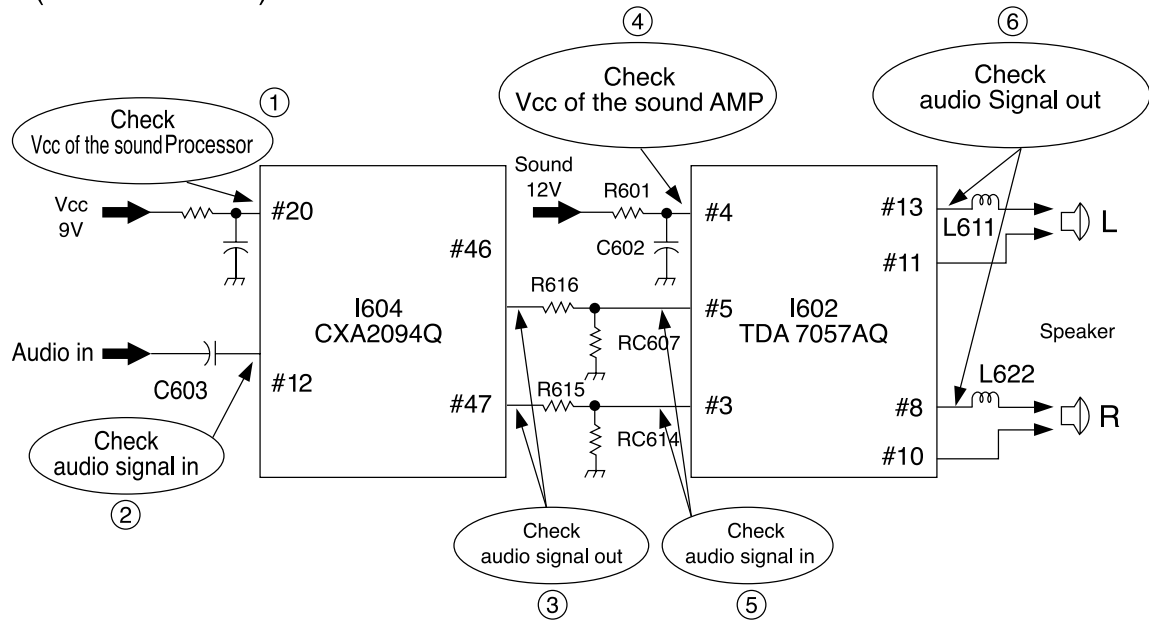


TROUBLESHOOTING GUIDE (Continued)

4. CH DON'T STOP


Check the input signal conditions	NG: Loss of signal or weak signal
	OK: Go to the figure (h)

(H)

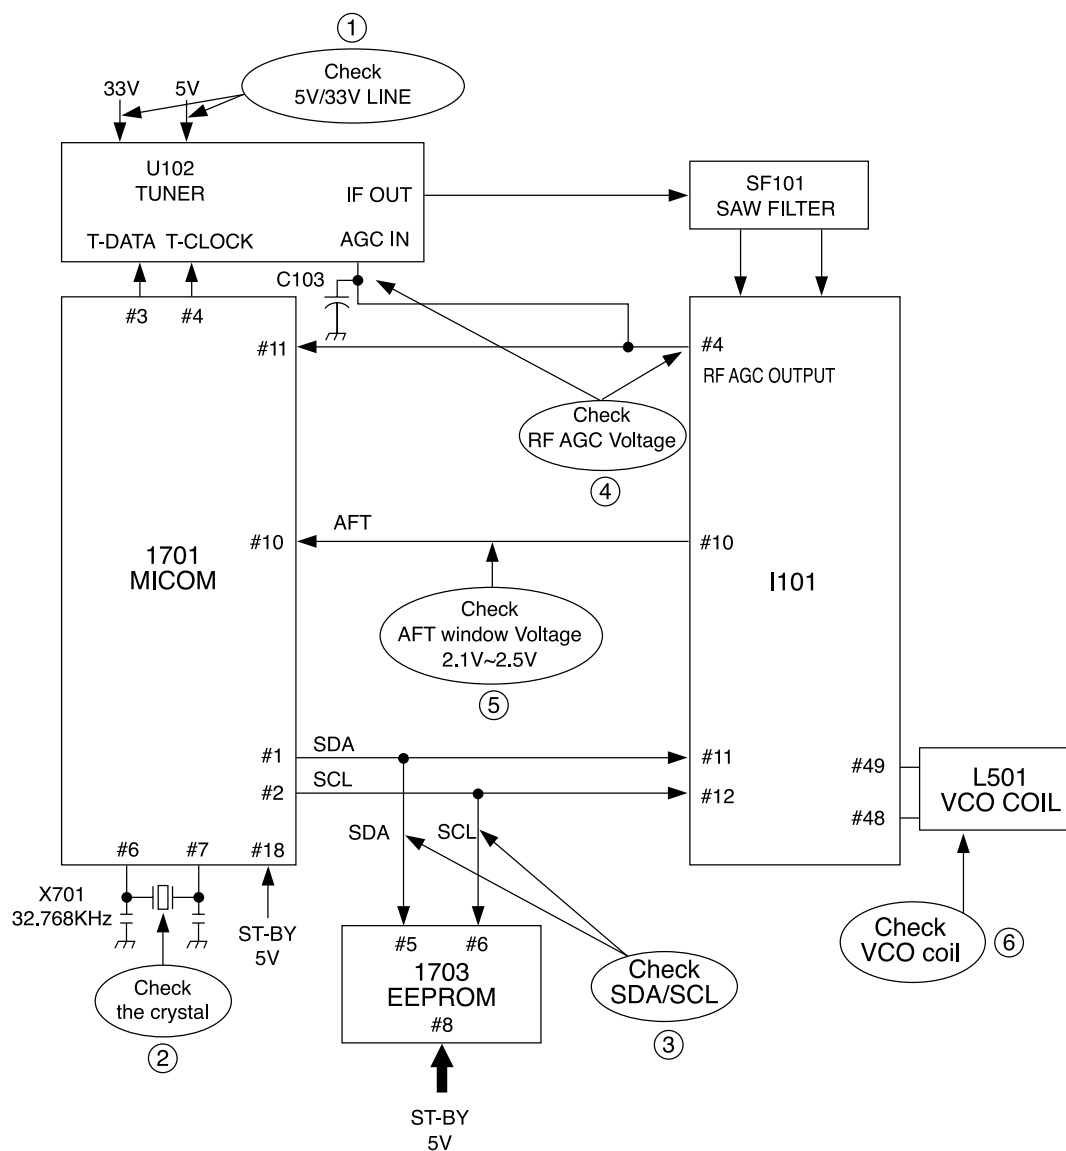


TROUBLESHOOTING GUIDE (Continued)

5. NO COLOR

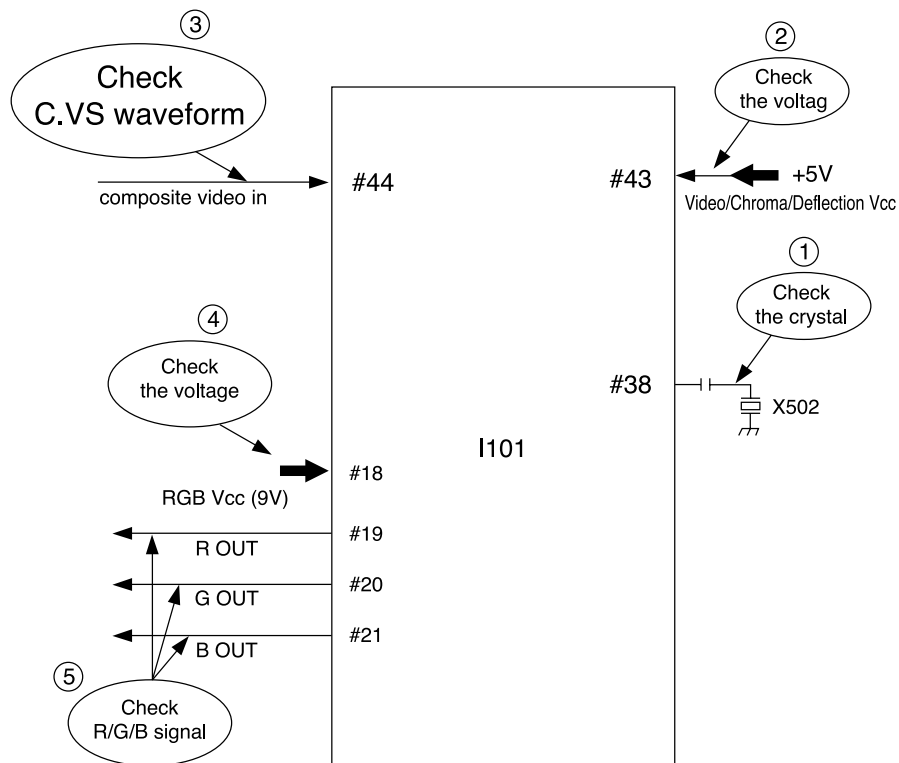


6. NO VERTICAL DEFLECTION

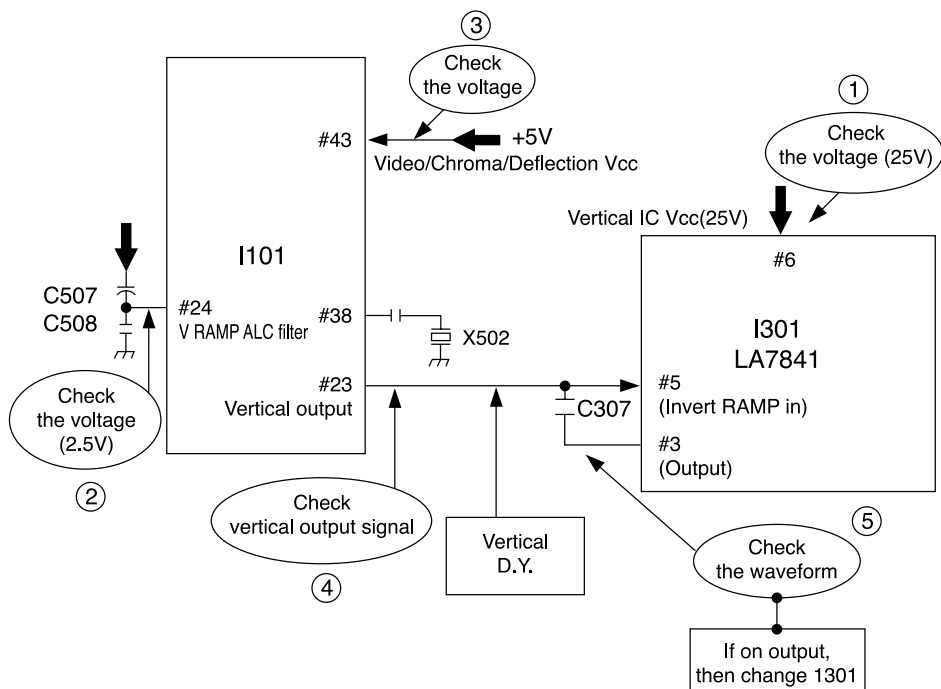

TROUBLESHOOTING GUIDE (Continued)

7. NO ON-SCREEN DISPLAY

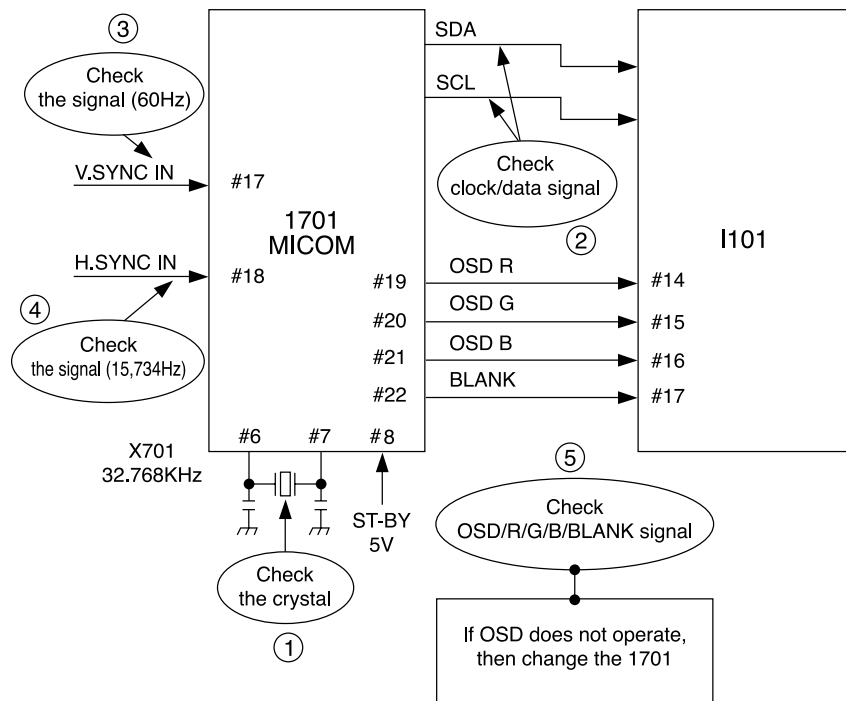

8. REMOTE CONTROL DOES NOT OPERATE

