


SERIALNUMBERLOCATION

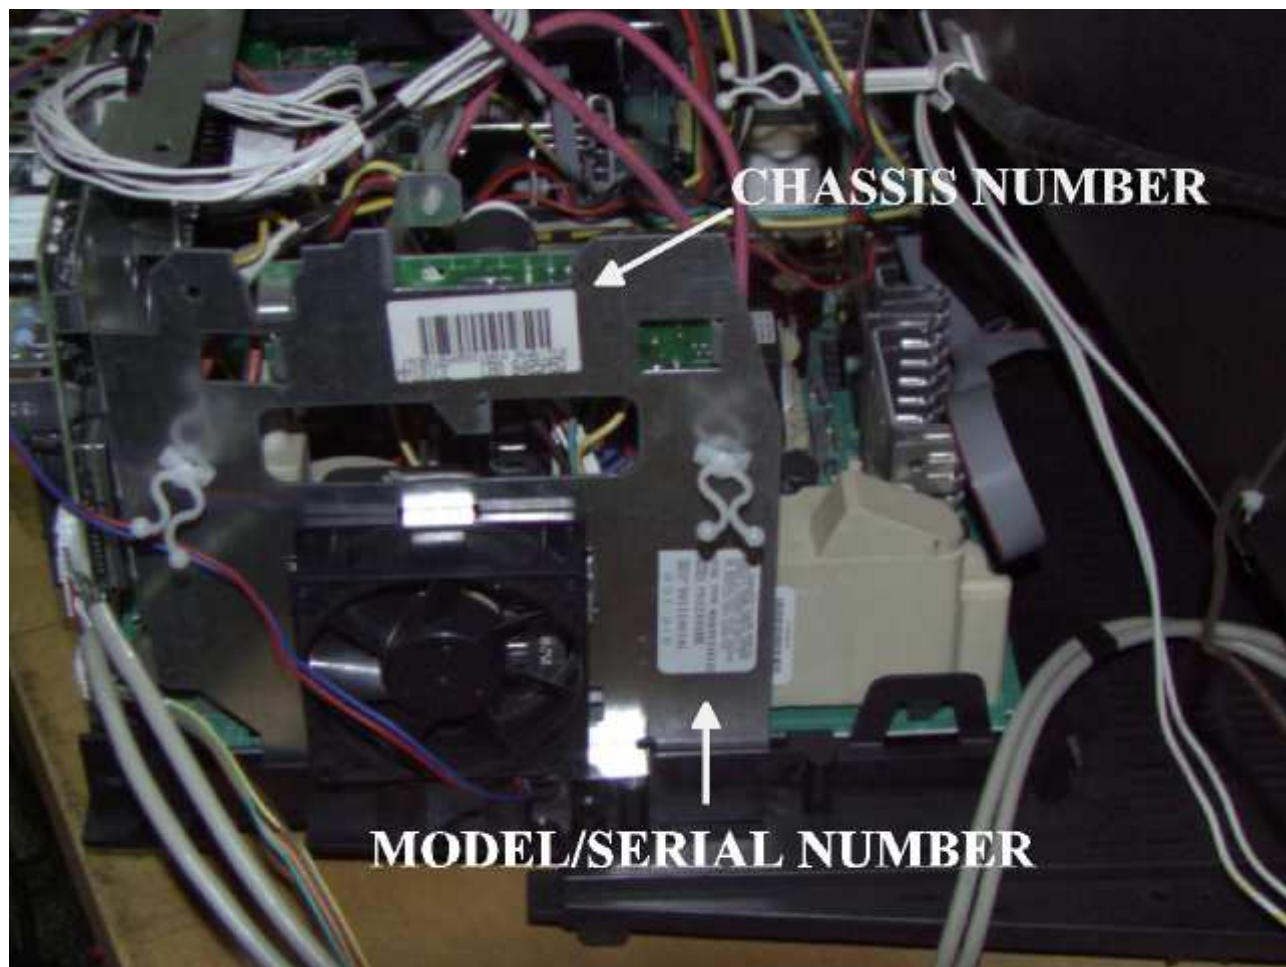

Serial Number/Model Number Location on Chassis