

MODEL

COMMANDER DEST. CHASSIS NO.

MODEL

COMMANDER DEST. CHASSIS NO.

KV-27XBR35

RM-Y113 u s SCC-F16D-A
TDR-IF310

KV-32XBR35

RM-Y113 u s SCC-F16A-A
TDR-IF310

KV-27XBR35

RM-Y113 Canadian SCC-F17C-A
TDR-IF310

KV-32XBR35

RM-Y113 Canadian SCC-F17A-A
TDR-IF310

CORRECTION-3


SUBJECT: ADJUSTMENT CHANGE

File this correction with the Service manual.

 : Corrected portion

SECTION 3 SET-UP ADJUSTMENT

Preparations(See page 45)

INCORRECT	CORRECT
<p>(1) In order to reduce the influence of geomagnetism on the set's picture tube face it east or west.</p> <p>(2) Switch on the set's power and degauss with the degausser.</p>	<p>(1) In order to reduce the influence of geomagnetism on the set's picture tube face it east or west.</p> <p>Note:Please do not use the hand degausser, because the hand degausser effects a spot on a CRT and magnetizes CRT around. </p>



※ Please file according to model size.



Sony Corporation
Consumer A&V Products Company
TV & Display Products Div.

g-964-849-93

English
96BE05366-1
Printed in JAPAN
019962