

KV-27V10/27V15

RM-Y117 RM-Y121/RM-CM101

KV-29V10C/29V10M/32V15


RM-Y117

RM-Y117

RM-Y121

RM-CM101

SERVICE MANUAL

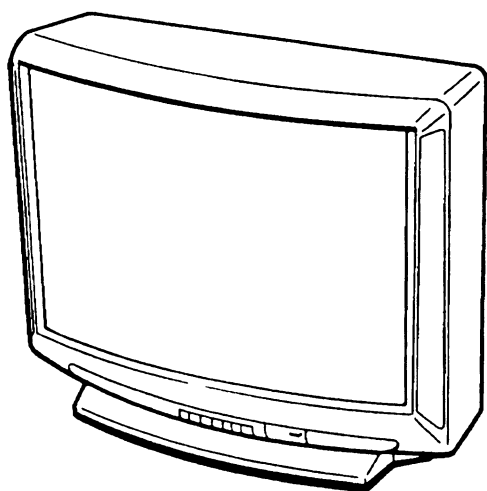

RM-Y121 RM-Y117 RM-CM101

US Model

KV-27V10 Chassis No. SCC-F84Q-A

KV-27V15 Chassis No. SCC-F84R-A

KV-32V15 Chassis No. SCC-F84S-A

Canadian Model

KV-27V10 Chassis No. SCC-F85L-A

KV-27V15 Chassis No. SCC-F85M-A

KV-32V15 Chassis No. SCC-F85N-A

WP Model

KV-29V10C Chassis No. SCC-G49A-A

E Model

KV-29V10M Chassis No. SCC-F89H-A

AA-1 CHASSIS

MODELS OF THE SAME SERIES

KV-27V10/27V15	KV-27S10/27S15/29RS10
KV-29V10C/29V10M/32V15	KV-29RS15/32S10/32S15
KV-27V55/29V55M	KV-2970RS/2970M/2975M

SPECIFICATIONS

Television system
Channel coverage

American TV standards

VHF: 2-13

UHF: 14-69

CABLE TV: 1-125

Picture tube

Hi-Black™ Trinitron® tube

(KV-27V10/27V15/29V10C/29V10M)

27-inch picture measured diagonally

29-inch picture measured diagonally

(KV-32V15)

32-inch picture measured diagonally

Antenna 75-ohm external antenna terminal for VHF/UHF

- Continued on next page -



TRINITRON® COLOR TV
SONY®

KV-27V10/27V15

RM-Y117 RM-Y121/RM-CM101

KV-29V10C/29V10M/32V15

RM-Y117

RM-Y117

RM-Y121

RM-CM101

SERVICE MANUAL



RM-Y117 RM-Y121 RM-CM101

US Model

KV-27V10 Chassis No. SCC-FM0-A

KV-27V15 Chassis No. SCC-FM0-A

KV-29V10 Chassis No. SCC-FM0-A

Canadian Model

KV-27V10 Chassis No. SCC-FM0-A

KV-27V15 Chassis No. SCC-FM0-A

KV-29V10 Chassis No. SCC-FM0-A

WP Model

KV-29V10C Chassis No. SCC-SM0-A

E Model

KV-29V10M Chassis No. SCC-FM0-A

AA-1 CHASSIS

MODELS OF THE SAME SERIES

KV-27V10/27V15

KV-29V10C/29V10M/32V15

KV-27V10/27V15/29V10

KV-29V10C/32V15/32V15

KV-27V10/29V10M

KV-29V10C/29V10M/32V15

SPECIFICATIONS

Television system
Channel coverage

American TV standards

VHF: 3-13

UHF: 24-69

CABLE TV: 3-120

Picture tube

16.1kV/17" Trinitron® tube

(KV-27V10/27V15/29V10C/29V10M)

21-inch picture measured diagonally

(KV-29V10C/32V15)

(KV-29V10)

22-inch picture measured diagonally

Antenna: 35-dBm external antenna terminal for VHF/UHF

• Continued on next page •



TRINITRON® COLOR TV

SONY®

Input

VIDEO and S VIDEO
S VIDEO IN
 Y: 1 Vp-p, 75-ohms unbalanced,
 sync negative
 C: 0.286 Vp-p (Burst signal),
 75-ohms
 Video : 1 Vp-p, 75-ohms
 unbalanced, sync negative
 Audio : 500 mVrms
 (100% modulation)
 Impedance: 47 kilo-ohms

Output

AUDIO OUT :
 More than 408 mVrms at the
 maximum volume setting (variable)
 More than 408 mVrms (fix)
 Impedances : 5 kilo-ohms
 (KV-27S15/29RS15/32S15)

Speaker output 5W×2
Power requirements 120 V AC, 60Hz
Power consumption

Model number	When in use	In standby mode
KV-27V10	165 W	6 W
KV-27V15	170 W	6.5 W
KV-29V10C	160 W	9 W
KV-29V10M	165 W	6 W
KV-32V15	205 W	6.5 W

Dimensions/Weight

	Dimensions (w/h/d)	Weight
KV-27V10	664×572×513 mm (26 ¹ / ₄ ×23 ⁵ / ₈ ×20 ¹ / ₄ inches)	42.9 kg (94 lbs)
KV-27V15	664×572×513 mm (26 ¹ / ₄ ×23 ⁵ / ₈ ×20 ¹ / ₄ inches)	43 kg (94 lbs 13 oz)
KV-29V10C	664×572×513 mm (26 ¹ / ₄ ×23 ⁵ / ₈ ×20 ¹ / ₄ inches)	42.9 kg (94 lbs)
KV-29V10M	664×572×513 mm (26 ¹ / ₄ ×23 ⁵ / ₈ ×20 ¹ / ₄ inches)	42.9 kg (94 lbs)
KV-32V15	801×664×603 mm (31 ⁵ / ₈ ×26 ¹ / ₄ ×23 ³ / ₄ inches)	70 kg (154 lbs 2 oz)

Supplied accessories (KV-27V10/29V10C/29V10M)
 Remote Commander RM-Y117 (1)
 with 2 size AA (R6) batteries
 (KV-27V15/32V15)
 Remote Commander RM-Y121 (1)
 with 1 size AA (R6) battery
 RM-CM101

Optional accessories U/V mixer EAC-66
 Connecting cable
 VMC-810S/820S, VMC-720M,
 YC-15V/30V, RK-74A

Design and specifications are subject to change without notice.

(CAUTION)

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.

WARNING!!

AN ISOLATION TRANSFORMER SHOULD BE USED DURING ANY SERVICE TO AVOID POSSIBLE SHOCK HAZARD, BECAUSE OF LIVE CHASSIS.
 THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE AC POWER LINE.

SAFETY-RELATED COMPONENT WARNING !!

COMPONENTS IDENTIFIED BY SHADING AND MARK Δ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL TO SAFE OPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.

(ATTENTION)

APRES AVOIR DECONNECTE LE CAP DE L'ANODE, COURT-CIRCUITER L'ANODE DU TUBE CATHODIQUE ET CELUI DE L'ANODE DU CAP AU CHASSIS METALLIQUE DE L'APPAREIL, OU AU COUCHE DE CARBONE PEINTE SUR LE TUBE CATHODIQUE OU AU BLINDAGE DU TUBE CATHODIQUE.

ATTENTION!!

AFIN D'EVITER TOUT RISQUE D'ELECTROCUTION PROVENANT D'UN CHASSIS SOUS TENSION, UN TRANSFORMATEUR D'ISOLEMENT DOIT ETRE UTILISE LORS DE TOUT DEPANNAGE.
 LE CHASSIS DE CE RECEPTEUR EST DIRECTEMENT RACCORDE A L'ALIMENTATION SECTEUR.

ATTENTION AUX COMPOSANTS RELATIFS A LA SECURITE!!

LES COMPOSANTS IDENTIFIES PAR UNE TRAME ET PAR UNE MAPQUE Δ SUR LES SCHEMAS DE PRINCIPE, LES VUES EXPLOSEES ET LES LISTES DE PIECES CONT D'UNE IMPORTANCE CRITIQUE POUR LA SECURITE DU FONCTIONNEMENT. NE LES REMPLACER QUE PAR DES COMPOSANTS SONY DONT LE NUMERO DE PIECE EST INDIQUE DANS LE PRESENT MANUEL OU DANS DES SUPPLEMENTS PUBLIES PAR SONY. LES REGLAGES DE CIRCUIT DONT L'IMPORTANCE EST CRITIQUE POUR LA SECURITE DU FONCTIONNEMENT SONT IDENTIFIES DANS LE PRESENT MANUEL. SUIVRE CES PROCEDURES LORS DE CHAQUE REMPLACEMENT DE COMPOSANTS CRITIQUES, OU LORSQU'UN MAUVAIS FONCTIONNEMENT EST SUSPECTE.

11

1000

7. 11/10/2019
 8. 11/10/2019
 9. 11/10/2019
 10. 11/10/2019
 11. 11/10/2019
 12. 11/10/2019
 13. 11/10/2019
 14. 11/10/2019
 15. 11/10/2019
 16. 11/10/2019
 17. 11/10/2019
 18. 11/10/2019
 19. 11/10/2019
 20. 11/10/2019
 21. 11/10/2019
 22. 11/10/2019
 23. 11/10/2019
 24. 11/10/2019
 25. 11/10/2019
 26. 11/10/2019
 27. 11/10/2019
 28. 11/10/2019
 29. 11/10/2019
 30. 11/10/2019
 31. 11/10/2019
 32. 11/10/2019
 33. 11/10/2019
 34. 11/10/2019
 35. 11/10/2019
 36. 11/10/2019
 37. 11/10/2019
 38. 11/10/2019
 39. 11/10/2019
 40. 11/10/2019
 41. 11/10/2019
 42. 11/10/2019
 43. 11/10/2019
 44. 11/10/2019
 45. 11/10/2019
 46. 11/10/2019
 47. 11/10/2019
 48. 11/10/2019
 49. 11/10/2019
 50. 11/10/2019
 51. 11/10/2019
 52. 11/10/2019
 53. 11/10/2019
 54. 11/10/2019
 55. 11/10/2019
 56. 11/10/2019
 57. 11/10/2019
 58. 11/10/2019
 59. 11/10/2019
 60. 11/10/2019
 61. 11/10/2019
 62. 11/10/2019
 63. 11/10/2019
 64. 11/10/2019
 65. 11/10/2019
 66. 11/10/2019
 67. 11/10/2019
 68. 11/10/2019
 69. 11/10/2019
 70. 11/10/2019
 71. 11/10/2019
 72. 11/10/2019
 73. 11/10/2019
 74. 11/10/2019
 75. 11/10/2019
 76. 11/10/2019
 77. 11/10/2019
 78. 11/10/2019
 79. 11/10/2019
 80. 11/10/2019
 81. 11/10/2019
 82. 11/10/2019
 83. 11/10/2019
 84. 11/10/2019
 85. 11/10/2019
 86. 11/10/2019
 87. 11/10/2019
 88. 11/10/2019
 89. 11/10/2019
 90. 11/10/2019
 91. 11/10/2019
 92. 11/10/2019
 93. 11/10/2019
 94. 11/10/2019
 95. 11/10/2019
 96. 11/10/2019
 97. 11/10/2019
 98. 11/10/2019
 99. 11/10/2019
 100. 11/10/2019

Abstract

(1974, continued)
 (continued)

10

[illegible][illegible]

	2002	2003	2004	2005	2006	2007	2008	2009	2010	2011	2012	2013	2014	2015	2016	2017	2018	2019	2020
1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
2	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
3	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
4	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
5	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
6	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
7	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
8	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
9	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
10	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
11	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
12	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
13	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
14	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
15	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
16	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
17	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
18	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
19	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
20	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
21	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
22	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
23	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
24	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
25	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
26	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
27	1	1	1	1															

100

Figure 1

1000

Model number	Offset in sec	Is normally used
100-17001	1.00 sec	Yes
100-17002	1.70 sec	No, 1.00 sec
100-17003	1.00 sec	Yes
100-17004	1.00 sec	Yes
100-17005	2.00 sec	No, 1.00 sec

1000

REPORT (RIGHT) THE AREA OF THE PICTURE TUBE AND THE
ADJUSTMENT TO THE METAL (WASHER, SET SCREW, CONTOUR
SCREW) ON THE TOP AFTER REMOVING THE COVER.

100

BE ISOLATED FROM OTHERS SHOULD BE YOUR CONCERN AND
EFFORTS TO AVOID POSSIBLE SPREAD DURING, BECAUSE OF
IT IS NOT POSSIBLE

THE COLLAPSE OF THE BRIDGE IS DIRECTLY CONNECTED TO THE A-15 OVERPASS.

Abstract

[illegible]

1000

	Dimensions (L x W x H)	Weight
DS-17501	400 x 120 x 120 mm (15.75 x 4.75 x 4.75 in.)	250 kg (550 lb.)
DS-17502	400 x 120 x 120 mm (15.75 x 4.75 x 4.75 in.)	40 kg (88 lb.)
DS-19910	400 x 120 x 120 mm (15.75 x 4.75 x 4.75 in.)	104 kg (23 lb.)
DS-19912	400 x 120 x 120 mm (15.75 x 4.75 x 4.75 in.)	40 kg (88 lb.)
DS-19913	400 x 120 x 120 mm (15.75 x 4.75 x 4.75 in.)	200 kg (440 lb.)
DS-19914	400 x 120 x 120 mm (15.75 x 4.75 x 4.75 in.)	40 kg (88 lb.)
DS-19915	400 x 120 x 120 mm (15.75 x 4.75 x 4.75 in.)	80 kg (176 lb.)

1000

(BY-2) (WV, 1994, 1995, 1996)
 Nevada Commander RM-Y117 (1)
 with 1 also AA (WV) Kentucky
 (BY-2) (WV, 1994, 1995, 1996)
 Nevada Commander RM-Y118 (1)
 with 1 also AA (WV) Kentucky
 (BY-2) (WV, 1994, 1995, 1996)

12/71 edition SAC-66
Continuing order:
1982-83, 1983-84, 1984-85, 1985-86, 1986-87, 1987-88, 1988-89, 1989-90, 1990-91, 1991-92, 1992-93, 1993-94, 1994-95, 1995-96, 1996-97, 1997-98, 1998-99, 1999-00, 2000-01, 2001-02, 2002-03, 2003-04, 2004-05, 2005-06, 2006-07, 2007-08, 2008-09, 2009-10, 2010-11, 2011-12, 2012-13, 2013-14, 2014-15, 2015-16, 2016-17, 2017-18, 2018-19, 2019-20, 2020-21, 2021-22, 2022-23, 2023-24, 2024-25, 2025-26, 2026-27, 2027-28, 2028-29, 2029-30, 2030-31, 2031-32, 2032-33, 2033-34, 2034-35, 2035-36, 2036-37, 2037-38, 2038-39, 2039-40, 2040-41, 2041-42, 2042-43, 2043-44, 2044-45, 2045-46, 2046-47, 2047-48, 2048-49, 2049-50, 2050-51, 2051-52, 2052-53, 2053-54, 2054-55, 2055-56, 2056-57, 2057-58, 2058-59, 2059-60, 2060-61, 2061-62, 2062-63, 2063-64, 2064-65, 2065-66, 2066-67, 2067-68, 2068-69, 2069-70, 2070-71, 2071-72, 2072-73, 2073-74, 2074-75, 2075-76, 2076-77, 2077-78, 2078-79, 2079-80, 2080-81, 2081-82, 2082-83, 2083-84, 2084-85, 2085-86, 2086-87, 2087-88, 2088-89, 2089-90, 2090-91, 2091-92, 2092-93, 2093-94, 2094-95, 2095-96, 2096-97, 2097-98, 2098-99, 2099-00, 2100-01, 2101-02, 2102-03, 2103-04, 2104-05, 2105-06, 2106-07, 2107-08, 2108-09, 2109-10, 2110-11, 2111-12, 2112-13, 2113-14, 2114-15, 2115-16, 2116-17, 2117-18, 2118-19, 2119-20, 2120-21, 2121-22, 2122-23, 2123-24, 2124-25, 2125-26, 2126-27, 2127-28, 2128-29, 2129-30, 2130-31, 2131-32, 2132-33, 2133-34, 2134-35, 2135-36, 2136-37, 2137-38, 2138-39, 2139-40, 2140-41, 2141-42, 2142-43, 2143-44, 2144-45, 2145-46, 2146-47, 2147-48, 2148-49, 2149-50, 2150-51, 2151-52, 2152-53, 2153-54, 2154-55, 2155-56, 2156-57, 2157-58, 2158-59, 2159-60, 2160-61, 2161-62, 2162-63, 2163-64, 2164-65, 2165-66, 2166-67, 2167-68, 2168-69, 2169-70, 2170-71, 2171-72, 2172-73, 2173-74, 2174-75, 2175-76, 2176-77, 2177-78, 2178-79, 2179-80, 2180-81, 2181-82, 2182-83, 2183-84, 2184-85, 2185-86, 2186-87, 2187-88, 2188-89, 2189-90, 2190-91, 2191-92, 2192-93, 2193-94, 2194-95, 2195-96, 2196-97, 2197-98, 2198-99, 2199-00, 2200-01, 2201-02, 2202-03, 2203-04, 2204-05, 2205-06, 2206-07, 2207-08, 2208-09, 2209-10, 2210-11, 2211-12, 2212-13, 2213-14, 2214-15, 2215-16, 2216-17, 2217-18, 2218-19, 2219-20, 2220-21, 2221-22, 2222-23, 2223-24, 2224-25, 2225-26, 2226-27, 2227-28, 2228-29, 2229-30, 2230-31, 2231-32, 2232-33, 2233-34, 2234-35, 2235-36, 2236-37, 2237-38, 2238-39, 2239-40, 2240-41, 2241-42, 2242-43, 2243-44, 2244-45, 2245-46, 2246-47, 2247-48, 2248-49, 2249-50, 2250-51, 2251-52, 2252-53, 2253-54, 2254-55, 2255-56, 2256-57, 2257-58, 2258-59, 2259-60, 2260-61, 2261-62, 2262-63, 2263-64, 2264-65, 2265-66, 2266-67, 2267-68, 2268-69, 2269-70, 2270-71, 2271-72, 2272-73, 2273-74, 2274-75, 2275-76, 2276-77, 2277-78, 2278-79, 2279-80, 2280-81, 2281-82, 2282-83, 2283-84, 2284-85, 2285-86, 2286-87, 2287-88, 2288-89, 2289-90, 2290-91, 2291-92, 2292-93, 2293-94, 2294-95, 2295-96, 2296-97, 2297-98, 2298-99, 2299-00, 2300-01, 2301-02, 2302-03, 2303-04, 2304-05, 2305-06, 2306-07, 2307-08, 2308-09, 2309-10, 2310-11, 2311-12, 2312-13, 2313-14, 2314-15, 2315-16, 2316-17, 2317-18, 2318-19, 2319-20, 2320-21, 2321-22, 2322-23, 2323-24, 2324-25, 2325-26, 2326-27, 2327-28, 2328-29, 2329-30, 2330-31, 2331-32, 2332-33, 2333-34, 2334-35, 2335-36, 2336-37, 2337-38, 2338-39, 2339-40, 2340-41, 2341-42, 2342-43, 2343-44, 2344-45, 2345-46, 2346-47, 2347-48, 2348-49, 2349-50, 2350-51, 2351-52, 2352-53, 2353-54, 2354-55, 2355-56, 2356-57, 2357-58, 2358-59, 2359-60, 2360-61, 2361-62, 2362-63, 2363-64, 2364-65, 2365-66, 2366-67, 2367-68, 2368-69, 2369-70, 2370-71, 2371-72, 2372-73, 2373-74, 2374-75, 2375-76, 2376-77, 2377-78, 2378-79, 2379-80, 2380-81, 2381-82, 2382-83, 2383-84, 2384-85, 2385-86, 2386-87, 2387-88, 2388-89, 2389-90, 2390-91, 2391-92, 2392-93, 2393-94, 2394-95, 2395-96, 2396-97, 2397-98, 2398-99, 2399-00, 2400-01, 2401-02, 2402-03, 2403-04, 2404-05, 2405-06, 2406-07, 2407-08, 2408-09, 2409-10, 2410-11, 2411-12, 2412-13, 2413-14, 2414-15, 2415-16, 2416-17, 2417-18, 2418-19, 2419-20, 2420-21, 2421-22, 2422-23, 2423-24, 2424-25, 2425-26, 2426-27, 2427-28, 2428-29, 2429-30, 2430-31, 2431-32, 2432-33, 2433-34, 2434-35,

1998, 1999, 2000, 2001, 2002, 2003, 2004, 2005, 2006, 2007, 2008, 2009, 2010, 2011, 2012, 2013, 2014, 2015, 2016, 2017, 2018, 2019, 2020, 2021, 2022, 2023, 2024, 2025, 2026, 2027, 2028, 2029, 2030, 2031, 2032, 2033, 2034, 2035, 2036, 2037, 2038, 2039, 2040, 2041, 2042, 2043, 2044, 2045, 2046, 2047, 2048, 2049, 2050, 2051, 2052, 2053, 2054, 2055, 2056, 2057, 2058, 2059, 2060, 2061, 2062, 2063, 2064, 2065, 2066, 2067, 2068, 2069, 2070, 2071, 2072, 2073, 2074, 2075, 2076, 2077, 2078, 2079, 2080, 2081, 2082, 2083, 2084, 2085, 2086, 2087, 2088, 2089, 2090, 2091, 2092, 2093, 2094, 2095, 2096, 2097, 2098, 2099, 2100, 2101, 2102, 2103, 2104, 2105, 2106, 2107, 2108, 2109, 2110, 2111, 2112, 2113, 2114, 2115, 2116, 2117, 2118, 2119, 2120, 2121, 2122, 2123, 2124, 2125, 2126, 2127, 2128, 2129, 2130, 2131, 2132, 2133, 2134, 2135, 2136, 2137, 2138, 2139, 2140, 2141, 2142, 2143, 2144, 2145, 2146, 2147, 2148, 2149, 2150, 2151, 2152, 2153, 2154, 2155, 2156, 2157, 2158, 2159, 2160, 2161, 2162, 2163, 2164, 2165, 2166, 2167, 2168, 2169, 2170, 2171, 2172, 2173, 2174, 2175, 2176, 2177, 2178, 2179, 2180, 2181, 2182, 2183, 2184, 2185, 2186, 2187, 2188, 2189, 2190, 2191, 2192, 2193, 2194, 2195, 2196, 2197, 2198, 2199, 2200, 2201, 2202, 2203, 2204, 2205, 2206, 2207, 2208, 2209, 2210, 2211, 2212, 2213, 2214, 2215, 2216, 2217, 2218, 2219, 2220, 2221, 2222, 2223, 2224, 2225, 2226, 2227, 2228, 2229, 2230, 2231, 2232, 2233, 2234, 2235, 2236, 2237, 2238, 2239, 2240, 2241, 2242, 2243, 2244, 2245, 2246, 2247, 2248, 2249, 2250, 2251, 2252, 2253, 2254, 2255, 2256, 2257, 2258, 2259, 2260, 2261, 2262, 2263, 2264, 2265, 2266, 2267, 2268, 2269, 2270, 2271, 2272, 2273, 2274, 2275, 2276, 2277, 2278, 2279, 2280, 2281, 2282, 2283, 2284, 2285, 2286, 2287, 2288, 2289, 2290, 2291, 2292, 2293, 2294, 2295, 2296, 2297, 2298, 2299, 2300, 2301, 2302, 2303, 2304, 2305, 2306, 2307, 2308, 2309, 2310, 2311, 2312, 2313, 2314, 2315, 2316, 2317, 2318, 2319, 2320, 2321, 2322, 2323, 2324, 2325, 2326, 2327, 2328, 2329, 2330, 2331, 2332, 2333, 2334, 2335, 2336, 2337, 2338, 2339, 2340, 2341, 2342, 2343, 2344, 2345, 2346, 2347, 2348, 2349, 2350, 2351, 2352, 2353, 2354, 2355, 2356, 2357, 2358, 2359, 2360, 2361, 2362, 2363, 2364, 2365, 2366, 2367, 2368, 2369, 2370, 2371, 2372, 2373, 2374, 2375, 2376, 2377, 2378, 2379, 2380, 2381, 2382, 2383, 2384, 2385, 2386, 2387, 2388, 2389, 2390, 2391, 2392, 2393, 2394, 2395, 2396, 2397, 2398, 2399, 2400, 2401, 2402, 2403, 2404, 2405, 2406, 2407, 2408, 2409, 2410, 2411, 2412, 2413, 2414, 2415, 2416, 2417, 2418, 2419, 2420, 2421, 2422, 2423, 2424, 2425, 2426, 2427, 2428, 2429, 2430, 2431, 2432, 2433, 2434, 2435, 2436, 2437, 2438, 2439, 2440, 2441, 2442, 2443, 2444, 2445, 2446, 2447, 2448, 2449, 2450, 2451, 2452, 2453, 2454, 2455, 2456, 2457, 2458, 2459, 2460, 2461, 2462, 2463, 2464, 2465, 2466, 2467, 2468, 2469, 2470, 2471, 2472, 2473, 2474, 2475, 2476, 2477, 2478, 2479, 2480, 2481, 2482, 2483, 2484, 2485, 2486, 2487, 2488, 2489, 2490, 2491, 2492, 2493, 2494, 2495, 2496, 2497, 2498, 2499, 2500, 2501, 2502, 2503, 2504, 2505, 2506, 2507, 2508, 2509, 2510, 2511, 2512, 2513, 2514, 2515, 2516, 2517, 2518, 2519, 2520, 2521, 2522, 2523, 2524, 2525, 2526, 2527, 2528, 2529, 2530, 2531, 2532, 2533, 2534, 2535, 2536, 2537, 2538, 2539, 2540, 2541, 2542, 2543, 2544, 2545, 2546, 2547, 2548, 2549, 2550, 2551, 2552, 2553, 2554, 2555, 2556, 2557, 2558, 2559, 2560, 2561, 2562, 2563, 2564, 2565, 2566, 2567, 2568, 2569, 2570, 2571, 2572, 2573, 2574, 2575, 2576, 2577, 2578, 2579, 2580, 2581, 2582, 2583, 2584, 2585, 2586, 2587, 2588, 2589, 2590, 2591, 2592, 2593, 2594, 2595, 2596, 2597, 2598, 2599, 2600, 2601, 2602, 2603, 2604, 2605, 2606, 2607, 2608, 2609, 2610, 2611, 2612, 2613, 2614, 2615, 2616, 2617, 2618, 2619, 2620, 2621, 2622, 2623, 2624, 2625, 2626, 2627, 2628, 2629, 2630, 2631, 2632, 2633, 2634, 2635, 2636, 2637, 2638, 2639, 2640, 2641, 2642, 2643, 2644, 2645, 2646, 2647, 2648, 2649, 2650, 2651, 2652, 2653, 2654, 2655, 2656, 2657, 2658, 2659, 2660, 2661, 2662, 2663, 2664, 2665, 2666, 2667, 2668, 2669, 2670, 2671, 2672, 2673, 2674, 2675, 2676, 2677, 2678, 2679, 26

1000

ARMES POUR DÉMONTRE LE RAP DE L'ARME, COURTOISIE L'ARMÉE DE TOUT DÉMONTRE ET CELLES L'ARMÉE DE RAP AU DÉMONTRE L'ARMÉE DE L'ARMÉE, OU AU DÉMONTRE DE DÉMONTRE L'ARMÉE DE TOUT DÉMONTRE DE AU DÉMONTRE DE TOUT DÉMONTRE

1. *Journal of the American Medical Association*, 2000; 284: 2689-2695.

AFR B'YTER NOT BEING REPRODUCTION
PROHIBIT OF CHAIRS BOW TENSION, IN
TRANSMISSION EFFICIENT NOT THE AFFAIR
AND IN THE MIDDLE.

LE CHAIRS DE CE MOUVEMENT SONT CARACTÉRISÉS PAR UNE LIGNE ÉPAGNOLÉE À LA MANIÈRE DES SIÈGES.

**APPROVED FOR COMMISSIONER RELATIVE TO
REGISTRATION**

[illegible]

SAFETY CHECK-OUT (US model only)

After correcting the original service problem, perform the following safety checks before releasing the set to the customer :

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Check that all control knobs, shields, covers, ground straps, and mounting hardware have been replaced. Be absolutely certain that you have replaced all the insulators.
4. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
5. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
6. Check the line cord for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
7. Check the condition of the monopole antenna (if any). Make sure the end is not broken off, and has the plastic cap on it. Point out the danger of impalement on a broken antenna to the customer, and recommend the antenna's replacement.
8. Check the B+ and HV to see they are at the values specified. Make sure your instruments are accurate ; be suspicious of your HV meter if sets always have low HV.
9. Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

HOW TO FIND A GOOD EARTH GROUND

A cold-water pipe is guaranteed earth ground ; the cover-plate retaining screw on most AC outlet boxes is also at earth ground. If the retaining screw is to be used as your earth-ground, verify that it is at ground by measuring the resistance between it and a cold-water pipe with an ohmmeter. The reading should be zero ohms. If a cold-water pipe is not accessible, connect a 60 – 100 watts trouble light (not a neon lamp) between the hot side of the receptacle and the retaining screw. Try both slots, if necessary, to locate the hot side of the line, the lamp should light at normal brilliance if the screw is at ground potential. (See Fig. B)

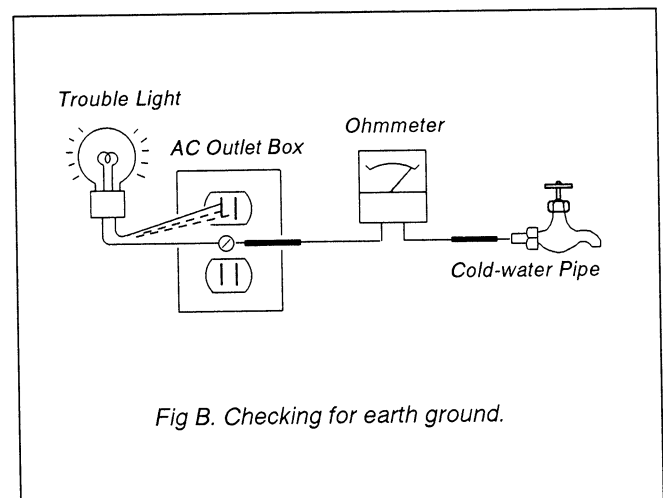
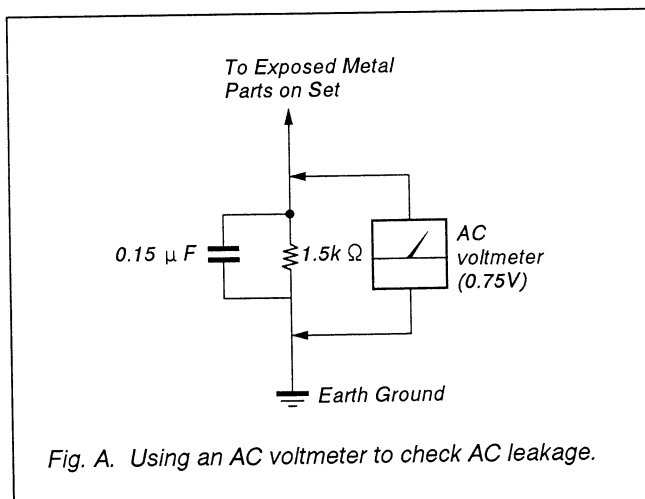


TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
1. GENERAL			3. SET-UP ADJUSTMENTS		
● KV-27V10/29V10C/29V10M			3-1. Beam Landing	28	
Step 1 : Hook up	5		3-2. Convergence	29	
Step 2 : Setting up the Remote Commander	6		3-3. Focus Adjustment	32	
Step 3 : Setting up the TV Automatically			3-4. G2 (Screen) and White Balance Adjustments	33	
(Auto Set Up)	6				
Changing the Menu Language	8		4. SAFETY RELATED ADJUSTMENTS	34	
Watching the TV	8				
Adjusting the Picture (Video)	9		5. CIRCUIT ADJUSTMENTS		
Adjusting Screen Brightness Automatically			5-1. Electrical Adjustment by Remote Commander	36	
(Lumisponder)	9		5-2. M Board Adjustments	38	
Adjusting the Sound (Audio)	9		5-3. P Board Adjustments		
Listening to Surround Sound (Surround)	10		(KV-27V15/32V15 only)	40	
Selecting Stereo or Bilingual Programs (MTS)	10				
Setting the Speaker Switch (Speaker)	10		6. DIAGRAMS		
Setting Audio Out (Audio out)	11		6-1. Block Diagrams (1)	41	
Customizing the Channel Number Buttons			6-2. Block Diagrams (2)	46	
(CH Caption/Guide)	11		6-3. Frame Schematic Diagram	51	
Setting Video Labels (Video Label)	12		6-4. Circuit Boards Location	55	
Displaying Caption Vision (Caption Vision)	12		6-5. Printed Wiring Boards and Schematic Diagrams	55	
Operating Video Equipment	12		• UA Board	56	
			• A Board	60	
● KV-27V15/32V15			• D Board	63	
Step 1 : Hook up	13		• M Board	73	
Step 2 : Setting up the Remote Commander	14		• H Board	77	
Step 3 : Setting up the TV Automatically			• P Board (KV-27V15/32V15 only)	78	
(Auto Set Up)	15		• E Board (KV-32V15 only)	81	
Changing the Menu Language	16		• C Board (KV-27V10/27V15/29V10C/29V10M)	84	
Watching the TV	17		• C Board (KV-32V15)	85	
Watching Two Programs at a Time-PIP	17		• Z Board (KV-27V15/32V15 only)	87	
Adjusting the Picture (Video)	18		• L Board (KV-27V15/32V15 only)	87	
Adjusting Screen Brightness Automatically			6-5. Semiconductors	88	
(Lumisponder)	18				
Adjusting the Sound (Audio)	19		7. EXPLODED VIEWS		
Listening to Surround Sound (Surround)	19		7-1. Chassis	90	
Selecting Stereo or Bilingual Programs (MTS)	19		7-2. Picture Tube	91	
Setting the Speaker Switch (Speaker)	20				
Setting Audio Out (Audio out)	20		8. ELECTRICAL PARTS LIST	92	
Customizing the Channel Number Buttons					
(CH Caption/Guide)	20				
Setting Video Labels (Video Label)	21				
Displaying Caption Vision (Caption Vision)	21				
Operating Video Equipment	22				
Operating a Cable Box	22				
2. DISASSEMBLY					
2-1. Rear Cover and Speaker Box Assembly Removal	24				
2-2. Chassis Assembly Removal	24				
2-3. Service Position	24				
2-4. P Board and P Bracket Removal					
(KV-27V15/32V15 only)	25				
2-5. UA Board Removal	25				
2-6. Extension Cable	25				
2-7. Picture Tube Removal (1)					
(KV-27V10/27V15/29V10C/29V10M only)	26				
2-8. Picture Tube Removal (2)					
(KV-32V15 only)	27				

SECTION 1 GENERAL

- KV-27V10/29V10C/29V10M

Step 1: Hookup

The operating instructions mentioned here are partial abstracts from the Operating Instruction Manual. The page numbers of the Operating Instruction Manual remain as in the manual.


Connecting an antenna/cable TV system with a VCR

To connect your VCR to the TV, first check the model number of your TV and select the corresponding connection. For details on connection, see the instruction manual of your VCR. Before making connection, disconnect the AC power cords of the equipment to be connected.

After making these connections, you will be able to do the following:

- View the playback of video tapes
- Record one TV program while viewing another program

Without a cable box

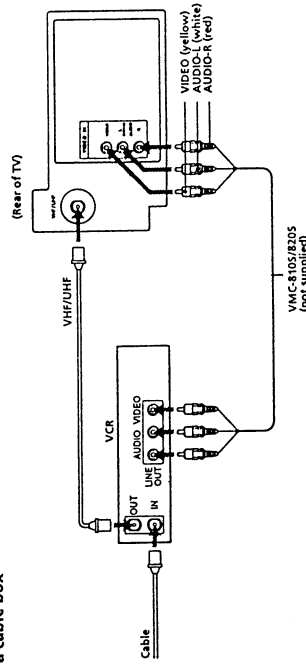


Note

- To connect a monaural VCR, connect the audio output of the VCR to AUDIO-L (mono) of VIDEO 1 IN on the TV.


To an S video equipped VCR without a cable box

- KV-27V10/29V10C/29V10M/32S10 only

If your VCR has an S video output jack, hook up as follows and then set S VIDEO to ON on your TV (page 12). (It is set to ON at the factory.)

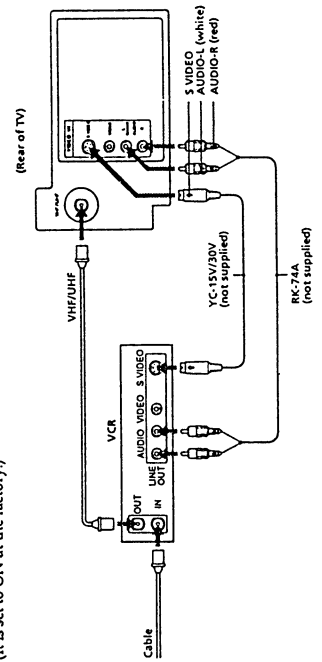


With a cable box

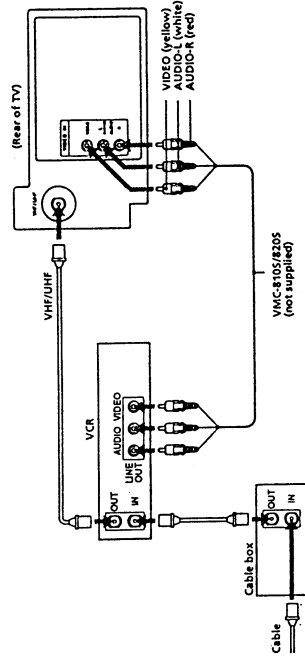

Note

- To connect a monaural VCR, connect the audio output of the VCR to AUDIO-L (mono) of VIDEO 1 IN on the TV.

To an S video equipped VCR with a cable box

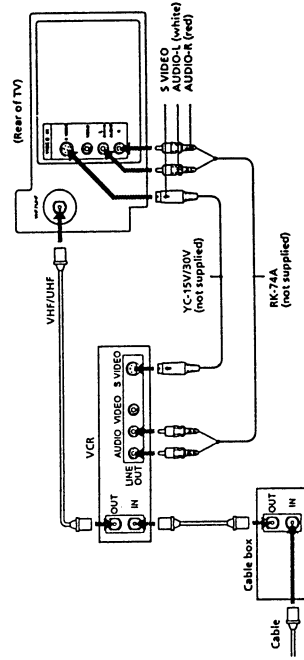

Note

 
- Video signals are composed of Y (luminance) and C (chroma) signals. The S connection sends the two signals separately preventing degradation, and gives better picture quality compared to conventional connection.

Step 1: Hookup

Connecting the instrumentation to the equipment is as follows:


1. Connect the test lead to the test equipment.
2. Connect the test lead to the test equipment.
3. Connect the test lead to the test equipment.
4. Connect the test lead to the test equipment.

Refer to the test lead.



1. Connect the test lead to the test equipment.
2. Connect the test lead to the test equipment.
3. Connect the test lead to the test equipment.
4. Connect the test lead to the test equipment.

 Refer to the test lead.




Refer to the test lead.


SECTION 1 GENERAL

The operating instructions contained here are for the equipment shown in the Operating Instructions Manual. The steps contained in the Operating Instructions Manual are for the equipment.

 Refer to the test lead.



 1. Connect the test lead to the test equipment.
2. Connect the test lead to the test equipment.
3. Connect the test lead to the test equipment.
4. Connect the test lead to the test equipment.




1. Connect the test lead to the test equipment.
2. Connect the test lead to the test equipment.
3. Connect the test lead to the test equipment.
4. Connect the test lead to the test equipment.

Refer to the test lead.

Connecting a camcorder

- KV-27V10/29V10C/29V10M only

This connection is convenient for viewing a camcorder.

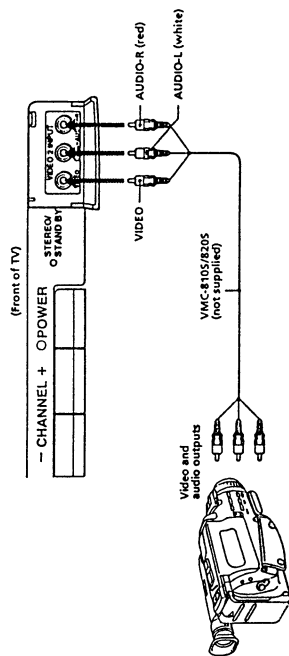


Note

- To connect a monaural camcorder, connect the audio output of the VCR to AUDIO-L (mono) or VIDEO 2 INPUT on the TV.

Connecting an audio system

- KV-27V10/29V10C/29V10M only


When connecting audio equipment, see page 17 and 18 for more information.

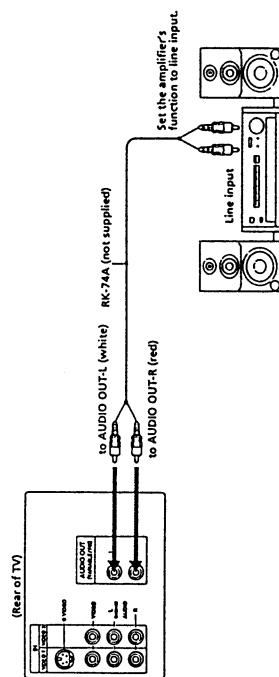

Step 2: Setting up the remote commander


- KV-27S10/29S10C/32S10 RM-Y116 remote commander

Insert two size AA (R6) batteries in correct polarity.

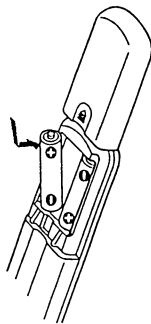

- KV-27V10/29V10C/29V10M RM-Y117 remote commander

Insert a size AA (R6) battery in correct polarity.

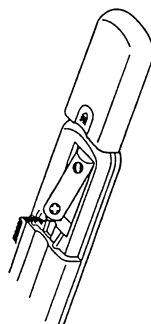

Notes


- With normal use, the battery should last for approximately six months.
- If you do not use the remote commander for an extended period of time, remove the battery to avoid possible damage from battery leakage.
- Do not handle the remote commander roughly. Do not drop it or let it get wet.
- Do not place the remote commander in locations where it is direct sunlight, near a heater, or where the humidity is high.

Step 3: Setting up the TV automatically (AUTO SET UP)

You can set up your TV easily by using AUTO SET UP feature. It presets all the receivable channels. To set up the TV manually, see "Setting cable TV on or off" and "Presetting channels" (page 11).

If the TV is set to a video input, you cannot execute AUTO SET UP. Press TV/VIDEO so that a channel number appears.

(Front of KV-27S10/29S10C/32S10)

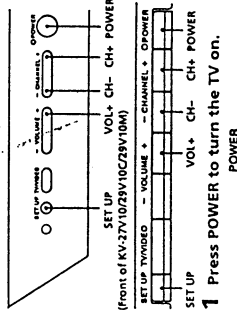


1 Press POWER to turn the TV on.




2 Press SET UP on the front of the TV.

 The menu appears.



3 Press CH +.

 


"AUTO PROGRAM" appears on the screen and the TV starts scanning and presetting channels automatically. When all the receivable channels are stored, "AUTO PROGRAM" disappears and the lowest numbered channel is displayed. If the TV receives cable TV channels, CATV is set to ON automatically.

Connecting a receiver

See page 10 for more information on the receiver.

 Connect the receiver's video outputs to the TV.




For more information on connecting the receiver, see page 10.

Connecting a video recorder

See page 10 for more information on the video recorder.

 Connect the video recorder's video outputs to the TV.



See page 10 for more information on the video recorder.

Step 2: Setting up the remote commander

1. Press the **POWER** button.



2. Press the **POWER** button.



3. Press the **POWER** button.

Step 3: Setting up the TV automatically

See page 10 for more information on the TV.

1. Press the **POWER** button.



2. Press the **POWER** button.



3. Press the **POWER** button.



4. Press the **POWER** button.



5. Press the **POWER** button.

See page 10 for more information on the TV.


Note

- If more than 90 seconds elapse after you press a button, the menu disappears automatically.

DEMO: To browse the main functions, Press VOL+ in step3. The functions and menus a displayed one by one.
FACTORY PRESET: To restore the factory settings when you are confused about the TV settings. Press CH- in step3. The settings of picture and sound are restored to the factory setting.


Erasing or adding channels

After AUTO SET UP you can erase unnecessary channels or add the channels you want. Preset channels during the day rather than late at night, when some channels may not be broadcasting.

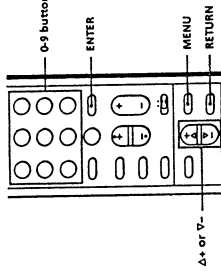

1 Press MENU.

 The main menu appears.



2 Press Δ+ or ∇- to select SET UP and press RETURN.

The SET UP menu appears.



3 Press Δ+ or ∇- to select CH SET UP and press RETURN.

The CH SET UP menu appears.



 
4 Press Δ+ or ∇- to select CH ERASE/ADD and press RETURN.

The CH ERASE/ADD menu appears.



5 Erase and/or add the channel you want:

- To erase an unwanted channel/Make sure the cursor (➤) is beside ERASE.
- Press CH +/– to select the channel you want to erase and,




(3) press RETURN.

The indication “-” appears beside the channel number, showing that the channel is erased from the preset memory.



To add a channel that you want

 - Press Δ+ or ∇- to select ADD.
- Press the 0–9 buttons to select the channel you want to add and press ENTER and,



(3) press RETURN.

The indication “+” appears beside the channel number, showing that the channel is added to the preset memory.



6 To erase and/or add other channels, repeat step 5.

7 When you finish, press MENU.



Note

- If you erase or add a VHF or UHF channel, the cable TV channel with the same number is also erased or added, and vice versa.

Setting cable TV on or off

 
If you have connected the TV to a cable TV system, set CABLE to ON, the factory setting. If not, set CABLE to OFF.

You do not have to do this procedure if you execute AUTO SET UP (page 9). Do this procedure only when you want to set it manually.

1 Press MENU.

2 Press Δ+ or ∇- to move the cursor (➤) to SET UP and press RETURN.

3 Press Δ+ or ∇- to move the cursor (➤) to CH SET UP and press RETURN.




4 Set CABLE to ON or OFF:

- Make sure the cursor (➤) is beside CABLE and press RETURN.

If the cursor is not beside CABLE, press Δ+ or ∇- to move the cursor and press RETURN.

 - Press Δ+ or ∇- to select ON or OFF and, (3) press RETURN.



5 Press MENU to return to the original screen.

Note

- If CH SET UP menu appears in black, the TV is set to a video input and you cannot select CABLE. Press TV/VIDEO so that a channel number appears.

Presetting channels

 
You can preset TV channels easily by AUTO PROGRAM feature.

You do not have to do this procedure if you execute AUTO SET UP (page 9). Do this procedure only when you want to set it manually.


1 Press MENU.

2 Press Δ+ or ∇- to move the cursor (➤) to SET UP and press RETURN.

3 Press Δ+ or ∇- to move the cursor (➤) to CH SET UP and press RETURN.



 4 Press Δ+ or ∇- to move the cursor (➤) to AUTO PROGRAM and press RETURN.



“AUTO PROGRAM” appears on the screen and the TV starts scanning and presetting channels automatically. When all the receivable channels are stored, “AUTO PROGRAM” disappears and the lowest numbered channel is displayed.

5 Press MENU to return to the original screen.

Note

- If the CH SET UP menu appears in black, the TV is set to a video input and you cannot select AUTO PROGRAM. Press TV/VIDEO or TV so that a channel number appears.

1. The following information is for your information only.

When you receive the information, you should check the information against the information you have received from the other parties to the transaction. If you find any discrepancies, you should contact the relevant party immediately.

When you receive the information, you should check the information against the information you have received from the other parties to the transaction. If you find any discrepancies, you should contact the relevant party immediately.



2. The following information is for your information only.



3. The following information is for your information only.



4. The following information is for your information only.



5. The following information is for your information only.



6. The following information is for your information only.



7. The following information is for your information only.



8. The following information is for your information only.



9. The following information is for your information only.



10. The following information is for your information only.



11. The following information is for your information only.



12. The following information is for your information only.



13. The following information is for your information only.



14. The following information is for your information only.



15. The following information is for your information only.



16. The following information is for your information only.



17. The following information is for your information only.



18. The following information is for your information only.



19. The following information is for your information only.



20. The following information is for your information only.



21. The following information is for your information only.



22. The following information is for your information only.

 
 


Setting S video on or off

■ KV-27V10I29V10C/29V10M/32S10 only

You can change the S VIDEO menu to ON or OFF.

- 1 Press TV/VIDEO select VIDEO 1.
- 2 Press MENU.
- 3 Press Δ or ∇ to move the cursor (\blacktriangleright) to SET UP and press RETURN.
- 4 Press Δ or ∇ to move the cursor (\blacktriangleright) to S VIDEO and press RETURN.
- 5 Press Δ or ∇ to select ON or OFF and press RETURN.
- 6 Press MENU to return to the original screen.




- Note**
- If S VIDEO appears in black, set a video input to VIDEO 1.
 - If you set S VIDEO to ON, the TV automatically receive S video signals whenever a VCR with S video is connected.




Changing the menu language

■ KV-29R510I29V10C/29V10M only

If you prefer Spanish to English, you can change the menu language.

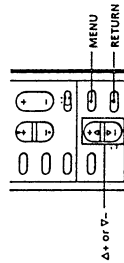

   
- 1 Press MENU.
The main menu appears.
- 2 Press Δ or ∇ to move the cursor (\blacktriangleright) to ENGLISH and press RETURN.
- 3 Press Δ or ∇ to select ESPAÑOL and press RETURN.
- 4 Press MENU to return to the original screen.




- Note**
- Certain parts of the ESPAÑOL menus remain in English.

Operations

Watching the TV

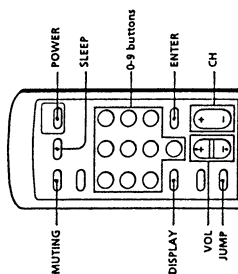

 - 1 Press POWER to turn the TV on.
If "VIDEO" appears on the screen, press the TV/VIDEO button so that a channel number appears.
- 2 Select the channel you want:
To select a channel directly
Press the 0-9 buttons and then press ENTER.




The channel can also be selected without pressing ENTER.

To scan through channels
Press CH \pm until the channel you want appears.



 - 3 Press VOL \pm to adjust the volume.



- Note**
- Set the CABLE BOX/TV selector to TV.
(KV-27V10I29V10C/29V10M only)

Switching quickly between two channels

Press JUMP.
The channel you watched previously appears.



Pressing JUMP again switches back the channel.

Muting the sound

Press MUTING.
"MUTING" appears on the screen.



To restore the sound, press MUTING again, or press VOL \pm .

Displaying on-screen information

Use this feature to check the channel number, channel caption (if set), and MTS mode (if SAP is selected).
Press DISPLAY.



To cancel the display, press DISPLAY again.

Setting the Sleep Timer

The TV stays on for the length of time you specify and then shuts off automatically.
Press SLEEP repeatedly until the time (minutes) you want appears.

Each time you press SLEEP, the time changes as follows: 30 \rightarrow 60 \rightarrow 90 \rightarrow OFF.



To cancel the Sleep Timer, press SLEEP repeatedly until "SLEEP OFF" appears, or turn the TV off.

Setting Picture and Sound

1. Press the **Picture** button on the remote control.

2. Press the **Menu** button on the remote control.

3. Press the **Right** arrow button.

4. Press the **Up** arrow button.

5. Press the **Enter** button.

6. Press the **Left** arrow button.

7. Press the **Enter** button.



8. Press the **Left** arrow button.



9. Press the **Left** arrow button.

10. Press the **Enter** button.

Changing the menu language

1. Press the **Picture** button on the remote control.

2. Press the **Menu** button on the remote control.

3. Press the **Right** arrow button.

4. Press the **Up** arrow button.

5. Press the **Enter** button.



6. Press the **Left** arrow button.



7. Press the **Left** arrow button.



8. Press the **Left** arrow button.



9. Press the **Left** arrow button.

10. Press the **Enter** button.

Watching the TV

1. Press the **Power** button on the remote control.

2. Press the **Menu** button on the remote control.

3. Press the **Right** arrow button.

4. Press the **Up** arrow button.

5. Press the **Enter** button.



6. Press the **Left** arrow button.



7. Press the **Left** arrow button.



8. Press the **Left** arrow button.



9. Press the **Left** arrow button.

10. Press the **Enter** button.

Setting the TV

1. Press the **Picture** button on the remote control.

2. Press the **Menu** button on the remote control.

3. Press the **Right** arrow button.

4. Press the **Up** arrow button.

5. Press the **Enter** button.



6. Press the **Left** arrow button.



7. Press the **Left** arrow button.



8. Press the **Left** arrow button.




9. Press the **Left** arrow button.


10. Press the **Enter** button.

Adjusting the picture (VIDEO)

When watching TV programs, you can adjust the quality of the picture to suit your taste. You can adjust the picture of video input(s) as well. These settings are stored separately from those for the TV picture.

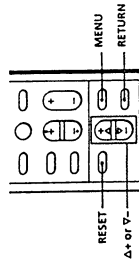


 - 1 Press MENU.
- 2 Make sure the cursor (P) is beside VIDEO and press RETURN.




- 3 Select the item you want to adjust.

 For example:
(1) To adjust brightness, press Δ+ or ∇- to select BRIGHT and,




 - (2) press RETURN.




- 4 Adjust the selected item:

 (1) Press Δ+ or ∇- to adjust the item and,



- (2) press RETURN.

 The new setting appears in the VIDEO menu.



For details on each item, see "Description of adjustable items" below.

- 5 To adjust other items, repeat steps 3 and 4.

Description of adjustable items			
Item	Press Δ+ to	Press ∇- to	
PICTURE	Increase picture contrast and give vivid color	Decrease picture contrast and give soft color	
HUE	Make skin tones become greenish	Make skin tones become purplish	
COLOR	Increase color intensity	Decrease color intensity	
BRIGHT	Brighten the picture	Darken the picture	
SHARP	Sharpen the picture	Soften the picture	


To restore the factory settings

Press RESET while the VIDEO menu is displayed. All the settings are restored to the factory settings.

Adjusting screen brightness automatically (LUMISPONDER)

■ KV-27V10/29V10C/29V10M only

The LUMISPONDER feature adjusts the brightness of the screen automatically according to the ambient brightness. The LUMISPONDER function automatically adjusts the level set by the user in the VIDEO menu to the standard.

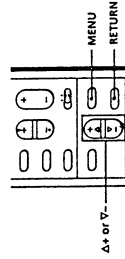

- 1 Press MENU.
- 2 Press Δ+ or ∇- to select VIDEO and press RETURN.
- 3 Press Δ+ or ∇- to select LUMISPONDER and press RETURN.




- 4 Press Δ+ or ∇- to select ON or OFF and press RETURN.



Adjusting the sound (AUDIO)

You can adjust the quality of the sound to suit your taste.

You can adjust the sound of video input(s) as well. These settings are stored separately from those for the TV sound.

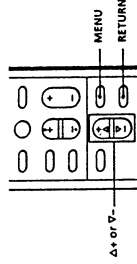


- 1 Press MENU.
- 2 Press Δ+ or ∇- to select AUDIO and press RETURN.




- 3 Select the item you want to adjust.

 For example:
(1) To adjust bass, press Δ+ or ∇- to select BASS and,



 - (2) press RETURN.



Call 800-845-6130

1998

- 



adjusting screen
brightness
temperature

100

1. **Introduction**

- 1000



Understanding the world

1000

- 
 NIST
 National Institute of Standards and Technology
 Gaithersburg, MD 20899-1000
 Telephone: 301-975-3000
 Fax: 301-975-2855
 E-mail: info@nist.gov



 
4 Adjust the selected item:

- (1) Press Δ or ∇ to adjust the item and,



- (2) press RETURN.

The new setting appears in the AUDIO menu.



For details on each item, see "Description of adjustable items" below.

5 To adjust other items, repeat steps 3 and 4 above.

Item	Press Δ to	Press ∇ to
TREBLE	Increase the treble response	Decrease the treble response
BASS	Increase the bass response	Decrease the bass response
BALANCE	Emphasize the right speaker's volume	Emphasize the left speaker's volume

To restore the factory settings

Press RESET while the AUDIO menu is displayed.


Note

- When SPEAKER (page 17) is OFF and AUDIO OUT (page 18) is FIXED condition, sound menu appears mid-level setting and it cannot be adjusted.

Listening to surround sound (SURROUND)

KV-27V1029V10C29V10M only

SURROUND feature simulate sound reproduction with the atmosphere of a movie theater or a concert hall. Surround sound is only effective for stereo programs.

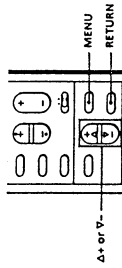

- 1 Press MENU.
- 2 Press Δ or ∇ to select AUDIO and press RETURN.
- 3 Press Δ or ∇ to select SURROUND and press RETURN.




- 4 Press Δ or ∇ to select ON and press RETURN.



Selecting stereo or bilingual programs (MTS)

The Multichannel TV Sound (MTS) feature allows you to enjoy stereo sound or Second Audio Programs (SAP) at your choice. The initial setting is stereo sound (MAIN).

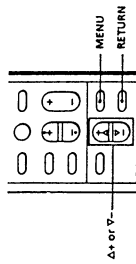

- 1 Press MENU.
- 2 Press Δ or ∇ to select AUDIO and press RETURN.
- 3 Press Δ or ∇ to select MTS and press RETURN.



- 4 Press Δ or ∇ to select MAIN, SAP, or MONO and press RETURN.



Choose	To
MAIN	Listen to stereo sound. The STEREO indicator on the TV lights up while a stereo broadcast is received.
SAP	Listen to bilingual programs. The sound of non-SAP programs will be muted when SAP is selected.
MONO	Reduce noise during stereo broadcasts.


Note

- Stereo and SAP sounds are subject to program sources.

Setting the speaker switch (SPEAKER)

KV-27V1029V10C29V10M only


You may switch off the TV speakers when, for example, you want to listen to the sound through a stereo system.

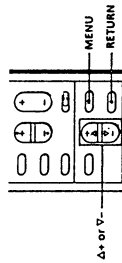

- 1 Press MENU.
- 2 Press Δ or ∇ to select AUDIO and press RETURN.
- 3 Press Δ or ∇ to select SPEAKER SWITCH and press RETURN.



 - 4 Make sure the cursor (>) is beside SPEAKER and press RETURN.



- 5 Press Δ or ∇ to select ON or OFF and press RETURN.



4. Press the **OK** button to confirm the selection.



5. Press the **OK** button to confirm the selection.



6. Press the **OK** button to confirm the selection.

7. Press the **OK** button to confirm the selection.

8. Press the **OK** button to confirm the selection.

9. Press the **OK** button to confirm the selection.

Listening to surround sound

1. Press the **OK** button to confirm the selection.



2. Press the **OK** button to confirm the selection.

3. Press the **OK** button to confirm the selection.

4. Press the **OK** button to confirm the selection.



5. Press the **OK** button to confirm the selection.



Selecting stereo or bilingual programs

1. Press the **OK** button to confirm the selection.



2. Press the **OK** button to confirm the selection.

3. Press the **OK** button to confirm the selection.

4. Press the **OK** button to confirm the selection.



5. Press the **OK** button to confirm the selection.



Setting the speaker switch channel

1. Press the **OK** button to confirm the selection.



2. Press the **OK** button to confirm the selection.

3. Press the **OK** button to confirm the selection.

4. Press the **OK** button to confirm the selection.




5. Press the **OK** button to confirm the selection.



Setting audio out (AUDIO OUT)

■ KV-27V1029V10C/29V10M only

You can select audio out to variable or fixed when SPEAKER is set to OFF. Audio out is variable when SPEAKER is set to ON.

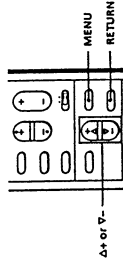

- 1 Press MENU.
- 2 Press Δ + or ∇ - to select AUDIO and press RETURN.
- 3 Press Δ + or ∇ - to select SPEAKER SWITCH and press RETURN.



- 4 Press Δ + or ∇ - to select AUDIO OUT and press RETURN.
- 5 Press Δ + or ∇ - to select VAR or FIXED and press RETURN.




VAR: Sound output varied according to the TV settings. You can adjust the volume, bass, treble and balance.
FIXED: Sound output is always fixed to a certain level.
 You cannot adjust the volume.

Customizing the channel number buttons (CH CAPTION/ GUIDE)

You can choose up to 12 channels, caption each channel, and assign a specific channel number button to each channel. This feature allows you to select your favorite channels easily by name. For example, you can name channel 20 "ESPN," and assign the channel number 4 button to it.

Setting captions to favorite channels

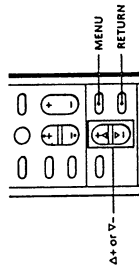

- 1 Press TV/VIDEO to select TV mode.
- 2 Press MENU.
- 3 Press Δ + or ∇ - to select SET UP and press RETURN.

- 4 Press Δ + or ∇ - to select CH CAPTION/ GUIDE and press RETURN.



- 5 Press RETURN again.

 


- 6 Press Δ + or ∇ - to select a channel guide number button and press RETURN.

Each time you press Δ + or ∇ -, the channel numbers change to red in turns. The channel number button you select will be the one you press to call up your favorite channel.



- 7 Press Δ + or ∇ - to select the channel that you want to caption and press RETURN.




- 8 Enter the letters (up to four) to caption the channel:

(1) Press Δ + or ∇ - to select the first letter. Each time you press Δ + or ∇ -, the letter changes as shown below and,



 - (2) press RETURN.



- (3) Repeat steps (1) and (2) to select the remaining letters and press RETURN.




- 9 Repeat step 5 to 7 to caption other channels.

To erase a caption Press RESET after step 5.


Notes

- The position number you already selected appears in yellow.
- If the CH CAPTION/ GUIDE menu appears in black, the TV is set to a video input and you cannot select CH CAPTION/ GUIDE.
- Press TV/VIDEO to select TV mode.
- If more than 90 seconds elapse after you press a button, the menu disappears automatically.

Selecting a captioned channel

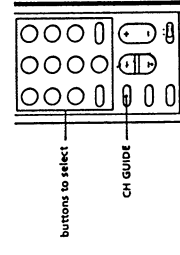

 - 1 Press CH GUIDE. The CHANNEL GUIDE menu appears showing channel captions and the corresponding channel number buttons.



- 2 Press a channel number button, the DISPLAY or ENTER button to select the channel you want.

To cancel the CHANNEL GUIDE menu Press CH GUIDE again.

Setting radio out

display only

1 Press **ENTER** to enter the menu.

2 Press **DOWN** to select **radio out** and press **ENTER** to confirm.



3 Press **ENTER**.

4 Press **DOWN** to select **radio out** and press **ENTER** to confirm.

5 Press **ENTER** to confirm the selection.



6 Press **DOWN** to select **radio out** and press **ENTER** to confirm.



7 Press **ENTER** to confirm the selection.



8 Press **ENTER** to confirm the selection.

9 Press **ENTER** to confirm the selection.

Customising the channel number buttons on screen

display

1 Press **ENTER** to enter the menu.

2 Press **DOWN** to select **channel number** and press **ENTER** to confirm.



3 Press **ENTER** to confirm the selection.

4 Press **DOWN** to select **channel number** and press **ENTER** to confirm.

5 Press **ENTER** to confirm the selection.



6 Press **ENTER** to confirm the selection.



7 Press **ENTER** to confirm the selection.

8 Press **ENTER** to confirm the selection.



9 Press **ENTER** to confirm the selection.



10 Press **ENTER** to confirm the selection.

11 Press **ENTER** to confirm the selection.



12 Press **ENTER** to confirm the selection.



13 Press **ENTER** to confirm the selection.



14 Press **ENTER** to confirm the selection.

15 Press **ENTER** to confirm the selection.



16 Press **ENTER** to confirm the selection.



17 Press **ENTER** to confirm the selection.

18 Press **ENTER** to confirm the selection.



19 Press **ENTER** to confirm the selection.




20 Press **ENTER** to confirm the selection.



Setting video labels (VIDEO LABEL)

■ KV-27V1029V10C29V10M only

This feature allows you to label each input mode so that you can easily identify the connected equipment. For example, you can label VIDEO 1 IN as VHS.

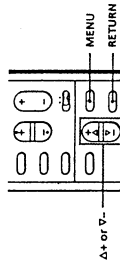

- 1 Press MENU.
- 2 Press Delta+ or Delta- to select SET UP and press RETURN.
- 3 Press Delta+ or Delta- to select VIDEO LABEL and press RETURN.



- 4 Press Delta+ or Delta- to select the input mode you want to label and press RETURN.



- 5 Press Delta+ or Delta- to select the label and press RETURN.



Each time you press Delta+ or Delta-, the label changes as shown below.

VIDEO 1
VIDEO 1 → S VIDEO → BETA → 8 mm → VHS → LD
VIDEO 2
VIDEO 2 → BETA → 8 mm → VHS → LD
VIDEO 3
VIDEO 3 → BETA → 8 mm → VHS → LD


- 6 Repeat steps 4 and 5 to label other input modes.

Note
• If more than 90 seconds elapse after you press a button, the menu disappears automatically.

Displaying Caption Vision (CAPTION VISION)

■ KV-27S1027V10I32S10 only

Some source programs provide with Caption Vision (Closed Caption). To display Caption Vision, select either CC1, CC2, TEXT1, or TEXT2 from the menu. CC1 or CC2 shows you a caption, that is a printed version of the dialog or sound effects of a program. (The mode should be set to CC1 for most programs.) TEXT1 or TEXT2 shows you text, that is information presented using half to full of the screen. It is not usually related to the program.

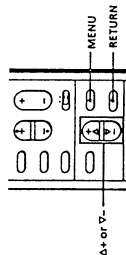

- 1 Press MENU.
- 2 Press Delta+ or Delta- to select CAPTION VISION and press RETURN.



- 3 Press Delta+ or Delta- to select the caption type and press RETURN.




Note
• Captions may appear with a white box or another error instead of a certain word. Poor reception of TV programs can also cause errors in Caption Vision.

Operating video equipment

■ KV-27V1029V10C29V10M only

You can operate video equipment that has an infrared remote sensor with the supplied remote commander. For the operations, set the manufacturer's code number.

Setting the manufacturer's code

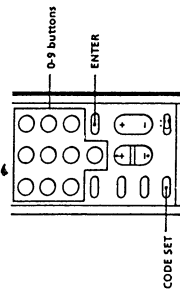

While pressing CODE SET, press 0-9 to enter the manufacturer's code number (see the chart on the next page). For example, to operate a Sony 8 mm VCR, press 0, 2 and ENTER.



The code numbers for Sony equipment are assigned as follows:

- 01 Beta, ED Beta VCR
- 02 8 mm VCR
- 03 VHS VCR (Factory setting)
- 04 MDP

Setting video labels VIDEO LABEL

1. Press the [VIDEO] button

The video label is set to the default value of 0000. Press the [VIDEO] button to change the video label.



2. Press [0-9]

Press the [0-9] button to set the video label.

3. Press the [ENTER] button

The video label is set to the value you entered.



4. Press the [0-9] button to set the video label

The video label is set to the value you entered.



5. Press the [0-9] button

The video label is set to the value you entered.



The video label is set to the value you entered.

The video label is set to the value you entered.

The video label is set to the value you entered.

The video label is set to the value you entered.

The video label is set to the value you entered.

The video label is set to the value you entered.

The video label is set to the value you entered.

The video label is set to the value you entered.

Displaying Caption VIDEO CAPTION

1. Press the [VIDEO] button

The video caption is set to the default value of 0000. Press the [VIDEO] button to change the video caption.



2. Press [0-9]

Press the [0-9] button to set the video caption.

3. Press the [ENTER] button

The video caption is set to the value you entered.



4. Press the [0-9] button to set the video caption

The video caption is set to the value you entered.



Operating video equipment

1. Press the [VIDEO] button

The video equipment is set to the default value of 0000. Press the [VIDEO] button to change the video equipment.



2. Press [0-9]

Press the [0-9] button to set the video equipment.

3. Press the [ENTER] button

The video equipment is set to the value you entered.




4. Press the [0-9] button to set the video equipment

The video equipment is set to the value you entered.



● KV-27V15/32V15

Step 1: Hookup

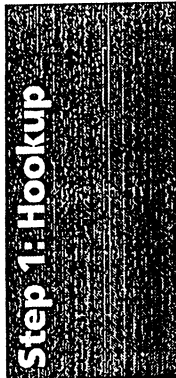


Connecting an antenna/cable TV system with a VCR

To connect your VCR to the TV, first check the model number of your TV and select the corresponding connection. For details on connection, see the instruction manual of your VCR. Before making connection, disconnect the AC power cords of the equipment to be connected.

Without a cable box

After making these connections, you will be able to do the following:

- View the playback of video tapes
- Record one TV program while viewing another Program
- Watch two TV programs at once using a window Picture (Picture in Picture)

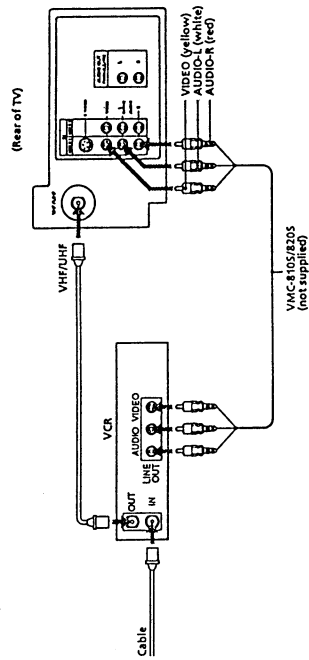


Note


- To connect a monaural VCR, connect the audio output of the VCR to AUDIO-L (mono) of VIDEO 1 IN on the TV.

To an S video equipped VCR without a cable box

If your VCR has an S video output jack, hook up as follows and then set S VIDEO to ON on your TV (page 12). It is set to ON at the factory.

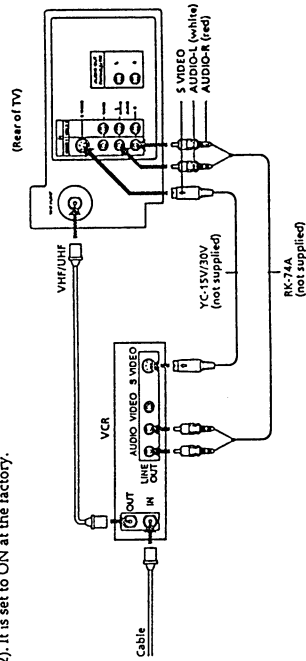


With a cable box

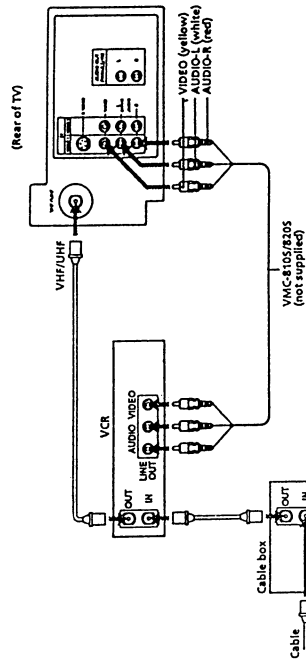

Note

- To connect a monaural VCR, connect the audio output of the VCR to AUDIO-L (mono) of VIDEO 1 IN on the TV.

To an S video equipped VCR with a cable box

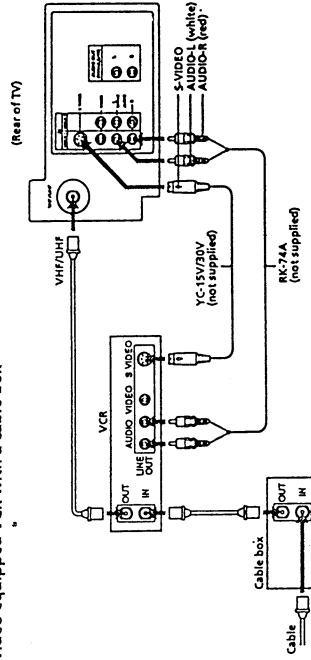


Note

- Video signals are composed of Y (luminance) and C (chroma) signals. The S connection sends the two signals separately, preventing degradation, and gives better picture quality compared to conventional connection.

Connecting a camcorder

KV-27V15/32S15/32V15 only

This connection is convenient for viewing a camcorder.

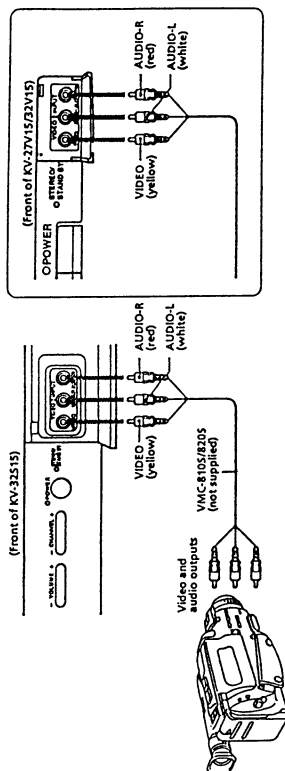


Note

- To connect a monaural camcorder, connect the audio output of the VCR to AUDIO-L (mono) of VIDEO 2 INPUT on the TV.

Connecting an audio system

When connecting audio equipment, see page 20 for more information.

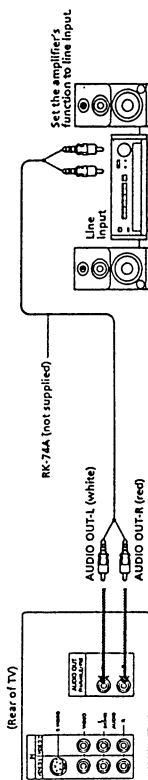


Connecting other Sony equipment with CONTROL S jack

KV-27V15/32V15 only

Connect the supplied cable box controller (Cable Mouse) to the CONTROL S OUT jack. Refer to the Cable Mouse's manual for details on the connection.

 (Rear of TV)



- Make the following connections to control the TV and connected equipment with one remote commander.
- To control other Sony equipment with the TV's remote commander, connect the input of the equipment to CONTROL S OUT jack on the TV.
 - To control the TV with the remote commander of other Sony equipment, connect the output of the equipment to CONTROL S IN jack on the TV.

Step 2: Setting up the remote commander

Insert one size AA (R6) battery (supplied) by matching the + and - on the battery to the diagram inside the battery compartment.




Notes

- With normal use, the battery should last for approximately six months.
- If you do not use the remote commander for an extended period of time, remove the battery to avoid possible damage from battery leakage.
- Do not handle the remote commander roughly. Do not drop it, step on it or let it get wet.
- Do not place the remote commander in direct sunlight, near a heater, or where the humidity is high.


Using the remote commander

The upper half of the remote commander has three selectable operation modes. Each button in this area has three different functions. You can select the mode by sliding a selector on the left side.


For normal TV viewing

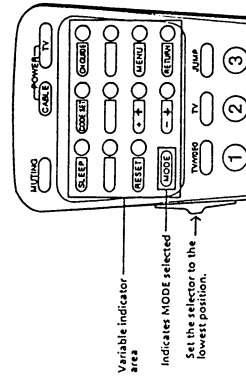

For operating video equipment

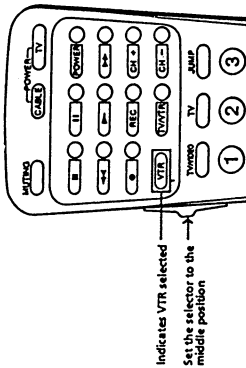

For using the Picture-in-Picture feature

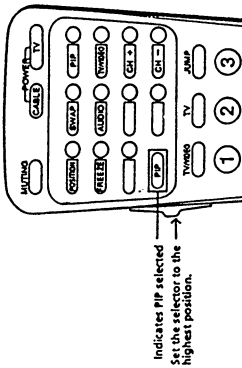

Step 2: Setting up the remote:

1000

 


100

...the ...



1



100

10




100



Step 3: Setting up the TV automatically (AUTO SETUP)

For cable box control (Cable Mouse) users (KV-27V15/32V15 only)
Refer to the supplied manual of Cable Mouse on how to set up your TV.

You can set up your TV easily by using AUTO SET UP feature. It presets all the receivable channels. To set up the TV manually, see "Setting cable TV on or off" (page 12) and "Presetting channels" (page 12). If the TV is set to a video input, you cannot execute AUTO SET UP. Press TV/VIDEO or TV so that a channel number appears.

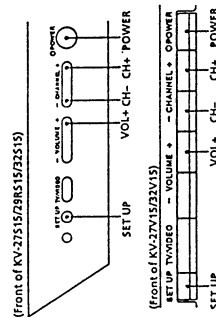

1 Press POWER to turn the TV on.

2 Press SET UP on the front of the TV.

The menu appears.



3 Press CH +.



"AUTO PROGRAM" appears on the screen and the TV starts scanning and presetting channels automatically. When all the receivable channels are stored, "AUTO PROGRAM" disappears and the lowest numbered channel is displayed. If the TV receives cable TV channels, CATV is set to ON automatically.

Note

- If more than 90 seconds elapse after you press a button, the menu disappears automatically.

DEMO: To browse the main functions,

 
Press VOL+ in step 3. The functions and menus are displayed one by one.

FACTORY PRESET: To restore the factory settings when you are confused about the TV settings.

Press CH- in step 3. The settings of picture and sound are restored to the factory setting.


Erasing or adding channels

After AUTO SET UP you can erase unnecessary channels or add the channels you want. Preset channels during the day rather than late at night, when some channels may not be broadcasting.



1 Press MENU.

 
The main menu appears.



(continued)


2 Press + or - to move the cursor (P) to the SET UP and press RETURN.

 The SET UP menu appears.




3 Press + or - to move the cursor (P) to CH SET UP and press RETURN.

 The CH SET UP menu appears.




4 Press + or - to move the cursor (P) to CH ERASE/ADD and press RETURN.

 The CH ERASE/ADD menu appears.



5 Erase and/or add the channel you want:

 - Make sure the cursor (P) is beside ERASE.
- Press CH +/- to select the channel you want to erase and,




(3) press RETURN.
The indication "-" appears beside the channel number, showing that the channel is erased from the preset memory.



To add a channel that you want

 - Press + or - to move the cursor (P) to ADD.
- Press the 0-9 buttons to select the channel you want to add and press ENTER and,



(3) press RETURN.

The indication "+" appears beside the channel number, showing that the channel is added to the preset memory.



6 To erase and/or add other channels, repeat step 5.

7 When you finish, press MENU.



Note

- If you erase or add a VHF or UHF channel, the cable TV channel with the same number is also erased or added, and vice versa.

Step 4: Setting up the TV automatically Approx. 5 min.



After the TV has finished the automatic setup, the screen will show the TV's model number and the date of purchase. The TV will then display the date of purchase and the date of purchase.



1. Connect the TV to a power source and a signal source.

2. Press the **Power** button on the TV to turn it on.

3. Press the **Power** button on the TV to turn it on.

4. Press the **Power** button on the TV to turn it on.

5. Press the **Power** button on the TV to turn it on.

6. Press the **Power** button on the TV to turn it on.

7. Press the **Power** button on the TV to turn it on.

8. Press the **Power** button on the TV to turn it on.

9. Press the **Power** button on the TV to turn it on.

10. Press the **Power** button on the TV to turn it on.

11. Press the **Power** button on the TV to turn it on.

12. Press the **Power** button on the TV to turn it on.

13. Press the **Power** button on the TV to turn it on.

14. Press the **Power** button on the TV to turn it on.

15. Press the **Power** button on the TV to turn it on.

16. Press the **Power** button on the TV to turn it on.

17. Press the **Power** button on the TV to turn it on.

18. Press the **Power** button on the TV to turn it on.

19. Press the **Power** button on the TV to turn it on.

20. Press the **Power** button on the TV to turn it on.

21. Press the **Power** button on the TV to turn it on.

22. Press the **Power** button on the TV to turn it on.

23. Press the **Power** button on the TV to turn it on.

Setting cable TV on or off

For cable box control (Cable Mouse) users (KV-27V1532 V15 only)
Refer to the supplied manual of Cable Mouse on how to set cable TV.

If you have connected the TV to a cable TV system, set CABLE to ON, the factory setting. If not, set CABLE to OFF.
You do not have to do this procedure if you execute AUTO SET UP (page 10). Do this procedure only when you want to set it manually.

- 1 Press MENU.
- 2 Press + + or - - to move the cursor (▶) to SET UP and press RETURN.
- 3 Press + + or - - to move the cursor (▶) to CH SET UP and press RETURN.

CH SET UP
+ CABLE : ON
+ AUTO PROGRAM
+ CH EASER/ADD
+ MENU
Use + + or - - to move the cursor (▶) to CH SET UP and press RETURN.

- 4 Set CABLE to ON or OFF:

- (1) Make sure the cursor (▶) is beside CABLE and press RETURN.
If the cursor is not beside CABLE, press + + or - - to move the cursor and press RETURN.
- (2) Press + + or - - to select ON or OFF and, press RETURN.

CH SET UP
+ CABLE : OFF
+ AUTO PROGRAM
+ CH EASER/ADD
+ MENU
Use + + or - - to move the cursor (▶) to CH SET UP and press RETURN.

- 5 Press MENU to return to the original screen.

Note
If CH SET UP appears in black, the TV is set to a video input and you cannot select CABLE. Press TV/VIDEO or TV so that a channel number appears.

Presetting channels

For cable box control (Cable Mouse) users (KV-27V1532 V15 only)
Refer to the supplied manual of Cable Mouse on how to preset channels.

You can preset TV channels easily by AUTO PROGRAM feature.
You do not have to do this procedure if you execute AUTO SET UP (page 10). Do this procedure only when you want to set it manually.

- 1 Press MENU.
- 2 Press + + or - - to move the cursor (▶) to SET UP and press RETURN.
- 3 Press + + or - - to move the cursor (▶) to CH SET UP and press RETURN.

CH SET UP
+ CABLE : ON
+ AUTO PROGRAM
+ CH EASER/ADD
+ MENU
Use + + or - - to move the cursor (▶) to CH SET UP and press RETURN.

- 4 Press + + or - - to move the cursor (▶) to AUTO PROGRAM and press RETURN.

CH SET UP
+ CABLE : ON
+ AUTO PROGRAM
+ CH EASER/ADD
+ MENU
Use + + or - - to move the cursor (▶) to CH SET UP and press RETURN.

"AUTO PROGRAM" appears on the screen and the TV starts scanning and presetting channels automatically. When all the receivable channels are stored, "AUTO PROGRAM" disappears and the lowest numbered channel is displayed.

- 5 Press MENU to return to the original screen.

Note
If the CH SET UP menu appears in black, the TV is set to a video input and you cannot select AUTO PROGRAM. Press TV/VIDEO or TV so that a channel number appears.

Setting S video on or off

You can change the S VIDEO menu to ON or OFF.

- 1 Press TV/VIDEO to select VIDEO 1.
- 2 Press MENU.
- 3 Press + + or - - to move the cursor (▶) to SET UP and press RETURN.
- 4 Press + + or - - to move the cursor (▶) to S VIDEO and press RETURN.

SET UP
CH CAPTION/GUIDE
CH SET UP
+ S VIDEO : ON
+ MENU
Use + + or - - to move the cursor (▶) to SET UP and press RETURN.

- 5 Press + + or - - to select ON or OFF and press RETURN.

SET UP
CH CAPTION/GUIDE
CH SET UP
+ S VIDEO : OFF
+ MENU
Use + + or - - to move the cursor (▶) to SET UP and press RETURN.

 
- 6 Press MENU to return to the original screen.

Notes
• If S VIDEO appears in black, set a video input to VIDEO 1.
• If you set S VIDEO to ON, the TV automatically receives S video signals whenever a VCR with S video is connected.

Changing the menu language

■ KV-29RS15 only

If you prefer Spanish to English, you can change the menu language.



- 1 Press MENU.

The main menu appears.

MENU
VIDEO
AUDIO
SET UP
BACK LTR
Use + + or - - to move the cursor (▶) to MENU and press RETURN.

- 2 Press + + or - - to move the cursor (▶) to ENGLISH and press RETURN.

VIDEO
AUDIO
SET UP
BACK LTR
Use + + or - - to move the cursor (▶) to ENGLISH and press RETURN.

- 3 Press + + or - - to select ESPAÑOL and press RETURN.


VIDEO
AUDIO
SET UP
BACK LTR
Use + + or - - to move the cursor (▶) to ESPAÑOL and press RETURN.

- 4 Press MENU to return to the original screen.

Note
• Certain parts of the ESPAÑOL menus remain in English.



For cable box control, (Cable Mouse) users
(KV-27V15/27V15 only)
Refer to the supplied manual of Cable Mouse on
How to watch the TV using the Cable box control.

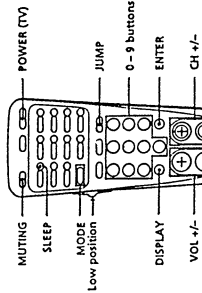

1 Press POWER (TV) to turn the TV on.



If "VIDEO" appears on the screen, press the TV / VIDEO or TV button so that a channel number appears.

2 Select the channel you want:

To select a channel directly
Press the 0-9 buttons and then press ENTER.



 
The channel can also be selected without pressing ENTER.

To scan through channels

Press CH +/- until the channel you want appears.



3 Press VOL +/- to adjust the volume.



Note

- Set the CABLE BOX/TV selector to TV.

Switching quickly between two channels

Press JUMP.

The channel you watched previously appears.



Pressing JUMP again switches back the channel.

Muting the sound

Press MUTE.

"MUTING" appears on the screen.



To restore the sound, press MUTE again, or press VOL +.

Displaying on-screen information

Use this feature to check the channel number, channel caption (if set), and MTS mode (if SAP is selected). Press DISPLAY.



To cancel the display, press DISPLAY again.

Setting the Sleep Timer


The TV stays on for the length of time you specify and then shuts off automatically.

Press SLEEP repeatedly until the time (minutes) you want appears.


Each time you press SLEEP, the time changes as follows: 30 → 60 → 90 → OFF.



To cancel the Sleep Timer, press SLEEP repeatedly until "SLEEP OFF" appears, or turn the TV off.

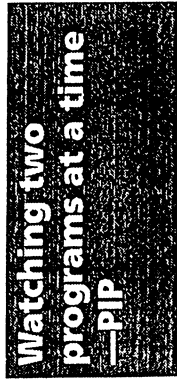


 The Picture-in-Picture (PIP) feature allows you to watch both the main picture and a window picture simultaneously. You can watch two TV channels at a time with this feature. See "Connecting an antenna/cable TV system with a VCR" (page 6) for connections.




Displaying a window picture

Press PIP.

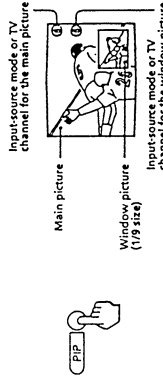

 Press PIP again to display a smaller window picture.



To remove the window picture, press PIP again.

Notes

- If the main picture is not receiving an image, the window picture may be in black and white.
- The window picture may be affected by the condition of the main picture.
- The window picture sound is also output from the VARIABLE/FIX AUDIO OUT jacks when you listen to it.

Changing the window picture input mode

Press TV/VIDEO in the PIP control area to select the input mode.

Each time you press TV/VIDEO, "TV", "VIDEO 1", "VIDEO 2", and "VIDEO 3 (except for KV-27S15/29RS15)" appear in sequence.

 


A window picture will appear in the same input mode as the last time you used PIP.

Listening to the sound of the window picture

Press AUDIO.

The \mathbf{A} display appears for a few seconds, indicating that the window picture sound is being received.



To restore the main picture sound, press AUDIO again.

 
Changing TV channels in the window picture

Press CH +/- in the PIP control area.




Changing the position of the window picture

Press POSITION.
Each time you press POSITION, the window picture will move counterclockwise on the screen.



Freezing the window picture

 
This feature is useful when you want to write down a recipe from a cooking program, a displayed address or a phone number and so on.
Press FREEZE.



To restore the normal screen, press FREEZE again.

Swapping the main and window pictures

Press SWAP.
Each time you press SWAP, the images from the main and window pictures switch places along with the sound.

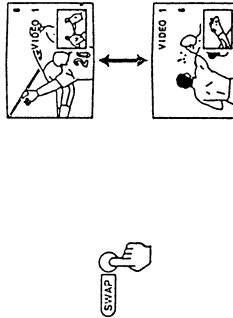


Note

- The channels being received through the AUX jack cannot be displayed as a window picture (KV-32V15 only).


Adjusting the picture (VIDEO)

 When watching TV programs, you can adjust the quality of the picture to suit your taste.
You can adjust the picture of video input(s) as well. These settings are stored separately from those for the TV picture.



1 Press MENU.

 2 Make sure the cursor (▶) is beside VIDEO and press RETURN.



3 Select the item you want to adjust.

For example:
(1) To adjust brightness, press + or - to select BRIGHT and,

 


(2) press RETURN.




4 Adjust the selected item:

(1) Press + or - to adjust the item and,



(2) press RETURN.

 The new setting appears in the VIDEO menu.



For details on each item, see "Description of adjustable items" below.

5 To adjust other items, repeat steps 3 and 4.

Description of adjustable items

Item	Press + to	Press - to
PICTURE	Increase picture contrast and give vivid color	Decrease picture contrast and give soft color
HUE	Make skin tones become greenish	Make skin tones become purplish
COLOR	Increase color intensity	Decrease color intensity
BRIGHT	Brighten the picture	Darken the picture
SHARP	Sharpen the picture	Soften the picture

 
To restore the factory settings

Press RESET while the VIDEO menu is displayed.
All the settings are restored to the factory settings.

Adjusting screen brightness automatically (LUMISPONDER)

■ KV-27V15/32V15 only

The LUMISPONDER feature adjusts the brightness of the screen automatically according to the ambient brightness. The LUMISPONDER function automatically adjusts the level set by the user in the VIDEO menu to the standard.



1 Press MENU.

2 Press + or - to select VIDEO and press RETURN.

3 Press + or - to select LUMISPONDER and press RETURN.



4 Press + or - to select ON or OFF and press RETURN.



Adjusting the position of the window

Click on the window title bar and drag the window to the desired position.



Resizing the window picture

Click on the window title bar and drag the window to the desired position.



Zooming the window picture

Click on the window title bar and drag the window to the desired position.

Click on the window title bar and drag the window to the desired position.



Click on the window title bar and drag the window to the desired position.

Adjusting the picture picture

Click on the window title bar and drag the window to the desired position.



Click on the window title bar and drag the window to the desired position.



Click on the window title bar and drag the window to the desired position.



Click on the window title bar and drag the window to the desired position.



Adjusting the picture picture

Click on the window title bar and drag the window to the desired position.



Click on the window title bar and drag the window to the desired position.



Click on the window title bar and drag the window to the desired position.



Click on the window title bar and drag the window to the desired position.



Adjusting screen brightness automatically

Click on the window title bar and drag the window to the desired position.



Click on the window title bar and drag the window to the desired position.

 


Click on the window title bar and drag the window to the desired position.




Adjusting the sound (AUDIO)

You can adjust the quality of the TV sound to suit your taste.
You can adjust the sound of video input(s) as well.
These settings are stored separately from those for the TV sound.



 
- 1 Press MENU.
- 2 Press \leftarrow or \rightarrow to select AUDIO and press RETURN.
- 3 Select the item you want to adjust.
For example:
(1) To adjust bass, press \leftarrow or \rightarrow to select BASS and,



- (2) press RETURN.



 - 4 Adjust the selected item:
(1) Press \leftarrow or \rightarrow to adjust the item and,
(2) press RETURN.
The new setting appears in the AUDIO menu.



For details on each item, see "Description of adjustable items" below.

- 5 To adjust other items, repeat steps 3 and 4 above.


Description of adjustable items	
Item	Press \leftarrow or \rightarrow to
TREBLE	Increase the treble response
BASS	Increase the bass response
BALANCE	Emphasize the right speaker's volume
	Emphasize the left speaker's volume

To restore the factory settings
Press RESET while the AUDIO menu is displayed.

Note
• When SPEAKER (page 20) is OFF and AUDIO OUT (page 20) is FIXED condition, the sound is set to mid-level and it cannot be adjusted.

Listening to surround sound (SURROUND)

 
SURROUND feature simulates sound reproduction with the atmosphere of a movie theater or a concert hall. Surround sound is only effective for stereo programs.



- 1 Press MENU.
- 2 Press \leftarrow or \rightarrow to select AUDIO and press RETURN.
- 3 Press \leftarrow or \rightarrow to select SURROUND and press RETURN.




 - 4 Press \leftarrow or \rightarrow to select ON and press RETURN.



Selecting stereo or bilingual programs (MTS)

 The Multichannel TV Sound (MTS) feature allows you to enjoy stereo sound or Second Audio Programs (SAP) at your choice. The initial setting is stereo sound (MAIN).



- 1 Press MENU.
- 2 Press \leftarrow or \rightarrow to select AUDIO and press RETURN.
- 3 Press \leftarrow or \rightarrow to select MTS and press RETURN.
- 4 Press \leftarrow or \rightarrow to select MAIN, SAP, or MONO and press RETURN.



Choose	To
MAIN	Listen to stereo sound. The STEREO indicator on the TV lights up while a stereo broadcast is received.
SAP	Listen to bilingual programs. The sound of non-SAP programs will be muted when SAP is selected.
MONO	Reduce noise during stereo broadcasts.

Note
• Stereo and SAP sounds are subject to program sources.

Adjusting the sound

Windows

The sound icon in the Windows taskbar is used to adjust the sound settings. To adjust the sound settings, click the sound icon in the Windows taskbar.



1. Click the sound icon.

2. Click the sound icon in the Windows taskbar.



3. Click the sound icon in the Windows taskbar.

4. Click the sound icon in the Windows taskbar.



5. Click the sound icon in the Windows taskbar.



6. Click the sound icon in the Windows taskbar.

Adjusting the sound

Windows

The sound icon in the Windows taskbar is used to adjust the sound settings. To adjust the sound settings, click the sound icon in the Windows taskbar.



1. Click the sound icon.

2. Click the sound icon in the Windows taskbar.



3. Click the sound icon in the Windows taskbar.

4. Click the sound icon in the Windows taskbar.



5. Click the sound icon in the Windows taskbar.



6. Click the sound icon in the Windows taskbar.

Listening to surround sound

Windows

The sound icon in the Windows taskbar is used to adjust the sound settings. To adjust the sound settings, click the sound icon in the Windows taskbar.



1. Click the sound icon.

2. Click the sound icon in the Windows taskbar.



3. Click the sound icon in the Windows taskbar.

4. Click the sound icon in the Windows taskbar.



5. Click the sound icon in the Windows taskbar.



6. Click the sound icon in the Windows taskbar.

Selecting Stereo or Multichannel programs

Windows

The sound icon in the Windows taskbar is used to adjust the sound settings. To adjust the sound settings, click the sound icon in the Windows taskbar.



1. Click the sound icon.

2. Click the sound icon in the Windows taskbar.



3. Click the sound icon in the Windows taskbar.

4. Click the sound icon in the Windows taskbar.



 
5. Click the sound icon in the Windows taskbar.



6. Click the sound icon in the Windows taskbar.

Setting the speaker switch (SPEAKER)

You may switch off the TV speakers when, for example, you want to listen to the sound through a stereo system.




- 1 Press MENU.
- 2 Press \uparrow or \downarrow to select AUDIO and press RETURN.

- 3 Press \uparrow or \downarrow to select SPEAKER SWITCH and press RETURN.



 - 4 Make sure the cursor (P) is beside SPEAKER and press RETURN.




- 5 Press \uparrow or \downarrow to select ON or OFF and press RETURN.



Setting audio out (AUDIO OUT)

 You can select audio out to variable or fixed when SPEAKER is set to OFF.
Audio out is variable when SPEAKER is set to ON.



- 1 Press MENU.
- 2 Press \uparrow or \downarrow to select AUDIO and press RETURN.

- 3 Press \uparrow or \downarrow to select SPEAKER SWITCH and press RETURN.



- 4 Press \uparrow or \downarrow to select AUDIO OUT and press RETURN.



- 5 Press \uparrow or \downarrow to select VAR or FIXED and press RETURN.




VAR: Sound output varied according to the TV settings. You can adjust the volume, bass, treble and balance.
FIXED: Sound output is always fixed to a certain level. You cannot adjust the volume.

Customizing the channel number buttons (CH CAPTION/GUIDE)

For cable box control (Cable Mouse) users (KV-27V15 (3V15 only))
Make the setting of Cable Mouse before customizing the channel number buttons.

You can choose up to 12 channels, caption each channel, and assign a specific channel number button to each channel. This feature allows you to select your favorite channels easily by name. For example, you can name channel 20 "ESPN," and assign the channel number 4 button to it.

Setting captions to favorite channels

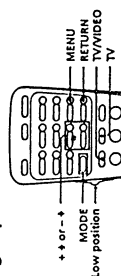

- 1 Press TV/VIDEO or TV to select TV mode.

 
- 2 Press MENU.

- 3 Press \uparrow or \downarrow to select SET UP and press RETURN.

- 4 Press \uparrow or \downarrow to select CH CAPTION/GUIDE and press RETURN.



- 5 Press RETURN again.



- 6 Press \uparrow or \downarrow to select a channel guide number button and press RETURN.
Each time you press \uparrow or \downarrow , the channel positions change to red in turns. The channel number button you select will be the one you press to call up your favorite channel.

 


- 7 Press \uparrow or \downarrow to select the channel that you want to caption and press RETURN.




- 8 Enter the letters (up to four) to caption the channel:

(1) Press \uparrow or \downarrow to select the first letter.
Each time you press \uparrow or \downarrow , the letter changes as shown below and,



 - (2) Press RETURN.



- (3) Repeat steps (1) and (2) to select the remaining letters and press RETURN.



(continued)

Setting the speaker output channels

Settings related to the speaker output can be made in the menu **Settings** → **Speaker**.



1. Press **ENTER**.
2. Press **1** to select **Speaker output** and press **ENTER**.
3. Press **1** to select **Speaker layout** and press **ENTER**.
4. Press **1** to select **Speaker layout** and press **ENTER**.
5. Press **1** to select **Speaker layout** and press **ENTER**.
6. Press **1** to select **Speaker layout** and press **ENTER**.



Setting audio out - Channel mix

Settings related to the audio output can be made in the menu **Settings** → **Audio**.



1. Press **ENTER**.
2. Press **1** to select **Audio output** and press **ENTER**.
3. Press **1** to select **Audio output** and press **ENTER**.
4. Press **1** to select **Audio output** and press **ENTER**.
5. Press **1** to select **Audio output** and press **ENTER**.
6. Press **1** to select **Audio output** and press **ENTER**.



Customizing the channel mixing software and settings

Page 10



Settings related to the channel mixing can be made in the menu **Settings** → **Channel mixing**.

Settings related to the channel mixing can be made in the menu **Settings** → **Channel mixing**.

Settings related to the channel mixing can be made in the menu **Settings** → **Channel mixing**.

Settings related to the channel mixing can be made in the menu **Settings** → **Channel mixing**.

Settings related to the channel mixing can be made in the menu **Settings** → **Channel mixing**.

Settings related to the channel mixing can be made in the menu **Settings** → **Channel mixing**.

Settings related to the channel mixing can be made in the menu **Settings** → **Channel mixing**.

Settings related to the channel mixing can be made in the menu **Settings** → **Channel mixing**.

Settings related to the channel mixing can be made in the menu **Settings** → **Channel mixing**.

Settings related to the channel mixing can be made in the menu **Settings** → **Channel mixing**.

Settings related to the channel mixing can be made in the menu **Settings** → **Channel mixing**.

Settings related to the channel mixing can be made in the menu **Settings** → **Channel mixing**.

Settings related to the channel mixing can be made in the menu **Settings** → **Channel mixing**.

Settings related to the channel mixing can be made in the menu **Settings** → **Channel mixing**.

Settings related to the channel mixing can be made in the menu **Settings** → **Channel mixing**.

Settings related to the channel mixing can be made in the menu **Settings** → **Channel mixing**.

- 6** Repeat steps 4 and 5 to label other input modes.

1. Connect the video cable to the video input on the back of the monitor.
2. Turn on the monitor.

The video cable is connected to the video input on the back of the monitor. The video cable is connected to the video input on the back of the monitor. The video cable is connected to the video input on the back of the monitor.

Make sure the video cable is connected to the video input on the back of the monitor.



1. Turn on the monitor.
2. Turn on the video source.



3. Turn on the video source.
4. Turn on the video source.

Setting video inputs

The video cable is connected to the video input on the back of the monitor. The video cable is connected to the video input on the back of the monitor. The video cable is connected to the video input on the back of the monitor.

Make sure the video cable is connected to the video input on the back of the monitor.



1. Turn on the monitor.
2. Turn on the video source.



3. Turn on the video source.
4. Turn on the video source.



3. Turn on the video source.



Make sure the video cable is connected to the video input on the back of the monitor.



4. Turn on the video source.

Make sure the video cable is connected to the video input on the back of the monitor.

Displaying CapView Motion picture mode

The video cable is connected to the video input on the back of the monitor. The video cable is connected to the video input on the back of the monitor. The video cable is connected to the video input on the back of the monitor.

Make sure the video cable is connected to the video input on the back of the monitor.



1. Turn on the monitor.
2. Turn on the video source.



3. Turn on the video source.




Make sure the video cable is connected to the video input on the back of the monitor.

Operating video equipment

You can operate video equipment that has an infrared remote sensor with the supplied remote commander. For the operations, set the manufacturer's code number.

Setting the manufacturer's code

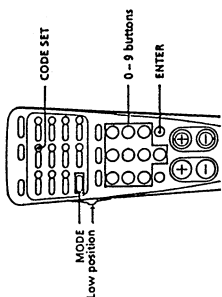

While pressing CODE SET, press 0 - 9 to enter the manufacturer's code number (see the chart in the right column). For example, to operate a Sony 8 mm VCR, press 0, 2 and ENTER.



The code numbers for Sony equipment are assigned as follows:

- 01 Beta, ED Beta VCR
- 02 8 mm VCR
- 03 VHS VCR (Factory preset of Remote Commander.)

VCR Manufacturer Code numbers

Manufacturer	Code number
SONY	01, 02, 03
CANON	05
EMERSON	22, 30, 33
FISHER	10, 11, 12, 15
FUNAI	29
GENERAL ELECTRIC	05, 08
GOLDSTAR	25
HITACHI	07, 08, 36
JVC	16, 35
MAGNAVOX	05, 06, 09
MITSUBISHI	18, 19, 26, 27
MULTITECH	29
NEC	16, 23, 31
PANASONIC	05, 06
PHILCO	05, 06, 09
PHILIPS	05, 06
QUASAR	07, 08
RCA	24, 32
SAMSUNG	11, 15
SANYO	21
SCOTT	13, 14
SHARP	34
SHENYONG	29
SYLVANIA	05, 06, 09
SYMPHONIC	29
TEKNIKA	26, 29
TOSHIBA	20, 21
TOTE VISION	25
ZENITH	17

Manufacturer	Code number
MDP	04
SONY	58
KENWOOD	52
MAGNAVOX	54
MARRANZ	51
MITSUBISHI	55
PANASONIC	52
PHILIPS	51
PIONEER	51
RCA	51
SANYO	57
SHARP	56
YAMAHA	53

 
Notes

- If more than one code number is listed, by entering them one by one, until you come to the correct code for your equipment.
- In some rare cases, your equipment may not be able to operate your non-Sony video equipment with this remote commander. This is because your equipment may use a code that is not provided with this remote commander. In this case, please use the equipment's own remote control unit.

Caution

When you remove a battery from the remote commander, the code may revert to 03. Reset the code each time you replace the battery, if necessary.

Operating video equipment



Use the video operating buttons on the remote commander to operate the video equipment.

Operating a VCR	Buttons on the remote commander
To turn on or off	Press POWER
To change channels	Press CH +/-
To record	Press ● and REC simultaneously
To play	Press ►
To stop	Press ■
To fast forward	Press ►►
To rewind the tape	Press ◄◄
To pause	Press II
To search the picture forward and backward	Press ►► or ◄◄ during playback

Operating the laser-disc Player	Buttons on the remote commander
To play	Press ►
To stop	Press ■
To pause	Press II
To search the picture forward and backward	Keep pressing ►► or ◄◄ during playback
To resume normal playback, release the button.	To resume normal playback, release the button.
To search the chapter	Press CH +/-


Note

- If the video equipment does not have a certain function, the corresponding button on this remote commander will not operate.

Operating a cable box

For cable box control (Cable Mouse) users (KV-27V1522V15 only) Set the CABLE BOX/TV selector to TV.

Follow these instructions to set the manufacturer's code which will enable you to operate a connected cable box with the pre-programmed remote commander. For example, you can set the remote commander to operate a connected Zenith cable box.

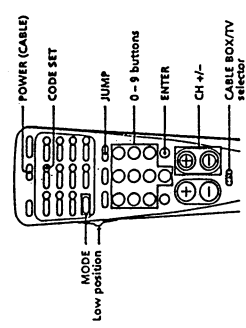

1 Set the CABLE BOX/TV selector to CABLE BOX.




2 While pressing CODE SET, press 6 and 8 (Zenith's code number —see chart on the next page) and ENTER.



(continued)

- 3 Use POWER(CABLE) and the TV control buttons (0 - 9, ENTER, JUMP and CH +/-) to operate the cable box.

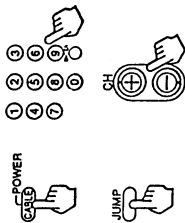

To operate the TV

Set the CABLE BOX/TV selector to TV. Then use the TV control buttons to control the TV.

For more details on operating the cable box Refer to the operating instructions that come with the cable box.

Manufactures and code numbers (cable box)	
Manufacturer	Code number
JEROLD	60, 61, 62, 63, 64, 65, 73
PIONEER	69, 70
SCIENTIFIC ATLANTA	66, 67
TOCOM	71, 72
ZENITH	68

Notes

- If more than one code number is listed, try entering them one by one until you come to the correct code for your equipment.
- If you enter a new code number, the code number you previously entered at that setting is erased.
- In some cases, your equipment may use a code that is not provided with this remote commander and you may not be able to operate your cable box with the supplied remote commander. In this case, use the equipment's own remote control unit.
- When you remove a battery from the remote commander, the code may be erased. Reset the code each time you replace the battery, if necessary.

1. The following table shows the results of the survey conducted in the year 2010.

Category	Frequency
A	10
B	15
C	20
D	25
E	30
F	35
G	40
H	45
I	50
J	55
K	60
L	65
M	70
N	75
O	80
P	85
Q	90
R	95
S	100

2. The following table shows the results of the survey conducted in the year 2011.


Category	Frequency
A	12
B	18
C	22
D	28
E	32
F	38
G	42
H	48
I	52
J	58
K	62
L	68
M	72
N	78
O	82
P	88
Q	92
R	98
S	102

3. The following table shows the results of the survey conducted in the year 2012.


Category	Frequency
A	14
B	20
C	24
D	30
E	34
F	40
G	44
H	50
I	54
J	60
K	64
L	70
M	74
N	80
O	84
P	90
Q	94
R	100
S	104

SECTION 2 DISASSEMBLY


2-1. REAR COVER AND SPEAKER BOX ASSEMBLY REMOVAL

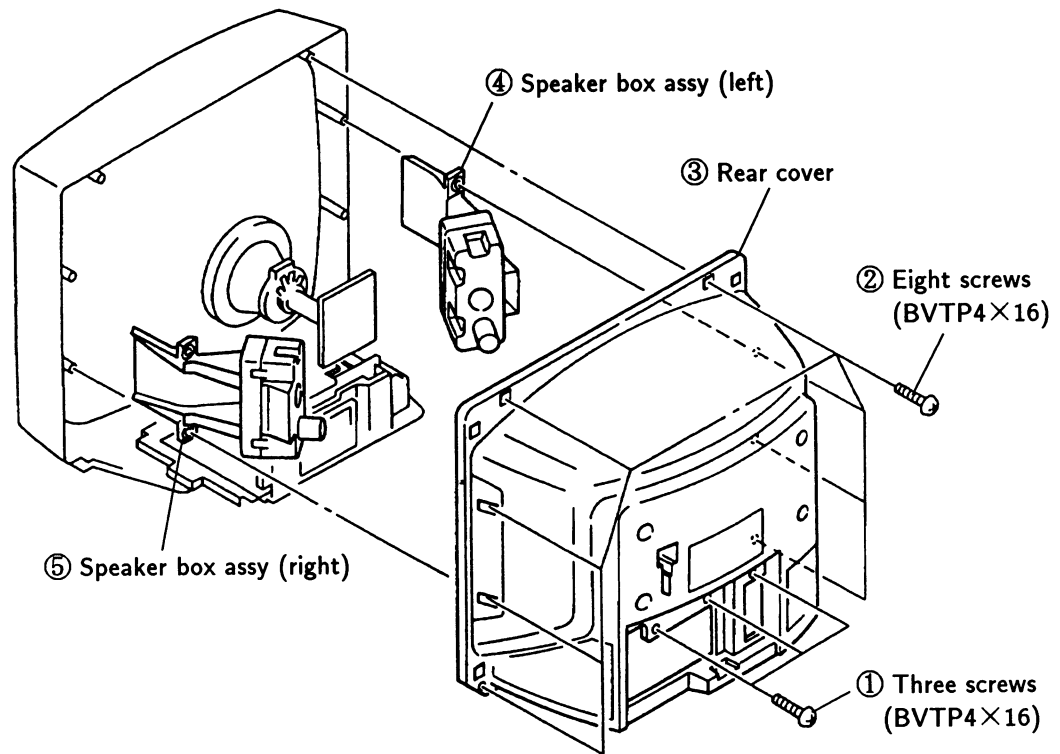

2-2. CHASSIS ASSEMBLY REMOVAL

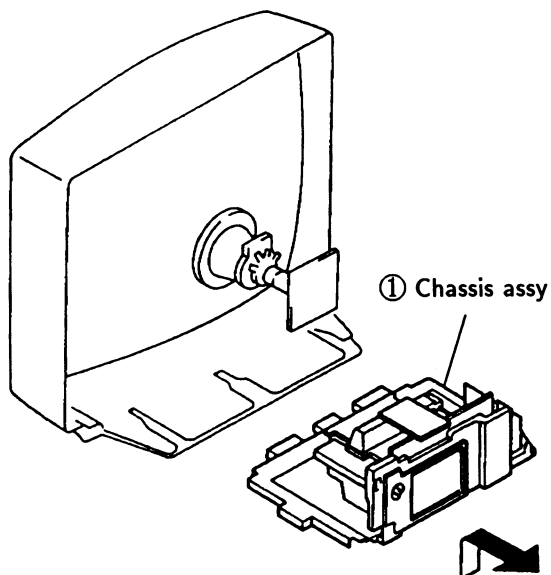


2-3. SERVICE POSITION

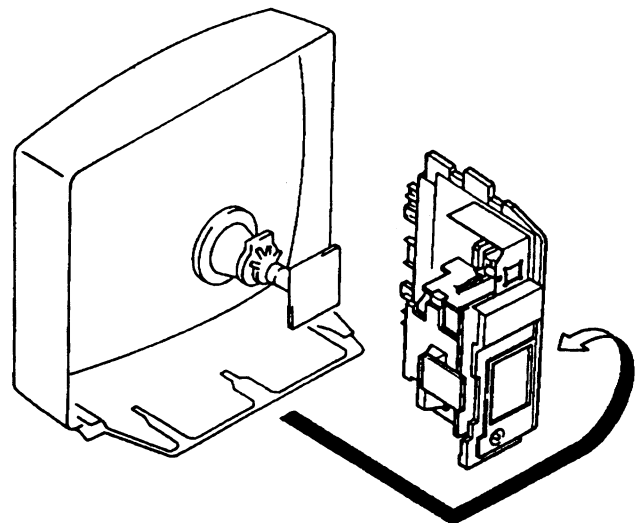

SECTION 2 DISASSEMBLY

 2-1. REAR COVER AND SPEAKER BOX ASSEMBLY REMOVAL




2-2. CHASSIS ASSEMBLY REMOVAL




2-3. SERVICE POSITION





2-4. P BOARD AND BRACKET REMOVAL (KV-27V15/KV-32V15 only)

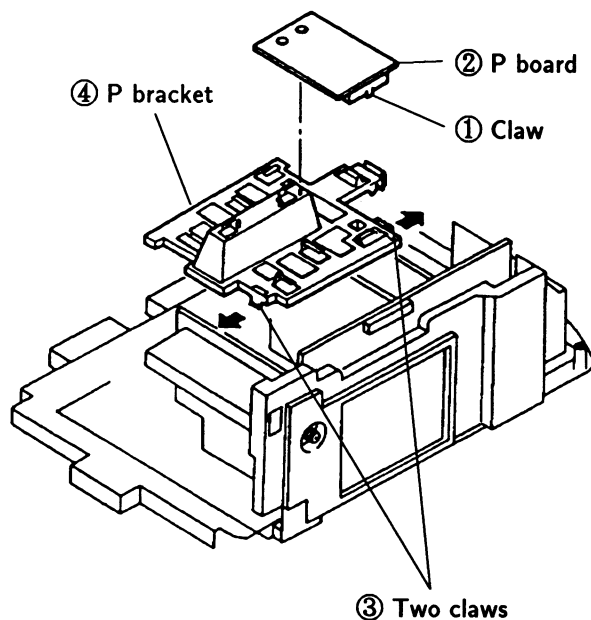


2-5. U BOARD REMOVAL

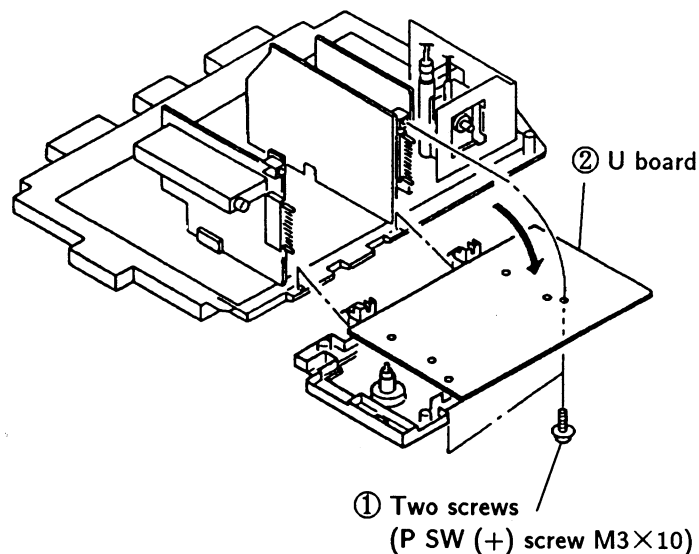

2-6. EXTENSION CABLE

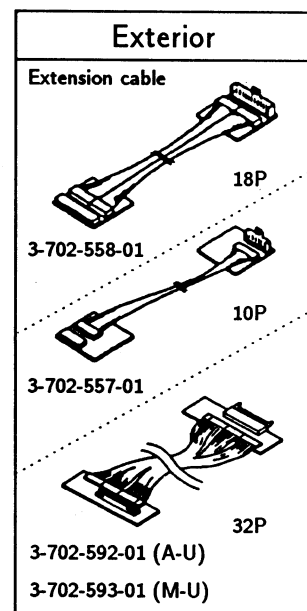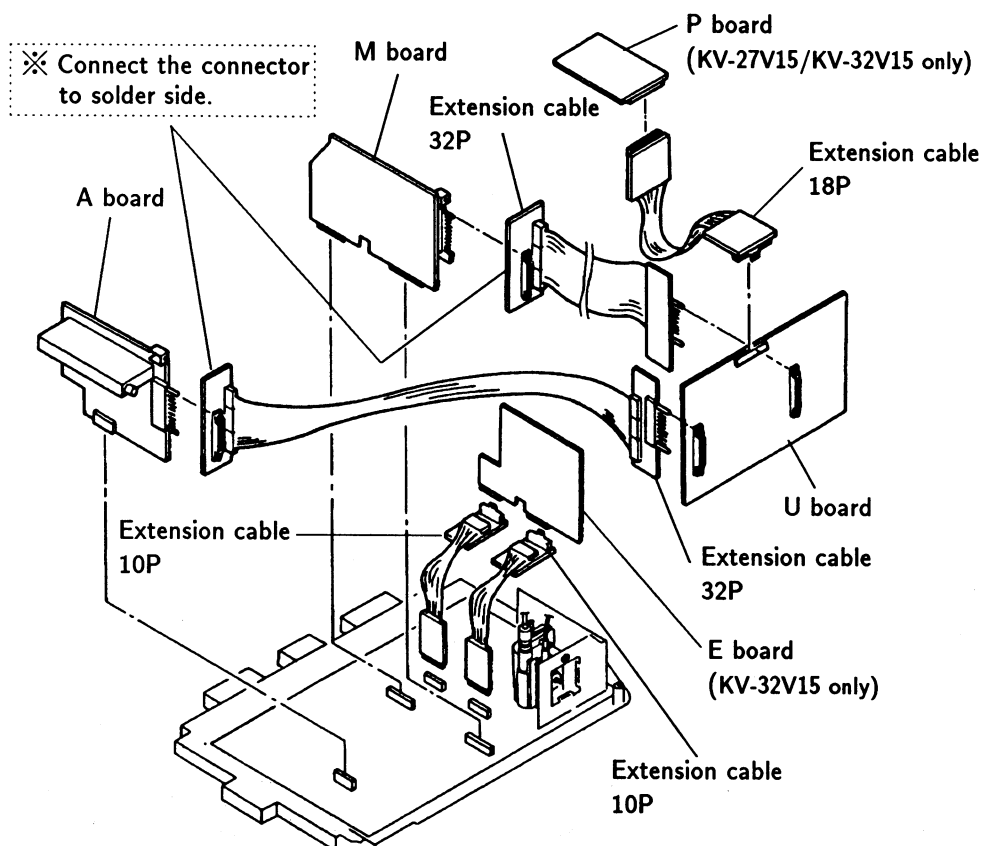


2-7. PICTURE TUBE REMOVAL (1) (KV-27V10/27V15/29V10C/29V10M only)

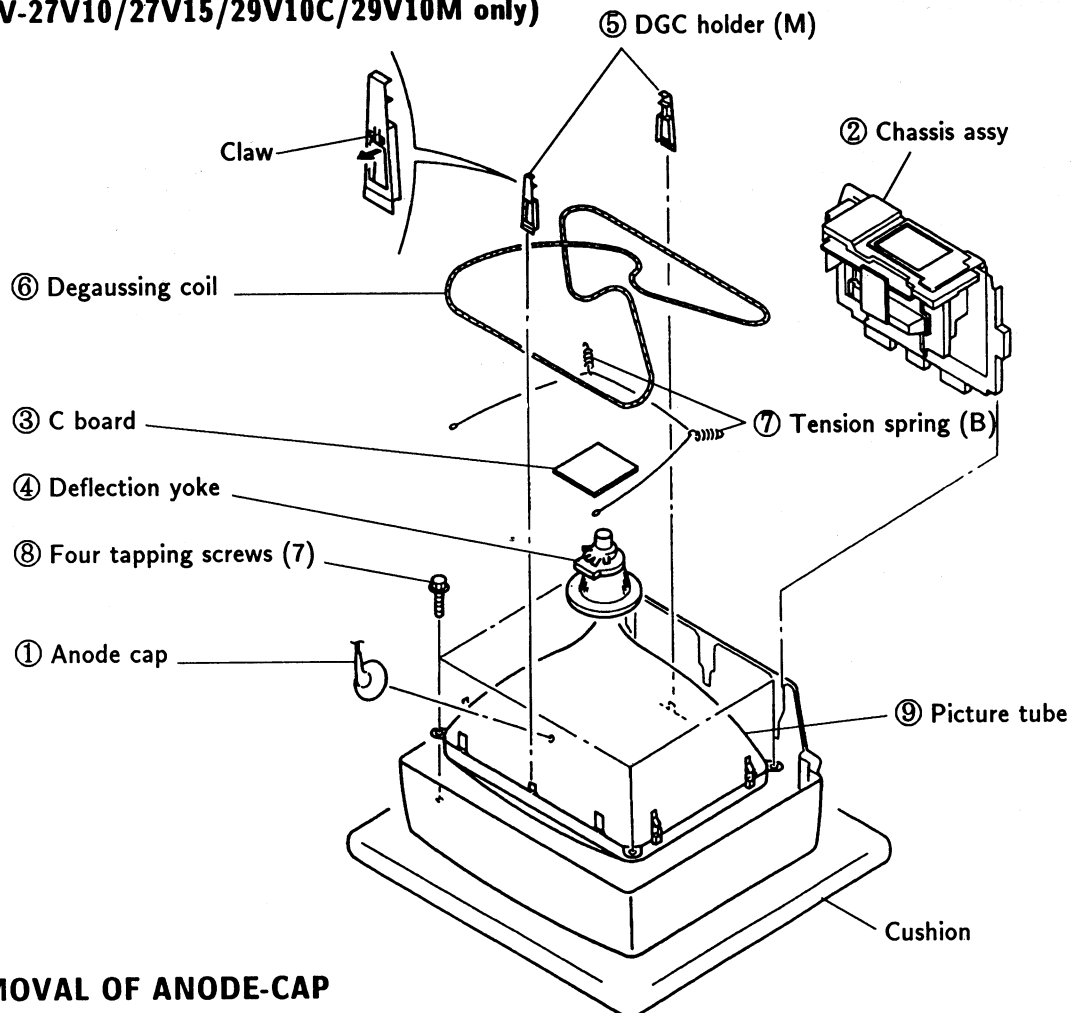

• REMOVAL OF ANODE-CAP



NOTE : Short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield or carbon painted on the CRT, after removing the anode.

• REMOVING PROCEDURES

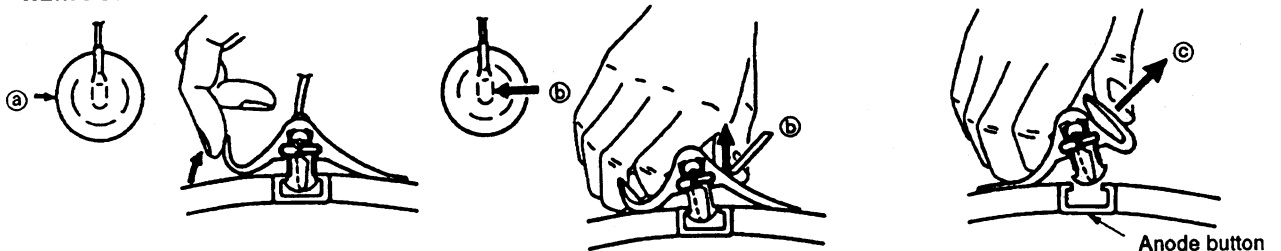


• HOW TO HANDLE AN ANODE-CAP

- ① Don't hurt the surface of anode-caps with sharp shaped material!
- ② Don't press the rubber hardly not to hurt inside of anode-caps!
A material fitting called as shatter-hook terminal is built in the rubber. Don't turn the foot of rubber over hardly! The shatter-hook terminal will stick out or hurt the rubber.
- ③

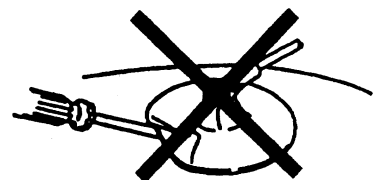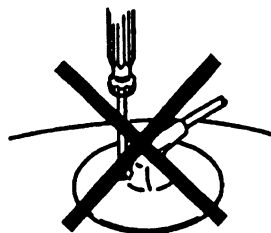

3-7. PICTURE TUBE REMOVAL (I)

(KV-27V20, 27V15, 27V16C, 27V18H only)

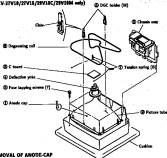

• REMOVAL OF ANODE-CAP

NOTE: Short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield or carbon painted on the CRT, after removing the anode.

• REMOVING PROCEDURE




• HOW TO HANDLE AN ANODE-CAP

- Don't touch the surface of conductive (silver coated) material.
- Don't press the anode cap too hard to the back of the anode cap. A conductive (silver coated) material is bonded to the anode cap.
- Don't use the face of anode cap too hard. The anode cap cannot be used as the anode.




2-7. PICTURE TUBE REMOVAL (2) (KV-32V15 only)

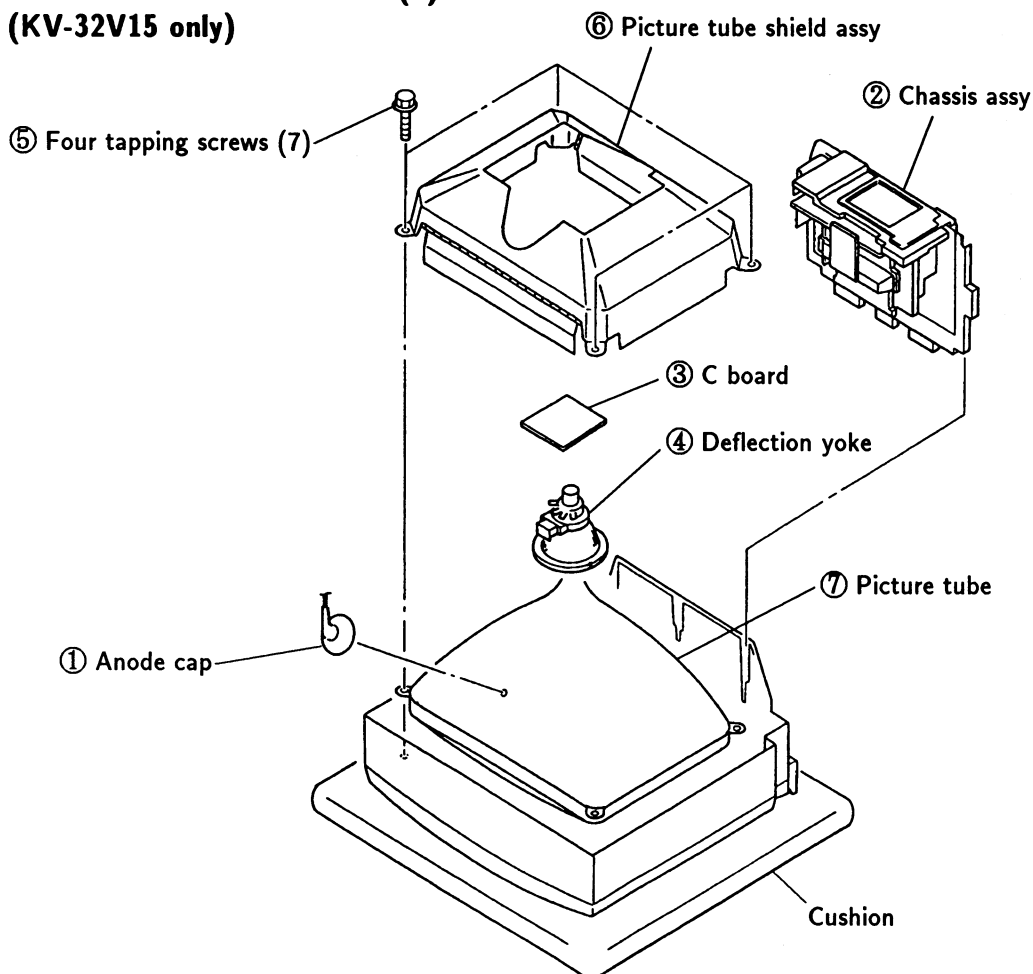

• REMOVAL OF ANODE-CAP

NOTE : Short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield or carbon painted on the CRT, after removing the anode.

• REMOVING PROCEDURES

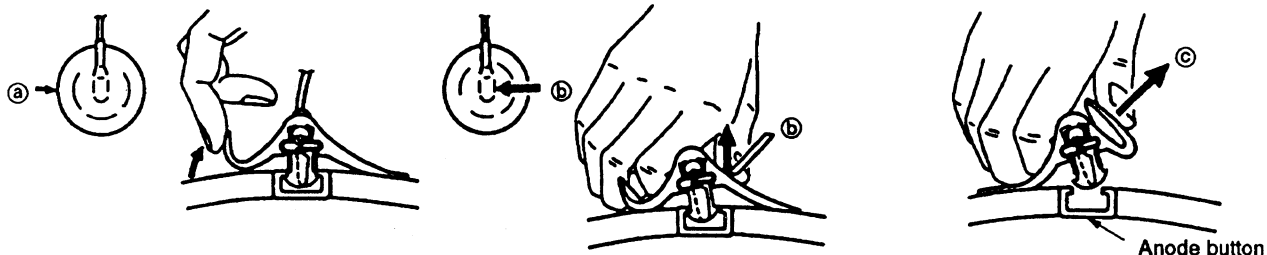



① Turn up one side of the rubber cap in the direction indicated by the arrow ②.

② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow ③.

③ When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling up it in the direction of the arrow ③.


• HOW TO HANDLE AN ANODE-CAP

- ① Don't hurt the surface of anode-caps with sharp shaped material!
- ② Don't press the rubber hardly not to hurt inside of anode-caps!
A material fitting called as shatter-hook terminal is built in the rubber.
- ③ Don't turn the foot of rubber over hardly!
The shatter-hook terminal will stick out or hurt the rubber.

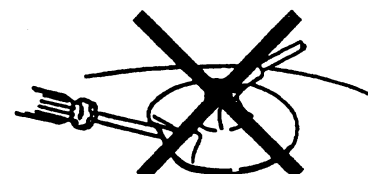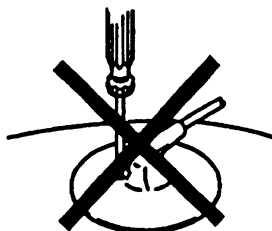

3.7. PICTURE TUBE REMOVAL (3)

(KY-50000 only)

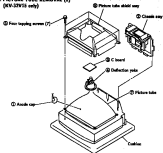

REMOVAL OF ANODE-CAP

NOTE: 1. Short circuit the anode of the picture tube and the anode cap to the metal chassis. CRT shield or carbon painted on the CRT, after removing the anode.

REMOVING PROCEDURES



1. Turn up one side of the anode cap in the direction indicated by the arrow (1).

2. Using a screw pull up the anode cap from the direction indicated by the arrow (2).

3. When one side of the anode cap is separated from the chassis surface, the anode cap can be removed by moving up the anode cap and pulling up it in the direction of the arrow (3).

HOW TO HANDLE AN ANODE-CAP

- Don't touch the surface of anode cap with sharp edged material.
- Don't press the anode heavily nor to test leads of anode cap.
- Don't use the face of anode cap heavily. The chassis lead terminal will stick out or hurt the anode.



SECTION 3

SET-UP ADJUSTMENTS

- The following adjustments should be made when a complete realignment is required or a new picture tube is installed.
- These adjustments should be performed with rated power supply voltage unless otherwise noted.

Controls and switch should be set as follows unless otherwise noted :

PICTURE control RESET
 BRIGHTNESS control center

Perform the adjustments in order as follows :

1. Beam Landing
2. Convergence
3. Focus
4. White Balance

Note : Test Equipment Required.

1. Color-bar/Pattern Generator
2. Degausser
3. Oscilloscope

Preparations :

- In order to reduce the influence of geomagnetism on the set's picture tube face it east or west.
- Switch on the set's power and degauss with the degausser.

3-1. BEAM LANDING

1. Input the white signal with the pattern generator.
 Contrast } normal
 Brightness } normal
2. Set the pattern generator raster signal to green.
3. Move the deflection yoke to the rear and adjust with the purity control so that the green is at the center and the blue and the red take up equally sized areas on each side.
 (See Figures 3-1 through 3-3.)
4. Move the deflection yoke forward and adjust so that entire screen is green. (See Figure 3-1.)
5. Switch the raster signal to blue, then to red and verify the condition.
6. When the position of the deflection yoke has been decided, fasten the deflection yoke with the screws.
7. If the beam does not land correctly in all the corners, use a magnet to adjust it.
 (See Figure 3-4.)

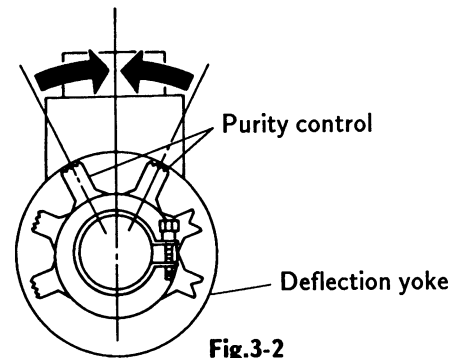


Fig.3-2

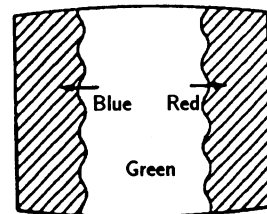


Fig.3-3

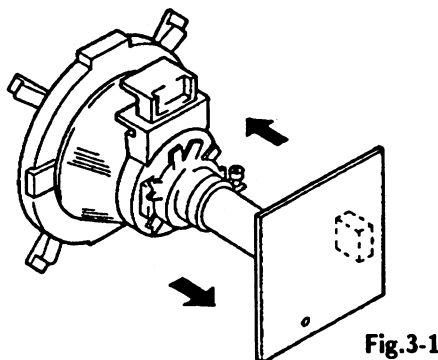


Fig.3-1

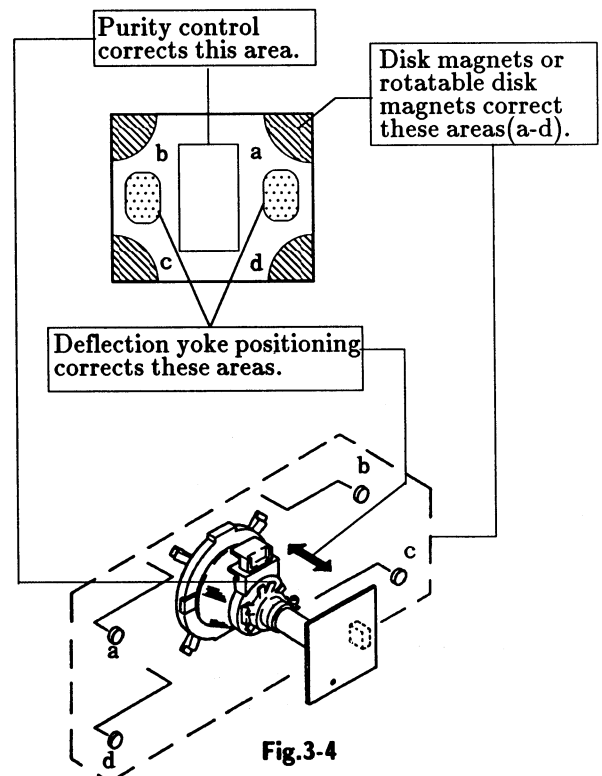


Fig.3-4

SECTION 3

SET-UP ADJUSTMENTS

- The following adjustments should be made when a complete realignment is required or a new picture tube is installed.
- These adjustments should be performed with rated power supply voltage unless otherwise noted.

Controls and vehicle should be set as follows unless otherwise noted:

PICTURE control **BRIGHT**
CONTRAST control **center**

Preparation:

- In order to reduce the influence of geomagnetism on the set's picture tube face it must be reset.
- Switch on the set's power and dispose with the diagram.

3-1. BEAM LANDING

1. Input the white signal with the pattern generator.
 Contrast | normal
 Brightness | normal
2. Set the pattern generator raster signal to green.
3. Move the deflection yoke to the rear and adjust with the purity control so that the green is at the center and the blue and the red take up equally equal areas on each side.
 (See Figures 3-1 through 3-3.)
4. Move the deflection yoke forward and adjust so that entire screen is green. (See Figure 3-1.)
5. Switch the raster signal to blue, then to red and verify the regulation.
6. When the position of the deflection yoke has been decided, rotate the deflection yoke with the screws.
7. If the beam does not land correctly in all the corners, use a magnet to adjust it.
 (See Figure 3-4.)



Fig. 3-1

Perform the adjustments in order as follows:

1. Beam Landing
2. Convergence
3. Focus
4. White Balance

Note: Test Equipment Required.

1. Color-key/Pattern Generator
2. Diagram
3. Convergence



Fig. 3-2



Fig. 3-3

 



Fig. 3-4

3-2. CONVERGENCE

Preparation :

- Before starting this adjustment, adjust the focus, horizontal size, and vertical size.
- Minimize the brightness setting.
- Provide dot pattern.

(1) Horizontal and Vertical Static Convergence

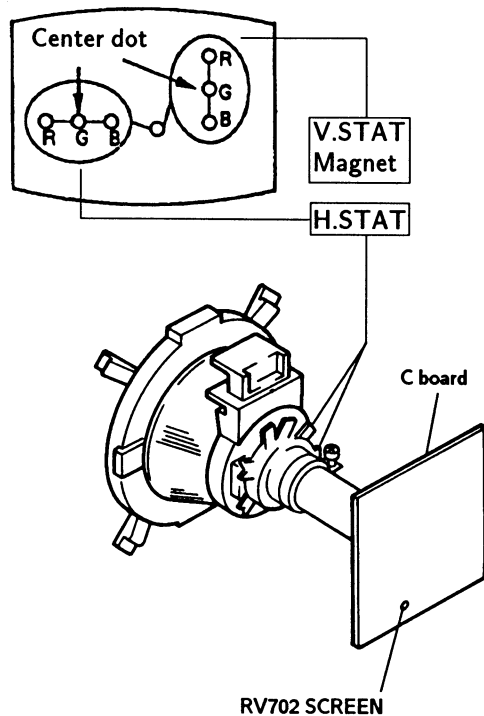

1. V. STAT Adjustment


Turn the V. STAT tabs to left or right so that the vertical red, green and blue dots converge in the center of the screen.

2. H. STAT Adjustment


Simultaneously turn the 2 V. STAT tabs in the same direction so that the horizontal red, green and blue dots converge in the center of the screen.

Note : Do not move the purity tab during adjustment with the V. STAT tab. If the purity tab is moved, the convergence condition will change, and possibly lead to misadjustment of a different yoke.

- Tilt the V. STAT tabs and adjust the static convergence by turning the V. STAT tabs to the left or right.

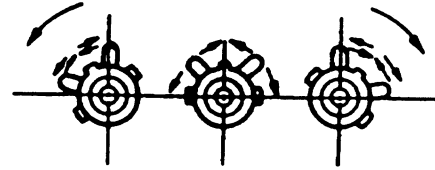

- The V. STAT tabs are moved in the direction of the (a) and (b) arrows and the red, green and blue points move as shown below.

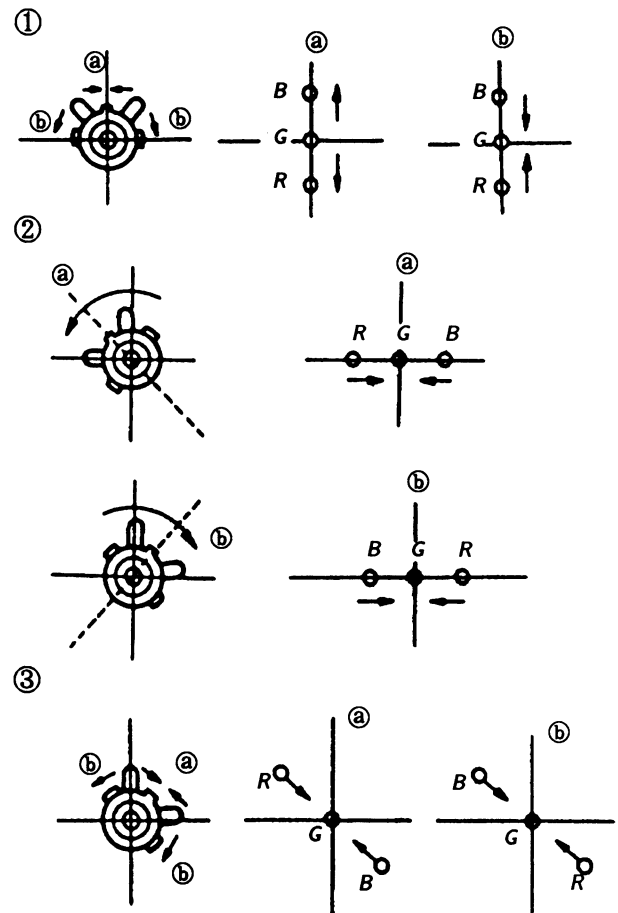


3-2. CONVERGENCE

Preparation:

- Before starting this adjustment, adjust the focus, horizontal aim, and vertical aim.
- Minimize the brightness setting.
- Provide dot pattern.

 (1) Horizontal and Vertical Static Convergence



1. Y-STAT Adjustment

Turn the Y-STAT tube to left or right so that the vertical red, green and blue dots converge to the center of the screen.

2. E-STAT Adjustment

 
Simultaneously turn the 2 Y-STAT tube in the same direction so that the horizontal red, green and blue dots converge to the center of the screen.

Note: Do not move the pretty tab during adjustment with the Y-STAT tube. If the pretty tab is moved, the convergence condition will change, and possibly lead to misadjustment of a different pole.


- Turn the Y-STAT tube and adjust the static convergence by turning the Y-STAT tube to the left or right.



- 4. The Y-STAT tube are moved in the direction of the ① and ② arrows and the red, green and blue points move as shown below.



● Operation of BMC (Hexapole) Magnet

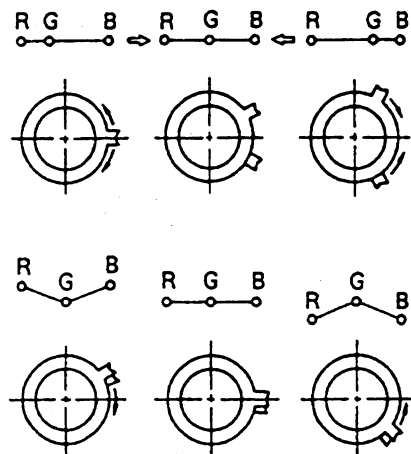


- The respective dot positions resulting from moving each magnet interact, so be sure to perform adjustment while tracking.
 Use the V.STAT tabs to adjust the red, green, and blue dots so they coincide at the center of screen (by moving the dots in the horizontal direction).

(2) Dynamic Convergence Adjustment

Preparations :


- Before starting this adjustment, adjust the horizontal static convergence and the vertical static convergence.
1. Slightly loosen the deflection yoke screws.
 2. Remove the deflection yoke spacer.

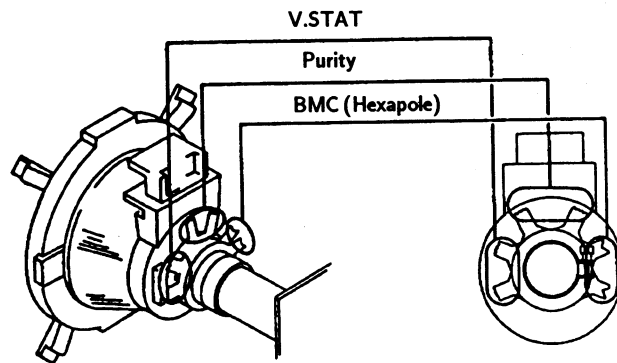

● Y separation axis correction magnet adjustment

1. Receive the cross-hatch signal, and adjust [PIX] to "MIN" and [BRT] to "standard".
2. Adjust the deflection yoke to the upright condition when it hits the CRT.
3. Adjust so that the Y separation axis correction magnet on the neck assembly is symmetrical at the top and bottom (open state).
4. Return the deflection yoke to its original position.

3. Move the deflection yoke as shown in the figure below and optimize the convergence.
4. Tighten the deflection yoke screws.
5. Install the deflection yoke spacer.

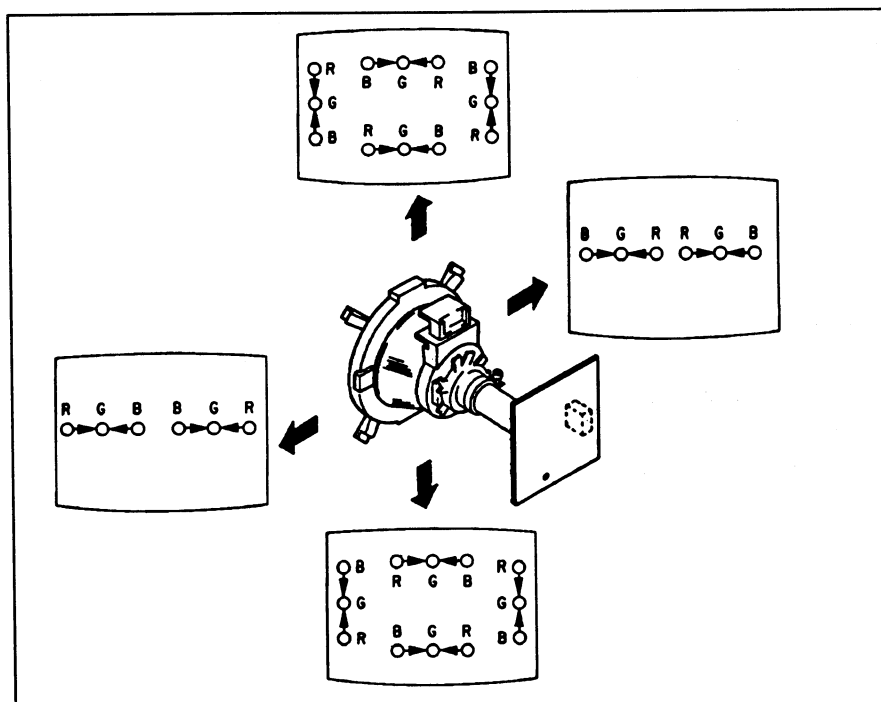

• Operation of H&O (Hexapole) Magnet



- The respective def. positions resulting from moving each magnet inward, as he move is position adjustment with tracking.
Use the V&T&T table to adjust the red, green, and blue dots as they coincide at the center of screen [by moving the dots in the horizontal direction].

20. Dynamic Convergence Adjustment

Preparation:

 
- Before starting this adjustment, adjust the horizontal static convergence and the vertical static convergence.
1. Slightly loosen the deflection yoke screws.
 2. Remove the deflection yoke spacer.



• Y separation with correction magnet adjustment

1. Rotate the cross-hatch signal, and adjust [FO] to "MIN" and [INT] to "Standard".
2. Adjust the deflection pole in the upright condition when it hits the CRT.
3. Adjust so that the Y separation with correction magnet on the each assembly is symmetrical at the top and bottom (open state).
4. Return the deflection pole to its original position.

2. Move the deflection pole as shown in the figure below and tighten the convergence.
4. Tighten the deflection pole screws.
5. Install the deflection pole spacer.




(3) Dynamic Convergence Circuit Adjustment

SERVICE MODE PROCEDURE


1. Standby mode.(Power off)
2. **DISPLAY** → **5** → **VOL (+)** → **POWER** on the Remote Commander. (Press each button within a second.)

SERVICE ADJUSTMENT MODE IN

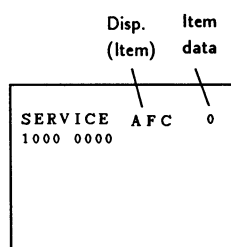


3. The CRT displays the item Being adjusted.
4. Press **1** or **4** on the Remote Commander to select the item.
5. Press **3** or **6** on the Remote Commander to change the data.
6. Press **MUTING** then **ENTER** to write into memory.

SERVICE ADJUSTMENT MODE MEMORY

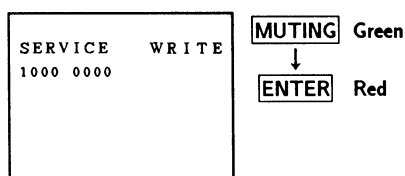

7. Press **8** then **ENTER** on the Remote Commander to initialize.

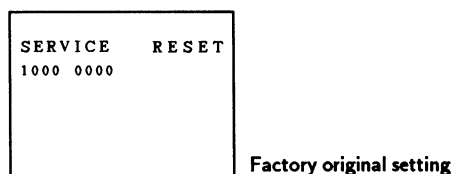


8. Turn set off and on to exit.

- Set to Service Mode.
- Input a cross-hatch signal.
- Press **1** and **4** serect an item of adjustments.
- Adjust **3** and **6** to the best picture.

No.	Disp.	Item	Ave.Data
40	UYBO	Upper Y-Bow	31
41	LYBO	Lower Y-Bow	25
42	HAMP	H. Amp	33
43	HTIL	H. Tilt	33
44	UCBO	Upper C-Bow	38
45	UTIL	Upper Tilt	40
46	LCBO	Lower C-Bow	41
47	LTIL	Lower Tilt	46
48	DCSH	DC Shift	37


U. YBOW

Select UYBO with **1** and **4**

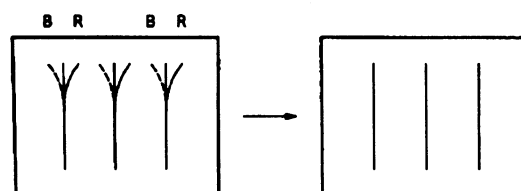


L. YBOW

Select LYBO with **1** and **4**

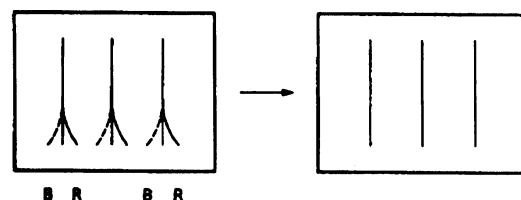

H. AMP

Select HAMP with **1** and **4**

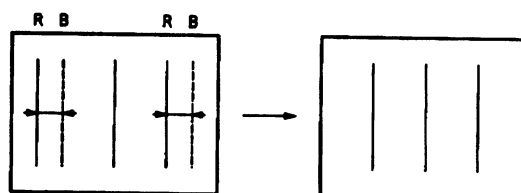

⑤ Dynamic Contrast Level Adjustment

SERVICE MODE PROCEDURE

1. Standby mode (Power off)
2. **[MENU]** → **[2]** → **[Y/B]** → **[2]** → **[POWER]** on the Remote Commander. (Press each button within a second.)

SERVICE ADJUSTMENT MODE IN



3. The CRT displays the item being adjusted.
4. Press **[2]** or **[4]** on the Remote Commander to select the item.
5. Press **[2]** or **[4]** on the Remote Commander to change the data.
6. Press **[ENTER]** then **[ENTER]** to sub-store memory.

SERVICE ADJUSTMENT MODE MEMORY



7. Press **[2]** then **[ENTER]** on the Remote Commander to initialize.



8. Turn set off and on to exit.

- Set to Service Mode.
- Input a cross-hatch signal.
- Press **[2]** and **[4]** select an item of adjustment.
- Adjust **[2]** and **[4]** to the test picture.

No.	Disp.	Item	Pos. Data
00	Y/B	Upper Y/B Bias	33
01	Y/B	Lower Y/B Bias	33
02	AMP	A. Amp	55
03	Y/B	H. Y/B	33
04	Y/B	Upper C/B Bias	33
05	Y/B	Lower C/B Bias	33
06	Y/B	Upper C/B Bias	33
07	Y/B	Lower C/B Bias	33
08	Y/B	Upper C/B Bias	33
09	Y/B	Lower C/B Bias	33

①. Y/B

Select Y/B with **[2]** and **[4]**



②. Y/B

Select Y/B with **[2]** and **[4]**




③. AMP

Select AMP with **[2]** and **[4]**




H. TILT

Select HTILT with **1** and **4**

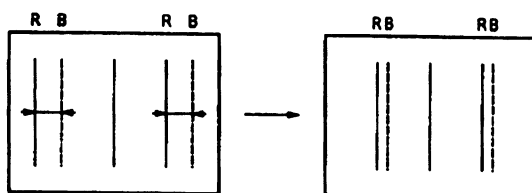


U. CBOW

Select UCBO with **1** and **4**

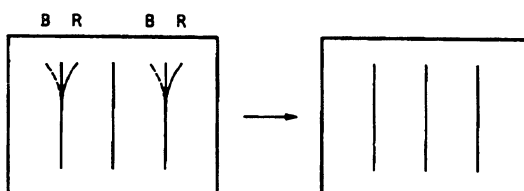


U. TILT

Select UTIL with **1** and **4**

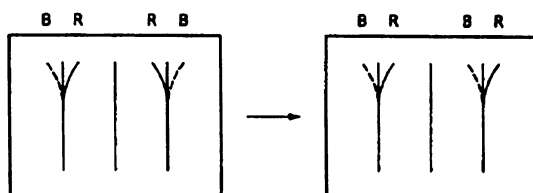


L. CBOW

Select LCBO with **1** and **4**


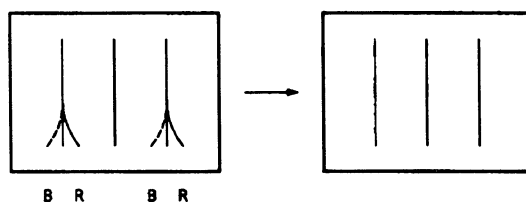


L. TILT

Select L. TIL with **1** and **4**

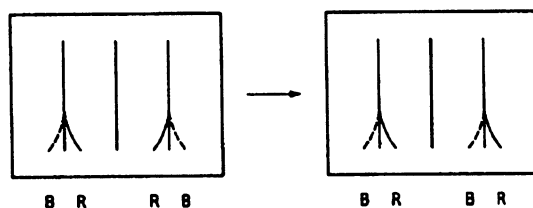


(4) Screen-corner Convergence

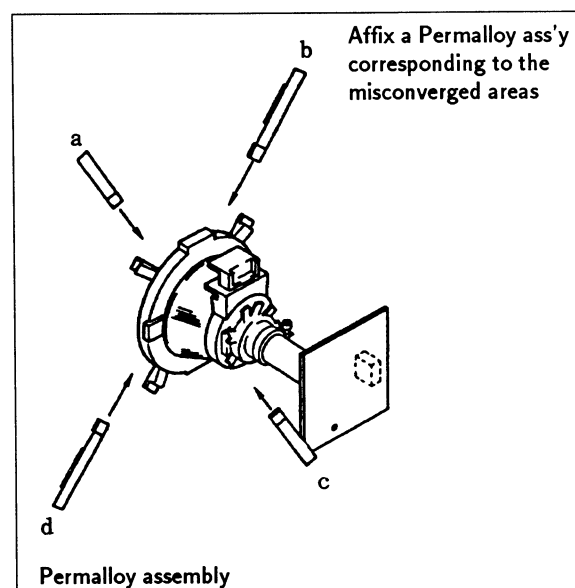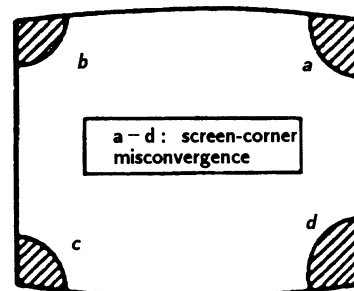

3-3. FOCUS ADJUSTMENT

Adjust FOCUS control on the flyback transformer for a best focus.

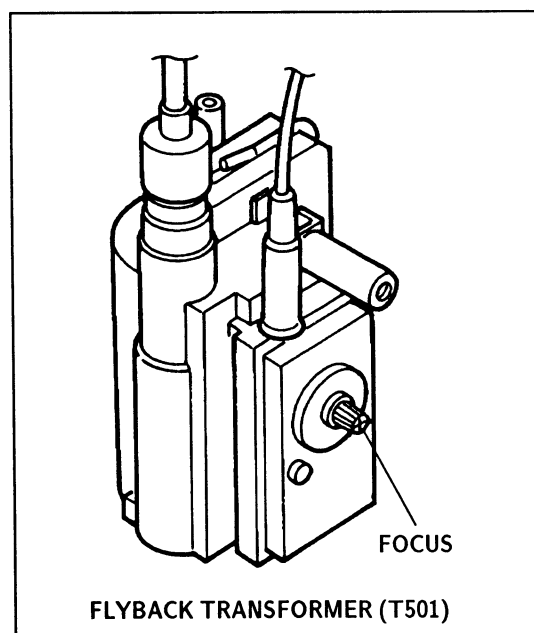

8. TEST

Select RTLT with and .



9. CHECK

Select TCHG with and .



10. TEST

Select UTFL with and .



11. CHECK

Select LCHO with and .



12. TEST

Select L.TTL with and .



13. Screen-corner Compensation



13.1. FOCUS ADJUSTMENT

Adjust FOCUS control on the Flyback transformer for a best focus.



SECTION 4
SAFETY RELATED ADJUSTMENTS

3-4. G2 (SCREEN) AND WHITE BALANCE
ADJUSTMENTS

1. G 2 (SCREEN) ADJUSTMENT (RV 702)

1. Set the PICTURE and BRIGHTNESS to normal.
2. Apply DC voltage of 170 V to the cathodes of R, G and B from DC stabilized power source.
3. While watching the picture, adjust the G2 control (RV 702) to the just the retrace line disappears.


2. WHITE BALANCE ADJUSTMENTS

No.	Disp.	Item	Ave. Data
14	GAMP	Green Amp	20
15	BAMP	Blue Amp	17
16	GCUT	Green Cut-off	7
17	BCUT	Blue Cut-off	8
22	SBRT	Sub Bright	35

1. Input an entire white signal.
2. Set to service adjustment mode.
3. Set the PICTURE and BRIGHT to minimum.
4. Adjust with SBRT if necessary.
5. Select G CUT and B CUT with **[1]** and **[4]**.
6. Adjust with **[3]** and **[6]** for the best white balance.
7. Set the PICTURE and BRIGHT to maximum.
8. Select GAMP and BAMP with **[1]** and **[4]**.
9. Adjust with **[3]** and **[6]** for the best white balance.
10. Write into the memory by pressing **[MUTING]** then **[ENTER]**.

3. SUB BRIGHT ADJUSTMENT

1. Set to service mode.
2. Input a staircase signal of black and white from the pattern generator.
3. BRIGHTNESS ... RESET
PICTURE minimum
4. Select SBRT with **[1]** and **[4]**, and adjust SUB BRIGHT level with **[3]** and **[6]** so that the stripe second from the right is dimly lit.

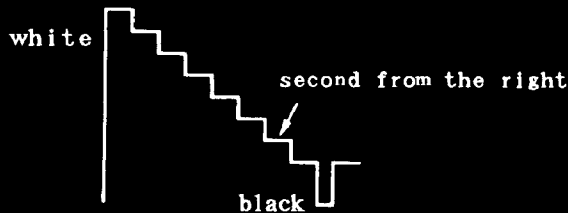

☒ R511 CONFIRMATION METHOD (HOLD-DOWN
CONFIRMATION) AND READJUSTMENTS

The following adjustments should always be performed when replacing the following components (marked with ☒ on the schematic diagram).
PM501, R338, R511, R632, R645, R650

①

1. Preparation before confirmation

- 1) Remove R635 on the D board and connect a variable resistor (RV1: about 4.7kΩ-10kΩ) between pin ① of IC601 and B+ line.
- 2) Supply 130±2.0V AC to with variable auto-transformer.

2. Hold-down operation confirmation

- 1) Turn the POWER switch ON, and receive entirely white signals and adjust ABL current to 1760±50μA with PICTURE and BRIGHT etc controls.
- 2) Increase B+ line voltage gradually by adjusting the resistor of RV1. Confirm that the minimum voltage is less than 142.5V DC (27 inch) 140.0V DC (32 inch) whereby the raster disappears during operation of hold-down circuit.

NOTE: When the hold-down circuit starts operating, switch OFF the POWER of the set immediately.

- 3) Turn the POWER switch ON, and receive dot signals and adjust ABL current to 160±50μA with PICTURE and BRIGHT etc controls.
- 4) Increase B+ line voltage gradually by adjusting the resistor of RV1. Confirm that the minimum voltage is less than 145.0V DC (27 inch), 143.5V DC (32 inch) whereby the raster disappears during operation of hold-down circuit.

NOTE: When the hold-down circuit starts operating, switch OFF the POWER of the set immediately.

3. Hold-down readjustment

When step 2 is not satisfied, readjustment should be performed by altering the resistance value of R511 (a component marked with ☒).

☒ R524 CONFIRMATION METHOD (HOLD-DOWN
CONFIRMATION) AND READJUSTMENTS

The following adjustments should always be performed when replacing the following components (marked with ☒ on the schematic diagram).
IC601, PM501, D504, C598, R338, R509, R524, R632, R635, R645, T501

②

1. Preparation before confirmation

- 1) Turn the POWER switch ON, and receive entirely white signals and set the PICTURE and BRIGHT controls to maximum.
- 2) Confirm that voltage of the check terminal of TP-85 (D BOARD) is more than 114.0V DC (27 inch) 122.3V DC (32inch) when the set is operating normally with 120.0±2.0V AC supply.

2. Hold-down operation confirmation

- 1) Turn the POWER switch ON, and receive entirely white signals and adjust ABL current to 1760±50μA with PICTURE and BRIGHT etc controls .
- 2) Apply DC voltage of over 130.0V DC gradually to the check terminal of TP-85 (D BOARD) via 1T40 from the DC stabilized power source. Confirm that the minimum voltage is less than 137.5V DC (27inch) 143.5V DC (32inch) whereby the raster disappears during operation of hold-down circuit.

NOTE: When the hold-down circuit starts operating, switch OFF the POWER of the set immediately.

- 3) Turn the POWER switch ON, and receive dot signals and adjust ABL current to 160±50μA with PICTURE and BRIGHT etc controls .
- 4) Apply DC voltage of over 130.0V gradually to the check terminal of TP-85 (D BOARD) via 1 T40 from the DC stabilized power source. Confirm that the minimum voltage is less than 138.0V DC (27inch) 144.1V DC (32inch) whereby the raster disappears during operation of hold-down circuit.

NOTE: When the hold-down circuit starts operating, switch OFF the POWER of the set immediately.

3. Hold-down readjustment


When step 2 is not satisfied, readjustment should be performed by altering the resistance value of R524 (a component marked with ☒).

B+ VOLTAGE CONFIRMATION

The following adjustments should always be performed when replacing IC601 and R635.

- 1) Supply 130±2.0V AC to with variable autotransformer.
- 2) Receive entirely monoscope signal.
- 3) Set the PICTURE control and the BRIGHT controls in to initial reset.
- 4) Confirm the voltage of TP91 is less than 137.0V DC.
- 5) If step 4) is not satisfied, replace IC601 and R635 repeat above steps.

* Use a digital multimeter whose input impedance over 100 MΩ when confirming the voltage of the protector terminal of TP85.

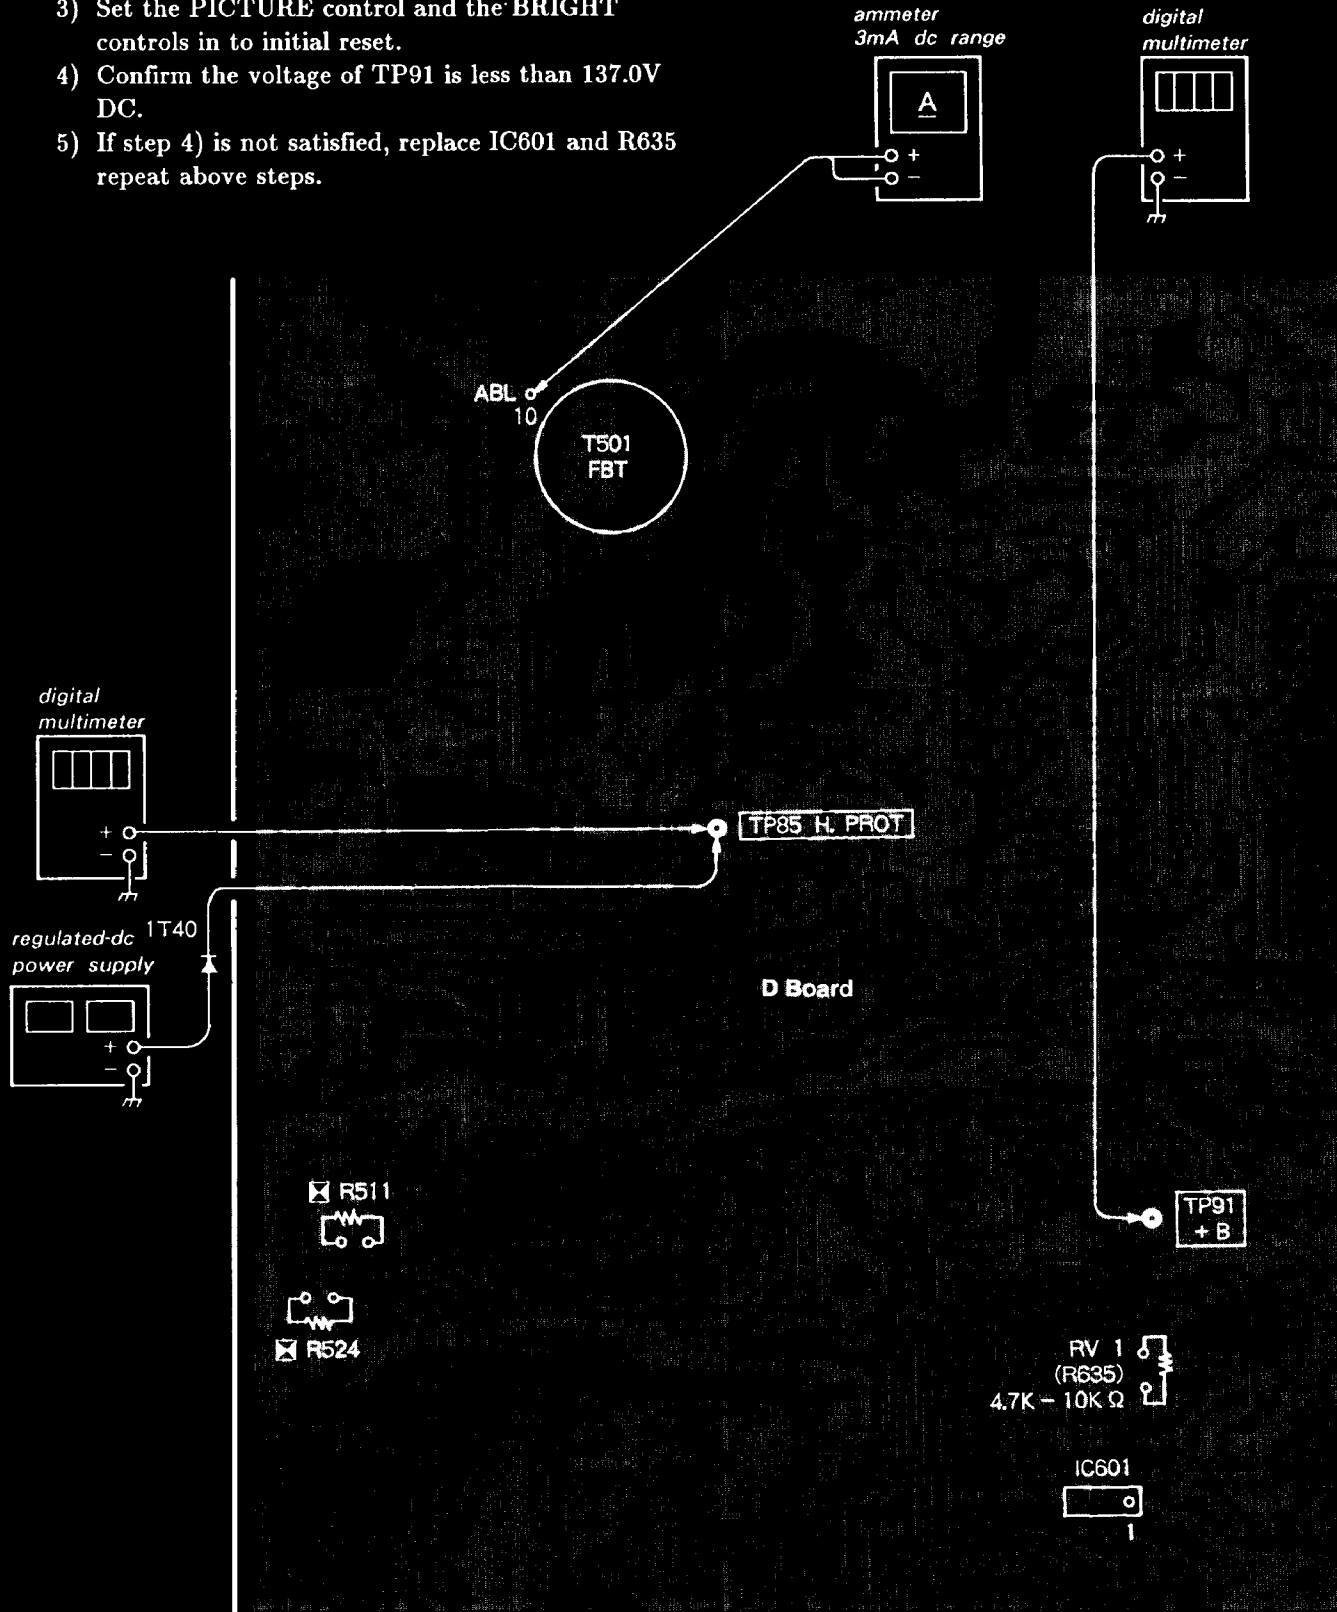

RV 1
(R635)
4.7K - 10K Ω

IC601
1

SECTION 4

SAFETY RELATED ADJUSTMENTS

☒ R511 CONFIRMATION METHOD (HOLD-DOWN CONFIRMATION) AND READJUSTMENTS

The following adjustments should always be performed when replacing the following components (marked with ☒ on the schematic diagram).
 PM501, R338, R511, R632, R645, R650

①

1. Preparation before confirmation

- 1) Remove R635 on the D board and connect a variable resistor (RV1: about $4.7k\Omega$ - $10k\Omega$) between pin ① of IC601 and B+ line.
- 2) Supply $130 \pm 2.0V$ AC to with variable auto-transformer.

2. Hold-down operation confirmation

- 1) Turn the POWER switch ON, and receive entirely white signals and adjust ABL current to $1760 \pm 50\mu A$ with PICTURE and BRIGHT etc controls.
- 2) Increase B+ line voltage gradually by adjusting the resistor of RV1. Confirm that the minimum voltage is less than $142.5V$ DC (27 inch) $140.0V$ DC (32 inch) whereby the raster disappears during operation of hold-down circuit.

NOTE: When the hold-down circuit starts operating, switch OFF the POWER of the set immediately.

- 3) Turn the POWER switch ON, and receive dot signals and adjust ABL current to $160 \pm 50\mu A$ with PICTURE and BRIGHT etc controls.
- 4) Increase B+ line voltage gradually by adjusting the resistor of RV1. Confirm that the minimum voltage is less than $145.0V$ DC (27 inch), $143.5V$ DC (32 inch) whereby the raster disappears during operation of hold-down circuit.

NOTE: When the hold-down circuit starts operating, switch OFF the POWER of the set immediately.

3. Hold-down readjustment

When step 2 is not satisfied, readjustment should be performed by altering the resistance value of R511 (a component marked with ☒).

☒ R524 CONFIRMATION METHOD (HOLD-DOWN CONFIRMATION) AND READJUSTMENTS

The following adjustments should always be performed when replacing the following components (marked with ☒ on the schematic diagram).
 IC601, PM501, D504, C598, R338, R509, R524, R632, R635, R645, T501

②

1. Preparation before confirmation

- 1) Turn the POWER switch ON, and receive entirely white signals and set the PICTURE and BRIGHT controls to maximum.
- 2) Confirm that voltage of the check terminal of TP-85 (D BOARD) is more than $114.0V$ DC (27 inch) $122.3V$ DC (32inch) when the set is operating normally with $120.0 \pm 2.0V$ AC supply.

2. Hold-down operation confirmation

- 1) Turn the POWER switch ON, and receive entirely white signals and adjust ABL current to $1760 \pm 50\mu A$ with PICTURE and BRIGHT etc controls .
- 2) Apply DC voltage of over $130.0V$ DC gradually to the check terminal of TP-85 (D BOARD) via 1T40 from the DC stabilized power source. Confirm that the minimum voltage is less than $137.5V$ DC (27inch) $143.5V$ DC (32inch) whereby the raster disappears during operation of hold-down circuit.

NOTE: When the hold-down circuit starts operating, switch OFF the POWER of the set immediately.

- 3) Turn the POWER switch ON, and receive dot signals and adjust ABL current to $160 \pm 50\mu A$ with PICTURE and BRIGHT etc controls .
- 4) Apply DC voltage of over $130.0V$ DC gradually to the check terminal of TP-85 (D BOARD) via 1 T40 from the DC stabilized power source. Confirm that the minimum voltage is less than $138.0V$ DC (27inch) $144.1V$ DC (32inch) whereby the raster disappears during operation of hold-down circuit.

NOTE: When the hold-down circuit starts operating, switch OFF the POWER of the set immediately.

3. Hold-down readjustment

When step 2 is not satisfied, readjustment should be performed by altering the resistance value of R524 (a component marked with ☒).

SECTION 4 SAFETY RELATED ADJUSTMENTS

1. EACH CONFIRMATION METHOD (HOLD-DOWN CONFIRMATION) AND READJUSTMENTS

The following adjustments should always be performed when replacing the following components (marked with **Q** on the schematic diagram).
FUSE, R408, R411, R402, R404, R405

Q

1. Preparation before confirmation

- 1) Remove R408 on the D board and connect a variable resistor (RV1, about 2.5kΩ/12kΩ) between pin **Q** of IC601 and B+ line.
- 2) Supply 180V 2.5V AC to with variable auto-transformer.

2. Hold-down operation confirmation

- 1) Turn the POWER switch ON, and receive video while signals and adjust ABL current to 170kΩ/kΩ with PICTURE and BRIGHT etc controls.
- 2) Increase B+ line voltage gradually by adjusting the resistor of RV1. Confirm that the minimum voltage is less than 145V DC (IT load) 140V DC (20 load) whereby the raster disappears during operation of hold-down circuit.
NOTE: When the hold-down circuit starts operating, switch OFF the POWER of the set immediately.
- 3) Turn the POWER switch ON, and receive dot signals and adjust ABL current to 140kΩ/kΩ with PICTURE and BRIGHT etc controls.
- 4) Increase B+ line voltage gradually by adjusting the resistor of RV1. Confirm that the minimum voltage is less than 145V DC (IT load), 140V DC (20 load) whereby the raster disappears during operation of hold-down circuit.
NOTE: When the hold-down circuit starts operating, switch OFF the POWER of the set immediately.

3. Hold-down readjustment

When step 1 is not satisfied, readjustment should be performed by altering the resistance value of R411 (a component marked with **Q**).

2. EACH CONFIRMATION METHOD (HOLD-DOWN CONFIRMATION) AND READJUSTMENTS


The following adjustments should always be performed when replacing the following components (marked with **Q** on the schematic diagram).
IC601, FUSE1, R404, C408, R408, R409, R410, R411, R402, R404, R405, R406, R407, R408, R409, R410, R411, R412, R413, R414, R415, R416, R417, R418, R419, R420, R421, R422, R423, R424, R425, R426, R427, R428, R429, R430, R431, R432, R433, R434, R435, R436, R437, R438, R439, R440, R441, R442, R443, R444, R445, R446, R447, R448, R449, R450, R451, R452, R453, R454, R455, R456, R457, R458, R459, R460, R461, R462, R463, R464, R465, R466, R467, R468, R469, R470, R471, R472, R473, R474, R475, R476, R477, R478, R479, R480, R481, R482, R483, R484, R485, R486, R487, R488, R489, R490, R491, R492, R493, R494, R495, R496, R497, R498, R499, R500, R501, R502, R503, R504, R505, R506, R507, R508, R509, R510, R511, R512, R513, R514, R515, R516, R517, R518, R519, R520, R521, R522, R523, R524, R525, R526, R527, R528, R529, R530, R531, R532, R533, R534, R535, R536, R537, R538, R539, R540, R541, R542, R543, R544, R545, R546, R547, R548, R549, R550, R551, R552, R553, R554, R555, R556, R557, R558, R559, R560, R561, R562, R563, R564, R565, R566, R567, R568, R569, R570, R571, R572, R573, R574, R575, R576, R577, R578, R579, R580, R581, R582, R583, R584, R585, R586, R587, R588, R589, R590, R591, R592, R593, R594, R595, R596, R597, R598, R599, R600, R601, R602, R603, R604, R605, R606, R607, R608, R609, R610, R611, R612, R613, R614, R615, R616, R617, R618, R619, R620, R621, R622, R623, R624, R625, R626, R627, R628, R629, R630, R631, R632, R633, R634, R635, R636, R637, R638, R639, R640, R641, R642, R643, R644, R645, R646, R647, R648, R649, R650, R651, R652, R653, R654, R655, R656, R657, R658, R659, R660, R661, R662, R663, R664, R665, R666, R667, R668, R669, R670, R671, R672, R673, R674, R675, R676, R677, R678, R679, R680, R681, R682, R683, R684, R685, R686, R687, R688, R689, R690, R691, R692, R693, R694, R695, R696, R697, R698, R699, R700, R701, R702, R703, R704, R705, R706, R707, R708, R709, R710, R711, R712, R713, R714, R715, R716, R717, R718, R719, R720, R721, R722, R723, R724, R725, R726, R727, R728, R729, R730, R731, R732, R733, R734, R735, R736, R737, R738, R739, R740, R741, R742, R743, R744, R745, R746, R747, R748, R749, R750, R751, R752, R753, R754, R755, R756, R757, R758, R759, R760, R761, R762, R763, R764, R765, R766, R767, R768, R769, R770, R771, R772, R773, R774, R775, R776, R777, R778, R779, R780, R781, R782, R783, R784, R785, R786, R787, R788, R789, R790, R791, R792, R793, R794, R795, R796, R797, R798, R799, R800, R801, R802, R803, R804, R805, R806, R807, R808, R809, R810, R811, R812, R813, R814, R815, R816, R817, R818, R819, R820, R821, R822, R823, R824, R825, R826, R827, R828, R829, R830, R831, R832, R833, R834, R835, R836, R837, R838, R839, R840, R841, R842, R843, R844, R845, R846, R847, R848, R849, R850, R851, R852, R853, R854, R855, R856, R857, R858, R859, R860, R861, R862, R863, R864, R865, R866, R867, R868, R869, R870, R871, R872, R873, R874, R875, R876, R877, R878, R879, R880, R881, R882, R883, R884, R885, R886, R887, R888, R889, R890, R891, R892, R893, R894, R895, R896, R897, R898, R899, R900, R901, R902, R903, R904, R905, R906, R907, R908, R909, R910, R911, R912, R913, R914, R915, R916, R917, R918, R919, R920, R921, R922, R923, R924, R925, R926, R927, R928, R929, R930, R931, R932, R933, R934, R935, R936, R937, R938, R939, R940, R941, R942, R943, R944, R945, R946, R947, R948, R949, R950, R951, R952, R953, R954, R955, R956, R957, R958, R959, R960, R961, R962, R963, R964, R965, R966, R967, R968, R969, R970, R971, R972, R973, R974, R975, R976, R977, R978, R979, R980, R981, R982, R983, R984, R985, R986, R987, R988, R989, R990, R991, R992, R993, R994, R995, R996, R997, R998, R999, R1000, R1001, R1002, R1003, R1004, R1005, R1006, R1007, R1008, R1009, R1010, R1011, R1012, R1013, R1014, R1015, R1016, R1017, R1018, R1019, R1020, R1021, R1022, R1023, R1024, R1025, R1026, R1027, R1028, R1029, R1030, R1031, R1032, R1033, R1034, R1035, R1036, R1037, R1038, R1039, R1040, R1041, R1042, R1043, R1044, R1045, R1046, R1047, R1048, R1049, R1050, R1051, R1052, R1053, R1054, R1055, R1056, R1057, R1058, R1059, R1060, R1061, R1062, R1063, R1064, R1065, R1066, R1067, R1068, R1069, R1070, R1071, R1072, R1073, R1074, R1075, R1076, R1077, R1078, R1079, R1080, R1081, R1082, R1083, R1084, R1085, R1086, R1087, R1088, R1089, R1090, R1091, R1092, R1093, R1094, R1095, R1096, R1097, R1098, R1099, R1100, R1101, R1102, R1103, R1104, R1105, R1106, R1107, R1108, R1109, R1110, R1111, R1112, R1113, R1114, R1115, R1116, R1117, R1118, R1119, R1120, R1121, R1122, R1123, R1124, R1125, R1126, R1127, R1128, R1129, R1130, R1131, R1132, R1133, R1134, R1135, R1136, R1137, R1138, R1139, R1140, R1141, R1142, R1143, R1144, R1145, R1146, R1147, R1148, R1149, R1150, R1151, R1152, R1153, R1154, R1155, R1156, R1157, R1158, R1159, R1160, R1161, R1162, R1163, R1164, R1165, R1166, R1167, R1168, R1169, R1170, R1171, R1172, R1173, R1174, R1175, R1176, R1177, R1178, R1179, R1180, R1181, R1182, R1183, R1184, R1185, R1186, R1187, R1188, R1189, R1190, R1191, R1192, R1193, R1194, R1195, R1196, R1197, R1198, R1199, R1200, R1201, R1202, R1203, R1204, R1205, R1206, R1207, R1208, R1209, R1210, R1211, R1212, R1213, R1214, R1215, R1216, R1217, R1218, R1219, R1220, R1221, R1222, R1223, R1224, R1225, R1226, R1227, R1228, R1229, R1230, R1231, R1232, R1233, R1234, R1235, R1236, R1237, R1238, R1239, R1240, R1241, R1242, R1243, R1244, R1245, R1246, R1247, R1248, R1249, R1250, R1251, R1252, R1253, R1254, R1255, R1256, R1257, R1258, R1259, R1260, R1261, R1262, R1263, R1264, R1265, R1266, R1267, R1268, R1269, R1270, R1271, R1272, R1273, R1274, R1275, R1276, R1277, R1278, R1279, R1280, R1281, R1282, R1283, R1284, R1285, R1286, R1287, R1288, R1289, R1290, R1291, R1292, R1293, R1294, R1295, R1296, R1297, R1298, R1299, R1300, R1301, R1302, R1303, R1304, R1305, R1306, R1307, R1308, R1309, R1310, R1311, R1312, R1313, R1314, R1315, R1316, R1317, R1318, R1319, R1320, R1321, R1322, R1323, R1324, R1325, R1326, R1327, R1328, R1329, R1330, R1331, R1332, R1333, R1334, R1335, R1336, R1337, R1338, R1339, R1340, R1341, R1342, R1343, R1344, R1345, R1346, R1347, R1348, R1349, R1350, R1351, R1352, R1353, R1354, R1355, R1356, R1357, R1358, R1359, R1360, R1361, R1362, R1363, R1364, R1365, R1366, R1367, R1368, R1369, R1370, R1371, R1372, R1373, R1374, R1375, R1376, R1377, R1378, R1379, R1380, R1381, R1382, R1383, R1384, R1385, R1386, R1387, R1388, R1389, R1390, R1391, R1392, R1393, R1394, R1395, R1396, R1397, R1398, R1399, R1400, R1401, R1402, R1403, R1404, R1405, R1406, R1407, R1408, R1409, R1410, R1411, R1412, R1413, R1414, R1415, R1416, R1417, R1418, R1419, R1420, R1421, R1422, R1423, R1424, R1425, R1426, R1427, R1428, R1429, R1430, R1431, R1432, R1433, R1434, R1435, R1436, R1437, R1438, R1439, R1440, R1441, R1442, R1443, R1444, R1445, R1446, R1447, R1448, R1449, R1450, R1451, R1452, R1453, R1454, R1455, R1456, R1457, R1458, R1459, R1460, R1461, R1462, R1463, R1464, R1465, R1466, R1467, R1468, R1469, R1470, R1471, R1472, R1473, R1474, R1475, R1476, R1477, R1478, R1479, R1480, R1481, R1482, R1483, R1484, R1485, R1486, R1487, R1488, R1489, R1490, R1491, R1492, R1493, R1494, R1495, R1496, R1497, R1498, R1499, R1500, R1501, R1502, R1503, R1504, R1505, R1506, R1507, R1508, R1509, R1510, R1511, R1512, R1513, R1514, R1515, R1516, R1517, R1518, R1519, R1520, R1521, R1522, R1523, R1524, R1525, R1526, R1527, R1528, R1529, R1530, R1531, R1532, R1533, R1534, R1535, R1536, R1537, R1538, R1539, R1540, R1541, R1542, R1543, R1544, R1545, R1546, R1547, R1548, R1549, R1550, R1551, R1552, R1553, R1554, R1555, R1556, R1557, R1558, R1559, R1560, R1561, R1562, R1563, R1564, R1565, R1566, R1567, R1568, R1569, R1570, R1571, R1572, R1573, R1574, R1575, R1576, R1577, R1578, R1579, R1580, R1581, R1582, R1583, R1584, R1585, R1586, R1587, R1588, R1589, R1590, R1591, R1592, R1593, R1594, R1595, R1596, R1597, R1598, R1599, R1600, R1601, R1602, R1603, R1604, R1605, R1606, R1607, R1608, R1609, R1610, R1611, R1612, R1613, R1614, R1615, R1616, R1617, R1618, R1619, R1620, R1621, R1622, R1623, R1624, R1625, R1626, R1627, R1628, R1629, R1630, R1631, R1632, R1633, R1634, R1635, R1636, R1637, R1638, R1639, R1640, R1641, R1642, R1643, R1644, R1645, R1646, R1647, R1648, R1649, R1650, R1651, R1652, R1653, R1654, R1655, R1656, R1657, R1658, R1659, R1660, R1661, R1662, R1663, R1664, R1665, R1666, R1667, R1668, R1669, R1670, R1671, R1672, R1673, R1674, R1675, R1676, R1677, R1678, R1679, R1680, R1681, R1682, R1683, R1684, R1685, R1686, R1687, R1688, R1689, R1690, R1691, R1692, R1693, R1694, R1695, R1696, R1697, R1698, R1699, R1700, R1701, R1702, R1703, R1704, R1705, R1706, R1707, R1708, R1709, R1710, R1711, R1712, R1713, R1714, R1715, R1716, R1717, R1718, R1719, R1720, R1721, R1722, R1723, R1724, R1725, R1726, R1727, R1728, R1729, R1730, R1731, R1732, R1733, R1734, R1735, R1736, R1737, R1738, R1739, R1740, R1741, R1742, R1743, R1744, R1745, R1746, R1747, R1748, R1749, R1750, R1751, R1752, R1753, R1754, R1755, R1756, R1757, R1758, R1759, R1760, R1761, R1762, R1763, R1764, R1765, R1766, R1767, R1768, R1769, R1770, R1771, R1772, R1773, R1774, R1775, R1776, R1777, R1778, R1779, R1780, R1781, R1782, R1783, R1784, R1785, R1786, R1787, R1788, R1789, R1790, R1791, R1792, R1793, R1794, R1795, R1796, R1797, R1798, R1799, R1800, R1801, R1802, R1803, R1804, R1805, R1806, R1807, R1808, R1809, R1810, R1811, R1812, R1813, R1814, R1815, R1816, R1817, R1818, R1819, R1820, R1821, R1822, R1823, R1824, R1825, R1826, R1827, R1828, R1829, R1830, R1831, R1832, R1833, R1834, R1835, R1836, R1837, R1838, R1839, R1840, R1841, R1842, R1843, R1844, R1845, R1846, R1847, R1848, R1849, R1850, R1851, R1852, R1853, R1854, R1855, R1856, R1857, R1858, R1859, R1860, R1861, R1862, R1863, R1864, R1865, R1866, R1867, R1868, R1869, R1870, R1871, R1872, R1873, R1874, R1875, R1876, R1877, R1878, R1879, R1880, R1881, R1882, R1883, R1884, R1885, R1886, R1887, R1888, R1889, R1890, R1891, R1892, R1893, R1894, R1895, R1896, R1897, R1898, R1899, R1900, R1901, R1902, R1903, R1904, R1905, R1906, R1907, R1908, R1909, R1910, R1911, R1912, R1913, R1914, R1915, R1916, R1917, R1918, R1919, R1920, R1921, R1922, R1923, R1924, R1925, R1926, R1927, R1928, R1929, R1930, R1931, R1932, R1933, R1934, R1935, R1936, R1937, R1938, R1939, R1940, R1941, R1942, R1943, R1944, R1945, R1946, R1947, R1948, R1949, R1950, R1951, R1952, R1953, R1954, R1955, R1956, R1957, R1958, R1959, R1960, R1961, R1962, R1963, R1964, R1965, R1966, R1967, R1968, R1969, R1970, R1971, R1972, R1973, R1974, R1975, R1976, R1977, R1978, R1979, R1980, R1981, R1982, R1983, R1984, R1985, R1986, R1987, R1988, R1989, R1990, R1991, R1992, R1993, R1994, R1995, R1996, R1997, R1998, R1999, R2000, R2001, R2002, R2003, R2004, R2005, R2006, R2007, R2008, R2009, R2010, R2011, R2012, R2013, R2014, R2015, R2016, R2017, R2018, R2019, R2020, R2021, R2022, R2023, R2024, R2025, R2026, R2027, R2028, R2029, R2030, R2031, R2032, R2033, R2034, R2035, R2036, R2037, R2038, R2039, R2040, R2041, R2042, R2043, R2044, R2045, R2046, R2047, R2048, R2049, R2050, R2051, R2052, R2053, R2054, R2055, R2056, R2057, R2058, R2059, R2060, R2061, R2062, R2063, R2064, R2065, R2066, R2067, R2068, R2069, R2070, R2071, R2072, R2073, R2074, R2075, R2076, R2077, R2078, R2079, R2080, R2081, R2082, R2083, R2084, R2085, R2086, R2087, R2088, R2089, R2090, R2091, R2092, R2093, R2094, R2095, R2096, R2097, R2098, R2099, R2100, R2101, R2102, R2103, R2104, R2105, R2106, R2107, R2108, R2109, R2110, R2111, R2112, R2113, R2114, R2115, R2116, R2117, R2118, R2119, R2120, R2121, R2122, R2123, R2124, R2125, R2126, R2127, R2128, R2129, R2130, R2131, R2132, R2133, R2134, R2135, R2136, R2137, R2138, R2139, R2140, R2141, R2142, R2143, R2144, R2145, R2146, R2147, R2148, R2149, R2150, R2151, R2152, R2153, R2154, R2155, R2156, R2157, R2158, R2159, R2160, R2161, R2162, R2163, R2164, R2165, R2166, R2167, R2168, R2169, R2170, R2171, R2172, R2173, R2174, R2175, R2176, R2177, R2178, R2179, R2180, R2181, R2182, R2183, R2184, R2185, R2186, R2187, R2188, R2189, R2190, R2191, R2192, R2193, R2194, R2195, R2196, R2197, R2198, R2199, R2200, R2201, R2202, R2203, R2204, R2205, R2206, R2207, R2208, R2209, R2210, R2211, R2212, R2213, R2214, R2215, R2216, R2217, R2218, R2219, R2220, R2221, R2222, R2223, R2224, R2225, R2226, R2227, R2228, R2229, R2230, R2231, R2232, R2233, R2234, R2235, R2236, R2237, R2238, R2239, R2240, R2241, R2242, R2243, R2244, R2245, R2246, R2247, R2248, R2249, R2250, R2251, R2252, R2253, R2254, R2255, R2256, R2257, R2258, R2259, R2260, R2261, R2262, R2263, R2264, R2265, R2266, R2267, R2268, R2269, R2270, R2271, R2272, R2273, R2274, R2275, R2276, R2277, R2278, R2279, R2280, R2281, R2282, R2283, R2284, R2285, R2286, R2287, R2288, R2289, R2290, R2291, R2292, R2293, R2294, R2295, R2296, R2297, R2298, R2299, R2300, R2301, R2302, R2303, R2304, R2305, R2306, R2307, R2308, R2309, R2310, R2311, R2312, R2313, R2314, R2315, R2316, R2317, R2318, R2319, R2320, R2321, R2322, R2323, R2324, R2325, R2326, R2327, R2328, R2329, R2330, R2331, R2332, R2333, R2334, R2335, R2336, R2337, R2338, R2339, R2340, R2341, R2342, R2343, R2344, R2345, R2346, R2347, R2348, R2349, R2350, R2351, R2352, R2353, R2354, R2355, R2356, R2357, R2358, R2359, R2360, R2361, R2362, R2363, R2364, R2365, R2366, R2367, R2368, R2369, R2370, R2371, R2372, R2373, R2374, R2375, R2376, R2377, R2378, R2379, R2380, R2381, R

B+ VOLTAGE CONFIRMATION

The following adjustments should always be performed when replacing IC601 and R635.

- 1) Supply $130 \pm 5\%$ V AC to with variable autotransformer.
- 2) Receive entirely monoscope signal.
- 3) Set the PICTURE control and the BRIGHT controls in to initial reset.
- 4) Confirm the voltage of TP91 is less than 137.0V DC.
- 5) If step 4) is not satisfied, replace IC601 and R635 repeat above steps.

* Use a digital multimeter whose input impedance over $100 \text{ M}\Omega$ when confirming the voltage of the protector terminal of TP85.

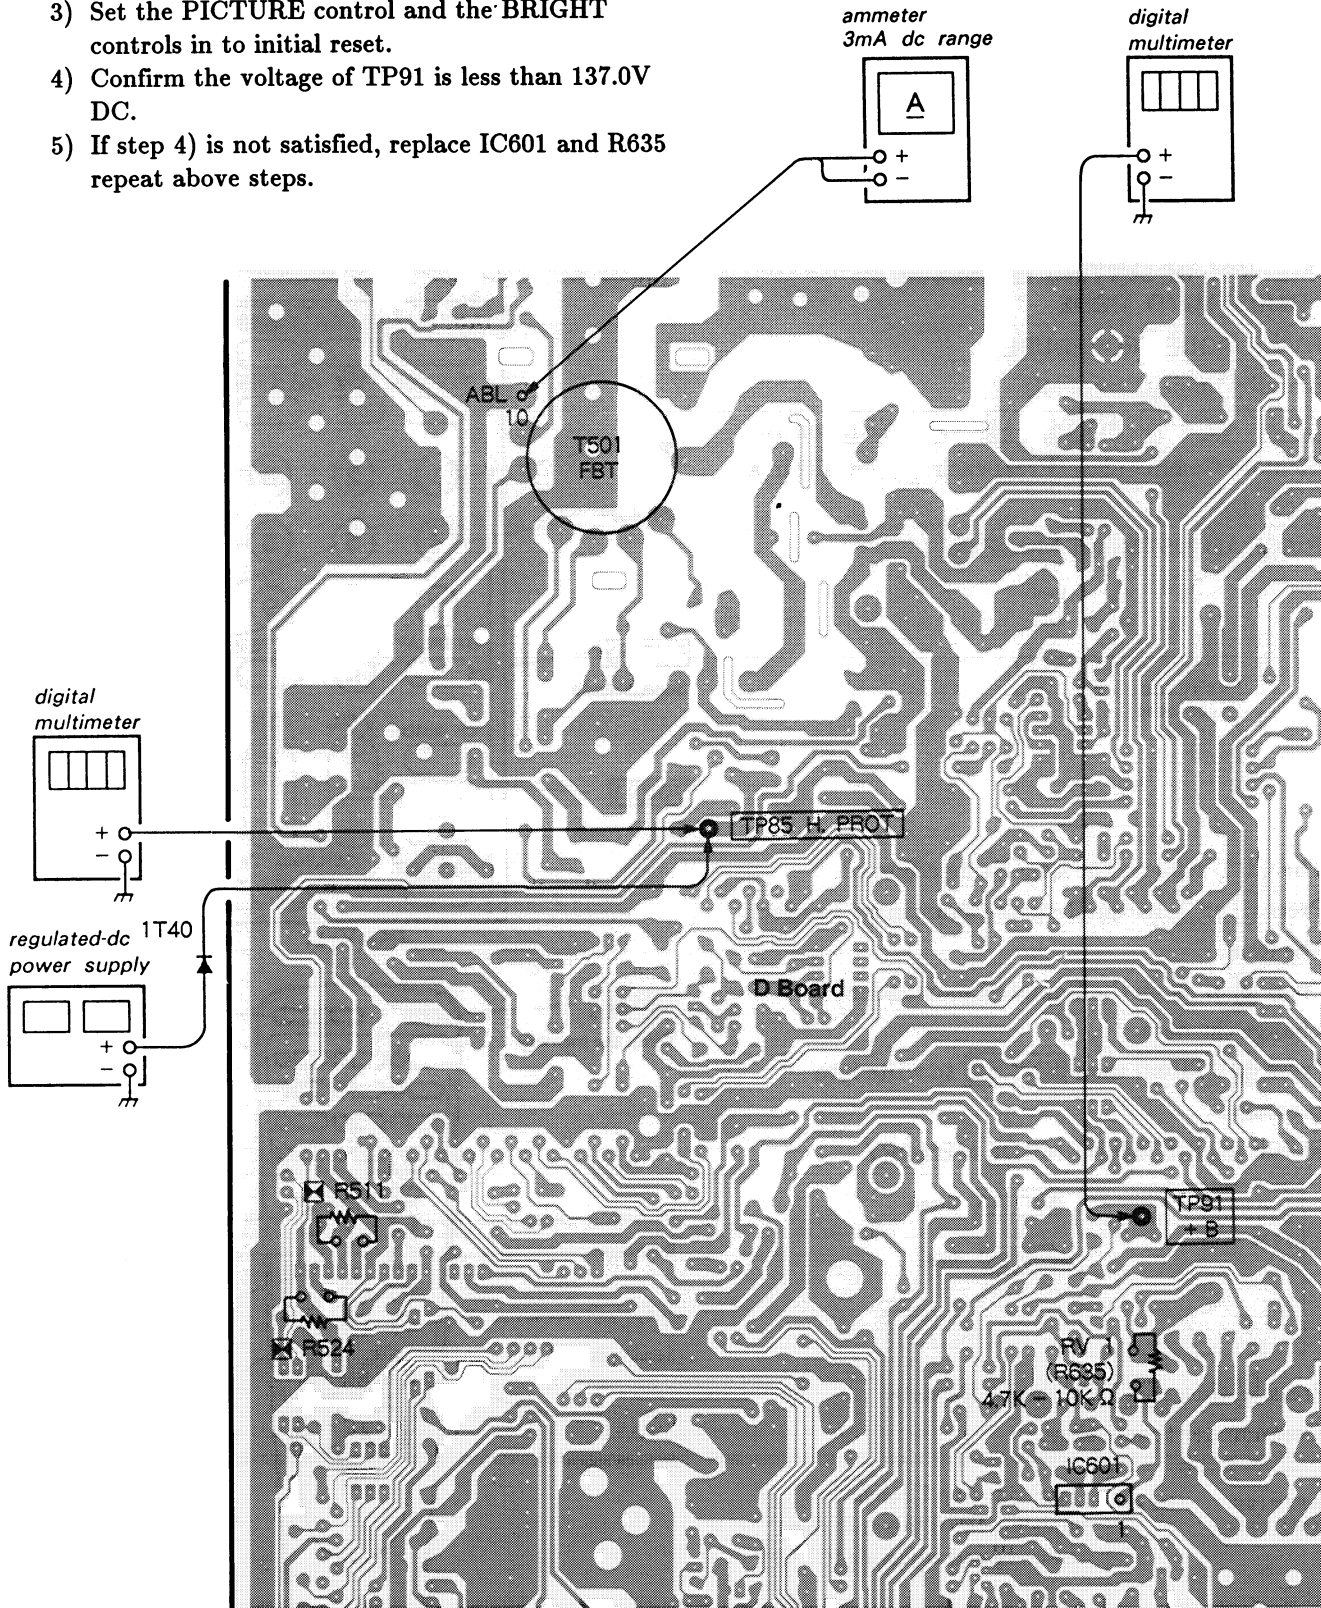

VOLTAGE CONFIRMATION


The following adjustments should always be performed when replacing D5001 and D5002.

- Use a digital multimeter whose input impedance is over 100 MΩ when confirming the voltage of the protector terminal of TP94.

- 1) Supply 100V±5% AC to with variable autotransformer.
- 2) Receive entirely monochrome signal.
- 3) Set the FOCUS control and the BRIGHT controls to its initial reset.
- 4) Confirm the voltage of TP91 is less than 17V±5V DC.
- 5) If step 4) is not satisfied, replace D5001 and D5002 repeat above steps.

analog
load at range

digital
multimeter

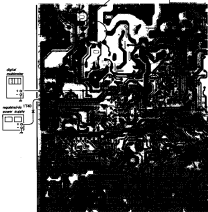

SECTION 5 CIRCUIT ADJUSTMENTS

5-1. ELECTRICAL ADJUSTMENT BY REMOTE COMMANDER

Use of Remote Commander can be performed circuit adjustments about this model.

NOTE : Test Equipment Required.


1. Pattern Generator
2. Frequency counter
3. Digital multimeter
4. Audio OSC

1. METHOD OF SETTING THE SERVICE ADJUSTMENT MODE

SERVICE MODE PROCEDURE


1. Standby mode.(Power off)
2. **DISPLAY** → **5** → **VOL (+)** → **POWER** on the Remote Commander. (Press each button within a second.)

SERVICE ADJUSTMENT MODE IN

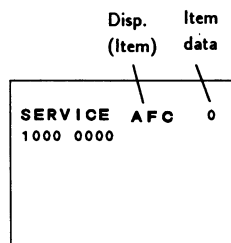


3. The CRT displays the item Being adjusted.
4. Press **1** or **4** on the Remote Commander to select the item.
5. Press **3** or **6** on the Remote Commander to change the data.
6. Press **MUTING** then **ENTER** to write into memory.

SERVICE ADJUSTMENT MODE MEMORY

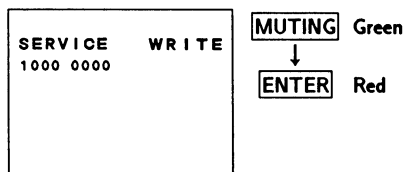

7. Press **8** then **ENTER** on the Remote Commander to initialize.

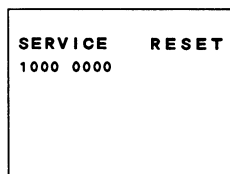

Carry out step 7) when adjusting IDs 0 to 4 and when replacing and adjusting IC102.



Factory original setting

8. Turn set off and on to exit.

2. MEMORY WRITE CONFIRMATION METHOD

1. After adjustment, pull out the plug from AC outlet, and next place, plug in AC outlet again.
2. Turn the power switch ON and set to Service Mode.
3. Call the adjusted items again, confirm they were adjusted.

3. ADJUST BUTTONS AND INDICATOR

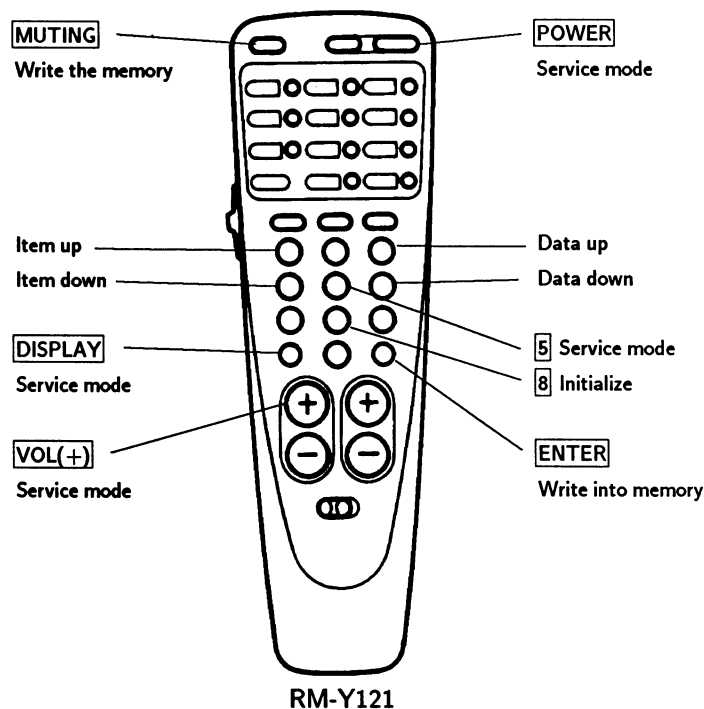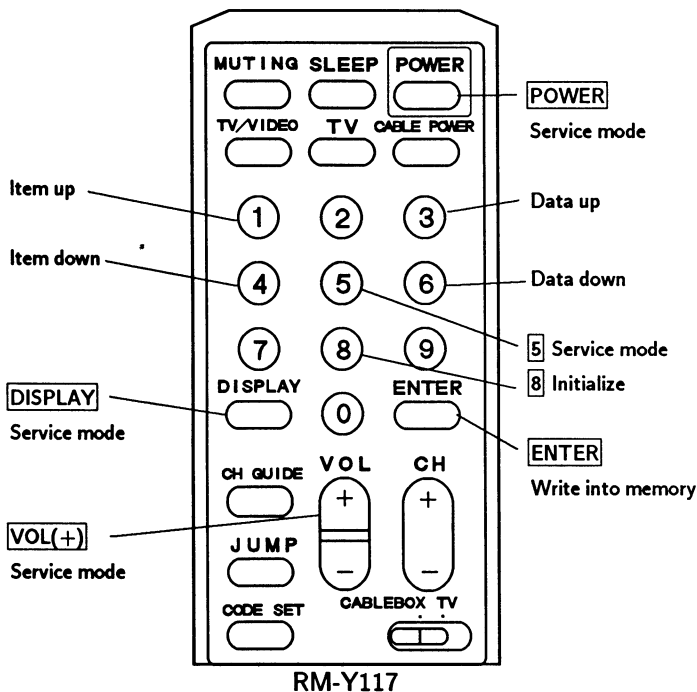

4. AN ITEM OF ADJUSTMENTS

No.	Disp.	Item	Data range	Ave. data (27 inch)	Ave. data (32 inch)
1	AFC	AFC Loop Gain	0~3	* 0	* 0
2	HFRE	H. Frequency	0~127	70	70
3	VFRE	V. Frequency	0~31	14	14
4	VPOS	V. Center	0~31	17	17
5	VSIZ	V. Size	0~63	28	28
6	VLIN	V. Linearity	0~15	8	8
7	VSCO	V. Correction	0~15	6	6
8	HPOS	H. Center	0~15	6	6
9	HSIZ	H. Size	0~31	31	31
10	PAMP	Pin Amp	0~31	24	24
11	CPIN	Corner Pin	0~7	3	3
12	PPHA	Pin Phase	0~15	6	6
13	VCOM	V. Compensation	0~7	* 2	* 2
14	GAMP	Green Amp	0~31	20	20
15	BAMP	Blue Amp	0~31	17	17
16	GCUT	Green Cut Off	0~15	7	7
17	BCUT	Blue Cut Off	0~15	8	8
18	CROM	Chroma Trap	0~63	* 28	* 28
19	SPIX	Sub Contrast	0~63	20	20
20	SHUE	Sub Hue	0~63	33	33
21	SCOL	Sub Color	0~63	32	32
22	SBRT	Sub Bright	0~63	35	35
23	RGBP	RGB Picture	0~63	* 30	* 10
24	SHAP	Sharpness	0~15	* 10	7
25	VSMO	V Pull in Range	0, 1	* 0	* 0
26	REF	Refference line	0~3	* 2	* 2
27	ROFF	Red Out	0, 1	1	1
28	GOFF	Green Out	0, 1	1	1
29	BOFF	Blue Out	0, 1	1	1
30	ABLM	ABL Mode	0, 1	* 0	* 0
31	NOTC	Notch On/Off	0, 1	* 1	* 1
32	DRGB	OSD intensity	0, 1	* 0	* 0
33	DISP	Display Position	0~63	40	40
34	DPDV	Lumipon (dpdv)	0~3	* 1	* 1
35	MPIC	Lumipon (depth)	0~63	* 48	* 48
36	SVOL	Sub Volume	0~15	* 0	* 0
37	SBAL	Sub Balance	0~15	7	7
38	BASS	Sub Bass	0~15	* 8	* 8
39	TRE	Sub Treble	0~15	* 8	* 8
40	UYBO	Upper Y. Bow	0~63	31	31
41	LYBO	Lower Y. Bow	0~63	25	25
42	HAMP	H. Amp	0~63	33	33
43	HTIL	H. Tilt	0~63	33	33
44	UCBO	Upper C. Bow	0~63	38	38
45	UTIL	Upper Tilt	0~63	40	40
46	LCBO	Lower C. Bow	0~63	41	41
47	LTIL	Lower Tilt	0~63	46	46
48	DCSH	DC. Shift	0~63	37	37
49	PHPO	PinP H Position	0~127	76	76
50	PHUE	PinP Hue	0~127	* 0	* 0
51	ID-0	Model ID	0~127	by Model	by Model
52	ID-1	Model ID	0~127	by Model	by Model
53	ID-2	Model ID	0~127	by Model	by Model
54	ID-3	Model ID	0~127	by Model	by Model
55	ID-4	Model ID	0~127	by Model	by Model

Note : No. from 1 to 55 is to show adjusment order.

SERVICE ID 0 64
1000 0000 1000 000

Please adjust the function values as shown below when IC 102 on M board was replaced.

KV-27V 10 (US/CND)

No.	Disp.	Disp.	Data
51	ID-0	1 1 1 1 0 0 0	120
52	ID-1	1 1 1 1 1 1 1	127
53	ID-2	1 0 0 1 0 0 0	72
54	ID-3	0 0 0 0 0 0 0	0
55	ID-4	0 0 1 0 0 0 1	17

KV-27V 15 (US/CND)

No.	Disp.	Disp.	Data
51	ID-0	1 1 1 1 0 0 0	120
52	ID-1	1 1 1 1 1 1 1	127
53	ID-2	1 0 0 1 0 0 0	72
54	ID-3	1 0 0 0 0 0 0	64
55	ID-4	0 0 1 0 0 1 1	19

KV-29V 10 C (WP)/29 V 10 M (E)

No.	Disp.	Disp.	Data
51	ID-0	1 1 1 1 0 0 0	120
52	ID-1	1 1 1 1 1 1 1	127
53	ID-2	0 1 0 0 0 0 0	32
54	ID-3	0 0 0 0 0 0 0	0
55	ID-4	0 0 1 0 0 0 1	17

KV-32 V 15 (US/CND)

No.	Disp.	Disp.	Data
51	ID-0	1 1 1 1 0 0 0	120
52	ID-1	1 1 1 1 1 1 1	127
53	ID-2	1 0 0 1 0 0 0	72
54	ID-3	0 1 0 0 1 0 0	36
55	ID-4	0 0 1 0 0 1 1	19

* : Set-up value

5-2. M BOARD ADJUSTMENTS

H.FREQUENCY ADJUSTMENT (HFRE)

1. Input a color-bar signal.
2. Set to Service adjustment Mode.
3. Connect a frequency counter to CN131 Pin⑬ (H. DRIVE) connector and ground.
4. Call the item of AFC, set to 3 level (free run).
5. Select HFRE with **[1]** and **[4]**.
6. Adjust with **[3]** and **[6]** for the $15734 \pm 60\text{Hz}$.
7. Call the item of AFC again, adjust the level "0".
8. Write into the memory by pressing **[MUTING]** then **[ENTER]**.

V.FREQUENCY ADJUSTMENT (VFRE)

1. Select video 1 with no connecting the signal.
2. Set to Service adjustment Mode.
3. Connect the frequency counter across connector CN131 Pin⑦ (V. DRIVE) connector and ground.
4. Select VFRE with **[1]** and **[4]**.
5. Adjust with **[3]** and **[6]** for the $56 \pm 0.5\text{Hz}$.
6. Write the memory by pressing **[MUTING]** then **[ENTER]**.


SUB CONTRAST ADJUSTMENT (SPIX)

1. Input a color-bar signal.
2. Set to Service adjustment Mode.
3. Set the conditions as follows.

PICTURE	MAX
COLOR	MIN
BRIGHT	CENTER
R OFF	ON (1)
G OFF	OFF (0)
B OFF	OFF (0)

SERVICE ROFF 1	1: ON
1000 0000	0: OFF

4. Connect an oscilloscope to CN703 Pin① (R OUT) of C board and ground.
5. Select SPIX with **[1]** and **[4]**.
6. Adjust with **[3]** and **[6]** for the $1.9 \pm 0.1\text{Vp-p}$.

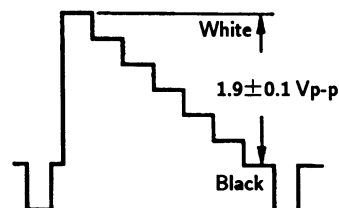

7. Write the memory by pressing **[MUTING]** then **[ENTER]**.
8. Return the following back to normal after adjustment.

PICTURE	MAX
BRIGHT	CENTER
COLOR	CENTER
R OFF	ON
G OFF	ON
B OFF	ON

5-2. M BOARD ADJUSTMENTS

5.1 FREQUENCY ADJUSTMENT (HP10)

1. Input a color-bar signal.
2. Set to Service adjustment Mode.
3. Connect a frequency counter to CP10 Pin② (V. DOUT) connector and ground.
4. Call the base of AFO, set to 0 level (five times).
5. Select HP10 with \leftarrow and \rightarrow .
6. Adjust with \uparrow and \downarrow for the 147.45 MHz.
7. Call the base of AFO again, adjust the level 0 %.
8. Write into the memory by pressing \rightarrow then \rightarrow .

OPTION

5.2 FREQUENCY ADJUSTMENT (VY10)

1. Select video 1 with no connecting the signal.
2. Set to Service adjustment Mode.
3. Connect the frequency counter across connector CP10 Pin② (V. DOUT) connector and ground.
4. Select VY10 with \leftarrow and \rightarrow .
5. Adjust with \uparrow and \downarrow for the 60 MHz.
6. Write the memory by pressing \rightarrow then \rightarrow .

OPTION

5.3 CONTRAST ADJUSTMENT (DP10)

1. Input a color-bar signal.
2. Set to Service adjustment Mode.
3. Set the conditions as follows.

PICTURE	-----	MAX
COLOR	-----	MIN
BRIGHT	-----	CENTER
B OFF	-----	ON (1)
G OFF	-----	OFF (2)
B OFF	-----	OFF (2)



4. Connect an oscilloscope to CP10 Pin② (V. DOUT) of C board and ground.
5. Select DP10 with \leftarrow and \rightarrow .
6. Adjust with \uparrow and \downarrow for the 1.0 VOL Vpp.




7. Write the memory by pressing \rightarrow then \rightarrow .
8. Return the following back to normal after adjustment.

PICTURE	-----	MAX
BRIGHT	-----	CENTER
COLOR	-----	CENTER
B OFF	-----	ON
G OFF	-----	ON
B OFF	-----	ON

SUB HUE, SUB COLOR ADJUSTMENT (SHUE, SCOL)

1. Input a color-bar signal.
2. Set to service adjustment mode.
3. Connect an oscilloscope to CN703 Pin③ (B OUT) of C board.
4. Select SHUE and SCOL with **[1]** and **[4]**.
5. Adjust with **[3]** and **[6]** for the $V1=V4$ (SCOR) and $V2=V3$ (SHUE).

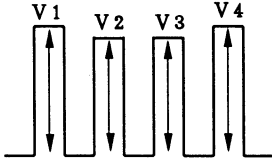


6. Increase the data of SCOL by 3 steps.
7. Write into the memory by pressing **MUTING** then **ENTER**.

SUB BARANCE ADJUSTMENT (SBAL)

1. Input a stereo signal.
2. Set to service adjustment mode.
3. Select SBAL with **[1]** and **[4]**.
4. Adjust with **[3]** and **[6]** for the best sound balance
5. Write into the memory by pressing **MUTING** then **ENTER**.

DISPLAY POSITION ADJUSTMENT (DISP)

1. Input a color-bar signal.
2. Set to service adjustment Mode.
3. Select DISP with **[1]** and **[4]**.
4. Adjust with **[3]** and **[6]** for the bar center.
5. Write the memory by pressing **MUTING** then **ENTER**.

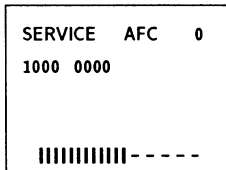


H.CENTER ADJUSTMENT (H POS)

Note: Perform this adjustment after H.FREQUENCY ADJUSTMENT (HFRE) .

1. Input a cross-hatch signal.
2. Set the Service adjustment mode.
3. Select HPOS with **[1]** and **[4]**.
4. Adjust with **[3]** and **[6]** to the best horizontal center.
5. Write into the memory by pressing **MUTING** then **ENTER**.

 H. CENTER (HPOS)



H.SIZE ADJUSTMENT (HSIZ)

1. Input a cross-hatch signal.
2. Set to service adjustment Mode.
3. Select HSIZ with **[1]** and **[4]**.
4. Adjust with **[3]** and **[6]** for best horizontal size.
5. Write into the memory by pressing **MUTING** then **ENTER**.

 
H. SIZE (HSIZ)



V.CENTER ADJUSTMENT (VPOS)

1. Input a cross-hatch signal.
2. Set to service adjustment Mode.
3. Select VPOS with **[1]** and **[4]**.
4. Adjust with **[3]** and **[6]** for the best vertical center.
5. Write into the memory by pressing **MUTING** then **ENTER**.


V. CENTER (VPOS)



V.SIZE ADJUSTMENT (VSIZ)

1. Input a cross-hatch signal.
2. Set to service adjustment Mode.
3. Select VSIZ with **1** and **4**.
4. Adjust with **3** and **6** for the best vertical size.
5. Write into the memory by pressing **MUTING** then **ENTER**.

 
V. SIZE (VSIZ)



V LINEARITY(VLIN), VS CORRECTION(VSCO), PIN AMP(PAMP), CORNER PIN(CPIN), AND PIN PHASE(PPHA) ADJUSTMENTS

1. Input a cross-hatch signal.
2. Set to Service adjustment Mode.
3. Select VLIN, VSCO, PAMP, CPIN, and PPHA with **1** and **4**.
4. Adjust with **3** and **6** for the best picture.
5. Write the memory by Pressing **MUTING** then **ENTER**.

 
V LINEARITY (VLIN)




VS CORRECTION (VSCO)



 
PIN AMP (PAMP)



CORNER PIN (CPIN)

 

PIN PHASE (PPHA)

 

5-3. P BOARD ADJUSTMENTS (KV-27V15/32V15 only)

P IN P H. POSITION (PHPO)

1. Input a color-bar signal
2. Set to Service adjustment Mode.
3. Select PHPO with **1** and **4**.
4. Adjust with **3** and **6** for the best balanced cent position at 4 corner P in P display position.
5. Write the memory by pressing **MUTING** then **ENTER**.

V-BIAS ADJUSTMENT (VBIAS)

1. Input a cross-hatch signal.
2. Set to service adjustment Mode.
3. Select VBIAS with **[F]** and **[A]**.
4. Adjust with **[L]** and **[R]** for the best vertical line.
5. Write into the memory by pressing **[MEMORY]** then **[ENTER]**.

V. BIAS (VBIAS)



V LINEARITY (VLIN), V2 CORRECTION (V2CO), PIN AMP (PAMP), CORNER PIN (CPIN), AND PIN PHASE (PPHA) ADJUSTMENTS

1. Input a cross-hatch signal.
2. Set to Service adjustment Mode.
3. Select VLIN, V2CO, PAMP, CPIN, and PPHA with **[F]** and **[A]**.
4. Adjust with **[L]** and **[R]** for the best picture.
5. Write the memory by pressing **[MEMORY]** then **[ENTER]**.

V LINEARITY (VLIN)



V2 CORRECTION (V2CO)



PIN AMP (PAMP)



CORNER PIN (CPIN)



PIN PHASE (PPHA)



5-2. P BOARD ADJUSTMENTS (EV-SPYGL/SPYGL only)

VRFL POSITION (VRPO)

1. Input a color bar signal.
2. Set to Service adjustment Mode.
3. Select VRPO with **[F]** and **[A]**.
4. Adjust with **[L]** and **[R]** for the best balanced color position at 4 corner P in P-display position.
5. Write the memory by pressing **[MEMORY]** then **[ENTER]**.

6-1. BLOCK DIAGRAMS (1)

SECTION 6 DIAGRAMS

KV-27V10/27V15
RM-Y117 RM-Y121/RM-CM101

KV-29V10C/29V10M/32V15
RM-Y117 RM-Y117 RM-Y121
RM-CM101

KV-27V10/27V15
RM-Y117 RM-Y121/RM-CM101



KV-29V10C/29V10M/32V15
RM-Y117 RM-Y117 RM-Y121
RM-CM101

KV-27V10/27V15
RM-Y117 RM-Y121/RM-CM101

KV-29V10C/29V10M/32V15
RM-Y117 RM-Y117 RM-Y121
RM-CM10

KV-27V10/27V15
RM-Y117 RM-Y121/RM-CM101
KV-29V10C/29V10M/32V15
RM-Y117 RM-Y117 RM-Y121
RM-CM101

KV-27V10/27V15
RM-Y117 RM-Y121/RM-CM101
KV-29V10C/29V10M/32V15
RM-Y117 RM-Y117 RM-Y121
RM-CM101

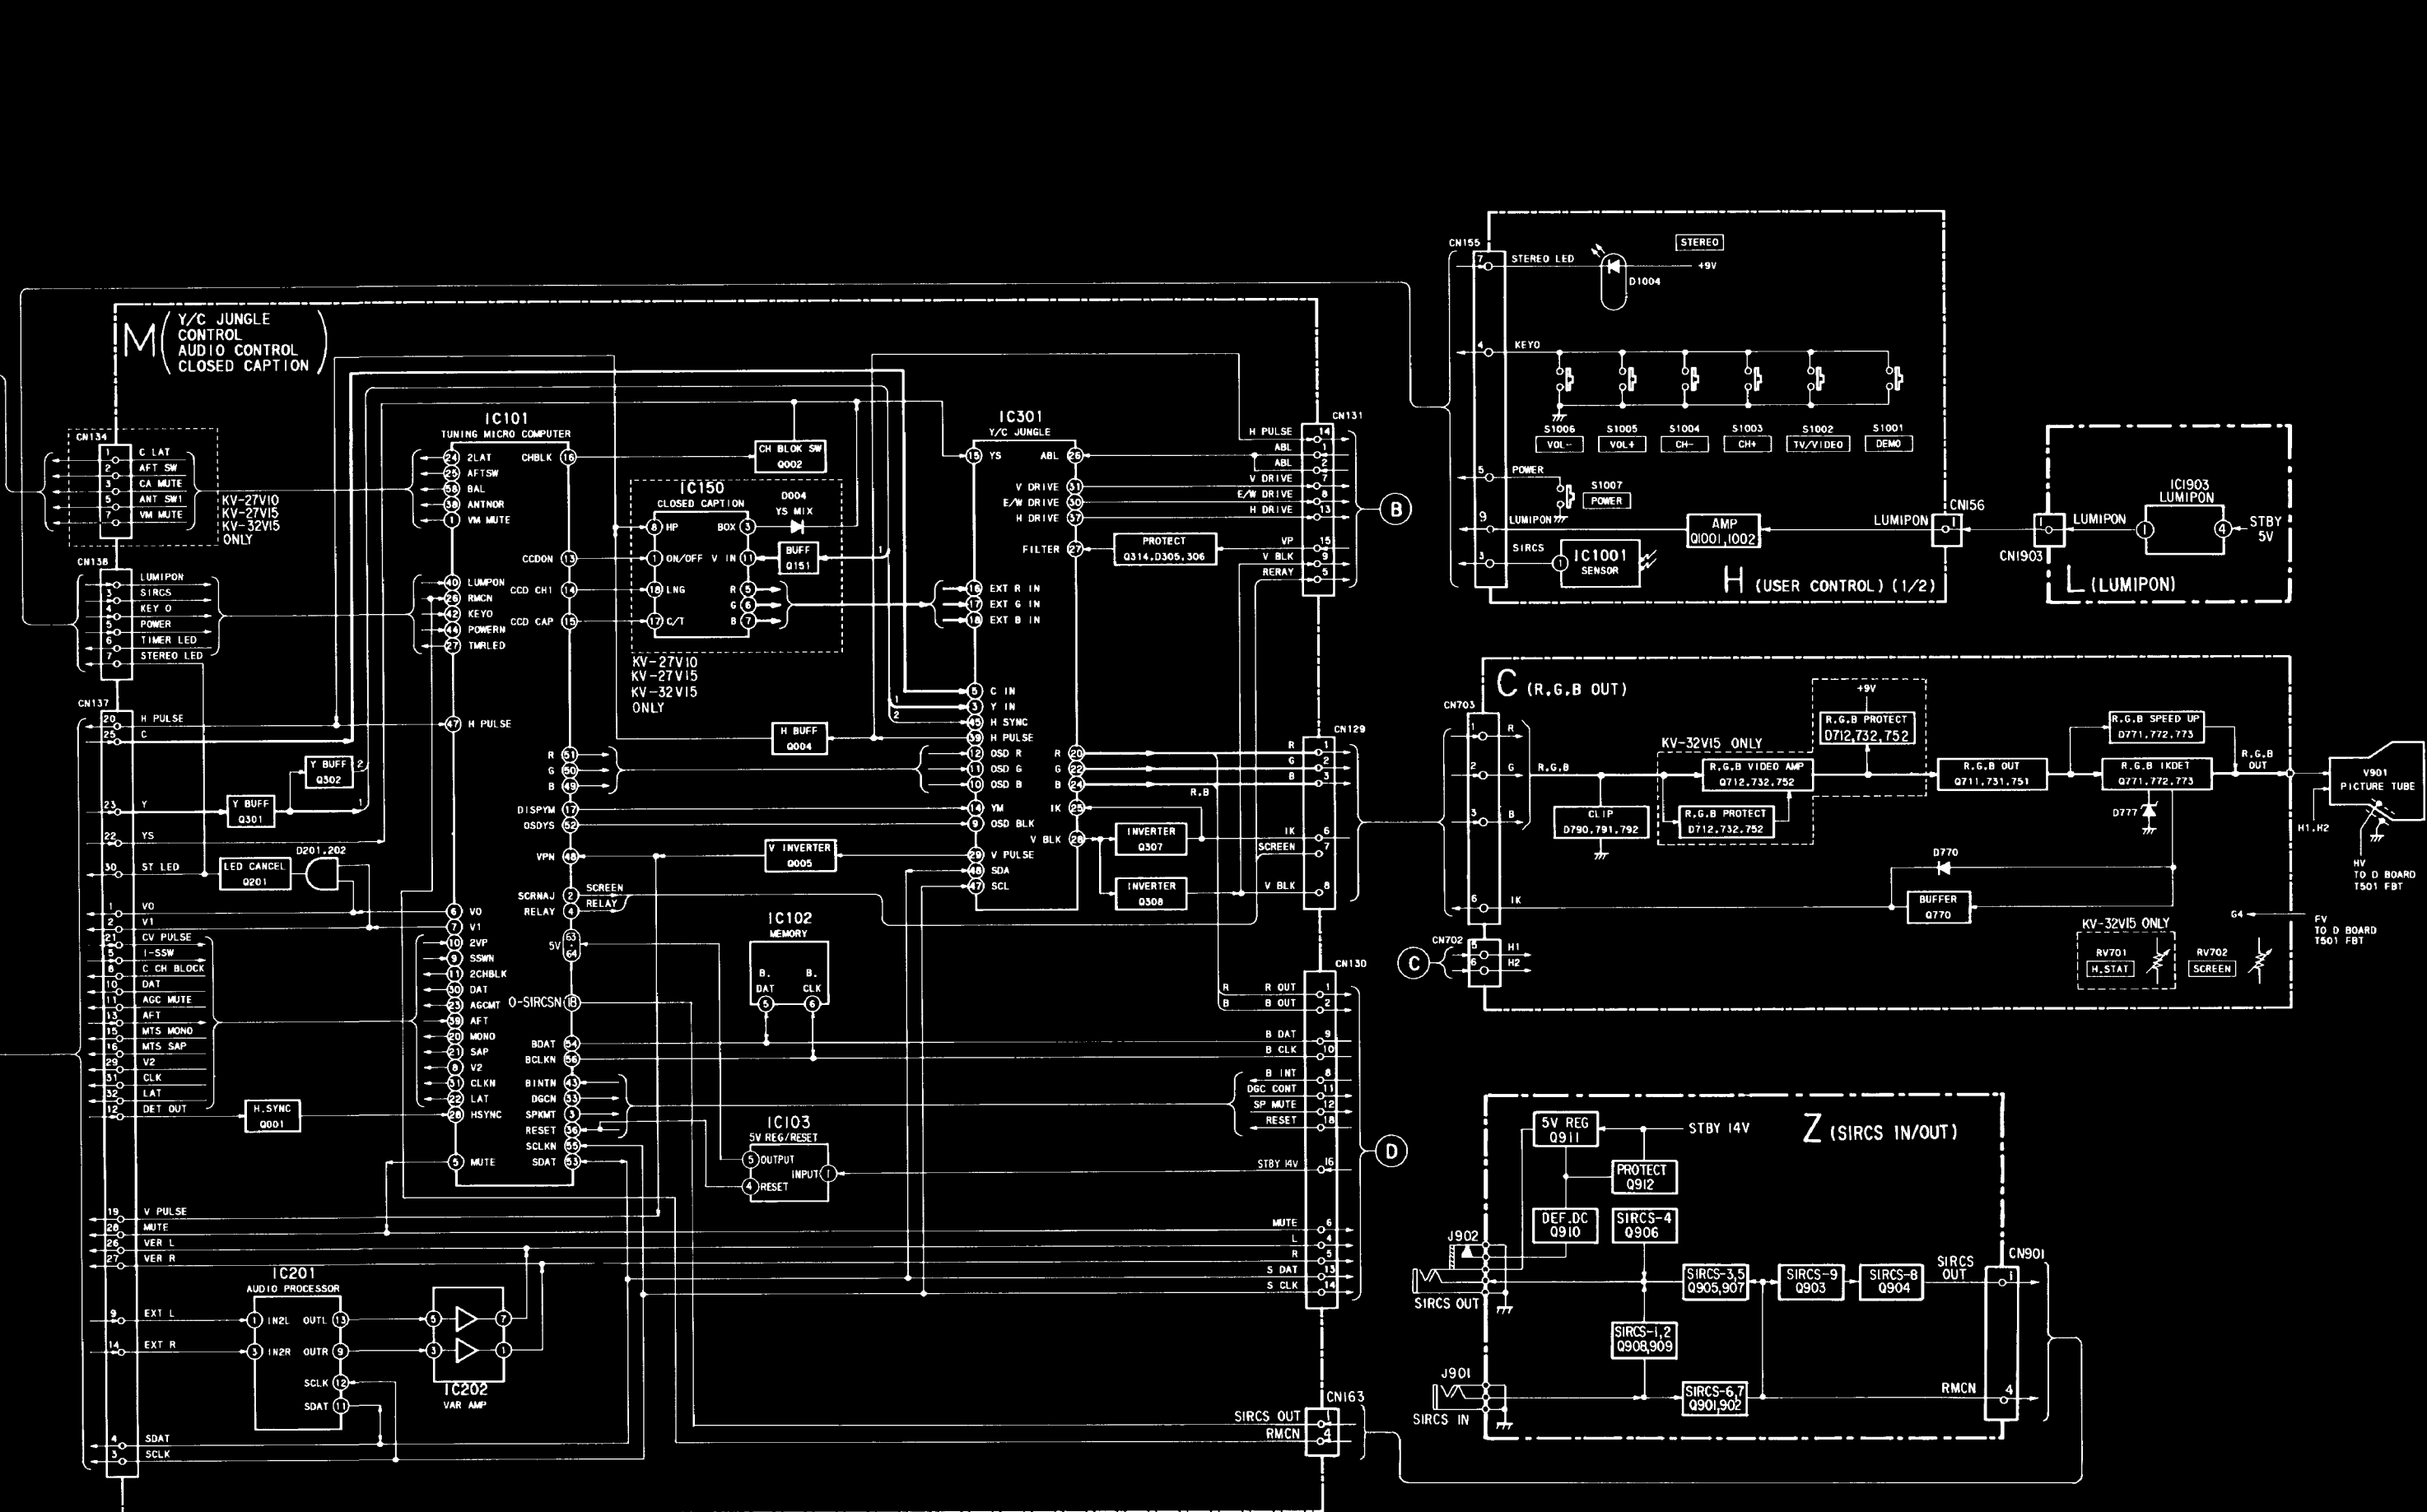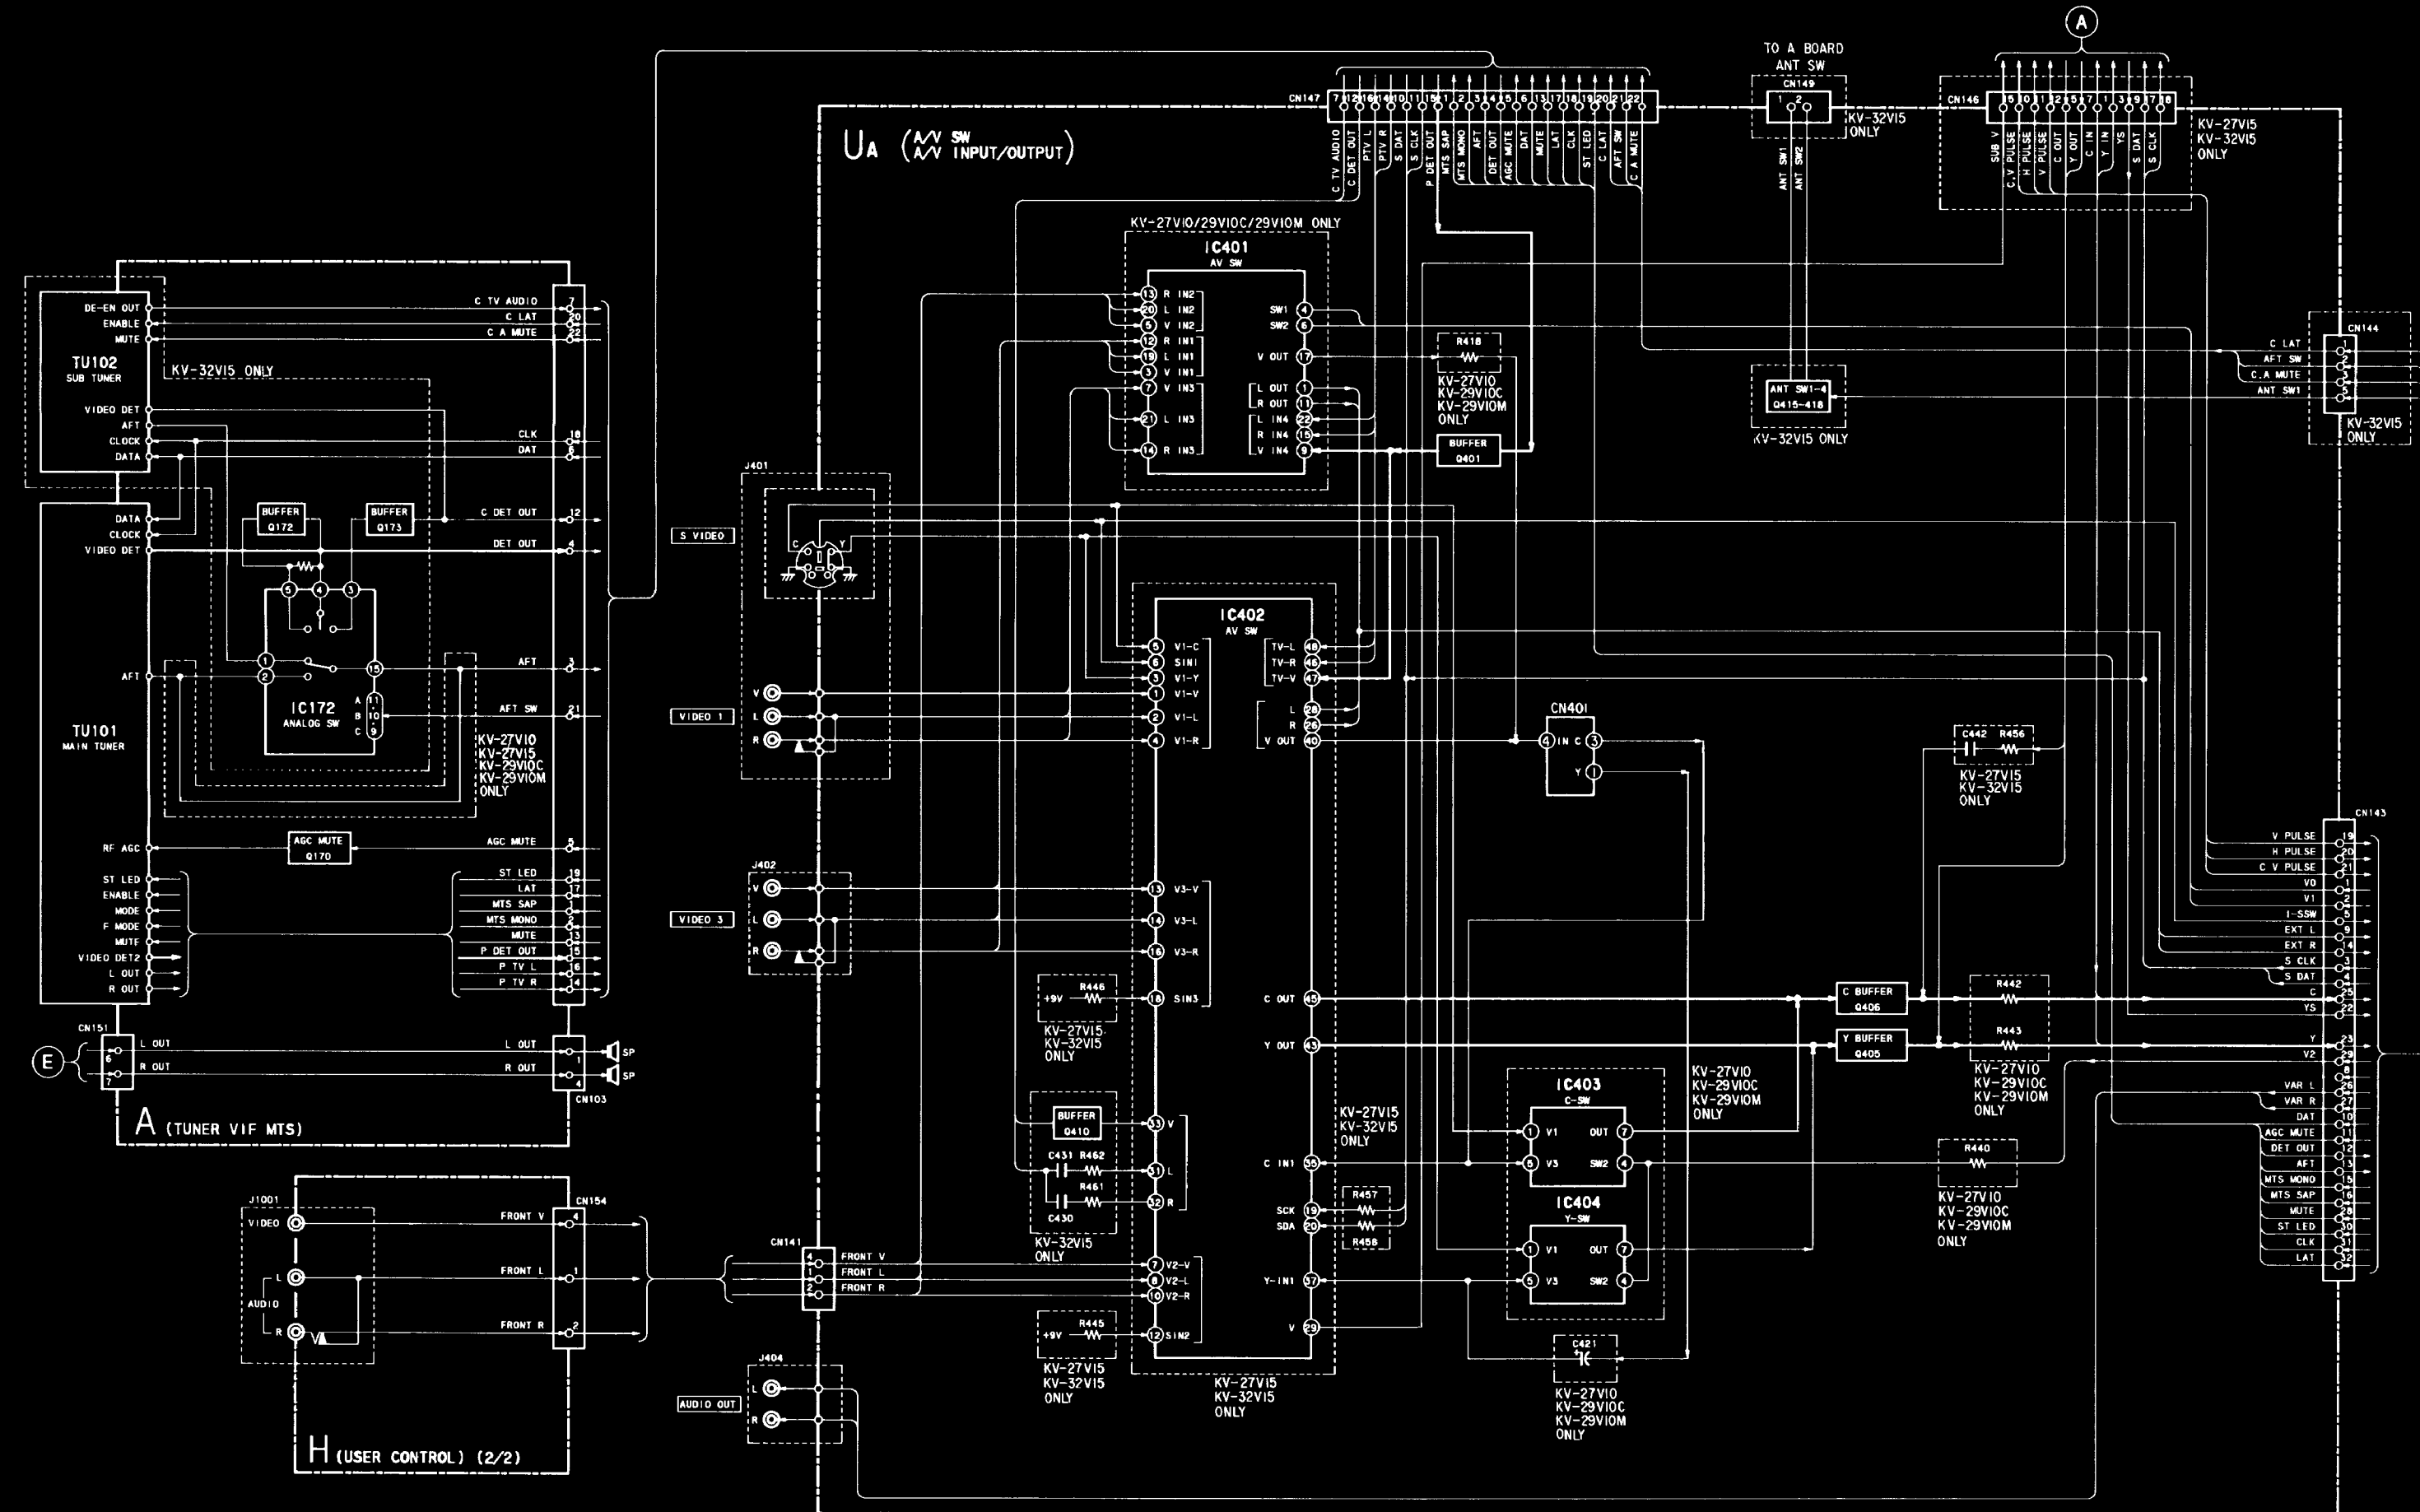

KV-27V10/27V15
RM-Y117 RM-Y121/RM-CM101
KV-29V10C/29V10M/32V15
RM-Y117 RM-Y117 RM-Y121
RM-CM101



KV-27V10/27V15
RM-Y117 RM-Y121/RM-CM101
KV-29V10C/29V10M/32V15
RM-Y117 RM-Y117 RM-Y121
RM-CM101


KV-27V10/27V15
RM-Y117 RM-Y121/RM-CM101
KV-29V10C/29V10M/32V15
RM-Y117 RM-Y117 RM-Y121
RM-CM101

KV-27V10/27V15
RM-Y117 RM-Y121/RM-CM101
KV-29V10C/29V10M/32V15
RM-Y117 RM-Y117 RM-Y121
RM-CM101


KV-27V10/27V15
RM-Y117 RM-Y121/RM-CM101
KV-29V10C/29V10M/32V15
RM-Y117 RM-Y117 RM-Y121
RM-CM101

6-2. BLOCK DIAGRAMS (2)

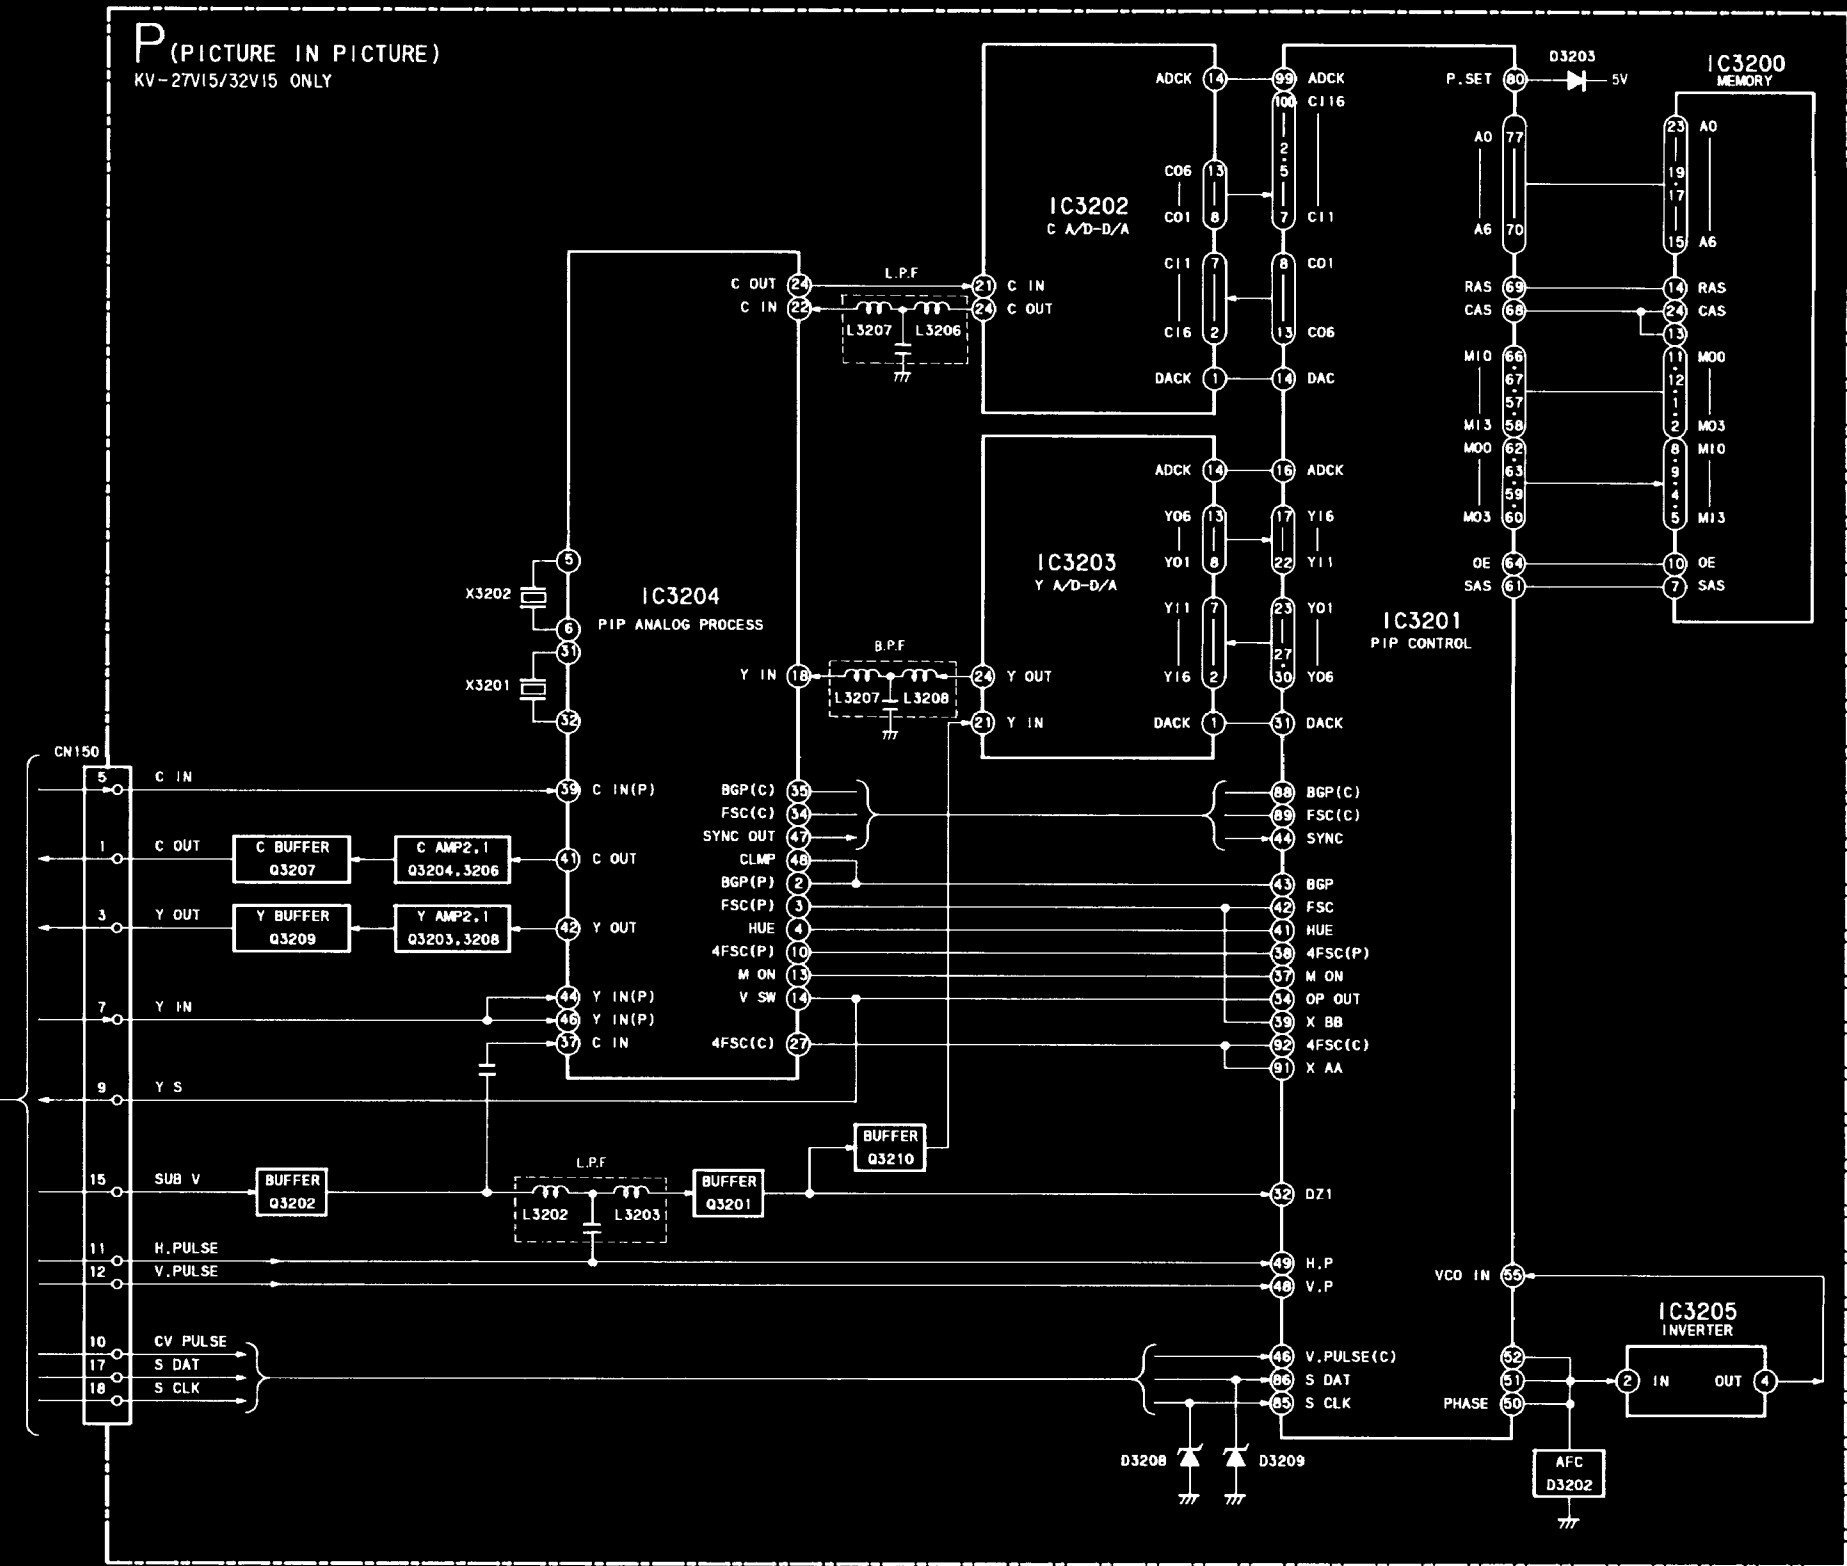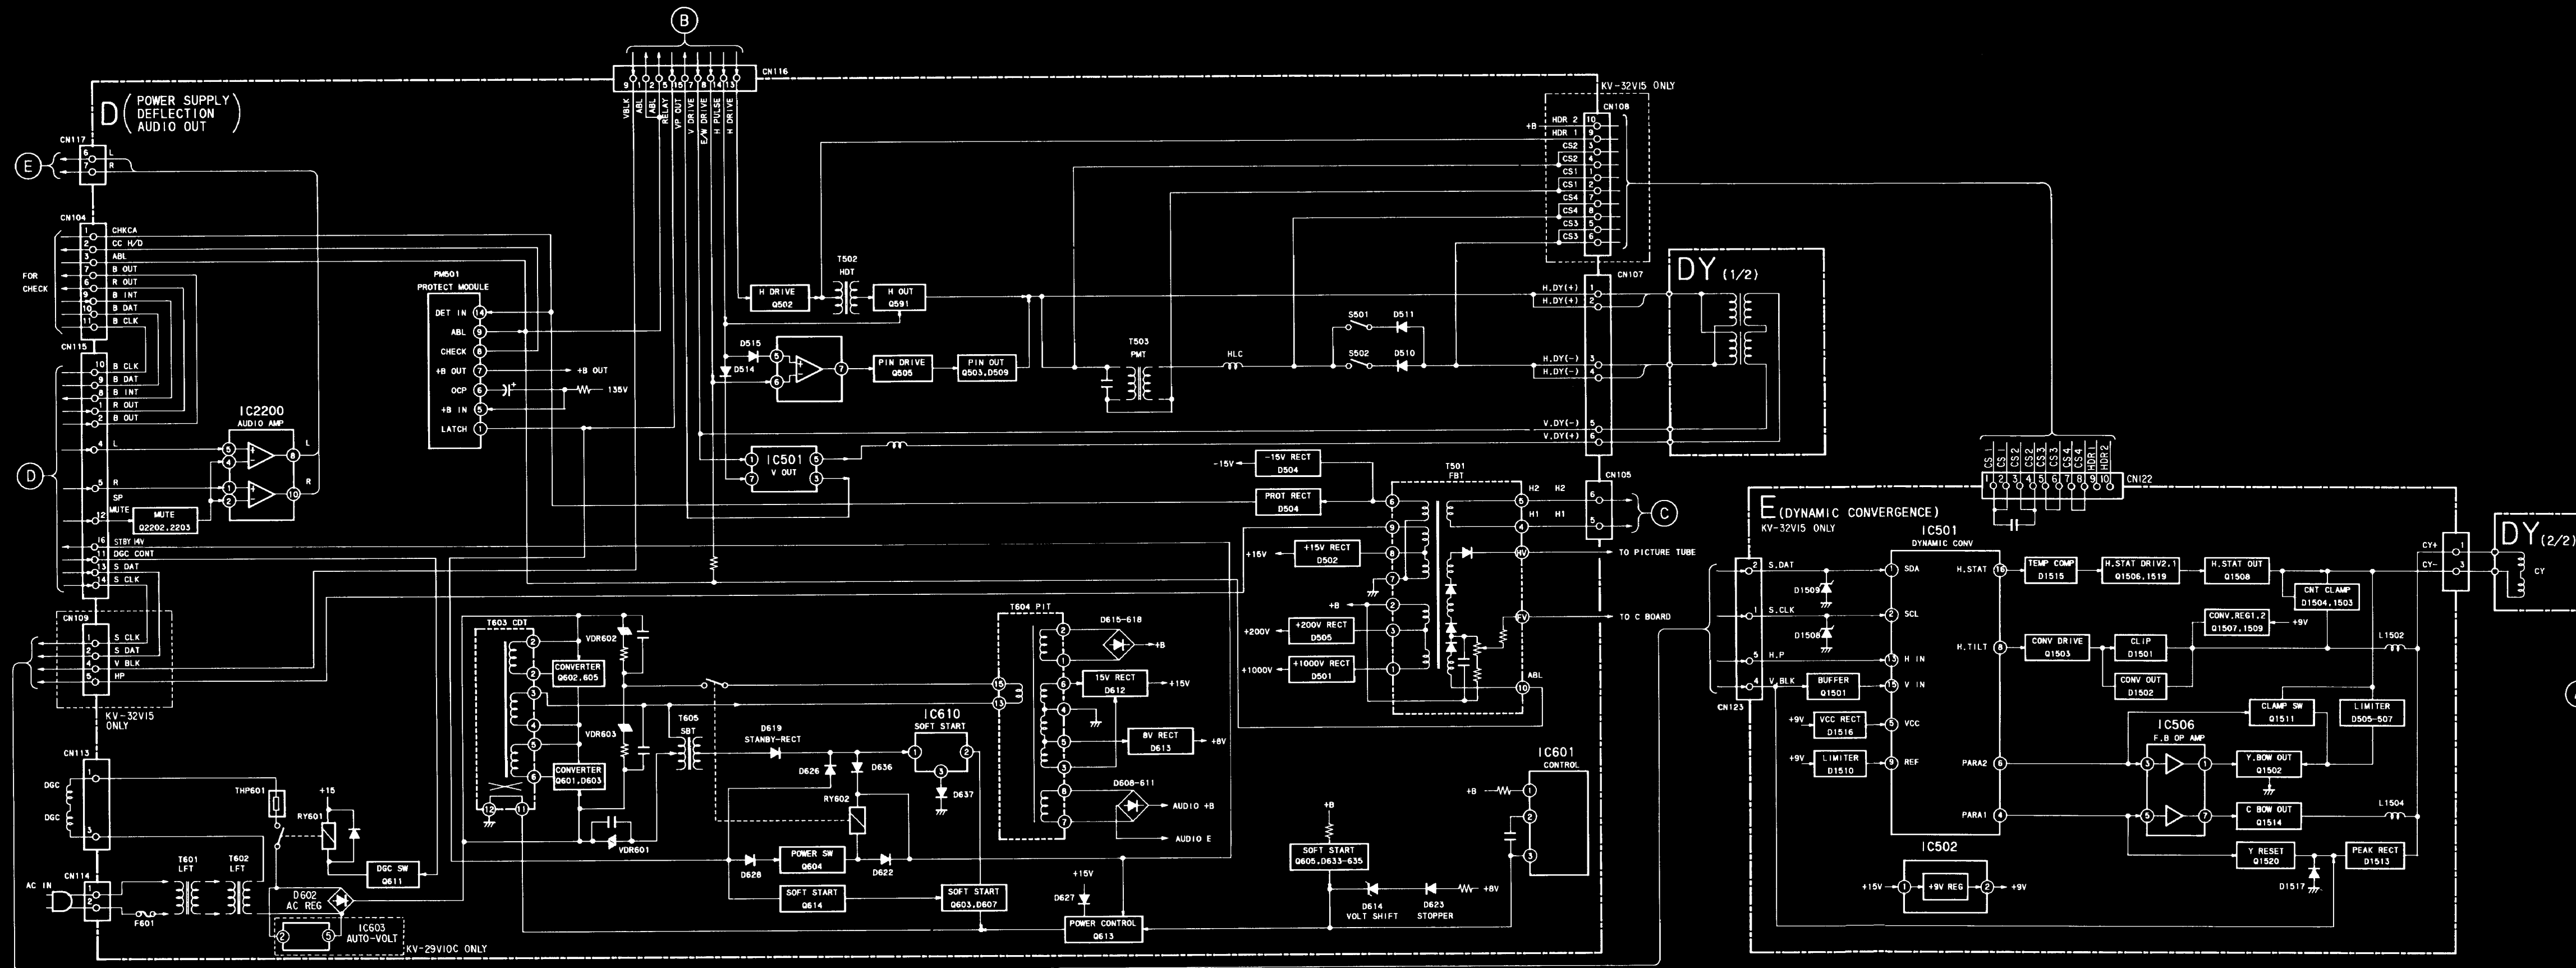

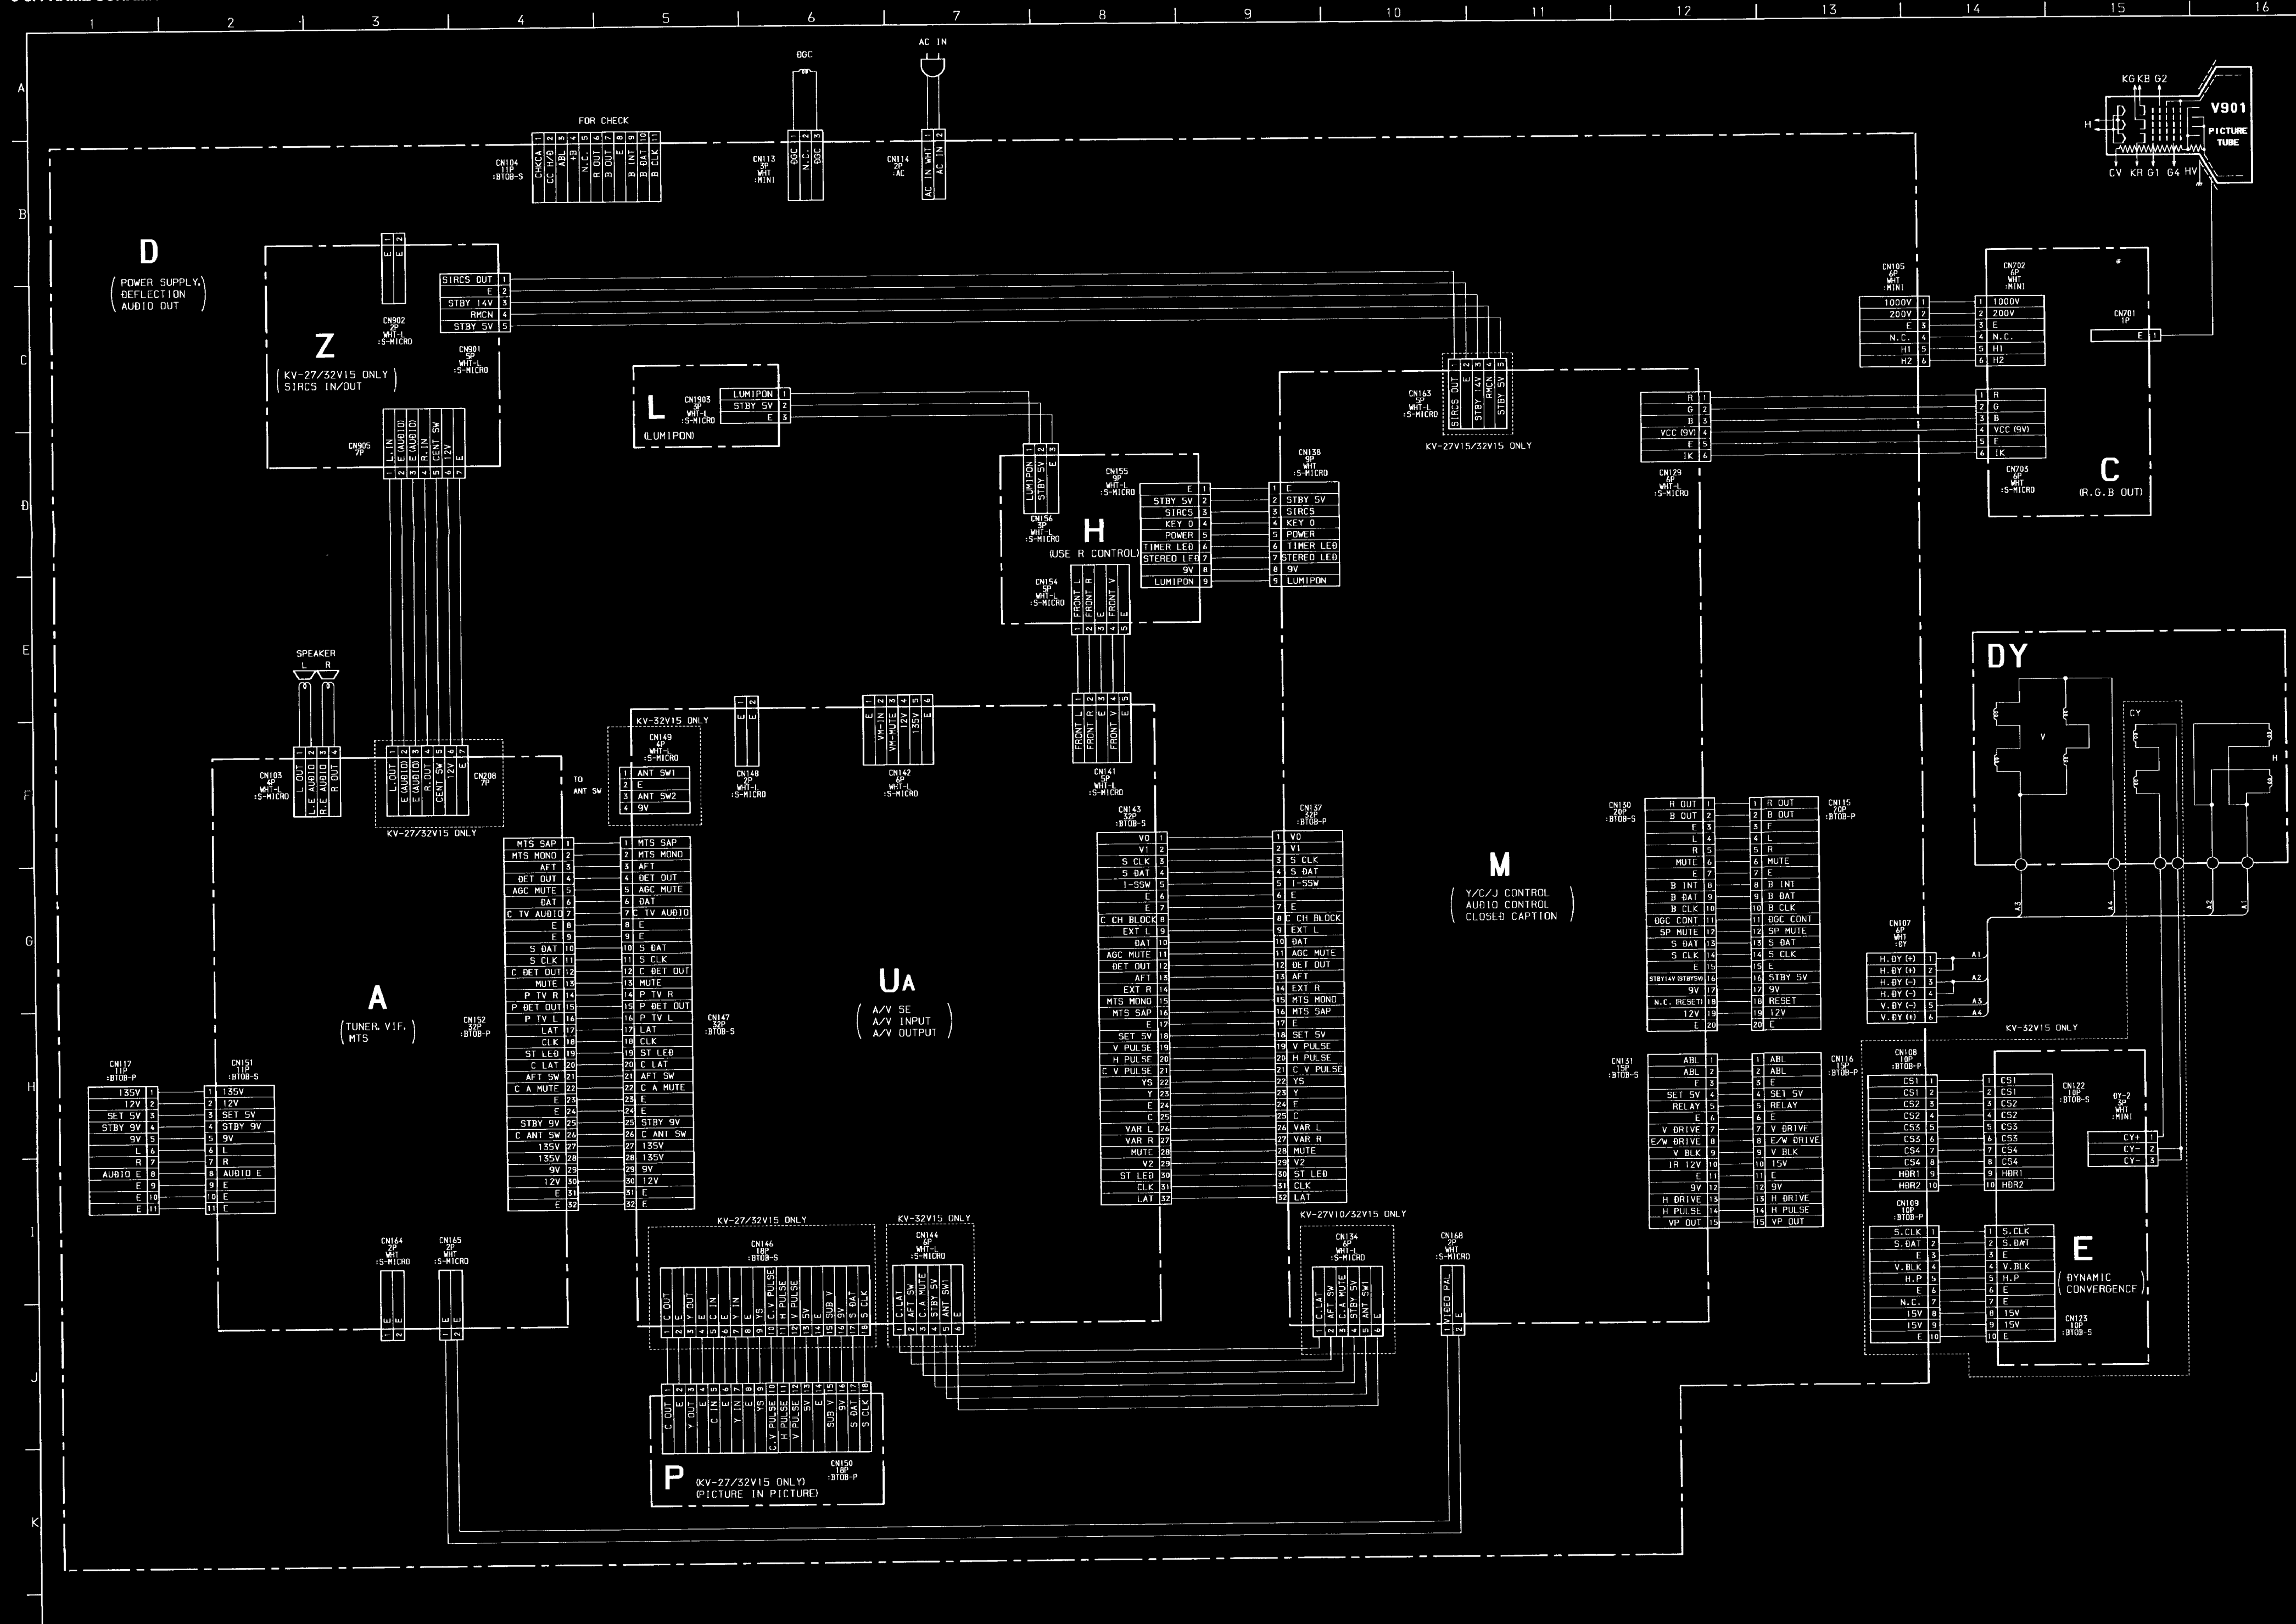

6-4. CIRCUIT BOARDS LOCATION

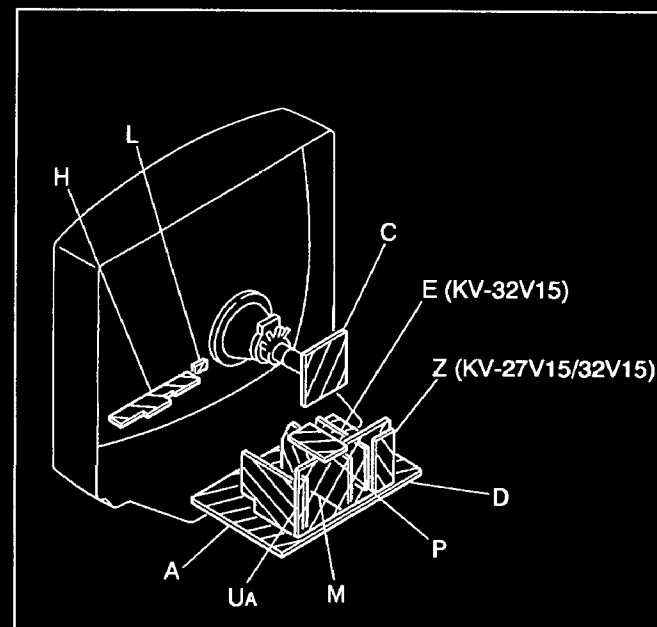

6-5. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

Note:

- All capacitors are in μF unless otherwise noted.
- pF: μF 50WV or less are not indicated except for electrolytic and tantalums.
- All electrolytics are in 50V unless otherwise specified.
- Indication of resistance, which does not have one for rating electrical power, is as follows.
- Pitch: 5 mm
- Rating electrical power 1/4W
- Chips resistors are 1/10W.
- All resistors are in ohms.
- k Ω =1000 Ω , M Ω =1000K Ω
- : nonflammable resistor.
- : fusible resistor.
- △: internal component.
- : panel designation, and adjustment for repair.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- L—: earth-ground. (cool)
- H—: earth-chassis. (hot)
- The components identified by □ in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.
- When replacing components identified by □, make the necessary adjustments indicated. If results do not meet the specified value, change the component identified by □ and repeat the adjustment until the specified value is achieved. (Refer to R511 and R524 on page 34, 35)
- When replacing the part in below table be sure to perform the related adjustment.

Part replaced (□)	Adjustment (△)
PM501, R511, R632, R645, R650, R338	D BOARD HOLD-DOWN (R511)
IC601, PM501, D504, C598, R509, R524, R632, R635, R645, T501, R338	D BOARD HOLD-DOWN (R524)

- All voltages are in V.
- Voltage are dc with respect to ground unless otherwise noted.
- Readings are taken with a 10 M Ω digital multimeter.
- Readings are taken with a color-bar signal input.
- Voltage variations may be noted due to normal production tolerance.
- Circled numbers are waveform references.
- : B+ line.
- : B- line.
- : signal path.

Reference Information

RESISTOR	: RN METAL FILM
	: RC SOLID
	: FPRD NONFLAMMABLE CARBON
	: FUSE NONFLAMMABLE FUSIBLE
	: RW NONFLAMMABLE WIREWOUND
	: RS NONFLAMMABLE METAL OXIDE
	: RB NONFLAMMABLE CEMENT
	: * ADJUSTMENT RESISTOR
COIL	: LF-8L MICRO INDUCTOR
CAPACITOR	: TA TANTALUM
	: PS STYROL
	: PP POLYPROPYLENE
	: PT MYLAR
	: MPS METALIZED POLYESTER
	: MPP METALIZED POLYPROPYLENE
	: ALB BIPOLAR
	: ALT HIGH TEMPERATURE
	: ALR HIGH RIPPLE

Note: The symbol □ display is on the component side.

The components identified by shading and mark △ are critical for safety. Replace only with part number specified.


The symbol □ indicate fast operating fuse. Replace only with fuse of same rating as marked.

Note: Les composants identifiés par un trame et une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Le symbole □ indique une fusible à action rapide. Doit être remplacée par une fusible de même valeur, comme marqué.

Schematic diagrams

UA board →

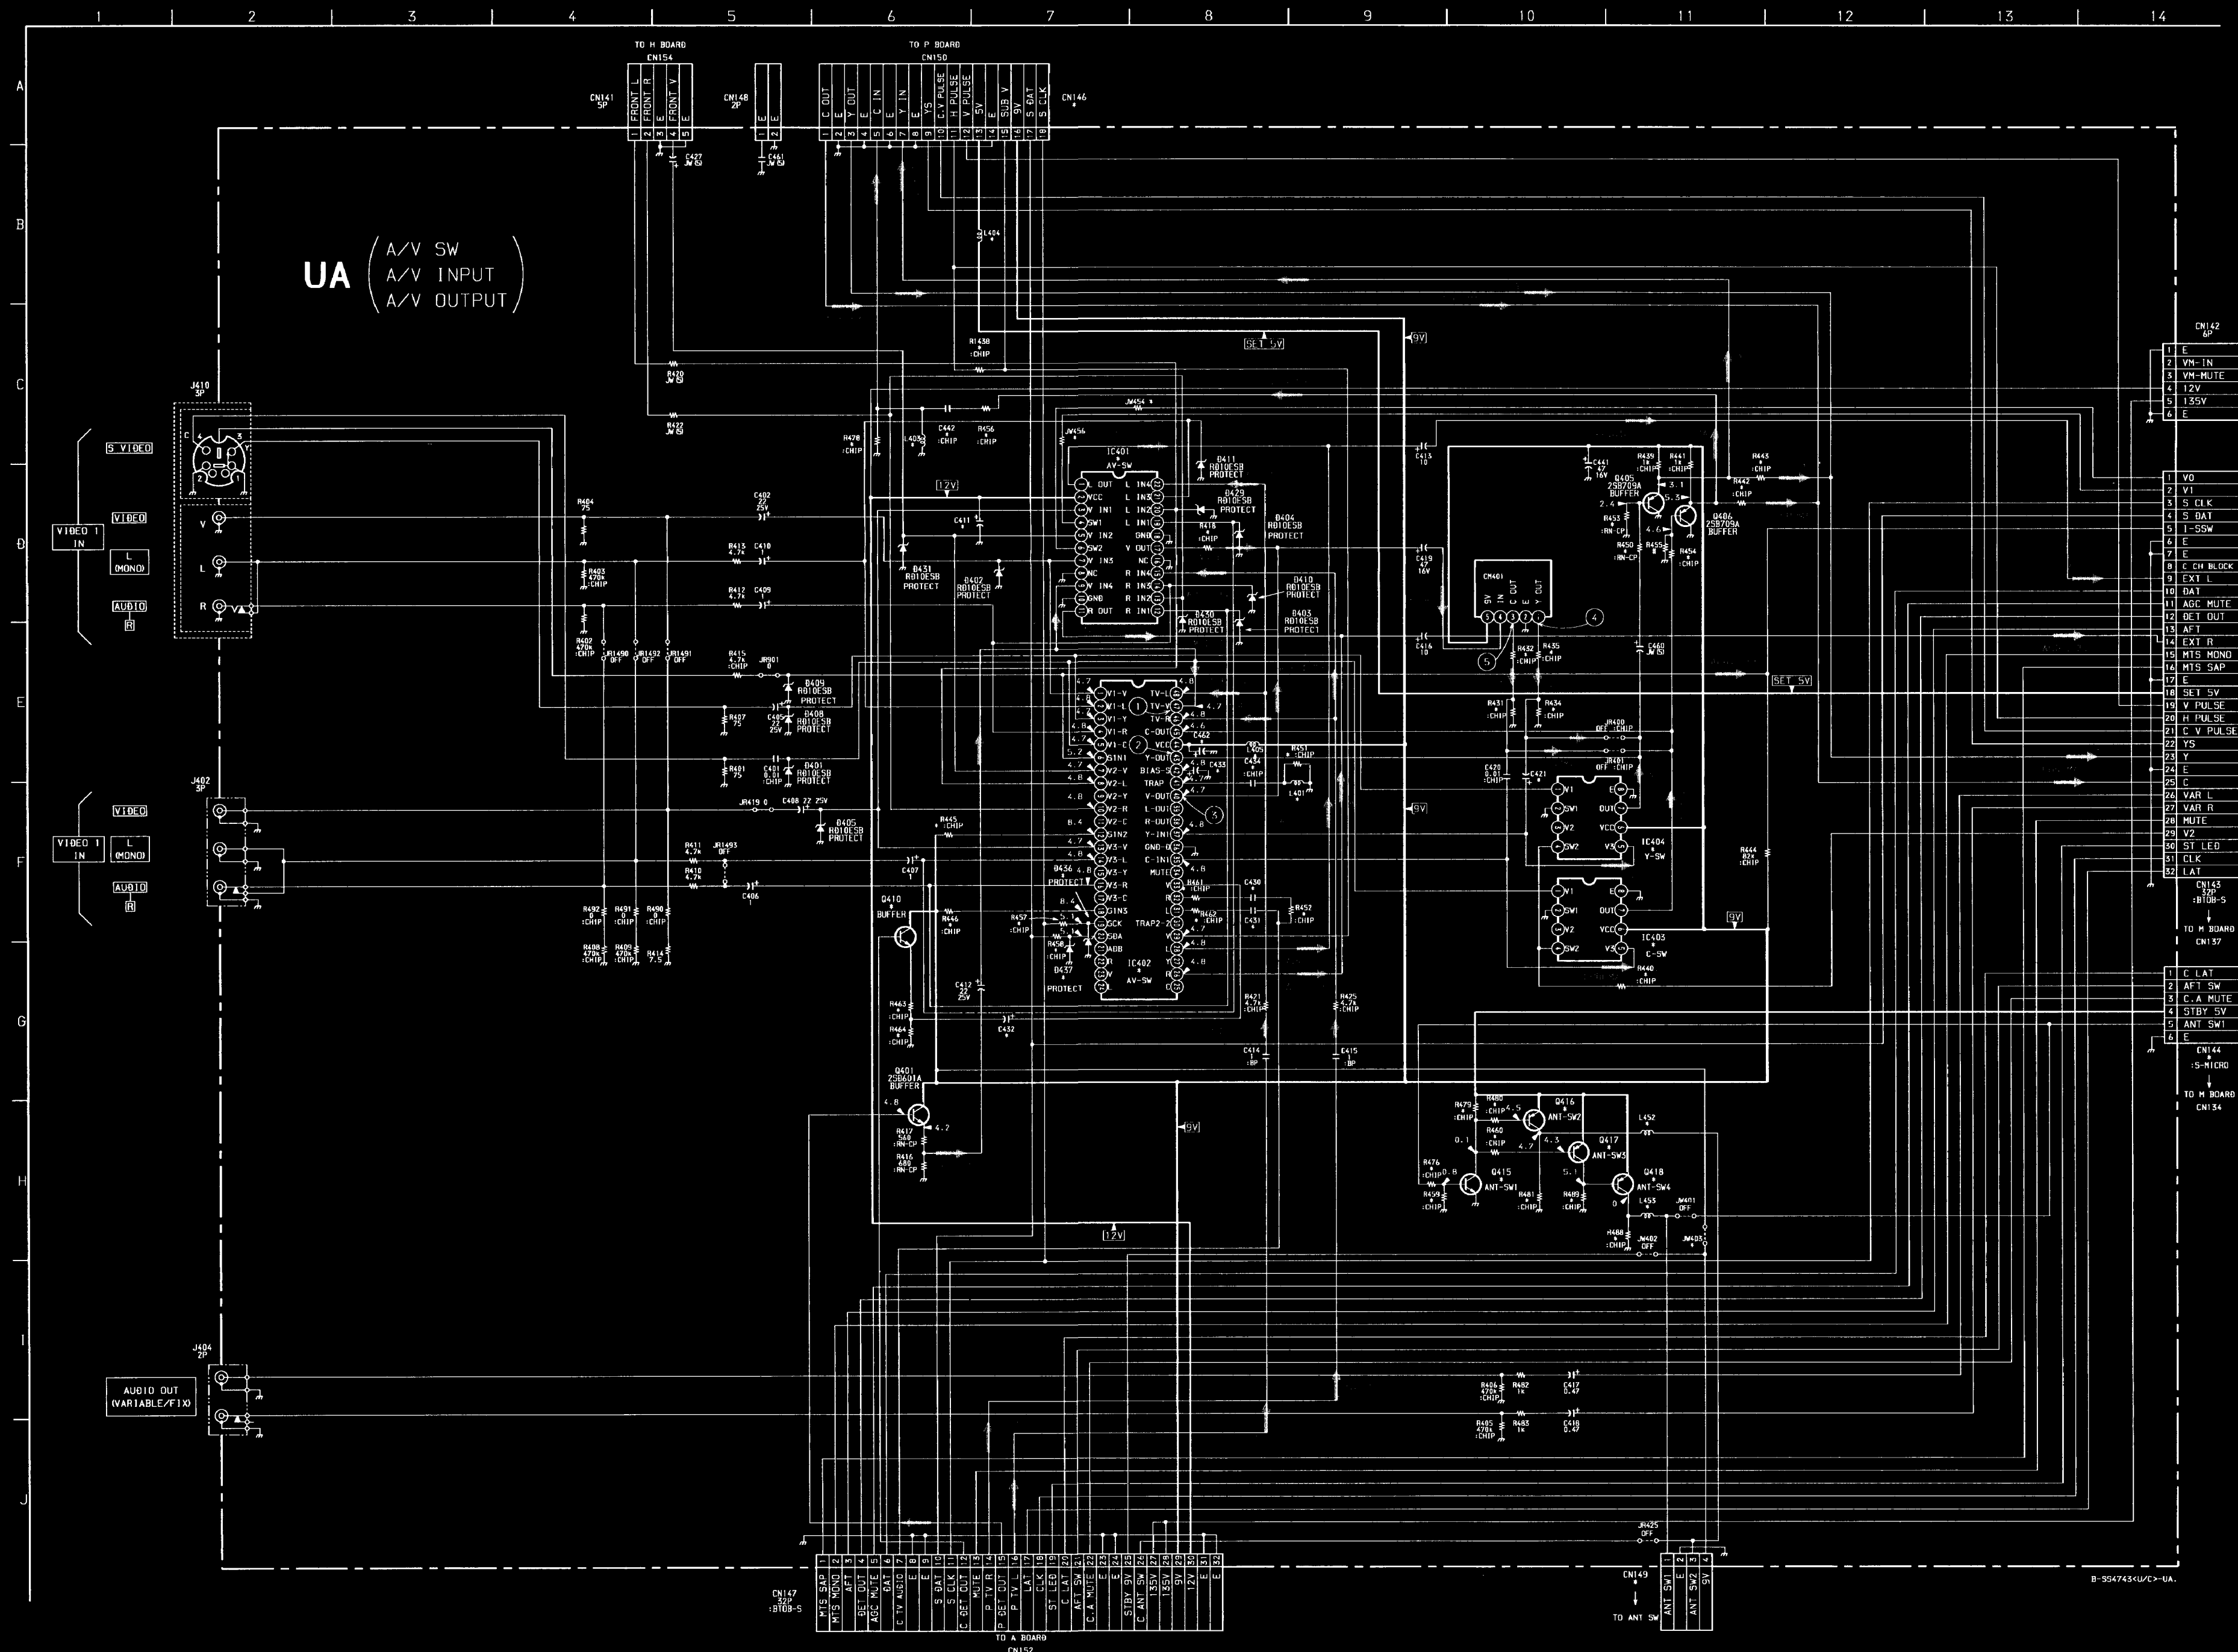

— UA BOARD —


Ref	LOCATION	KV-27V10/27V15 /29V10C/29V10M	KV-32V15
C411	C-6	100 25V	—
C421	E-10	0.47	22 25V
C430	F-8	—	1
C431	F-8	—	1
C432	F-7	—	22 25V
C433	E-8	—	33 25V
C434	E-8	—	100P
C442	C-6	—	100P
C462	E-8	—	100 16V
CN142	C-14	—	2P
CN144	F-14	—	6P
CN146	A-7	—	18P
CN149	K-11	—	4P
D436	F-7	—	RD10ESB
D437	F-7	—	RD10ESB
IC401	C-7	M52470AP	—
IC402	E-7	—	CXA1545AS
IC403	F-10	MM1114XFF	—
IC404	E-10	MM1118XFF	—
JW403	J-11	—	10MM
JW454	C-8	10K	—
JW456	C-7	10K	—
L401	E-9	—	18 μ H
L403	C-6	—	33 μ H
L404	B-6	—	33 μ H
L405	E-8	—	JW (5)
L452	I-10	—	JW (5)
L453	J-10	—	JW (5)
Q410	F-6	—	2SD601A
Q415	I-9	—	2SD601A
Q416	I-9	—	2SB709A
Q417	I-10	—	2SB709A
Q418	I-10	—	2SB709A
R418	D-8	100	—
R413	D-10	680	1K
R432	D-10	680	0
R434	D-10	680	1K
R435	D-10	680	0
R440	F-10	100	—
R442	C-11	100	—
R443	C-11	100	—
R445	E-6	—	10K
R446	F-6	—	10K
R450	C-11	100	470
R451	E-9	—	4.7K
R452	F-9	—	100
R453	C-11	1.2K	560
R454	D-11	100	0
R456	C-6	—	470
R457	F-7	—	220
R458	F-7	—	220
R459	I-9	—	22K
R460	I-9	—	330
R461	F-8	—	4.7K
R462	F-8	—	4.7K
R463	F-6	—	680
R464	G-6	—	680
R476	I-9	—	22K
R478	C-6	—	470
R479	I-9	—	22K
R480	I-9	—	22K
R481	I-10	—	22K
R488	I-10	—	22K
R489	I-10	—	22K
R1438	C-6	—	22K

— : NOT MOUNT


— A BOARD —

Ref	LOCATION	KV-27V10/27V15 /29V10C/29V10M	KV-32V15
C180	D-5	—	22MF / 25V
C182	D-3	—	0.0022MF
C184	D-5	—	10MF / 50V
C185	F-6	—	10MF / 50V
CN208	F-8	7P	—
D175	F-5	—	RD33ESB1
IC172	D-2	—	BU4053BF
L173	C-5	—	8.2 μ H
Q172	C-2	—	2SA1162-G
Q173	D-2	—	2SA1162-G
R170	C-2	100 1/10W	—
R173	D-3	—	0 1/10W
R175	F-6	—	22K 2W
R176	D-3	0 1/10W	—
R181	D-3	—	100 1/10W
R185	D-2	—	100 1/10W
R188	D-4	—	39K 1/10W
R189	D-4	—	27K 1/10W
R190	C-2	—	4.7K 1/10W
R191	D-3	—	4.7K 1/10W
R193	C-3	—	330 1/10W
R196	D-4	—	330 1/10W
TU102	E-4	—	BTF-LA401


— : NOT MOUNT

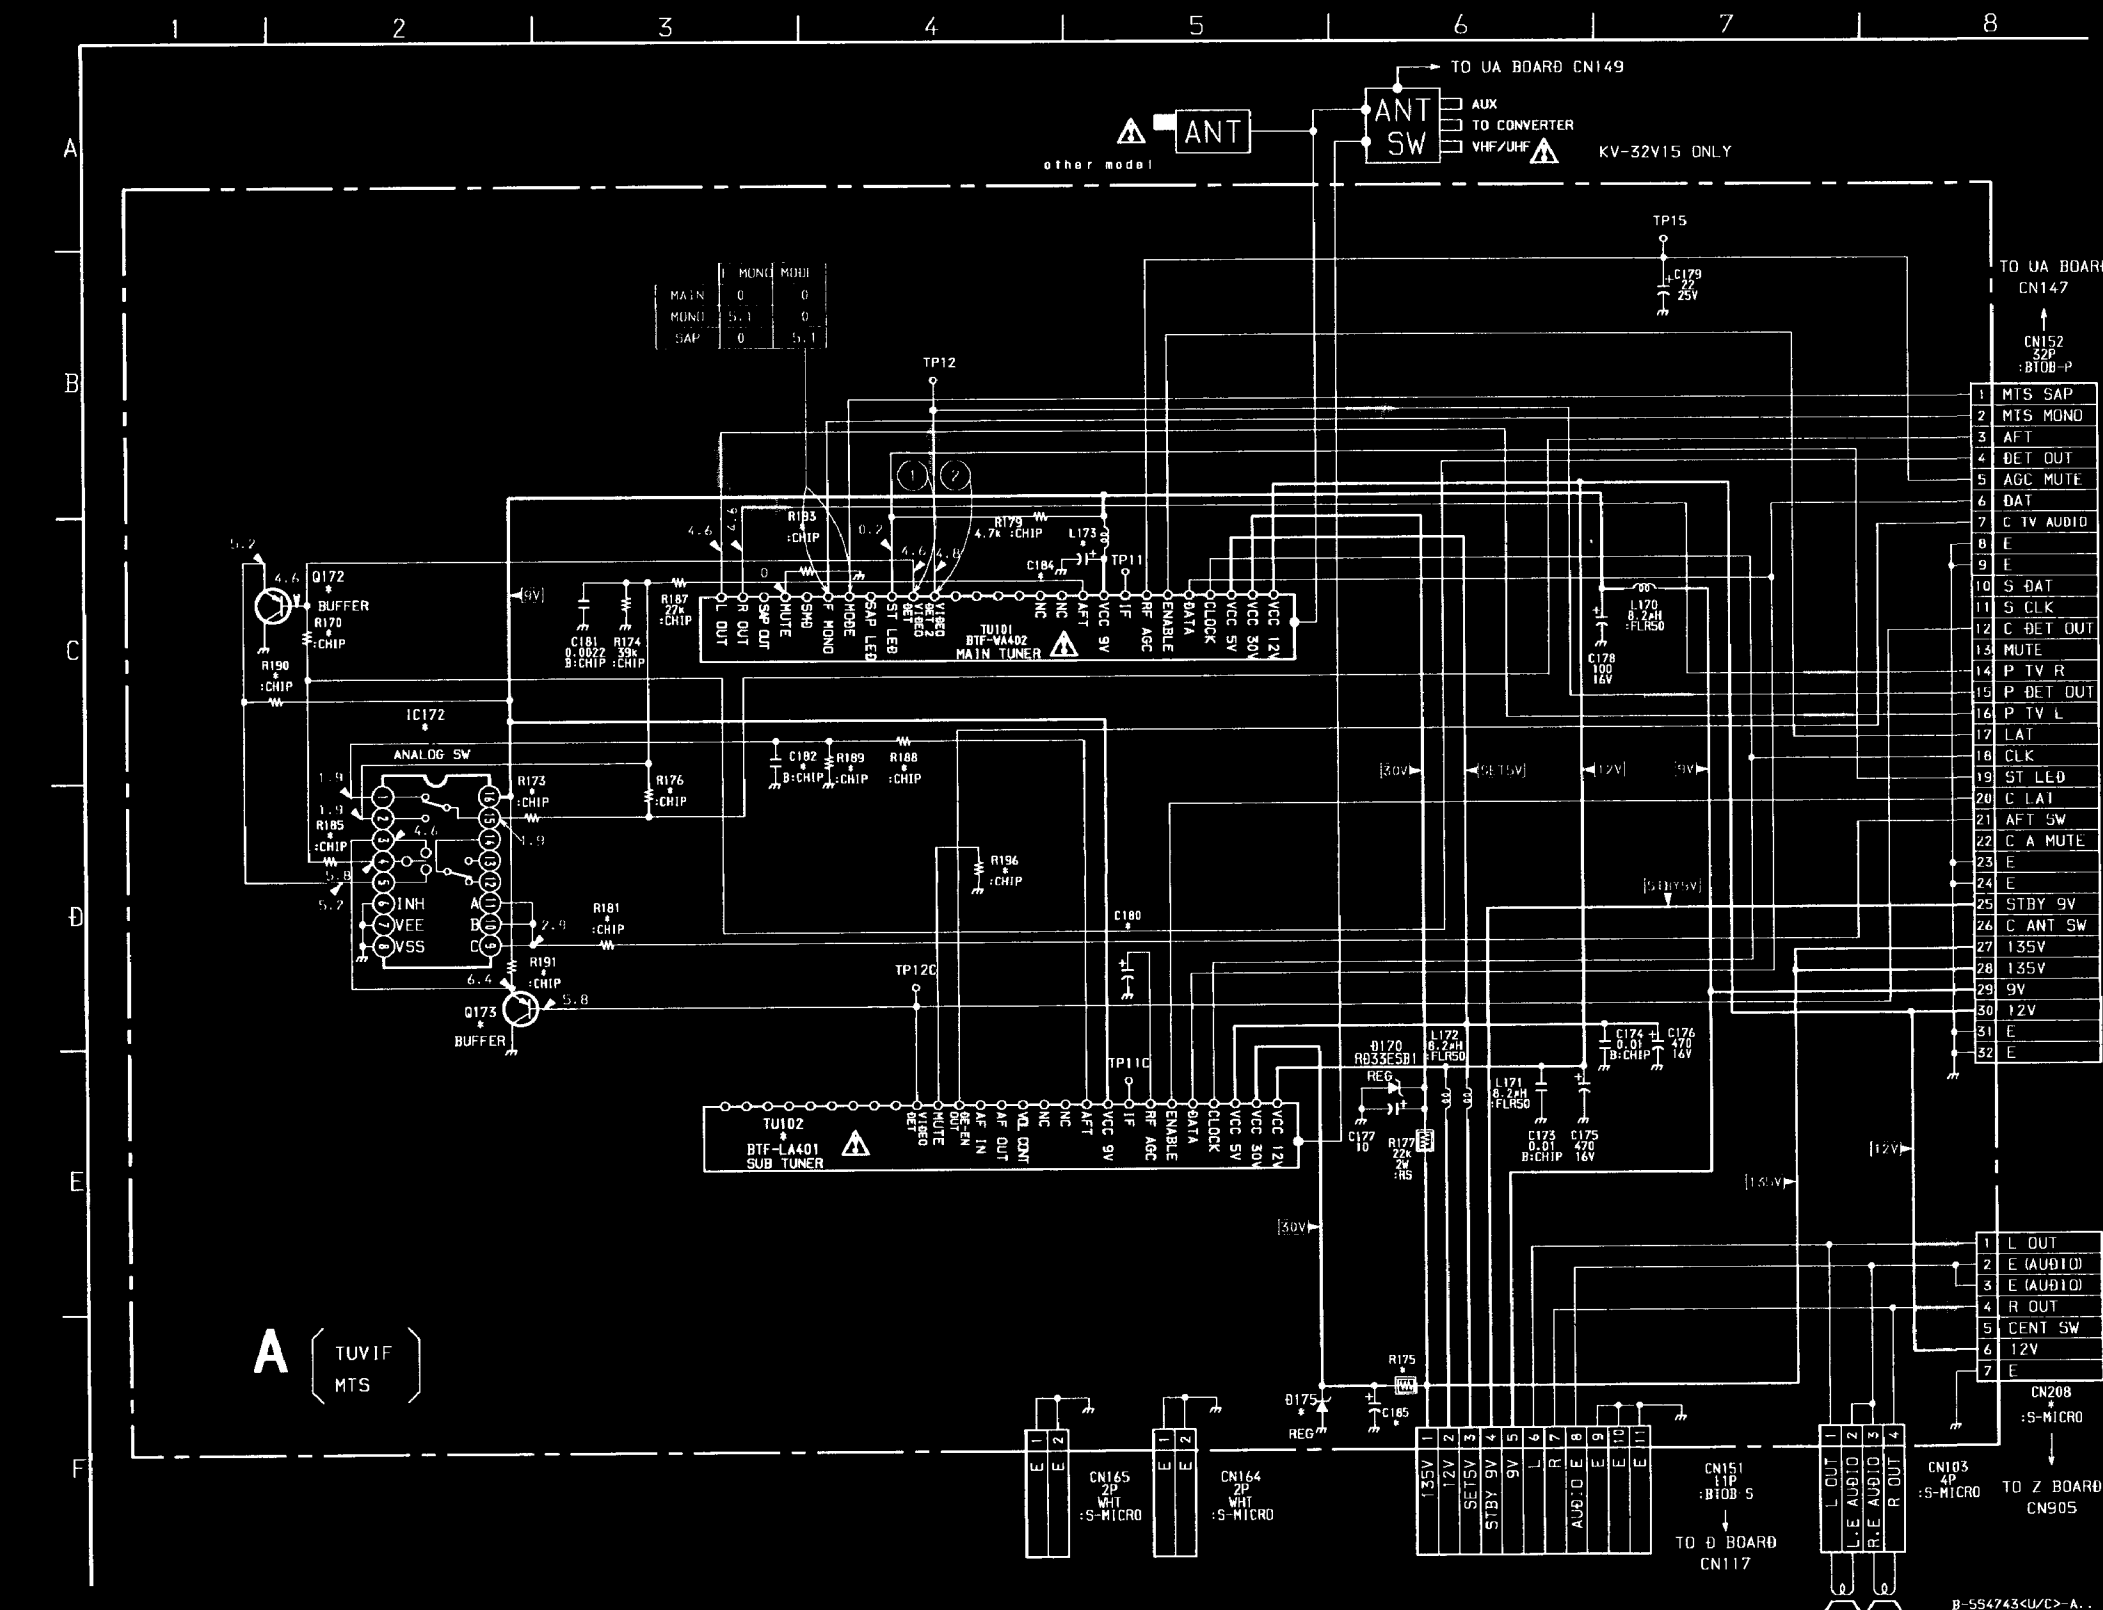


• UA BOARD WAVEFORMS

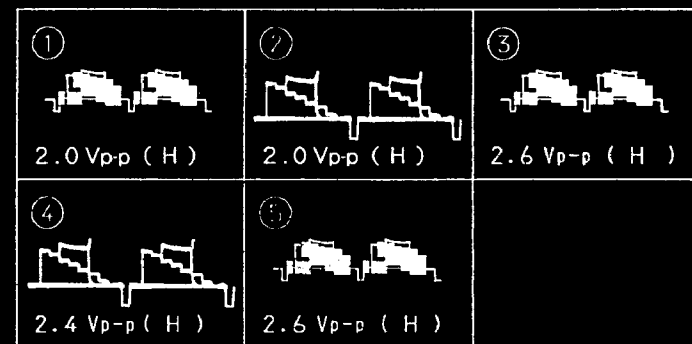


• A BOARD WAVEFORMS

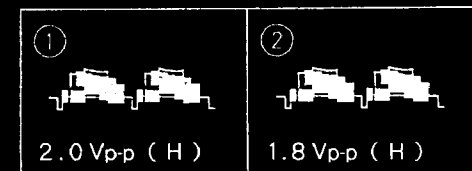


• UA Board IC401 M52470AP

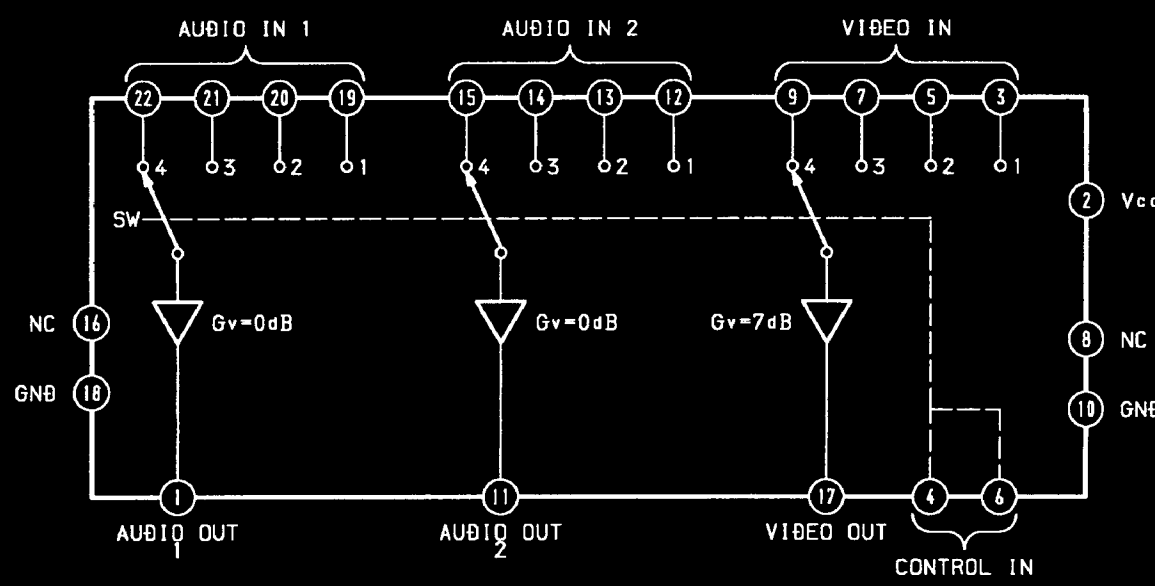


• UA Board IC402 CXA1545AS

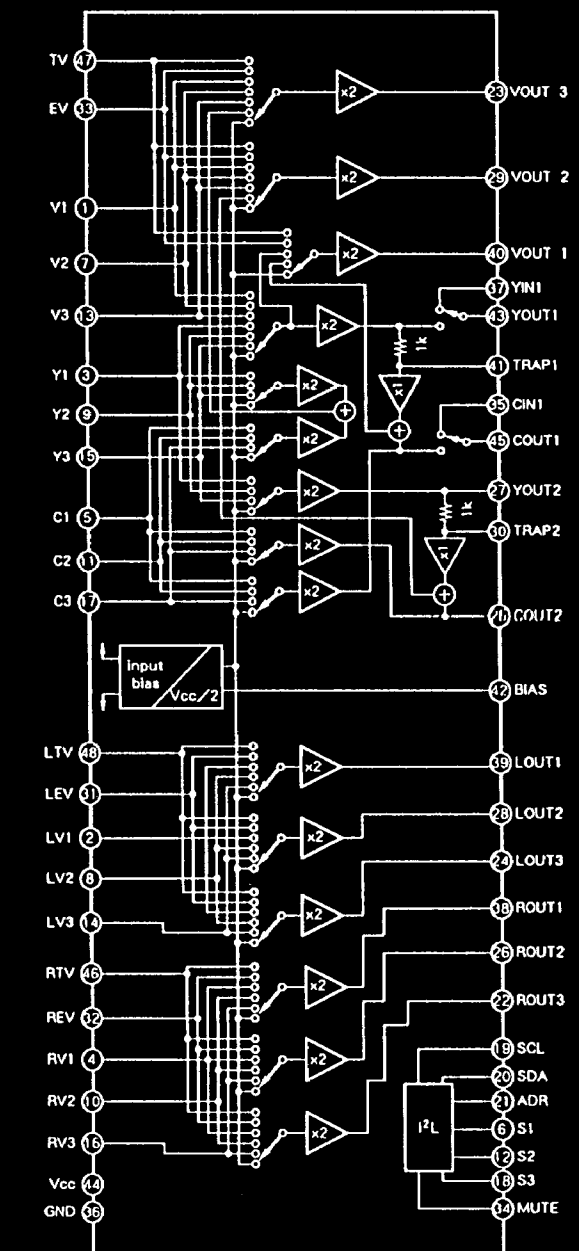

• UA Board IC403 MM1114XFF

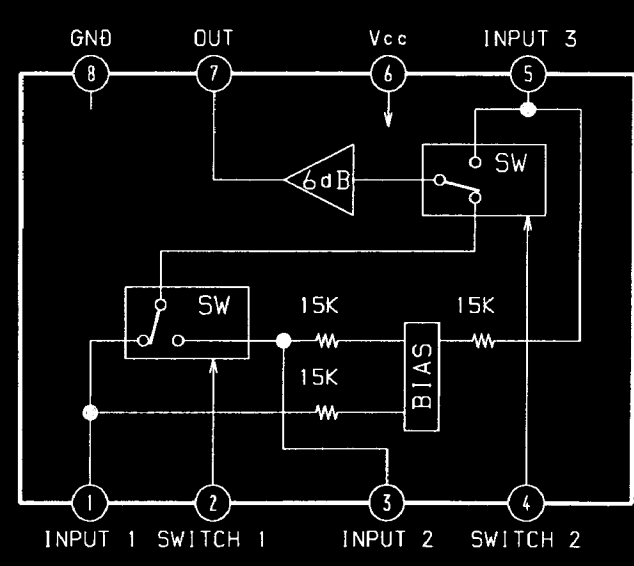


• UA Board IC404 MM1118XFF

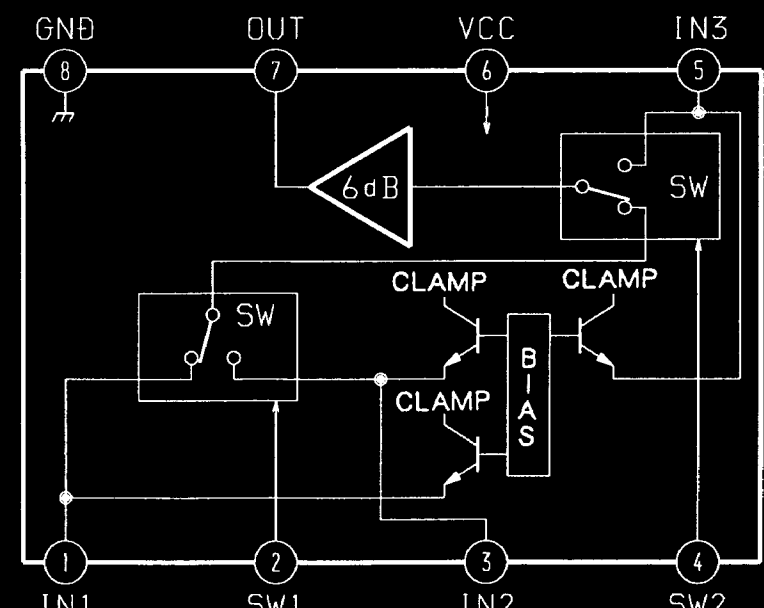



UA [A/V SW, A/V INPUT, A/V OUTPUT] A [TUNER, VIF, MTS]

— UA BOARD — (Conductor Side)

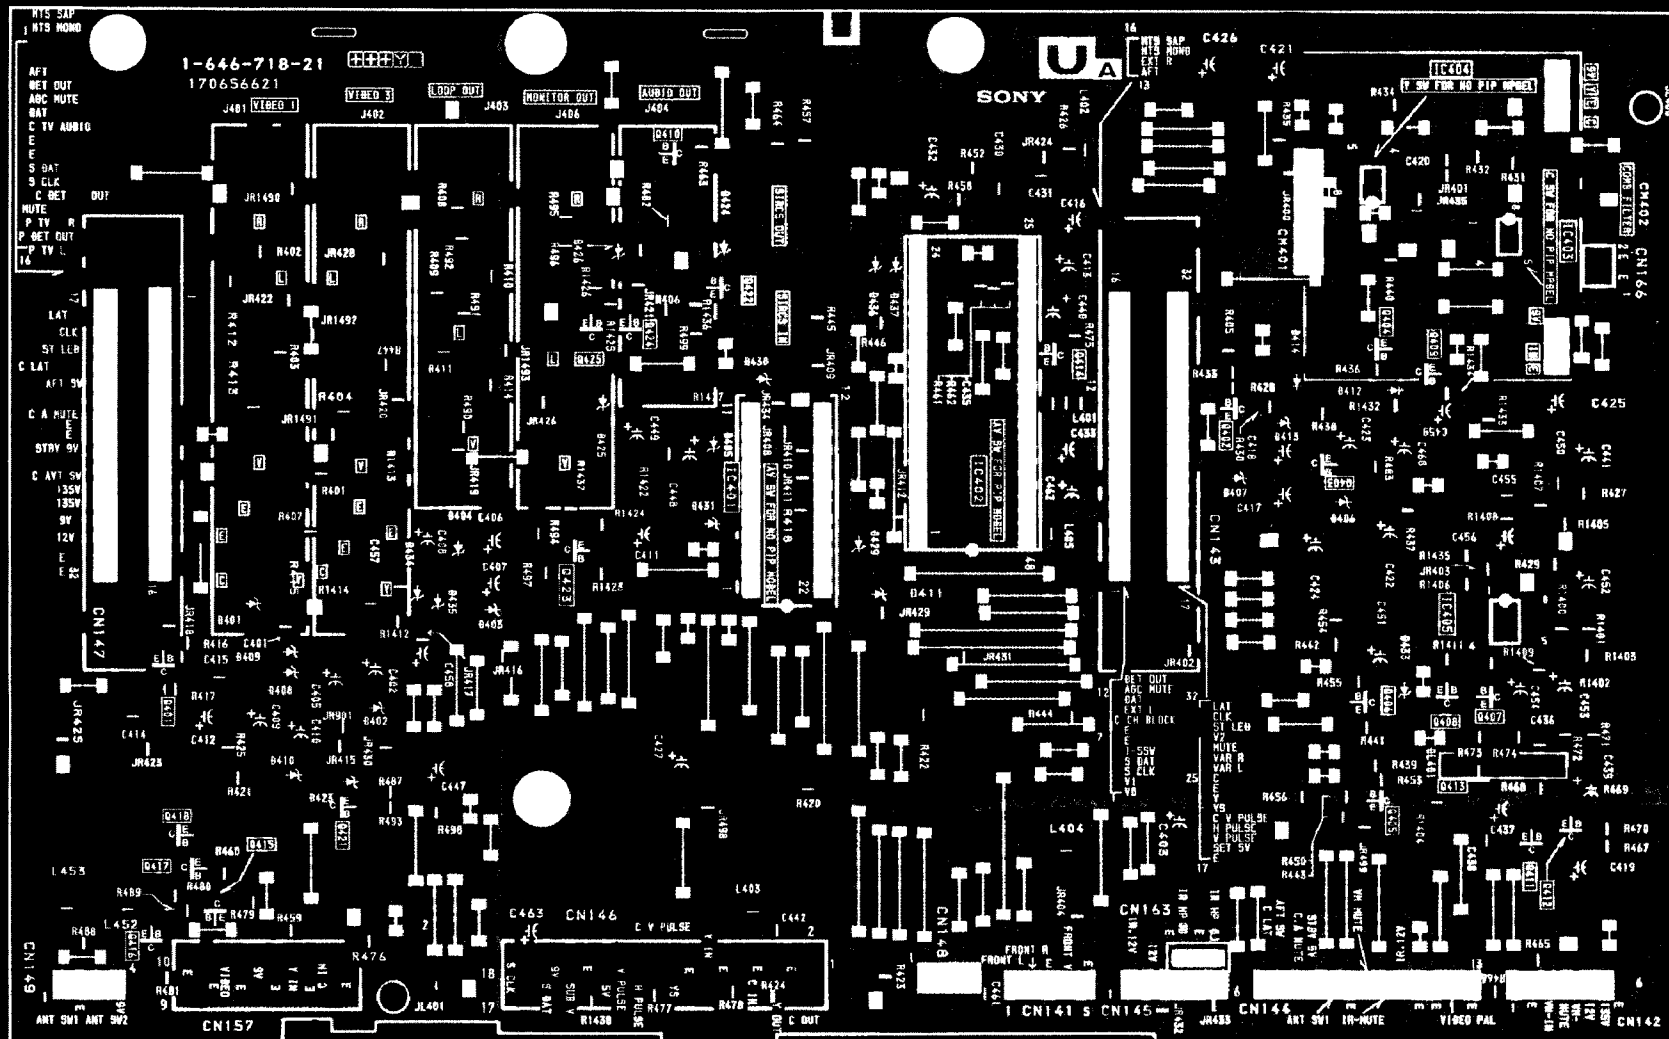


— A BOARD — (Conductor Side)

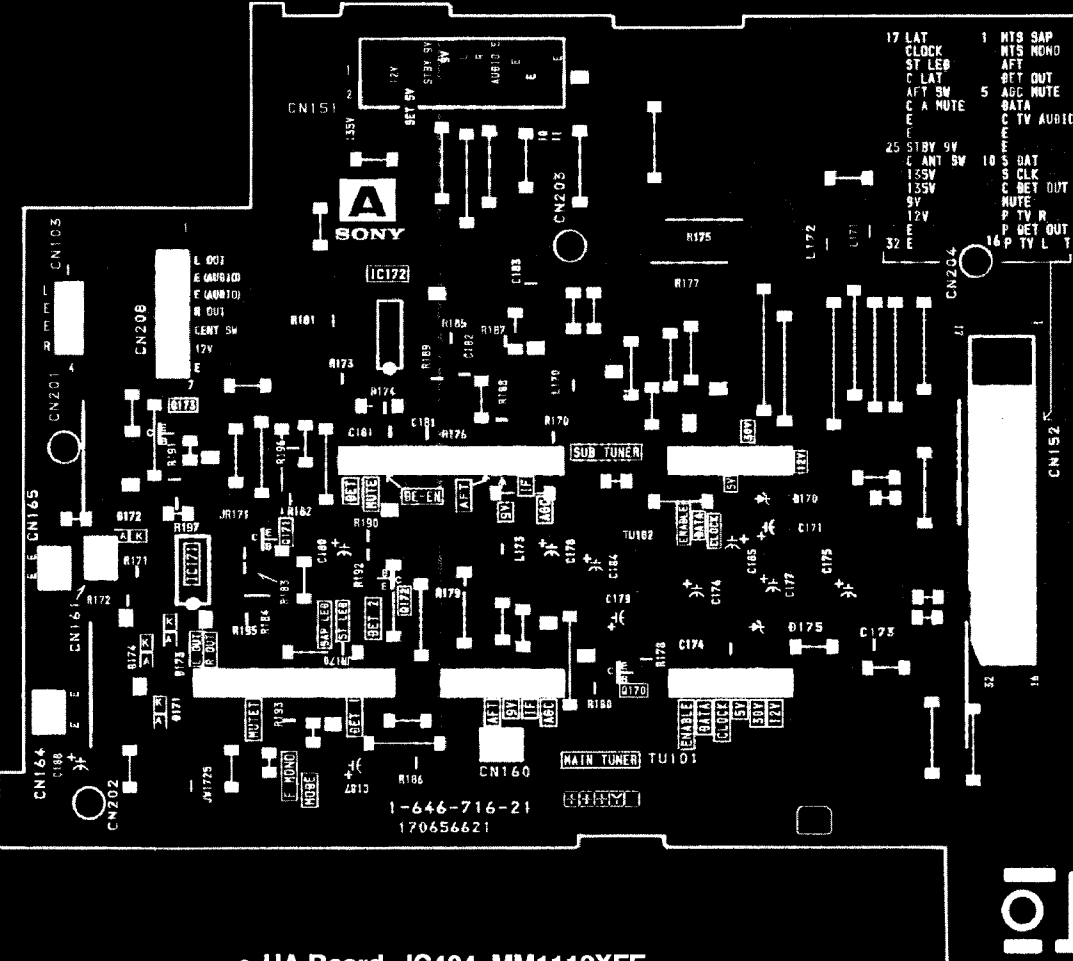

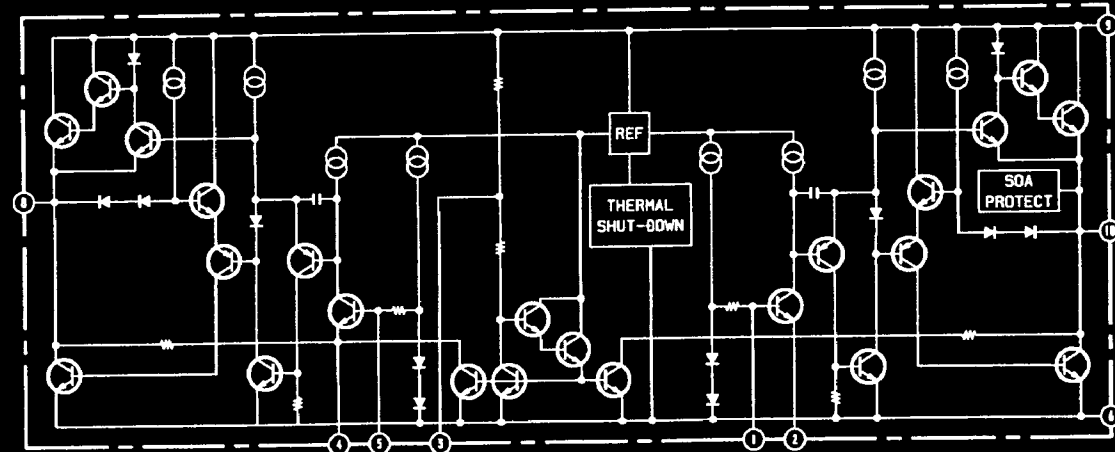


• D BOARD WAVEFORMS

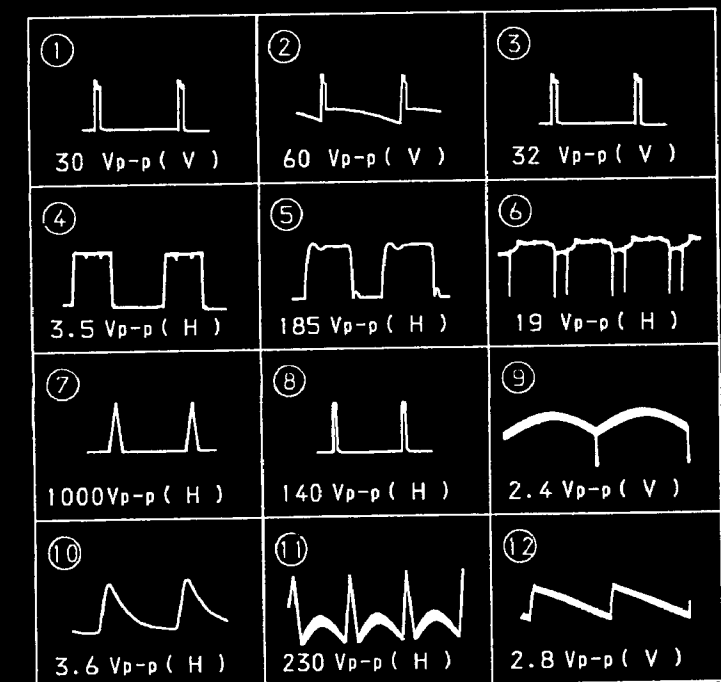

— D BOARD —

Ref	LOCATION	KV-27V10/ 28V10M	KV-27V15	KV-28V10C	KV-32V15
C508	D - 15	0.0022 / 630V	0.0022 / 630V	0.0022 / 630V	—
C601	E - 2	0.47 / 125V	0.47 / 125V	0.47 / 300V	0.47 / 125V
C602	E - 2	0.47 / 125V	0.47 / 125V	—	0.47 / 125V
C603	D - 2	0.47 / 125V	0.47 / 125V	—	0.47 / 125V
C607	C - 2	470 / 200V	470 / 200V	560 / 250V	470 / 200V
C608	B - 2	470 / 200V	470 / 200V	560 / 250V	470 / 200V
C628	F - 5	—	—	470P / 400V	—
C629	B - 2	—	—	0.047 / 200V	—
C630	B - 3	—	—	0.1	—
C632	B - 3	—	—	2.2	—
C633	B - 3	—	—	100	—
C639	F - 5	470P / 400V	470P / 400V	—	470P / 400V
CN108	D - 13	—	—	—	10P
CN109	H - 12	—	—	—	10P
D621	B - 4	—	—	RGF02-17	6.3A/125V
F601	F - 2	6.3A/125V	6.3A/125V	6.3A/250V	6.3A/125V
IC603	B - 3	—	—	STR81159A	—
JW640	B - 3	10MM	10MM	—	10MM
JW641	B - 3	10MM	10MM	—	10MM
JW642	C - 3	10MM	10MM	—	10MM
JW643	C - 3	10MM	10MM	—	10MM
JW644	C - 4	10MM	10MM	—	10MM
JW645	C - 4	10MM	10MM	—	10MM
JW681	—	—	—	10MM	—
JW682	—	—	—	10MM	—
PM501	H - 9	PM-38	PM-38	PM-38	PM-39
R525	D - 15	47 / 2W	47 / 2W	47 / 2W	—
R536	H - 15	—	—	—	4.7
R602	E - 2	2.2M 1/2W	2.2M 1/2W	8.2M 1W	22M 1/2W
R641	B - 3	—	—	4.7 1/4W	—
R642	B - 4	—	—	2.2 1/4W	—
R683	C - 3	—	—	1 10W	—
R684	C - 4	—	—	1 10W	—
R687	B - 7	6.8 / 1W	6.8 / 1W	JW(12.5)	6.8 / 1W

— NOT MOUNT

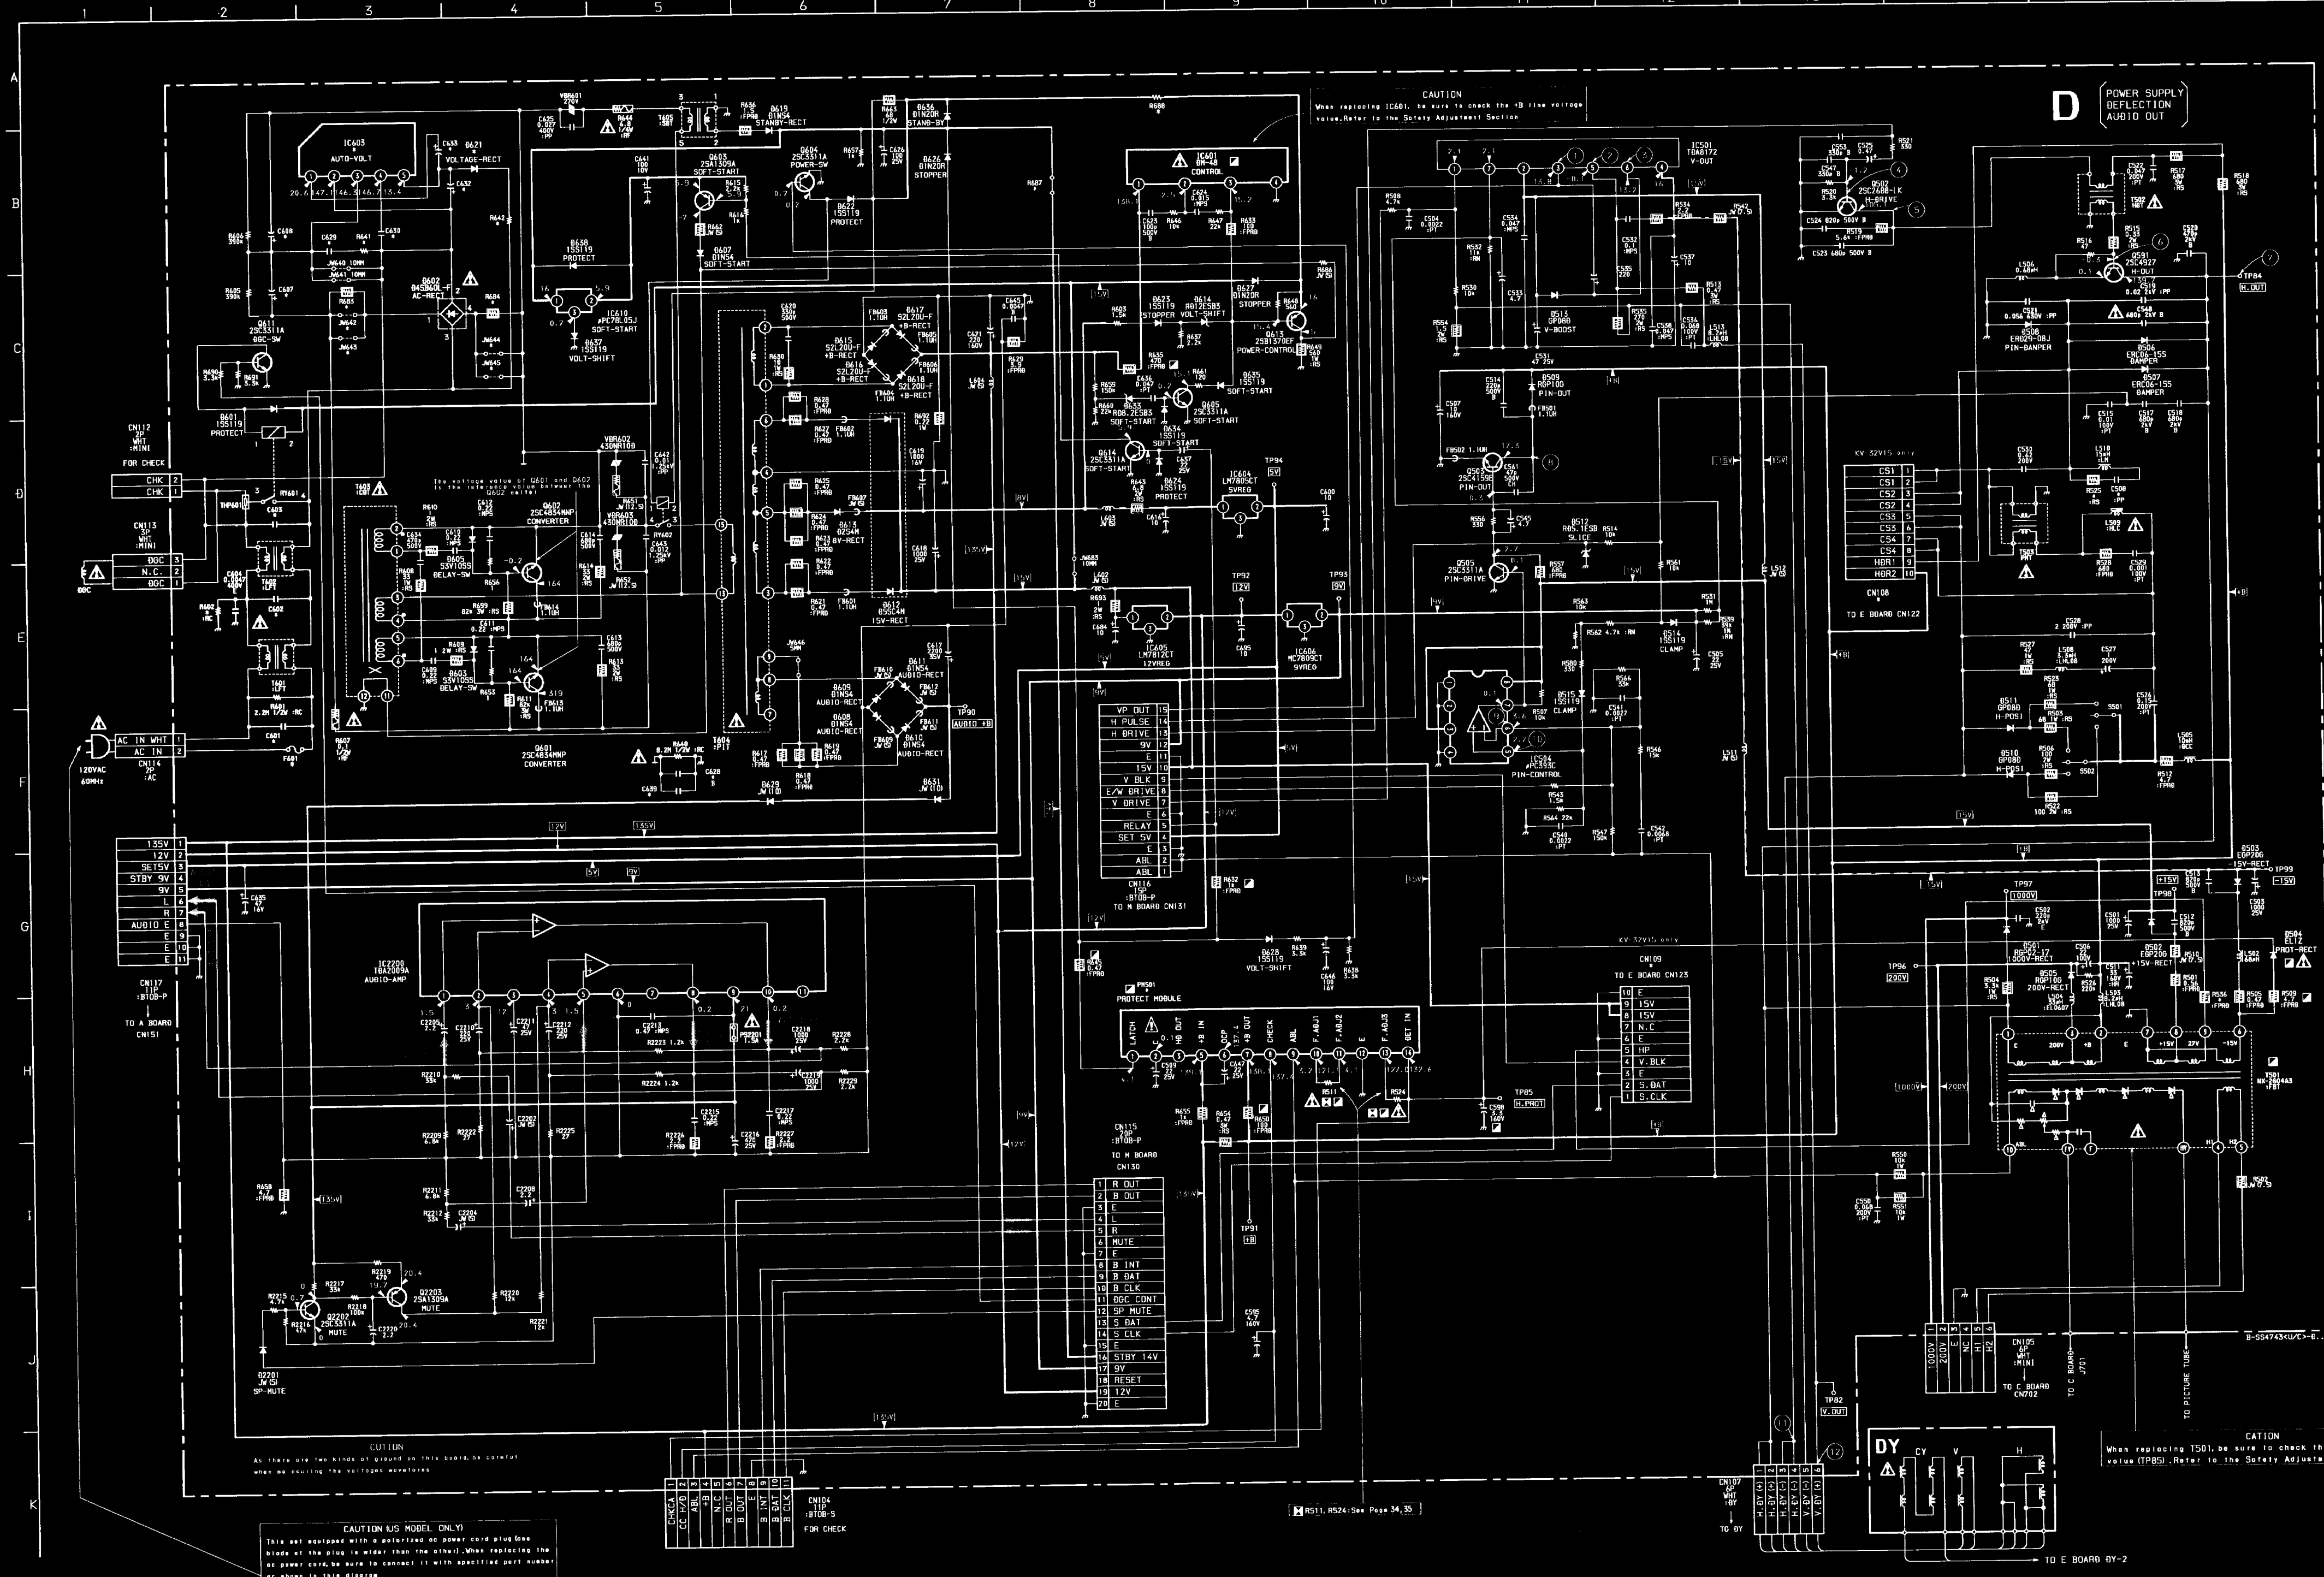


D POWER SUPPLY,
DEFLECTION,
AUDIO OUT

KV-27V10/27V15
RM-Y117 RM-Y121/RM-CM101
KV-29V10C/29V10M/32V15
RM-Y117 RM-Y117 RM-Y121
RM-CM101 RM-CM101

KV-27V10/27V15
RM-Y117 RM-Y121/RM-CM101
KV-29V10C/29V10M/32V15
RM-Y117 RM-Y117 RM-Y121
RM-CM101 RM-CM101

- D BOARD - (Conductor Side)

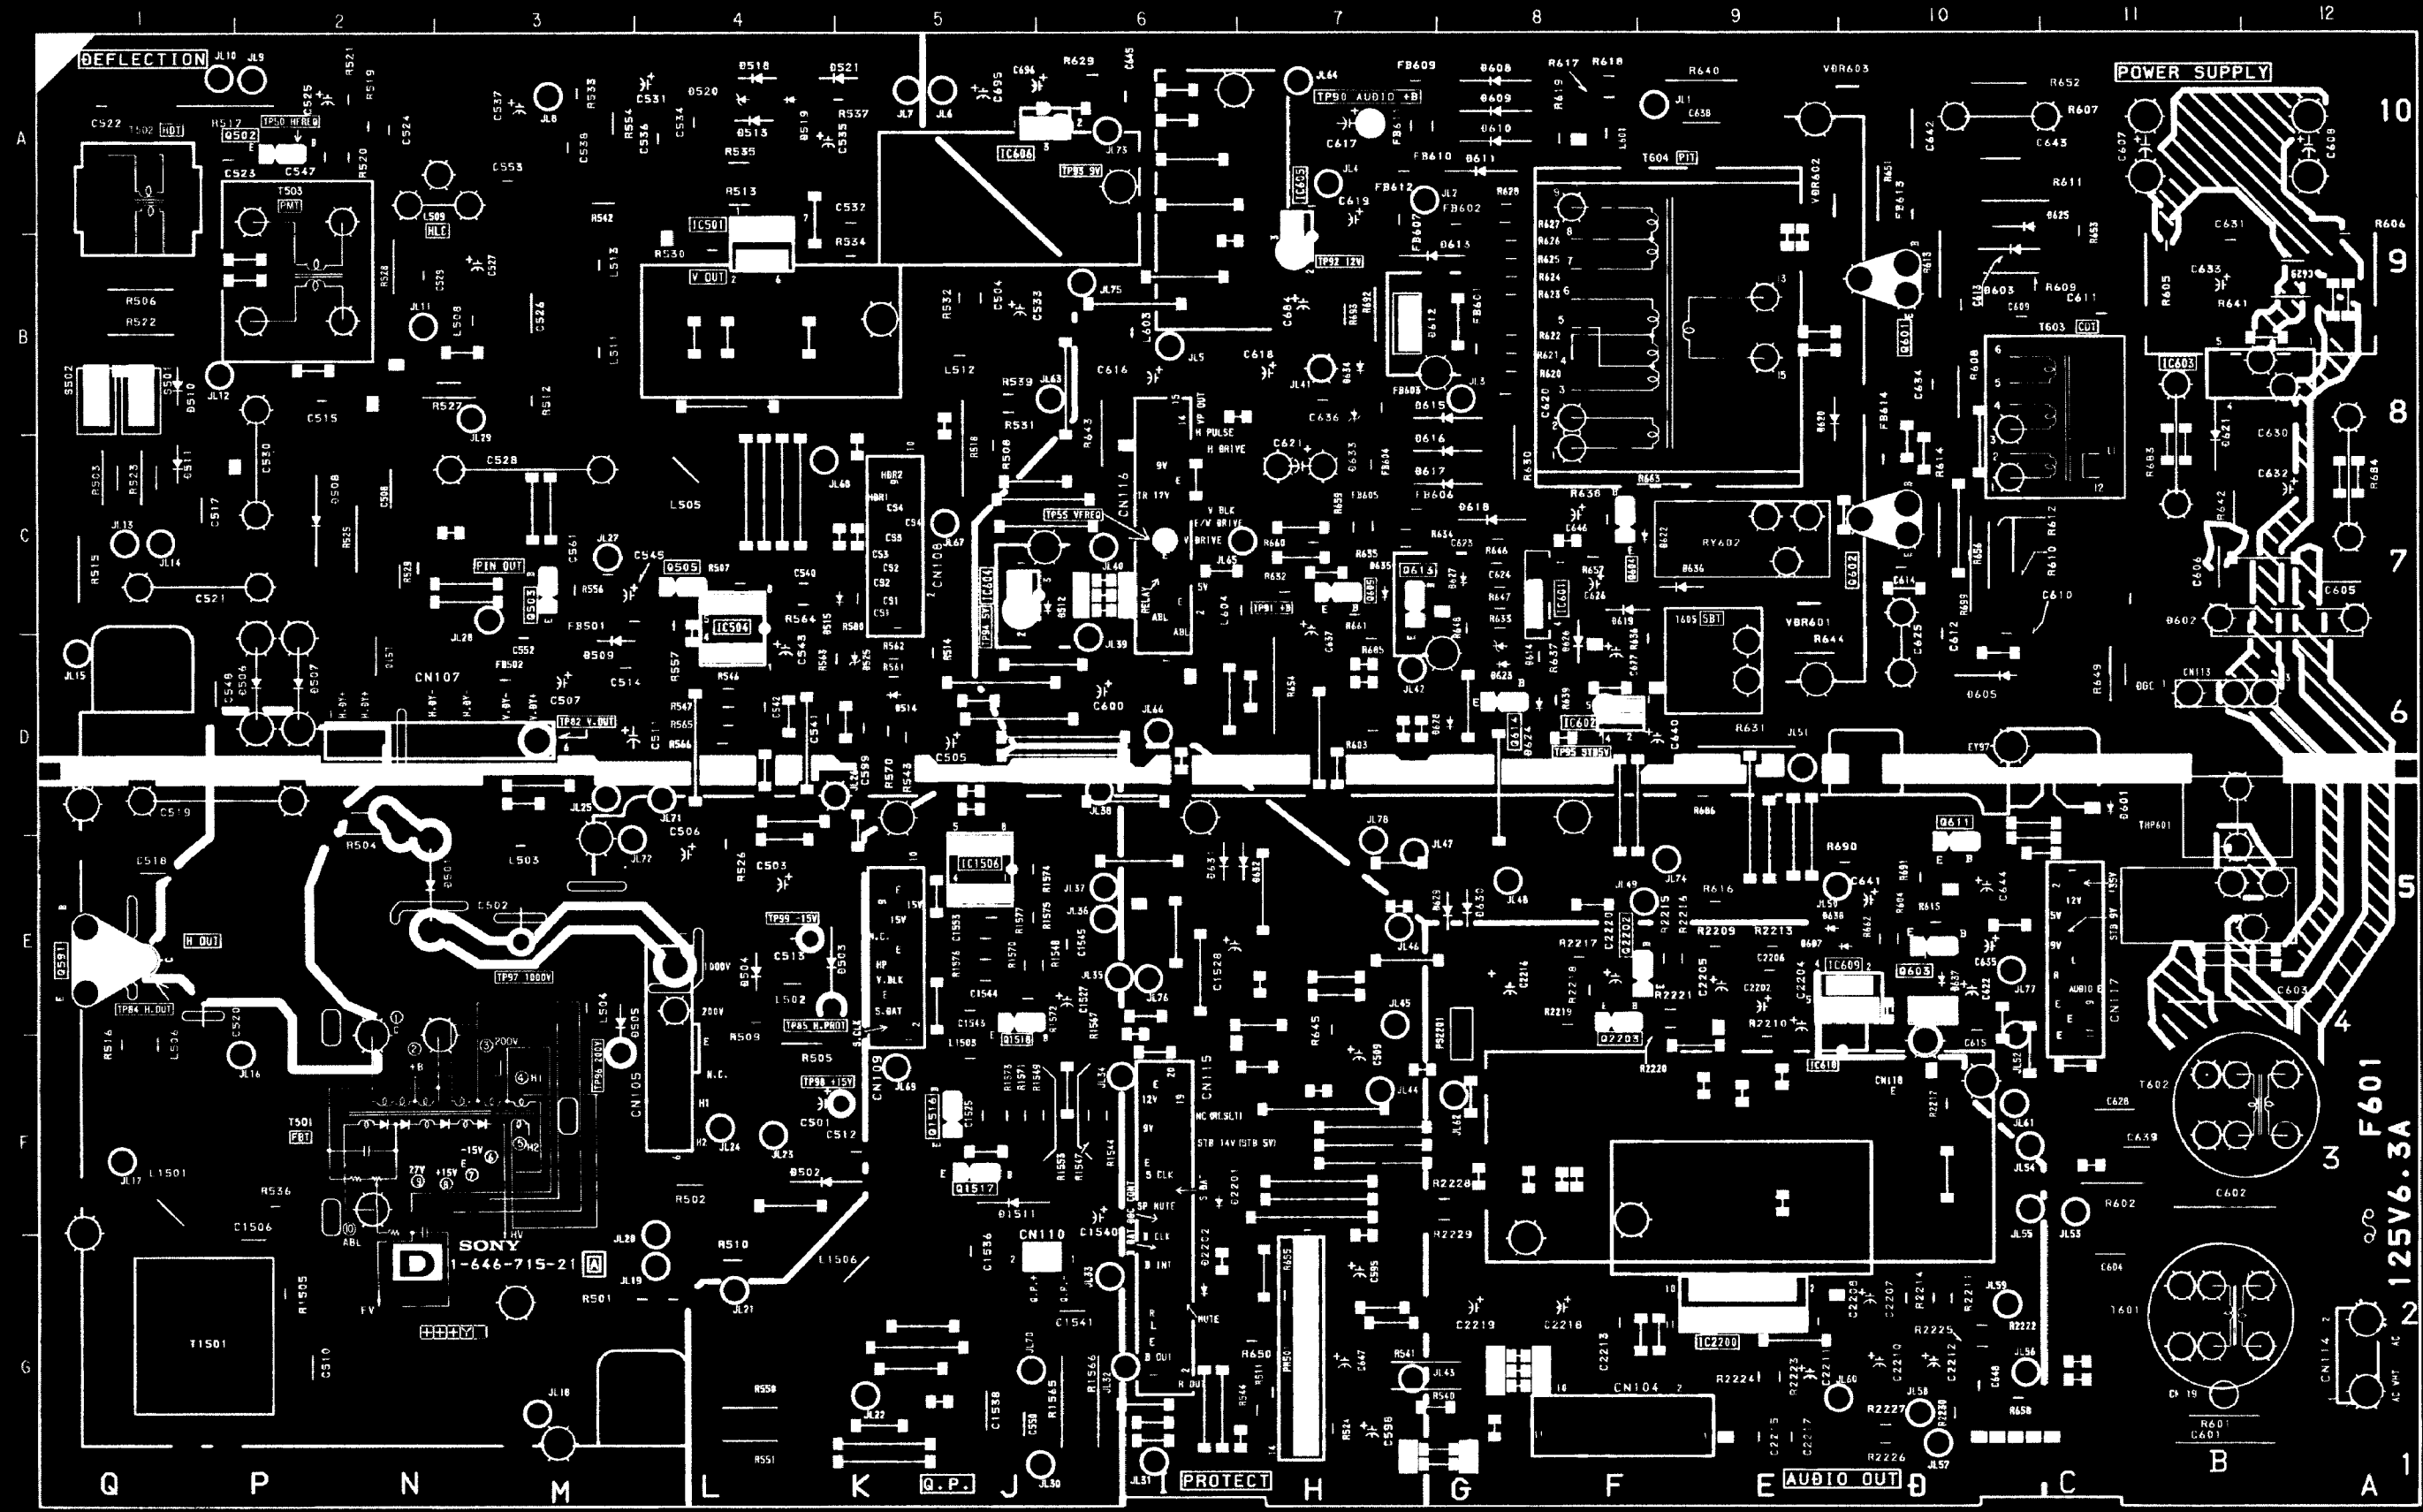

IC	
IC501	A-4
IC504	C-4
IC601	C-8
IC603	B-11
IC604	C-5
IC605	A-7
IC610	F-10
IC2200	G-9


TRANSISTOR	
Q502	A-2
Q503	C-3
Q505	C-4
Q591	E-1
Q601	B-10
Q602	C-10
Q603	E-10
Q604	C-8
Q605	C-7
Q611	E-10
Q613	C-7
Q614	D-8
Q2202	E-8
Q2203	E-8

DIODE	
D501	E-3
D502	F-4
D503	E-4
D504	E-4
D505	E-3
D506	D-2
D507	D-2
D508	C-2
D509	D-3
D510	B-1


D511	C-1
D512	C-6
D513	A-4
D514	D-5
D515	C-4
D601	D-11
D602	C-11
D603	B-10
D605	D-10
D607	E-10
D608	A-8
D609	A-8
D610	A-8
D611	A-8
D612	B-7
D613	B-8
D614	D-8
D615	B-8
D616	C-8
D617	C-8
D618	C-8
D619	C-8
D622	C-9
D623	D-8
D624	D-8
D626	D-8
D627	C-8
D628	D-8
D633	B-7
D634	B-7
D635	C-8
D636	C-9
D637	E-10
D638	E-10

NOTE:
The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.


• D Board IC501 TDA8172

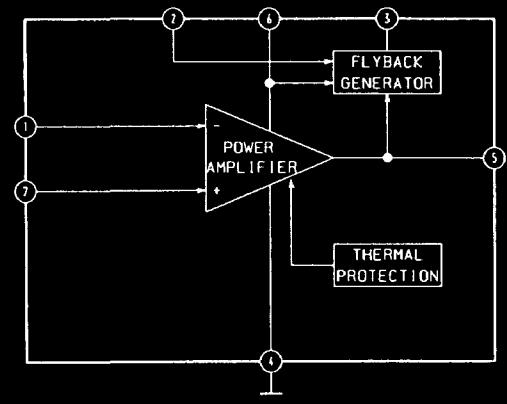


• D Board IC504 μ PC393C

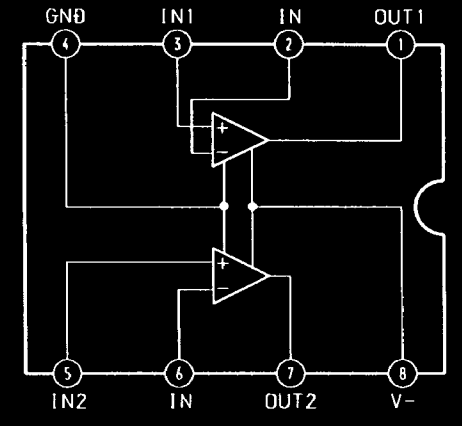

• D Board IC602 L78LR05D

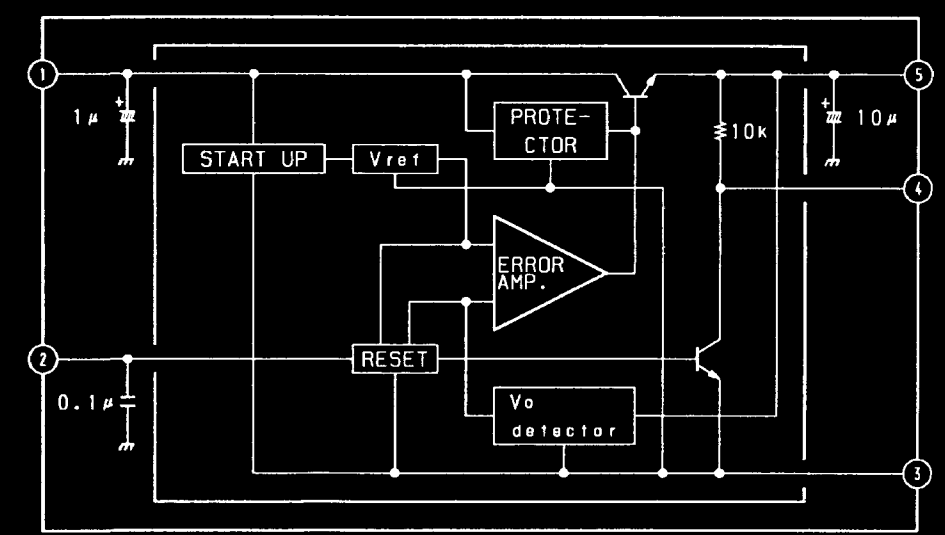

• D Board IC610 μ PC78L05J

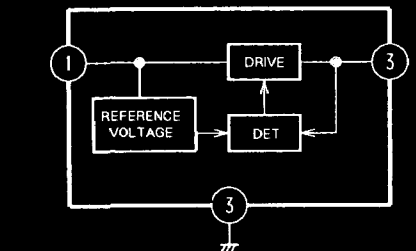

The block diagram illustrates the internal architecture of the PIC16C50 microcontroller. At the center is the **INTERRUPT CONTROLLER**, which is connected to various internal modules and external pins. On the left side, external pins are connected to several modules: **ON SCREEN DISPLAY** (via D₁₅, D₁₄, D₁₃, D₁₂, D₁₁, D₁₀, D₉, D₈, D₇, D₆, D₅, D₄, D₃, D₂, D₁, D₀), **SERIAL I/O** (via PE3/S1, PE2/S0, PE1/S2), **TIMER/COUNTER** (via PE2/EE, PE1/TO), **REXION / FIFO** (via PE4/RK), **H SYNC COUNTER** (via PE4/H3), **AC TIMER** (via PE5/AC1), **A/D CONVERTER** (via PE2/AN0, PE3/AN3), and **I²C INTERFACE UNIT** (via PE4/SCL0, PE5/SCL1, PE7/SDA1). On the right side, external pins are connected to **PORTA**, **PORTB**, **PORTC**, **PORTD**, **PORTF**, and **PORTG**. Internal components include the **SBC/30 CPU CORE**, **CLOCK GEN./ SYSTEM CONTROL**, **ROM 20K/24K BYTES**, **RAM 448 BYTES**, **WATCH DOG TIMER**, and **PRESCALE/ TIME BASE TIMER**. Power pins at the bottom are labeled **PEV/P0V**, **PEV/P0V0 - PE7/P0V0**, **PEV/P0V1**, and **PEV/P0V1**.

[illegible]

The block diagram illustrates the internal architecture of a video receiver. It starts with input signals (H, V, and a composite signal) entering from the left. The composite signal is split to a CLAMP block and a SYNC SUCR block. The CLAMP block outputs to the SYNC SUCR block. The SYNC SUCR block outputs to a DATA SUCR block and a COMP SYNC block. The DATA SUCR block outputs to a DATA RECOVERY block and a DATA CLK RECOVERY block. The DATA RECOVERY block outputs to a DATA MODULATOR AND TRANSFER BUFFER block. The DATA CLK RECOVERY block outputs to a TIMING LOGIC block. The COMP SYNC block outputs to a VERTICAL COUNTER AND CONTROL block. The VERTICAL COUNTER AND CONTROL block outputs to a HORIZONTAL COUNTER block. The HORIZONTAL COUNTER block outputs to a PHASE/FREQUENCY DETECTOR block, a LOOP FILTER block, and a VCO block. The PHASE/FREQUENCY DETECTOR block outputs to the LOOP FILTER block. The LOOP FILTER block outputs to the VCO block. The VCO block outputs to a BECODER CONTROL block. The BECODER CONTROL block outputs to the TIMING LOGIC block. The TIMING LOGIC block outputs to the DATA RECOVERY block, the DATA MODULATOR AND TRANSFER BUFFER block, and the COMMAND PROCESSOR block. The COMMAND PROCESSOR block outputs to the DATA MODULATOR AND TRANSFER BUFFER block, the DISPLAY RAM block, the CHARACTER ROM block, and the OUTPUT LOGIC block. The DISPLAY RAM block outputs to the CHARACTER ROM block. The CHARACTER ROM block outputs to the OUTPUT LOGIC block. The OUTPUT LOGIC block outputs to the video output signals (Y, Pb, Pr, Yb, Yr, Yg, Yb, Yr, Yg).

The diagram shows the internal circuitry of the LM317 precision centimeter voltmeter. It consists of a differential input stage with two inverters, a summing junction, and a feedback loop. The circuit includes four current regulators: two 5mA regulators for the input stage and two 100mA regulators for the output stage. The output is connected to a load and a feedback network. The circuit is powered by Vcc+ and GND (or Vcc-).


IC		DIODE	
IC101	C - 6, H - 6	D001	F - 5
IC102	B - 6, H - 6	D002	F - 5
IC103	D - 4, G - 4	D004	D - 4
IC150	B - 4, H - 4	D005	G - 6
IC201	B - 2, H - 2	D006	B - 6, H - 6
IC202	D - 1	D007	B - 7, H - 7
IC301	B - 3, G - 3	D008	B - 7, H - 7
TRANSISTOR		D009	B - 6, H - 6
		D150	G - 4
Q001	D - 6	D201	A - 1
Q004	G - 6	D202	A - 1
Q005	H - 6	D205	C - 2, G - 2
Q151	G - 5	D206	B - 2, H - 2
Q201	I - 1	D301	B - 4, H - 4
Q301	A - 2	D304	B - 4, H - 4
Q302	A - 2		
Q308	D - 3		

KV-27V10/27V15
RM-Y117 RM-Y121/RM-CM101

KV-29V10C/29V10M/32V15
RM-Y117 RM-Y117 RM-Y121
RM-CM101

— 72 —


(KV-32V15 only)

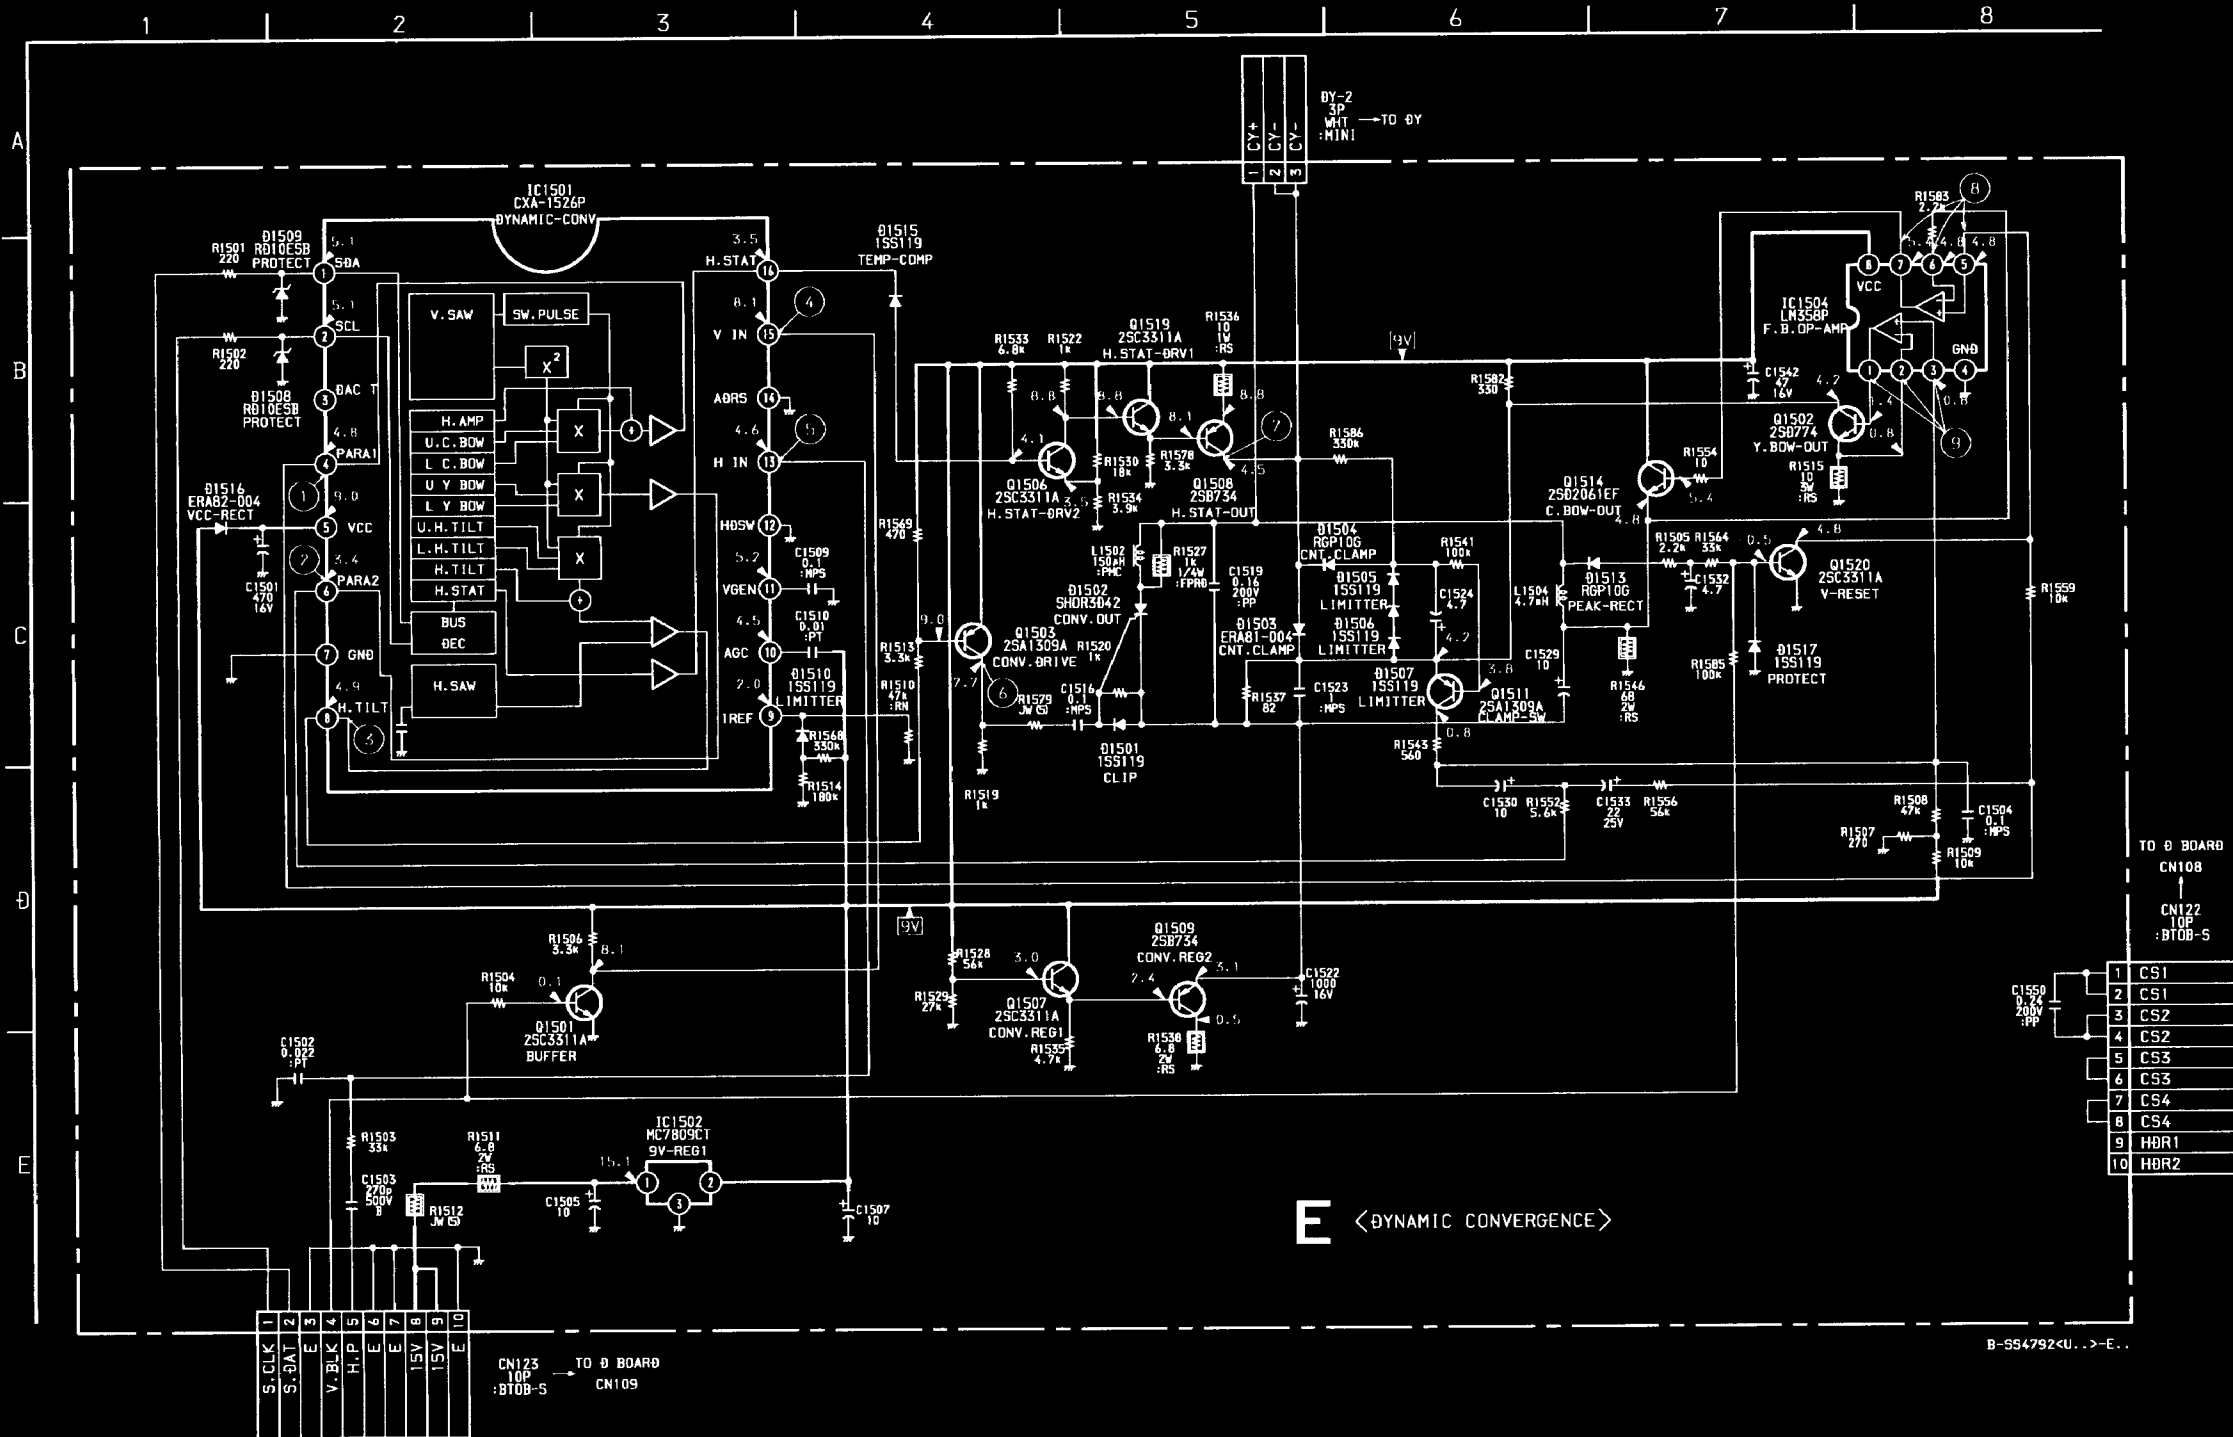


E [DYNAMIC CONVERGENCE]

- E BOARD - (Conductor Side)

(KV-32V15 only)

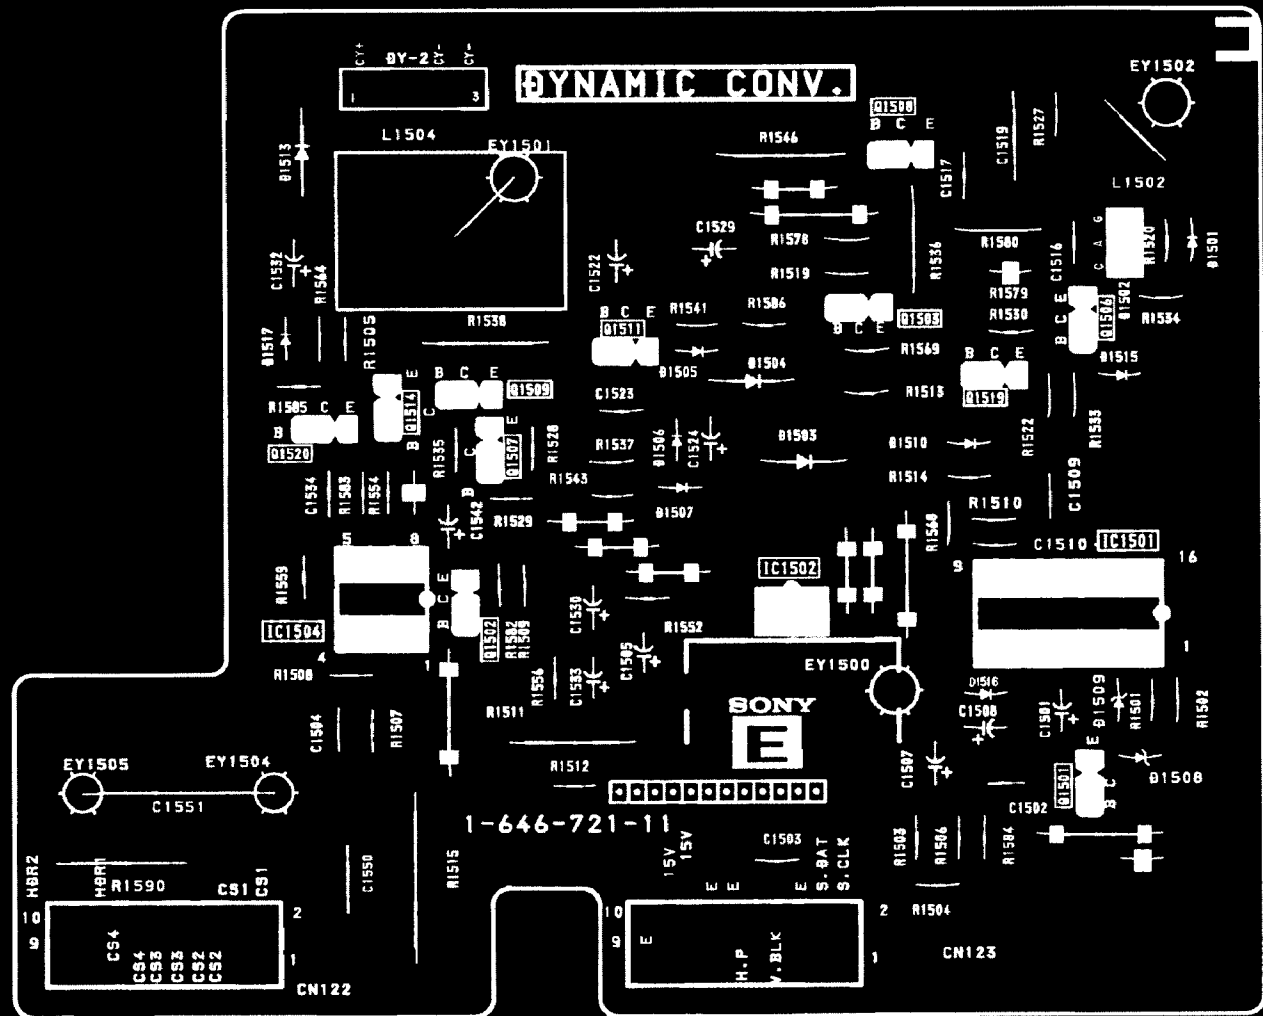

E BOARD WAVEFORMS

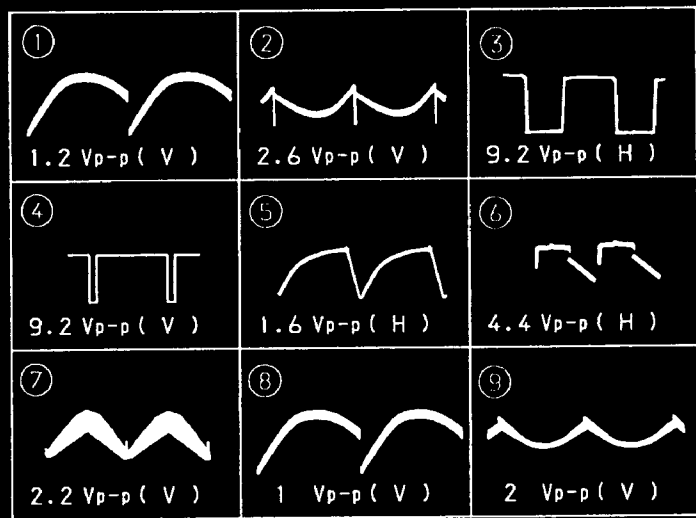


Schematic diagrams

← E board



Schematic diagrams

 C board →



<p>①</p> <p>5.4 Vp-p (H)</p>	<p>②</p> <p>5.6 Vp-p (H)</p>	<p>③</p> <p>5.6 Vp-p (H)</p>
<p>④</p> <p>175 Vp-p (H)</p>	<p>⑤</p> <p>180 Vp-p (H)</p>	<p>⑥</p> <p>185 Vp-p (H)</p>
<p>⑦</p> <p>25 Vp-p (H)</p>		

(KV-27V15/32V15 only)

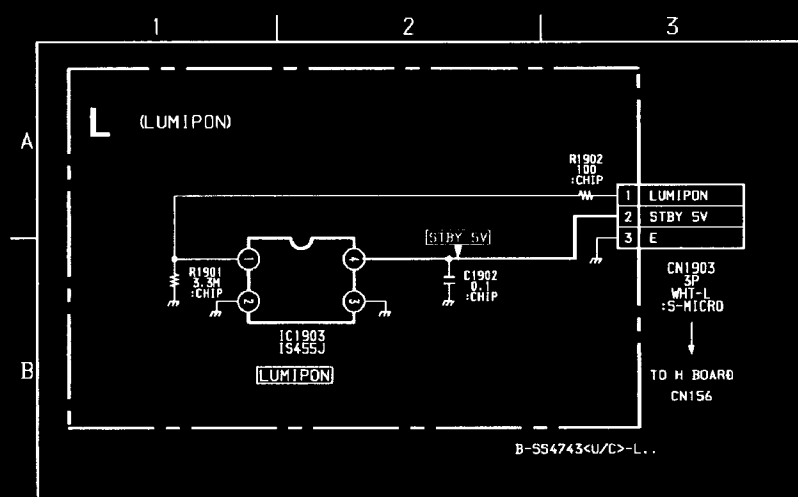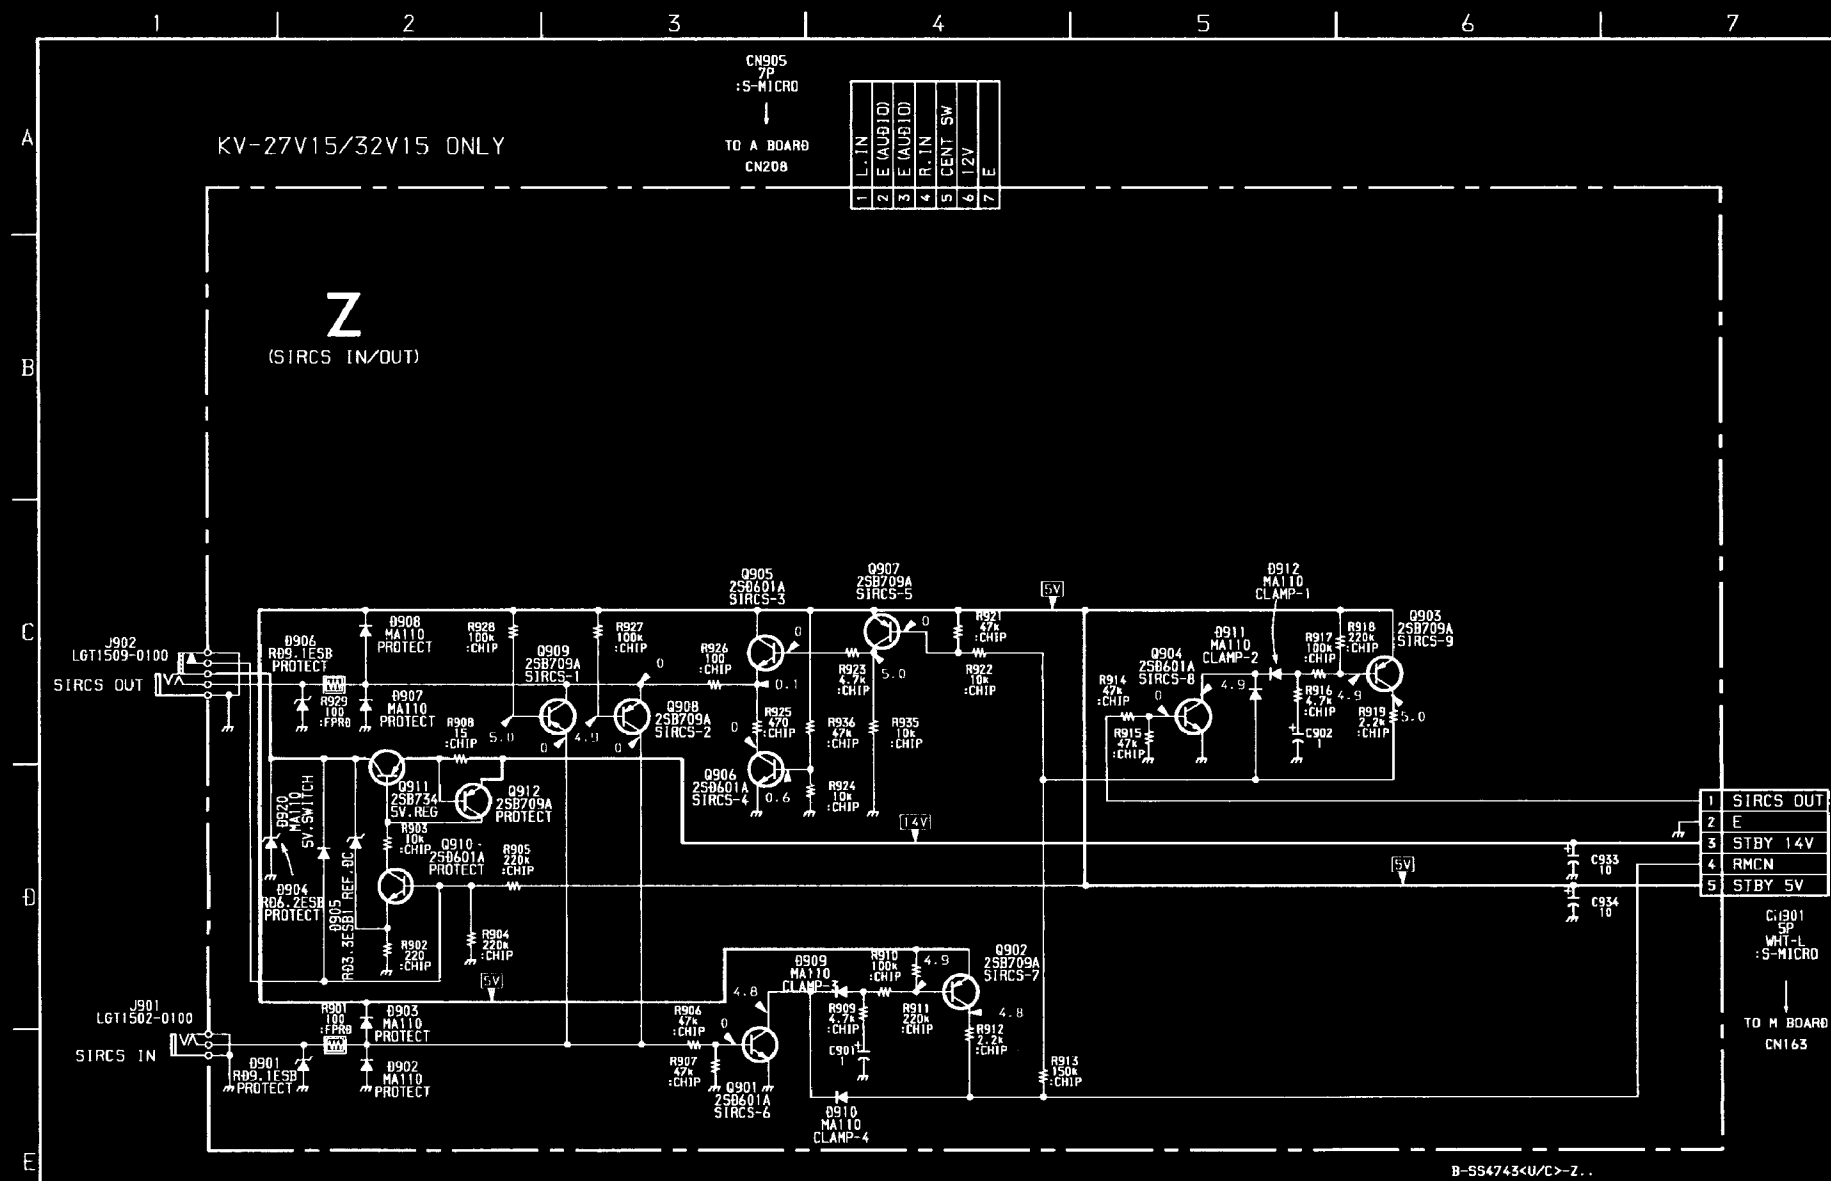


KV-27V10/27V15
RM-Y117 RM-Y121/RM-CM101
KV-29V10C/29V10M/32V15
RM-Y117 RM-Y121 RM-Y121 RM-Y121 RM-CM101


KV-27V10/27V15
RM-Y117 RM-Y121/RM-CM101
KV-29V10C/29V10M/32V15
RM-Y117 RM-Y121 RM-Y121 RM-Y121 RM-CM101

C [R. G. B. OUT] Z [SIRCS IN/OUT] L [LUMIPON]

- C BOARD - (KV-32V15 only) (Conductor Side)

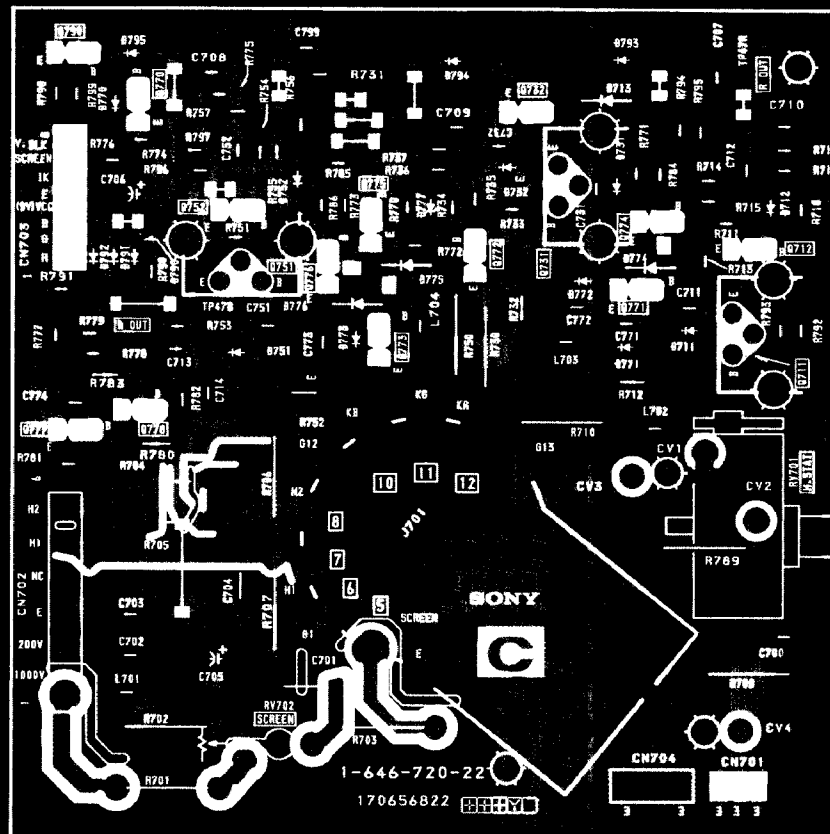

- C BOARD - (KV-27V10/27V15/29V10C/29V10M only) (Conductor Side)


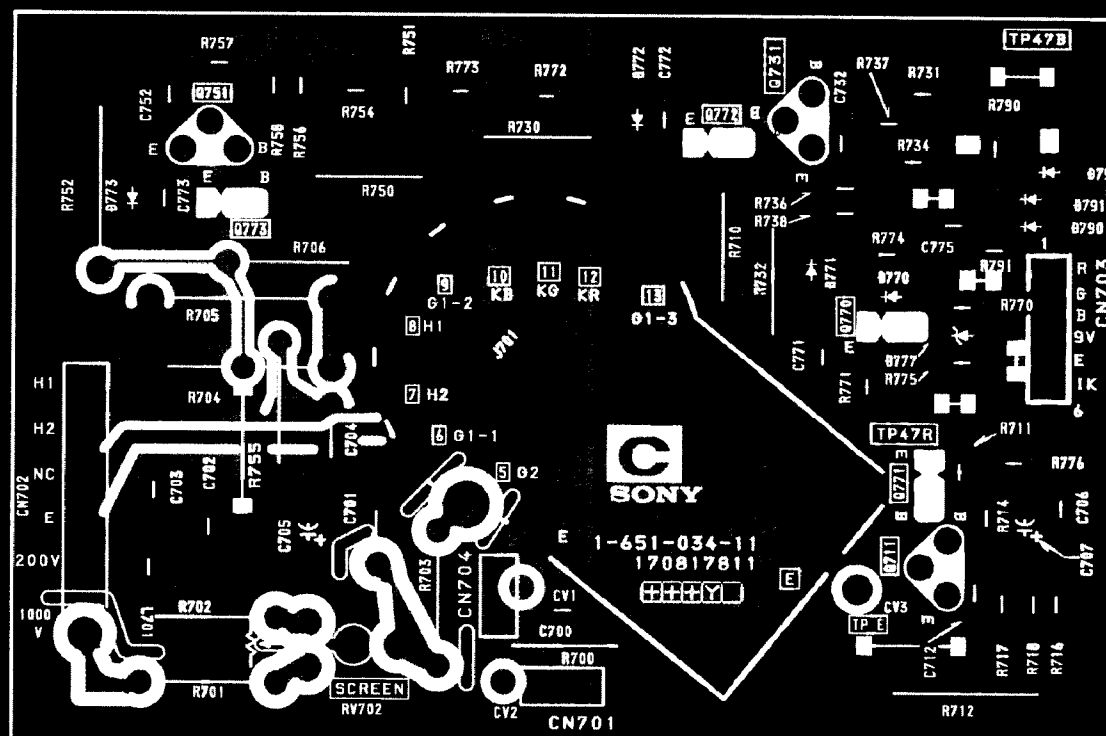


Schematic diagrams


← L Z boards

KV-27V10/27V15
RM-Y117 RM-Y121/RM-CM101
KV-29V10C/29V10M/32V15
RM-Y117 RM-Y121 RM-Y121 RM-Y121 RM-CM101

 - Z BOARD - (KV-27V15/32V15 only)

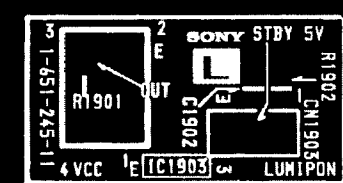


- L BOARD - (Conductor Side)

 


6-5. SEMICONDUCTORS

 
BU4053BF
CXA1315M



IS4555

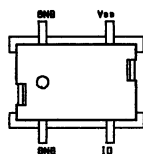


MB3512PFQ-G-BND-EF

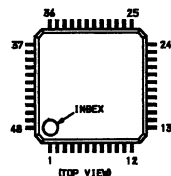

SI-3120C





CXA1213BS
CXA1465AS
CXA1545AS

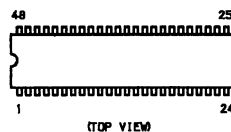


LM358P
ST24C02AB1
ST24C01B1
μPC358C
μPC393C
24C02A1/P


CXA1526P
MB40176PF-G-BND-EF

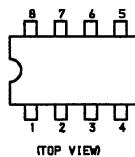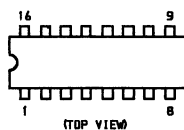

MB81461B-12RS-PSZ

 


STR81159A

 


TC7SU04F



MB86144BPF-G-BND

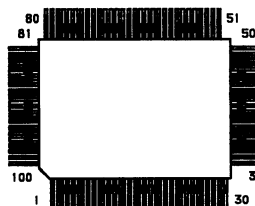


TDA2009A
TDA7262

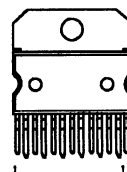


CXP80424-SV4782
CXP80424-SV4789
CXP85228-SV4745



 LM358PS
MM1114XFF
MM1118XFF




MC144143P1

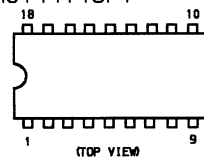

TDA8172




CXP80424-077S

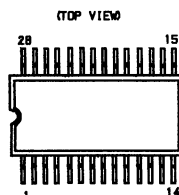


LM7805CT
LM7812CT
MC7809CT
NJM78M09FA
NJM7812FA



M52470AP
M52470P

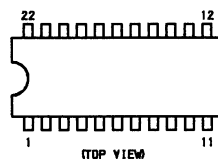

TDA8424

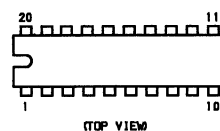

DM-48
PM-38
PM-39



MARKING SIDE VIEW

L78LR05D-MA




NJM78L05A



SBX1618-H9
SBX1618-51



μPC78L05J

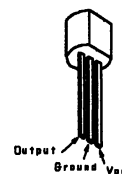

8-2. SEMICONDUCTORS

10-1000
 10-1000



10-1000



10-1000
 10-1000



10-1000
 10-1000



10-1000
 10-1000



10-1000
 10-1000



10-1000
 10-1000



10-1000
 10-1000



10-1000
 10-1000



10-1000
 10-1000



10-1000-PA



10-1000-PA



10-1000



10-1000



10-1000-PA



10-1000



10-1000-PA



10-1000



10-1000



10-1000



10-1000



10-1000



10-1000



10-1000



 
10-1000




2SA1091-O
 2SA1091-R
 2SC2551-O



2SA1162G
 2SB709A
 2SD601A



2SA1175-HFE
 2SA1309A
 2SC2785-HFE
 2SC3311A

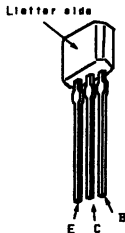

2SA1306A-Y



2SB1370-EF
 2SC3298A-Y
 2SC4159-E
 2SC4793
 2SD2012
 2SD2061



2SB733
 2SB734
 2SC3733
 2SD774



 
2SC2611
 2SC2688-LK
 2SC3271F-N




2SC4834MNP




2SC4927-01
 2SC4927-02




Ø1NS4
 Ø1N20R
 ERA82-004TP
 ERA83-006
 ERA85-009
 RØ10ESB
 RØ10ESB1
 RØ10ESB2
 RØ12ESB3
 RØ13ESB2
 RØ3.3ESB2
 RØ3.9ESB2
 RØ33ESB1
 RØ39ESB4
 RØ5.1ESB
 RØ5.1ESB1
 RØ6.2ESB2
 RØ8.2ESB3
 RØ9.1ESB1
 RØ9.1ESL
 1SS119

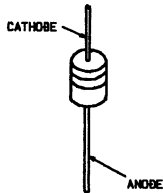


Ø2S4MF
 Ø2S4MTA1

 


Ø4SB60L

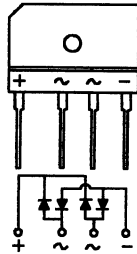


Ø5SC4M

 

EGP20G
 EL1Z
 GPØ8Ø
 RGPØ2-17EL-6433
 RGP10GPKG3
 RGP10GPKG23
 1SS83

 

ERA81-004
 ERA83-006
 ERCØ6-15S
 S2L20UF
 S3V10SS

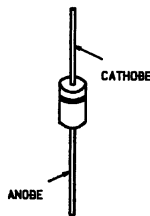


ERØ29-Ø8J




ES1F-LF-G2



 
GPØ8ØPKG3



HVU359TRF
 MA110
 1T33

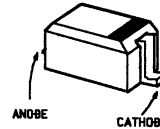

SHØR3Ø42

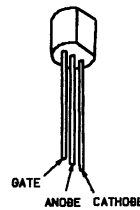

SECTION 7 EXPLODED VIEWS

NOTE:


- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified by shading and mark Δ are critical for safety.
 Replace only with part number specified.

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité.
 Ne les remplacer que par une pièce portant le numéro spécifié.

7-1. CHASSIS

- Δ : BVTP4 \times 12 7-685-661-14
 ■: BVTP4 \times 16 7-685-663-79

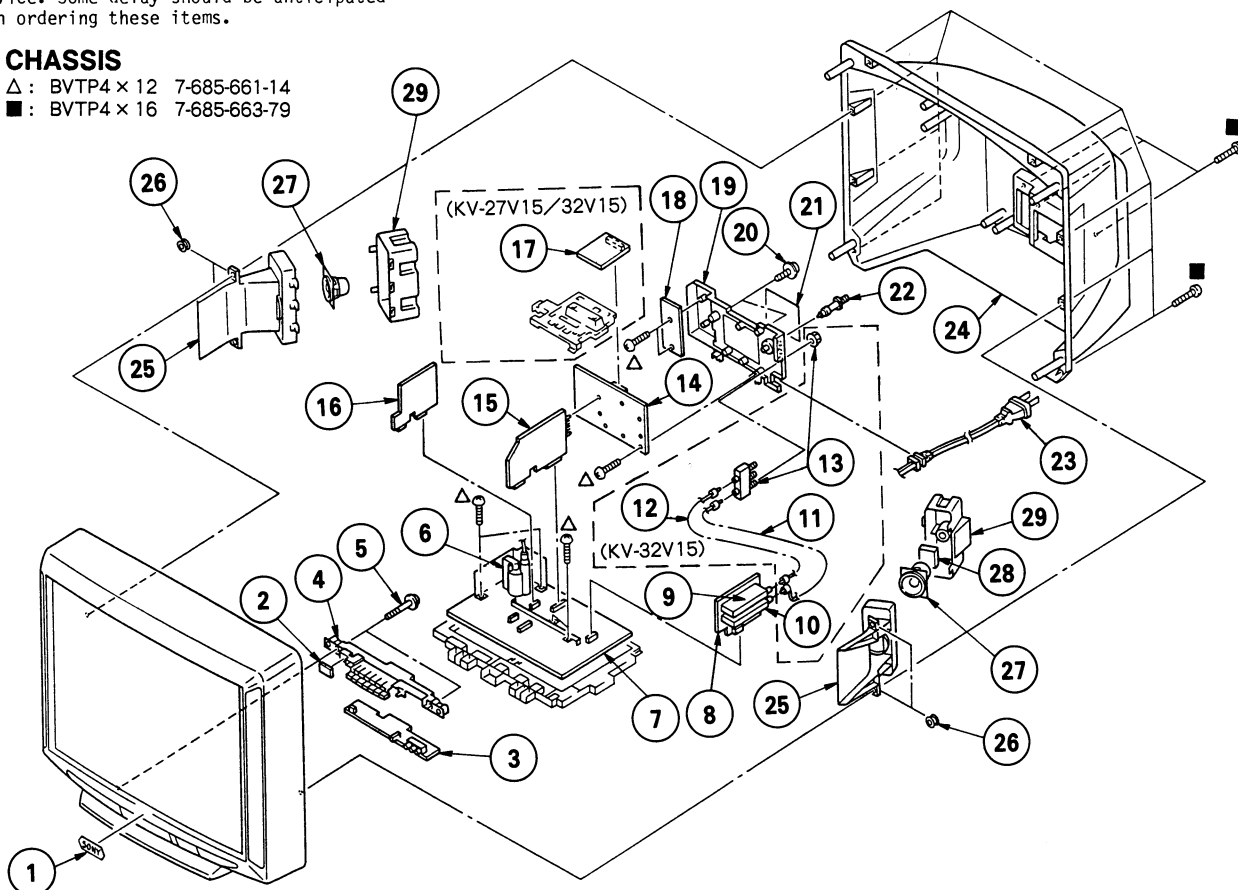


REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
1	4-394-048-01	EMBLEM (NO.9), SONY		16	*A-1341-622-A	E BOARD, COMPLETE (KV-32V15)	
2	*1-651-245-11	L BOARD		17	*A-1195-062-A	P BOARD, COMPLETE (KV-27V10/29V10M)	
3	*1-646-717-11	H BOARD		18	A-1390-411-A	Z BOARD, COMPLETE (KV-27V15/32V15)	
4	4-043-580-01	BUTTON, MULTI		19	4-039-517-11	PANEL, ANTENNA TERMINAL (KV-32V15)	
5	4-319-520-11	SCREW, SPECIAL (+PW4X30)			4-039-524-21	PANEL, ANTENNA TERMINAL (KV-27V15)	
6	Δ 1-453-416-11	TRANSFORMER ASSY. FLYBACK (NX-2604A3)			4-039-524-31	PANEL, ANTENNA TERMINAL (KV-27V10/29V10C/29V10M)	
7	*A-1346-192-A	D BOARD, COMPLETE (KV-27V10/29V10M)		20	4-382-854-11	SCREW (M3X10), P, SW (+)	
	*A-1346-199-A	D BOARD, COMPLETE (KV-29V10C)		21	4-039-834-01	LABEL, TERMINAL	
	*A-1346-200-A	D BOARD, COMPLETE (KV-27V15)		22	1-573-657-11	PLAUG, F-PIN (KV-27V10/27V15/29V10C/29V10M)	
	*A-1346-201-A	D BOARD, COMPLETE (KV-32V15)					
8	*A-1297-221-A	A BOARD, COMPLETE (KV-27V10/27V15/29V10C/29V10M)		23	Δ 1-751-056-11	CORD, POWER (WITH CONNECTOR) 6A/250V (KV-29V10C)	
	*A-1297-233-A	A BOARD, COMPLETE (KV-32V15)			Δ 1-751-059-11	CORD, POWER (WITH CONNECTOR) 10A/125V (KV-27V10/27V15/29V10M/32V15)	
9	Δ 8-598-254-00	TUNER BTf-WA402		24	4-043-579-01	COVER, REAR (KV-32V15)	
10	Δ 8-598-047-00	TUNER (KV-32V15)			4-043-661-01	COVER, REAR (KV-27V10/27V15/29V10C/29V10M)	
11	*1-751-136-11	CABLE, PIN (KV-32V15)		25	4-043-457-01	BAFFLE, SPEAKER	
12	*1-751-135-11	CABLE, PIN (KV-32V15)		26	4-374-745-11	CUSHION (A)	
13	1-417-178-11	SELECTOR, ANTENNA (AS-2) (KV-32V15)		27	1-504-524-11	SPEAKER (8CM)	
14	*A-1394-527-A	UA BOARD, COMPLETE (KV-27V15)					
	*A-1394-529-A	UA BOARD, COMPLETE (KV-32V15)		29	4-043-458-01	COVER, SPEAKER	
	*A-1394-552-A	UA BOARD, COMPLETE (KV-27V10/29V10C/29V10M)					
15	*A-1306-454-A	M BOARD, COMPLETE (KV-27V10/27V15/32V15)					
	*A-1306-462-A	M BOARD, COMPLETE (KV-29V10C/29V10M)					


SECTION 7

- **Images** which are **convex** (outward) and are therefore **upright** are **real** (physical) because they are **projected** (projected for the human eye to see)
- The **convex** (outward) parts of an **aspherical** lens are **thicker** (thicker) and a **convex** (outward) lens is a **converging** (converging) lens
- **Images** which are **convex** (outward) and are therefore **upright** are **real** (physical) because they are **projected** (projected for the human eye to see)
- The **convex** (outward) parts of an **aspherical** lens are **thicker** (thicker) and a **convex** (outward) lens is a **converging** (converging) lens

W **WILLIAMSON**

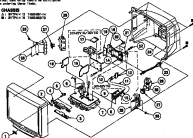[illegible]

7-2. PICTURE TUBE

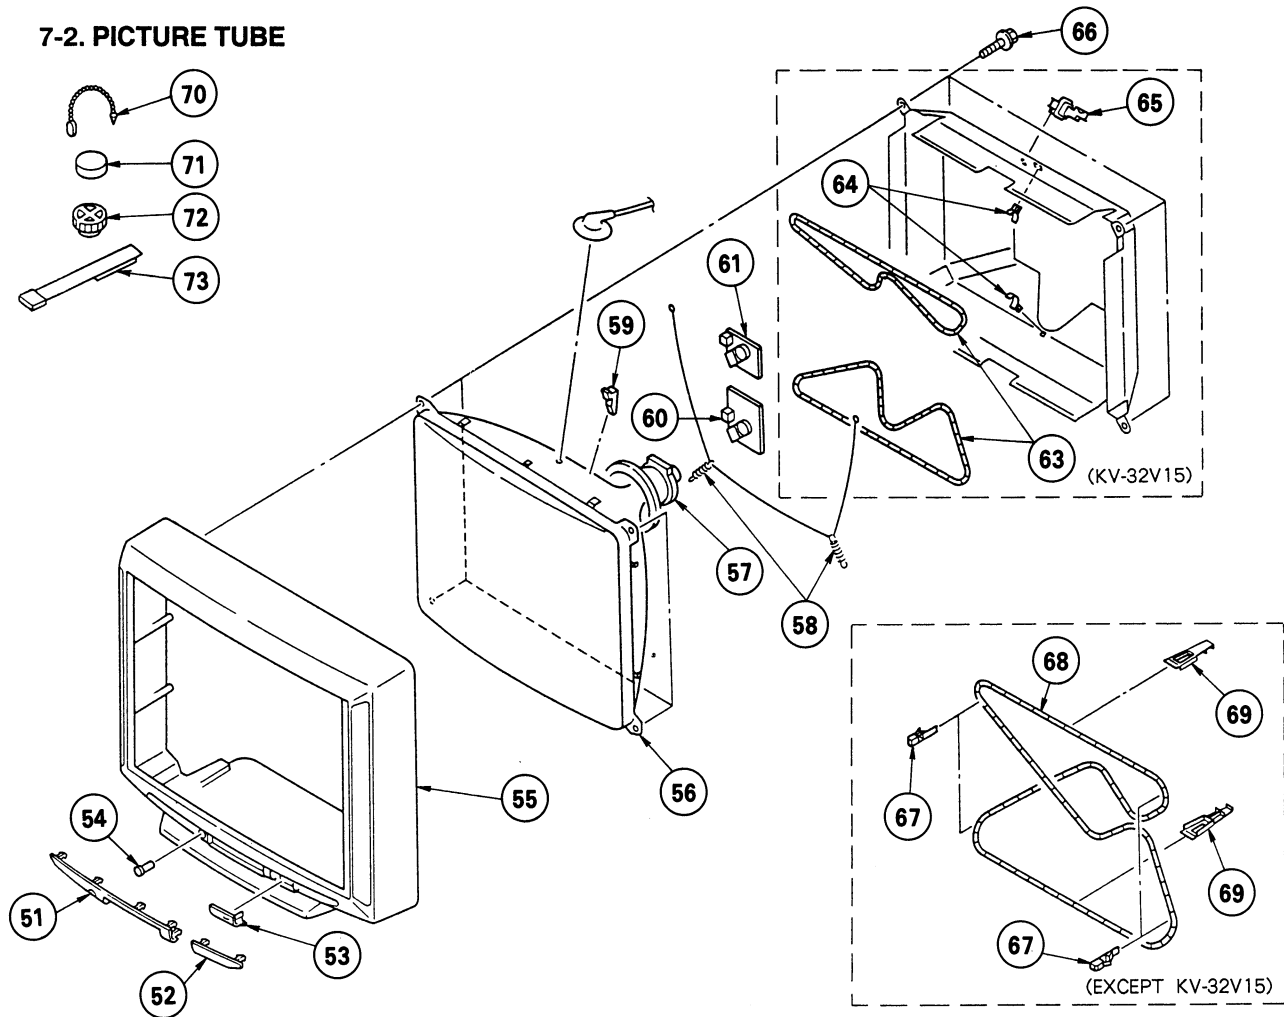

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
51	4-043-659-01	PANEL (LEFT), CONTROL		63	Δ 1-402-952-12	COIL, DEMAGNETIZATION (KV-32V15)	
52	4-043-658-01	PANEL (RIGHT), CONTROL		64	*4-371-629-01	STOPPER, WIRE (KV-32V15)	
53	4-043-433-01	DOOR, CONTROL		65	4-033-681-01	HOLDER, LEAD (KV-32V15)	
	4-043-433-21	DOOR, CONTROL (KV-32V15)		66	4-041-268-01	SCREW (7), TAPPING	
54	*4-389-517-01	GUIDE (R), LIGHT		67	4-040-388-01	HOLDER(S), DGC	
55	4-043-578-01	CABINET (WITH BEZEL) (KV-32V15)				(KV-27V10/27V15/29V10C/29V10M)	
	4-043-660-01	CABINET (WITH BEZEL)		68	Δ 1-406-726-22	COIL, DEMAGNETIZATION	
		(KV-27V10/27V15/29V10C/29V10M)			Δ 1-406-726-41	COIL, DEMAGNETIZATION (KV-29V10C)	
56	Δ 8-733-723-05	PICTURE TUBE (A80JYV50X) (KV-32V15)		69	4-040-387-01	HOLDER(M), DGC	
	Δ 8-733-848-05	PICTURE TUBE (A68KZJ50X)				(KV-27V10/27V15/29V10C/29V10M)	
57	Δ 8-451-275-42	DEFLECTION YOKE Y28PFA(VTM)		70	4-308-870-00	CLIP, LEAD WIRE	
		(KV-27V10/27V15/29V10C/29V10M)		71	1-452-032-00	MAGNET, DISK; 10MM ϕ	
	Δ 8-451-315-41	DEFLECTION YOKE Y34FXA(VTM) (KV-32V15)		72	1-452-094-00	MAGNET, ROTATABLE DISK; 15MM ϕ	
58	4-036-329-01	SPRING (B), TENSION		73	X-4306-312-0	PERMALLOY ASSY, CONVERGENCE	
59	4-041-361-01	SPACER, DEFLECTION YOKE					
60	*A-1331-351-A	C BOARD, COMPLETE (KV-32V15)					
61	*A-1331-327-A	C BOARD, COMPLETE					
		(KV-27V10/27V15/29V10C/29V10M)					

SECTION 8 ELECTRICAL PARTS LIST

P (KV-27V15/32V15)

NOTE:

The components identified by shading and mark **▲** are critical for safety.

Replace only with part number specified.

Les composants identifiés par une trame et une marque **▲** sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

• Items marked "★" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

• All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

RESISTORS

• All resistors are in ohms
• F : nonflammable

When indicating parts by reference number, please include the board name.

CAPACITORS

• MF : μ F, PF : μ F

COILS

• MMH : mH, UH : μ H

• The components identified by **■** in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
*A-1195-062-A P BOARD, COMPLETE (KV-27V15/32V15)				C3249	1-163-117-00	CERAMIC CHIP 100PF	5% 50V
*****				C3250	1-163-113-00	CERAMIC CHIP 68PF	5% 50V
<CAPACITOR>				C3251	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
C3201	1-124-477-11	ELECT 47MF	20% 16V	C3252	1-163-103-00	CERAMIC CHIP 27PF	5% 50V
C3203	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	C3253	1-163-101-00	CERAMIC CHIP 22PF	5% 50V
C3204	1-124-907-11	ELECT 10MF	20% 50V	C3254	1-163-141-00	CERAMIC CHIP 0.001MF	5% 50V
C3205	1-124-907-11	ELECT 10MF	20% 50V	C3255	1-163-101-00	CERAMIC CHIP 22PF	5% 50V
C3206	1-124-907-11	ELECT 10MF	20% 50V	C3256	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
C3207	1-163-117-00	CERAMIC CHIP 100PF	5% 50V	C3257	1-163-117-00	CERAMIC CHIP 100PF	5% 50V
C3208	1-163-117-00	CERAMIC CHIP 100PF	5% 50V	C3258	1-163-113-00	CERAMIC CHIP 68PF	5% 50V
C3209	1-126-962-11	ELECT 3.3MF	20% 50V	C3259	1-163-111-00	CERAMIC CHIP 56PF	5% 50V
C3210	1-124-477-11	ELECT 47MF	20% 16V	C3260	1-163-119-00	CERAMIC CHIP 120PF	5% 50V
C3212	1-126-962-11	ELECT 3.3MF	20% 50V	C3261	1-163-141-00	CERAMIC CHIP 0.001MF	5% 50V
C3213	1-164-346-11	CERAMIC CHIP 1MF	16V	C3263	1-163-141-00	CERAMIC CHIP 0.001MF	5% 50V
C3214	1-164-346-11	CERAMIC CHIP 1MF	16V	C3264	1-165-319-11	CERAMIC CHIP 0.1MF	5% 50V
C3215	1-164-346-11	CERAMIC CHIP 1MF	16V	C3265	1-163-141-00	CERAMIC CHIP 0.001MF	5% 50V
C3216	1-164-005-11	CERAMIC CHIP 0.47MF	25V	C3266	1-163-141-00	CERAMIC CHIP 0.001MF	5% 50V
C3217	1-164-346-11	CERAMIC CHIP 1MF	16V	C3267	1-163-141-00	CERAMIC CHIP 0.001MF	5% 50V
C3218	1-164-346-11	CERAMIC CHIP 1MF	16V	C3268	1-163-141-00	CERAMIC CHIP 0.001MF	5% 50V
C3219	1-126-103-11	ELECT 470MF	20% 16V	C3269	1-163-141-00	CERAMIC CHIP 0.001MF	5% 50V
C3220	1-164-346-11	CERAMIC CHIP 1MF	16V	C3270	1-165-319-11	CERAMIC CHIP 0.1MF	5% 50V
C3221	1-164-346-11	CERAMIC CHIP 1MF	16V	C3271	1-165-319-11	CERAMIC CHIP 0.1MF	5% 50V
C3222	1-164-336-11	CERAMIC CHIP 0.33MF	25V	C3272	1-165-319-11	CERAMIC CHIP 0.1MF	5% 50V
C3223	1-164-336-11	CERAMIC CHIP 0.33MF	25V	C3273	1-163-109-00	CERAMIC CHIP 47PF	5% 50V
C3224	1-164-222-11	CERAMIC CHIP 0.22MF	25V	C3274	1-163-101-00	CERAMIC CHIP 22PF	5% 50V
C3225	1-164-222-11	CERAMIC CHIP 0.22MF	25V	C3275	1-163-101-00	CERAMIC CHIP 22PF	5% 50V
C3226	1-164-005-11	CERAMIC CHIP 0.47MF	25V	C3276	1-163-111-00	CERAMIC CHIP 56PF	5% 50V
C3227	1-164-346-11	CERAMIC CHIP 1MF	16V	C3277	1-163-101-00	CERAMIC CHIP 22PF	5% 50V
C3228	1-163-117-00	CERAMIC CHIP 100PF	5% 50V	C3278	1-163-101-00	CERAMIC CHIP 22PF	5% 50V
C3229	1-163-093-00	CERAMIC CHIP 10PF	5% 50V	C3279	1-163-141-00	CERAMIC CHIP 0.001MF	5% 50V
C3230	1-163-141-00	CERAMIC CHIP 0.001MF	5% 50V	C3280	1-124-907-11	ELECT 10MF	20% 50V
C3231	1-163-125-00	CERAMIC CHIP 220PF	5% 50V	C3282	1-164-346-11	CERAMIC CHIP 1MF	16V
C3232	1-163-117-00	CERAMIC CHIP 100PF	5% 50V	<CONNECTOR>			
C3233	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	CN150	1-573-297-21	CONNECTOR, BOARD TO BOARD 18P	
C3234	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	<DIODE>			
C3235	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	D3202	8-719-031-68	DIODE HVU359TRF	
C3236	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	D3203	8-719-404-46	DIODE MA110	
C3237	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	D3208	8-719-110-17	DIODE RD10ESB2	
C3238	1-163-101-00	CERAMIC CHIP 22PF	5% 50V	D3209	8-719-110-17	DIODE RD10ESB2	
C3239	1-163-141-00	CERAMIC CHIP 0.001MF	5% 50V	<IC>			
C3240	1-163-101-00	CERAMIC CHIP 22PF	5% 50V	IC3200	8-759-971-56	IC MB81461B-12RS-PSZ	
C3241	1-163-103-00	CERAMIC CHIP 27PF	5% 50V	IC3201	8-759-093-29	IC MB86144BPF-G-BND	
C3242	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	IC3202	8-759-093-28	IC MB40176PF-G-BND-EF	
C3243	1-163-117-00	CERAMIC CHIP 100PF	5% 50V	IC3203	8-759-093-28	IC MB40176PF-G-BND-EF	
C3244	1-163-113-00	CERAMIC CHIP 68PF	5% 50V	IC3204	8-759-093-26	IC MB3512PFQ-G-BND-EF	
C3245	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V				
C3246	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V				
C3247	1-163-033-00	CERAMIC CHIP 0.022MF	50V				
C3248	1-163-125-00	CERAMIC CHIP 220PF	5% 50V				

P (KV-27V15/32V15)

A

REF.NO.	PART NO.	DESCRIPTION					REMARK	REF.NO.	PART NO.	DESCRIPTION					REMARK
IC3205	8-759-243-19	IC TC7SU04F						R3238	1-216-049-00	METAL GLAZE	1K	5%	1/10W		
								R3239	1-216-043-00	METAL GLAZE	560	5%	1/10W		
								R3241	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W		
								R3242	1-216-049-00	METAL GLAZE	1K	5%	1/10W		
		<COIL>													
L3201	1-410-470-11	INDUCTOR	10UH				R3243	1-216-025-00	METAL GLAZE	100	5%	1/10W			
L3202	1-408-424-00	INDUCTOR	180UH				R3244	1-216-025-00	METAL GLAZE	100	5%	1/10W			
L3203	1-408-424-00	INDUCTOR	180UH				R3245	1-216-025-00	METAL GLAZE	100	5%	1/10W			
L3204	1-410-476-11	INDUCTOR	33UH				R3246	1-216-069-00	METAL GLAZE	6.8K	5%	1/10W			
L3205	1-410-470-11	INDUCTOR	10UH				R3247	1-216-063-00	METAL GLAZE	3.9K	5%	1/10W			
L3206	1-410-387-11	INDUCTOR	33UH				R3248	1-216-295-00	METAL GLAZE	0	5%	1/10W			
L3207	1-410-387-11	INDUCTOR	33UH				R3249	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W			
L3208	1-410-387-11	INDUCTOR	33UH				R3250	1-216-043-00	METAL GLAZE	560	5%	1/10W			
L3209	1-410-387-11	INDUCTOR	33UH				R3251	1-216-049-00	METAL GLAZE	1K	5%	1/10W			
								R3252	1-216-043-00	METAL GLAZE	560	5%	1/10W		
		<TRANSISTOR>													
								R3253	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W		
Q3201	8-729-216-22	TRANSISTOR	2SA1162-G				R3254	1-216-043-00	METAL GLAZE	560	5%	1/10W			
Q3202	8-729-422-27	TRANSISTOR	2SD601A-Q				R3255	1-216-041-00	METAL GLAZE	470	5%	1/10W			
Q3203	8-729-216-22	TRANSISTOR	2SA1162-G				R3256	1-216-043-00	METAL GLAZE	560	5%	1/10W			
Q3204	8-729-216-22	TRANSISTOR	2SA1162-G				R3259	1-216-298-00	METAL GLAZE	2.2	5%	1/10W			
Q3206	8-729-422-27	TRANSISTOR	2SD601A-Q												
								R3260	1-216-073-00	METAL GLAZE	10K	5%	1/10W		
Q3207	8-729-216-22	TRANSISTOR	2SA1162-G				R3263	1-216-025-00	METAL GLAZE	100	5%	1/10W			
Q3208	8-729-422-27	TRANSISTOR	2SD601A-Q				R3264	1-216-025-00	METAL GLAZE	100	5%	1/10W			
Q3209	8-729-216-22	TRANSISTOR	2SA1162-G				R3265	1-216-049-00	METAL GLAZE	1K	5%	1/10W			
Q3210	8-729-216-22	TRANSISTOR	2SA1162-G				R3266	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W			
		<RESISTOR>													
								R3267	1-216-055-00	METAL GLAZE	1.8K	5%	1/10W		
R3201	1-216-097-00	METAL GLAZE	100K	5%	1/10W		R3268	1-216-053-00	METAL GLAZE	1.5K	5%	1/10W			
R3202	1-216-073-00	METAL GLAZE	10K	5%	1/10W		R3269	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W			
R3203	1-216-025-00	METAL GLAZE	100	5%	1/10W		R3270	1-216-657-11	METAL CHIP	1.8K	0.50%	1/10W			
R3204	1-216-025-00	METAL GLAZE	100	5%	1/10W		R3271	1-216-655-11	METAL CHIP	1.5K	0.50%	1/10W			
R3205	1-216-121-00	METAL GLAZE	1M	5%	1/10W										
								R3273	1-216-073-00	METAL GLAZE	10K	5%	1/10W		
R3207	1-216-295-00	METAL GLAZE	0	5%	1/10W		R3274	1-216-049-00	METAL GLAZE	1K	5%	1/10W			
R3208	1-216-097-00	METAL GLAZE	100K	5%	1/10W		R3275	1-216-049-00	METAL GLAZE	1K	5%	1/10W			
R3209	1-216-079-00	METAL GLAZE	18K	5%	1/10W		R3276	1-216-049-00	METAL GLAZE	1K	5%	1/10W			
R3210	1-216-089-91	METAL GLAZE	47K	5%	1/10W		R3277	1-216-298-00	METAL GLAZE	2.2	5%	1/10W			
R3211	1-216-073-00	METAL GLAZE	10K	5%	1/10W										
R3212	1-216-073-00	METAL GLAZE	10K	5%	1/10W		X3201	1-567-878-11	VIBRATOR, CRYSTAL						
R3213	1-216-075-00	METAL GLAZE	12K	5%	1/10W		X3202	1-567-878-11	VIBRATOR, CRYSTAL						
R3214	1-216-121-00	METAL GLAZE	1M	5%	1/10W		*****								
R3215	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W										
R3216	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W										
R3217	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W										
R3218	1-216-049-00	METAL GLAZE	1K	5%	1/10W										
R3219	1-216-049-00	METAL GLAZE	1K	5%	1/10W										
R3220	1-216-049-00	METAL GLAZE	1K	5%	1/10W										
R3221	1-216-655-11	METAL CHIP	1.5K	0.50%	1/10W										
R3222	1-216-655-11	METAL CHIP	1.5K	0.50%	1/10W										
R3223	1-216-025-00	METAL GLAZE	100	5%	1/10W										
R3224	1-216-049-00	METAL GLAZE	1K	5%	1/10W		C173	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V			
R3225	1-216-025-00	METAL GLAZE	100	5%	1/10W		C174	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V			
R3226	1-216-085-00	METAL GLAZE	33K	5%	1/10W		C175	1-126-935-11	ELECT	470MF	20%	16V			
								C176	1-126-935-11	ELECT	470MF	20%	16V		
R3227	1-216-647-11	METAL CHIP	680	0.50%	1/10W		C177	1-126-964-11	ELECT	10MF	20%	50V			
R3228	1-216-045-00	METAL GLAZE	680	5%	1/10W										
R3229	1-216-073-00	METAL GLAZE	10K	5%	1/10W		C178	1-126-933-11	ELECT	100MF	20%	16V			
R3230	1-216-073-00	METAL GLAZE	10K	5%	1/10W		C179	1-124-916-11	ELECT	22MF	20%	25V			
R3231	1-216-001-00	METAL GLAZE	10	5%	1/10W		C180	1-124-916-11	ELECT	22MF	20%	25V			
R3232	1-216-083-00	METAL GLAZE	27K	5%	1/10W		C181	1-164-161-11	CERAMIC CHIP	0.0022MF	10%	50V			
R3233	1-216-049-00	METAL GLAZE	1K	5%	1/10W										
R3234	1-216-651-11	METAL CHIP	1K	0.50%	1/10W		C182	1-164-161-11	CERAMIC CHIP	0.0022MF	10%	50V			
R3235	1-216-043-00	METAL GLAZE	560	5%	1/10W										
R3236	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W		C184	1-126-964-11	ELECT	10MF	20%	50V			
R3237	1-216-043-00	METAL GLAZE	560	5%	1/10W		C185	1-126-964-11	ELECT	10MF	20%	50V			

KV-27V10/27V15
 RM-Y117 RM-Y121/RM-CM101
KV-29V10C/29V10M/32V15
 RM-Y117 RM-Y117 RM-Y121
 RM-CM101

A M

Les composants identifiés par
 une trame et une marque Δ
 sont critiques pour la securite.
 Ne les remplacer que par une
 piece portant le numero specifie.

The components identified by
 shading and mark Δ are critical
 for safety.
 Replace only with part number
 specified.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
<CONNECTOR>				<TUNER>			
CN103	*1-564-519-11	PLUG, CONNECTOR 4P		TU101A	8-598-254-00	TUNER BTF-WA402	
CN151	1-573-979-21	CONNECTOR, BOARD TO BOARD 11P		TU102A	8-598-047-00	TUNER (KV-32V15)	
CN152	1-750-394-11	PIN, CONNECTOR (STAKING) 32P		*****			
CN164	1-564-505-11	PLUG, CONNECTOR 2P		*A-1306-454-A	M BOARD, COMPLETE (KV-27V10/27V15/32V15)		
CN165	1-564-505-11	PLUG, CONNECTOR 2P		*****			
CN208	1-564-510-11	PLUG, CONNECTOR 7P		*A-1306-462-A	M BOARD, COMPLETE (KV-29V10C/29V10M)		
		(KV-27V10/27V15/29V10C/29V10M)		*****			
<DIODE>				<CAPACITOR>			
D170	8-719-110-76	DIODE RD33ESB1		C002	1-163-809-11	CERAMIC CHIP 0.047MF	10% 25V
D175	8-719-110-76	DIODE RD33ESB1 (KV-32V15)		C003	1-163-001-11	CERAMIC CHIP 220PF	10% 50V
<IC>				C005	1-163-001-11	CERAMIC CHIP 220PF	10% 50V
IC172	8-759-932-67	IC BU4053BF		C006	1-163-001-11	CERAMIC CHIP 220PF	10% 50V
<COIL>				C007	1-124-903-11	ELECT 1MF	20% 50V
L170	1-408-408-00	INDUCTOR 8.2UH		C008	1-163-001-11	CERAMIC CHIP 220PF	10% 50V
L171	1-408-408-00	INDUCTOR 8.2UH		C009	1-163-001-11	CERAMIC CHIP 220PF	10% 50V
L172	1-408-408-00	INDUCTOR 8.2UH		C010	1-163-001-11	CERAMIC CHIP 220PF	10% 50V
L173	1-408-408-00	INDUCTOR 8.2UH (KV-32V15)		C012	1-163-001-11	CERAMIC CHIP 220PF	10% 50V
				C013	1-163-001-11	CERAMIC CHIP 220PF	10% 50V
<TRANSISTOR>				C014	1-163-001-11	CERAMIC CHIP 220PF	10% 50V
Q172	8-729-216-22	TRANSISTOR 2SA1162-G (KV-32V15)		C015	1-163-001-11	CERAMIC CHIP 220PF	10% 50V
Q173	8-729-216-22	TRANSISTOR 2SA1162-G (KV-32V15)		C016	1-163-001-11	CERAMIC CHIP 220PF	10% 50V
<RESISTOR>				C017	1-163-001-11	CERAMIC CHIP 220PF	10% 50V
R170	1-216-025-00	METAL GLAZE 100 5% 1/10W		C018	1-163-001-11	CERAMIC CHIP 220PF	10% 50V
		(KV-27V10/27V15/29V10C/29V10M)		C019	1-163-001-11	CERAMIC CHIP 220PF	10% 50V
R173	1-216-295-00	METAL GLAZE 0 5% 1/10W		C021	1-163-001-11	CERAMIC CHIP 220PF	10% 50V
		(KV-32V15)		C022	1-163-001-11	CERAMIC CHIP 220PF	10% 50V
R174	1-216-689-11	METAL GLAZE 39K 5% 1/10W		C023	1-163-001-11	CERAMIC CHIP 220PF	10% 50V
R175	1-215-900-11	METAL OXIDE 22K 5% 2W F		C025	1-163-001-11	CERAMIC CHIP 220PF	10% 50V
		(KV-32V15)		C028	1-163-001-11	CERAMIC CHIP 220PF	10% 50V
R176	1-216-295-00	METAL GLAZE 0 5% 1/10W		C029	1-163-001-11	CERAMIC CHIP 220PF	10% 50V
		(KV-27V10/27V15/29V10C/29V10M)		C032	1-124-902-00	ELECT 0.47MF	20% 50V
R177	1-215-900-11	METAL OXIDE 22K 5% 2W F		C033	1-126-933-11	ELECT 100MF	20% 10V
R179	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W		C034	1-163-001-11	CERAMIC CHIP 220PF	10% 50V
R181	1-216-025-00	METAL GLAZE 100 5% 1/10W				(KV-27V10/27V15/32V15)	
		(KV-32V15)		C035	1-163-001-11	CERAMIC CHIP 220PF	10% 50V
R185	1-216-025-00	METAL GLAZE 100 5% 1/10W				(KV-27V10/27V15/32V15)	
		(KV-32V15)		C041	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V
R187	1-216-083-00	METAL GLAZE 27K 5% 1/10W		C043	1-163-159-00	CERAMIC CHIP 12PF	2% 50V
R188	1-216-689-11	METAL GLAZE 39K 5% 1/10W		C045	1-126-940-11	ELECT 330MF	20% 16V
		(KV-32V15)		C047	1-104-896-11	CERAMIC CHIP 24PF	2% 50V
R189	1-216-083-00	METAL GLAZE 27K 5% 1/10W		C048	1-126-964-11	ELECT 10MF	20% 50V
		(KV-32V15)		C049	1-163-001-11	CERAMIC CHIP 220PF	10% 50V
R190	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W		C050	1-163-001-11	CERAMIC CHIP 220PF	10% 50V
		(KV-32V15)		C051	1-163-031-11	CERAMIC CHIP 0.01MF	50V
R191	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W		C052	1-163-001-11	CERAMIC CHIP 220PF	10% 50V
		(KV-32V15)		C053	1-163-121-00	CERAMIC CHIP 150PF	5% 50V
R193	1-216-037-00	METAL GLAZE 330 5% 1/10W		C054	1-163-125-00	CERAMIC CHIP 220PF	5% 50V
		(KV-32V15)		C055	1-163-001-11	CERAMIC CHIP 220PF	10% 50V
R196	1-216-037-00	METAL GLAZE 330 5% 1/10W		C056	1-163-001-11	CERAMIC CHIP 220PF	10% 50V
		(KV-32V15)		C057	1-163-017-00	CERAMIC CHIP 0.0047MF	10% 50V
				C058	1-163-037-11	CERAMIC CHIP 0.022MF	10% 25V
				C059	1-163-001-11	CERAMIC CHIP 220PF	10% 50V
				C060	1-124-903-11	ELECT 1MF	20% 50V
				C062	1-126-964-11	ELECT 10MF	20% 50V
				C150	1-136-165-00	FILM 0.1MF	5% 50V
						(KV-27V10/27V15/32V15)	

M

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
C151	1-136-175-00	FILM 0.068MF 5% 50V (KV-27V10/27V15/32V15)					
C152	1-126-964-11	ELECT 10MF 20% 50V (KV-27V10/27V15/32V15)				<CONNECTOR>	
C153	1-137-367-11	FILM 0.0033MF 5% 50V (KV-27V10/27V15/32V15)		CN129	*1-564-521-11	PLUG, CONNECTOR 6P	
C154	1-163-038-00	CERAMIC CHIP 0.1MF 25V (KV-27V10/27V15/32V15)		CN130	1-573-301-21	CONNECTOR, BOARD TO BOARD 20P	
C155	1-126-964-11	ELECT 10MF 20% 50V (KV-27V10/27V15/32V15)		CN131	*1-691-914-11	CONNECTOR, BOARD TO BOARD 15P	
C156	1-163-135-00	CERAMIC CHIP 560PF 5% 50V (KV-27V10/27V15/32V15)		CN134	*1-564-521-11	PLUG, CONNECTOR 6P (KV-27V10/27V15/32V15)	
C157	1-163-038-00	CERAMIC CHIP 0.1MF 25V (KV-27V10/27V15/32V15)		CN137	1-750-394-11	PIN, CONNECTOR (STAKING) 32P	
C158	1-124-903-11	ELECT 1MF 20% 50V (KV-27V10/27V15/32V15)		CN138	*1-564-512-11	PLUG, CONNECTOR 9P	
C201	1-124-903-11	ELECT 1MF 20% 50V		CN163	*1-564-508-11	PLUG, CONNECTOR 5P (KV-27V10/27V15/32V15)	
C202	1-163-017-00	CERAMIC CHIP 0.0047MF 10% 50V		CN168	1-564-505-11	PLUG, CONNECTOR 2P	
C203	1-163-001-11	CERAMIC CHIP 220PF 10% 50V				<DIODE>	
C204	1-163-989-11	CERAMIC CHIP 0.033MF 10% 25V		D001	8-719-404-46	DIODE MA110	
C205	1-126-933-11	ELECT 100MF 20% 16V		D002	8-719-404-46	DIODE MA110	
C211	1-163-001-11	CERAMIC CHIP 220PF 10% 50V		D004	8-719-404-46	DIODE MA110 (KV-27V10/27V15/32V15)	
C212	1-124-902-00	ELECT 0.47MF 20% 50V		D005	8-713-300-57	DIODE 1T33	
C213	1-124-902-00	ELECT 0.47MF 20% 50V		D006	8-719-110-17	DIODE RD10ESB2	
C214	1-163-017-00	CERAMIC CHIP 0.0047MF 10% 50V		D007	8-719-110-17	DIODE RD10ESB2	
C216	1-104-665-11	ELECT 100MF 20% 25V		D008	8-719-110-17	DIODE RD10ESB2	
C301	1-163-117-00	CERAMIC CHIP 100PF 5% 50V		D009	8-719-110-17	DIODE RD10ESB2	
C305	1-126-964-11	ELECT 10MF 20% 50V		D150	8-719-404-46	DIODE MA110 (KV-27V10/27V15/32V15)	
C306	1-124-902-00	ELECT 0.47MF 20% 50V		D201	8-719-404-46	DIODE MA110	
C307	1-163-125-00	CERAMIC CHIP 220PF 5% 50V		D202	8-719-404-46	DIODE MA110	
C308	1-163-099-00	CERAMIC CHIP 18PF 5% 50V		D205	8-719-110-17	DIODE RD10ESB2	
C310	1-124-916-11	ELECT 22MF 20% 25V		D206	8-719-110-17	DIODE RD10ESB2	
C311	1-124-903-11	ELECT 1MF 20% 50V		D207	8-719-510-48	DIODE DIN20R (KV-27V10/27V15/32V15)	
C313	1-163-003-11	CERAMIC CHIP 330PF 10% 50V		D301	8-719-110-17	DIODE RD10ESB2	
C315	1-126-964-11	ELECT 10MF 20% 50V (KV-27V10/27V15/32V15)		D304	8-719-110-17	DIODE RD10ESB2	
C316	1-126-964-11	ELECT 10MF 20% 50V (KV-27V10/27V15/32V15)				<IC>	
C317	1-126-964-11	ELECT 10MF 20% 50V (KV-27V10/27V15/32V15)		IC101	8-752-851-01	IC CXP80424-079S	
C318	1-136-165-00	FILM 0.1MF 5% 50V		IC102	8-759-168-37	IC ST24C01B1	
C319	1-136-165-00	FILM 0.1MF 5% 50V		IC103	8-759-805-37	IC L78LR05D-MA	
C320	1-136-165-00	FILM 0.1MF 5% 50V		IC150	8-759-084-28	IC MC144143P1 (KV-27V10/27V15/32V15)	
C321	1-126-952-11	ELECT 1000MF 20% 16V		IC201	8-759-090-21	IC TDA8424	
C322	1-136-153-00	FILM 0.01MF 5% 50V		IC202	8-759-983-69	IC LM358PS	
C323	1-126-923-11	ELECT 220MF 20% 10V		IC301	8-752-059-67	IC CXA1465AS	
C324	1-163-003-11	CERAMIC CHIP 330PF 10% 50V				<COIL>	
C325	1-163-037-11	CERAMIC CHIP 0.022MF 10% 25V		L001	1-410-470-11	INDUCTOR 10UH	
C326	1-136-169-00	FILM 0.22MF 5% 50V		L002	1-408-414-00	INDUCTOR 27UH	
C327	1-136-169-00	FILM 0.22MF 5% 50V		L150	1-410-470-11	INDUCTOR 10UH (KV-27V10/27V15/32V15)	
C328	1-124-902-00	ELECT 0.47MF 20% 50V				<TRANSISTOR>	
C329	1-124-903-11	ELECT 1MF 20% 50V		Q001	8-729-216-22	TRANSISTOR 2SA1162-G	
C330	1-126-964-11	ELECT 10MF 20% 50V		Q004	8-729-216-22	TRANSISTOR 2SA1162-G	
C332	1-164-489-11	CERAMIC CHIP 0.22MF 10% 16V		Q005	8-729-422-27	TRANSISTOR 2SD601A-Q	
C333	1-163-011-11	CERAMIC CHIP 0.0015MF 10% 50V		Q151	8-729-422-27	TRANSISTOR 2SD601A-Q (KV-27V10/27V15/32V15)	
C334	1-124-902-00	ELECT 0.47MF 20% 50V		Q201	8-729-422-27	TRANSISTOR 2SD601A-Q	
C335	1-163-001-11	CERAMIC CHIP 220PF 10% 50V		Q301	8-729-216-22	TRANSISTOR 2SA1162-G	
C336	1-124-903-11	ELECT 1MF 20% 50V		Q302	8-729-216-22	TRANSISTOR 2SA1162-G	
C337	1-124-902-00	ELECT 0.47MF 20% 50V		Q308	8-729-422-27	TRANSISTOR 2SD601A-Q	
C338	1-136-153-00	FILM 0.01MF 5% 50V					
C340	1-124-903-11	ELECT 1MF 20% 50V					
C341	1-163-005-11	CERAMIC CHIP 470PF 10% 50V					
C342	1-137-414-11	FILM 0.0047MF 10% 100V					

M

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
<RESISTOR>				R063	1-216-033-00	METAL GLAZE 220 5% 1/10W (KV-27V10/27V15/32V15)	
JR200	1-216-295-00	METAL GLAZE 0 5% 1/10W		R064	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
JR201	1-216-295-00	METAL GLAZE 0 5% 1/10W		R065	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
JR202	1-216-295-00	METAL GLAZE 0 5% 1/10W		R066	1-216-025-00	METAL GLAZE 100 5% 1/10W	
R002	1-216-073-00	METAL GLAZE 10K 5% 1/10W		R067	1-216-025-00	METAL GLAZE 100 5% 1/10W	
R003	1-216-033-00	METAL GLAZE 220 5% 1/10W		R069	1-216-033-00	METAL GLAZE 220 5% 1/10W (KV-27V10/27V15/32V15)	
R004	1-216-033-00	METAL GLAZE 220 5% 1/10W		R070	1-216-049-00	METAL GLAZE 1K 5% 1/10W (KV-27V10/27V15/32V15)	
R005	1-216-033-00	METAL GLAZE 220 5% 1/10W		R071	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R006	1-216-049-00	METAL GLAZE 1K 5% 1/10W		R074	1-216-295-00	METAL GLAZE 0 5% 1/10W	
R007	1-216-033-00	METAL GLAZE 220 5% 1/10W		R075	1-216-295-00	METAL GLAZE 0 5% 1/10W	
R008	1-216-033-00	METAL GLAZE 220 5% 1/10W		R076	1-216-295-00	METAL GLAZE 0 5% 1/10W	
R009	1-216-033-00	METAL GLAZE 220 5% 1/10W		R078	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R011	1-216-033-00	METAL GLAZE 220 5% 1/10W		R079	1-216-295-00	METAL GLAZE 0 5% 1/10W	
R012	1-216-033-00	METAL GLAZE 220 5% 1/10W		R080	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R013	1-216-033-00	METAL GLAZE 220 5% 1/10W		R082	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R016	1-216-033-00	METAL GLAZE 220 5% 1/10W		R083	1-216-089-91	METAL GLAZE 47K 5% 1/10W	
R017	1-216-033-00	METAL GLAZE 220 5% 1/10W		R086	1-216-089-91	METAL GLAZE 47K 5% 1/10W	
R018	1-216-033-00	METAL GLAZE 220 5% 1/10W		R087	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R019	1-216-033-00	METAL GLAZE 220 5% 1/10W		R091	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R020	1-216-033-00	METAL GLAZE 220 5% 1/10W		R092	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R021	1-216-073-00	METAL GLAZE 10K 5% 1/10W		R093	1-216-097-00	METAL GLAZE 100K 5% 1/10W	
R022	1-216-073-00	METAL GLAZE 10K 5% 1/10W		R150	1-216-097-00	METAL GLAZE 100K 5% 1/10W (KV-27V10/27V15/32V15)	
R023	1-216-033-00	METAL GLAZE 220 5% 1/10W		R151	1-216-049-00	METAL GLAZE 1K 5% 1/10W (KV-27V10/27V15/32V15)	
R025	1-216-033-00	METAL GLAZE 220 5% 1/10W		R152	1-216-049-00	METAL GLAZE 1K 5% 1/10W (KV-27V10/27V15/32V15)	
R026	1-216-097-00	METAL GLAZE 100K 5% 1/10W		R153	1-216-069-00	METAL GLAZE 6.8K 5% 1/10W (KV-27V10/27V15/32V15)	
R027	1-216-121-00	METAL GLAZE 1M 5% 1/10W		R154	1-216-041-00	METAL GLAZE 470 5% 1/10W (KV-27V10/27V15/32V15)	
R028	1-216-073-00	METAL GLAZE 10K 5% 1/10W		R155	1-216-049-00	METAL GLAZE 1K 5% 1/10W (KV-27V10/27V15/32V15)	
R029	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W		R156	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R030	1-216-073-00	METAL GLAZE 10K 5% 1/10W		R157	1-216-073-00	METAL GLAZE 10K 5% 1/10W (KV-27V10/27V15/32V15)	
R031	1-216-033-00	METAL GLAZE 220 5% 1/10W		R158	1-216-073-00	METAL GLAZE 10K 5% 1/10W (KV-27V10/27V15/32V15)	
R032	1-216-033-00	METAL GLAZE 220 5% 1/10W		R159	1-216-049-00	METAL GLAZE 1K 5% 1/10W (KV-27V10/27V15/32V15)	
R033	1-216-033-00	METAL GLAZE 220 5% 1/10W		R160	1-216-049-00	METAL GLAZE 1K 5% 1/10W (KV-27V10/27V15/32V15)	
R034	1-216-033-00	METAL GLAZE 220 5% 1/10W		R161	1-216-049-00	METAL GLAZE 1K 5% 1/10W (KV-27V10/27V15/32V15)	
R035	1-216-033-00	METAL GLAZE 220 5% 1/10W		R162	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W (KV-27V10/27V15/32V15)	
R036	1-216-033-00	METAL GLAZE 220 5% 1/10W		R163	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W (KV-27V10/27V15/32V15)	
R037	1-216-033-00	METAL GLAZE 220 5% 1/10W		R164	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W (KV-27V10/27V15/32V15)	
R038	1-216-033-00	METAL GLAZE 220 5% 1/10W		R165	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W (KV-27V10/27V15/32V15)	
R039	1-216-295-00	METAL GLAZE 0 5% 1/10W		R166	1-216-049-00	METAL GLAZE 1K 5% 1/10W (KV-27V10/27V15/32V15)	
R040	1-216-049-00	METAL GLAZE 1K 5% 1/10W		R168	1-216-049-00	METAL GLAZE 1K 5% 1/10W (KV-27V10/27V15/32V15)	
R041	1-216-033-00	METAL GLAZE 220 5% 1/10W		R201	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R042	1-216-049-00	METAL GLAZE 1K 5% 1/10W		R202	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R043	1-216-049-00	METAL GLAZE 1K 5% 1/10W		R203	1-216-089-91	METAL GLAZE 47K 5% 1/10W	
R044	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W		R204	1-216-089-91	METAL GLAZE 47K 5% 1/10W	
R045	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W		R205	1-216-295-00	METAL GLAZE 0 5% 1/10W	
R046	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W					
R048	1-216-073-00	METAL GLAZE 10K 5% 1/10W					
R049	1-216-049-00	METAL GLAZE 1K 5% 1/10W					
R050	1-216-049-00	METAL GLAZE 1K 5% 1/10W					
R051	1-216-073-00	METAL GLAZE 10K 5% 1/10W					
R052	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W					
R053	1-216-049-00	METAL GLAZE 1K 5% 1/10W					
R054	1-216-049-00	METAL GLAZE 1K 5% 1/10W					
R055	1-216-033-00	METAL GLAZE 220 5% 1/10W (KV-27V10/27V15/32V15)					
R056	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W					
R057	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W					
R058	1-216-073-00	METAL GLAZE 10K 5% 1/10W					
R059	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W					
R060	1-216-079-00	METAL GLAZE 18K 5% 1/10W (KV-27V10/27V15/32V15)					
	1-216-295-00	METAL GLAZE 0 5% 1/10W (KV-29V10C/29V10M)					
R062	1-216-057-00	METAL GLAZE 2.2K 5% 1/10W					

The components identified by shading and mark Δ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

KV-27V10/27V15
RM-Y117 RM-Y121/RM-CM101
KV-29V10C/29V10M/32V15
RM-Y117 RM-Y117 RM-Y121
RM-CM101

M **C**

REF. NO.	PART NO.	DESCRIPTION	REMARK
R206	1-216-295-00	METAL GLAZE 0 5% 1/10W	
R207	1-216-085-00	METAL GLAZE 33K 5% 1/10W	
R208	1-216-089-91	METAL GLAZE 47K 5% 1/10W	
R209	1-216-085-00	METAL GLAZE 33K 5% 1/10W	
R210	1-216-089-91	METAL GLAZE 47K 5% 1/10W	
R211	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R212	1-216-025-00	METAL GLAZE 100 5% 1/10W	
R213	1-216-025-00	METAL GLAZE 100 5% 1/10W	
R218	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R219	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R220	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R222	1-216-089-91	METAL GLAZE 47K 5% 1/10W	
R223	1-216-045-00	METAL GLAZE 680 5% 1/10W	
R301	1-216-025-00	METAL GLAZE 100 5% 1/10W	
R302	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R303	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R304	1-216-039-00	METAL GLAZE 390 5% 1/10W	
R305	1-216-039-00	METAL GLAZE 390 5% 1/10W	
R306	1-216-057-00	METAL GLAZE 2.2K 5% 1/10W	
R312	1-216-119-00	METAL GLAZE 820K 5% 1/10W	
R313	1-216-079-00	METAL GLAZE 18K 5% 1/10W	
R321	1-216-025-00	METAL GLAZE 100 5% 1/10W	
R323	1-216-041-00	METAL GLAZE 470 5% 1/10W	
R324	1-216-025-00	METAL GLAZE 100 5% 1/10W	
R327	1-216-653-11	METAL CHIP 1.2K 0.50% 1/10W	
R328	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R329	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R330	1-216-295-00	METAL GLAZE 0 5% 1/10W	
R331	1-216-678-11	METAL CHIP 13K 0.50% 1/10W	
R332	1-216-057-00	METAL GLAZE 2.2K 5% 1/10W	
R333	1-216-025-00	METAL GLAZE 100 5% 1/10W	
R334	1-216-687-11	METAL CHIP 33K 0.50% 1/10W	
R335	1-216-121-00	METAL GLAZE 1M 5% 1/10W	
R336	1-216-295-00	METAL GLAZE 0 5% 1/10W	
R337	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R338	1-249-417-11	CARBON 1K 5% 1/4W F	
R339	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R340	1-216-077-00	METAL GLAZE 15K 5% 1/10W	
R341	1-216-085-00	METAL GLAZE 33K 5% 1/10W	
R342	1-216-295-00	METAL GLAZE 0 5% 1/10W	
R343	1-216-053-00	METAL GLAZE 1.5K 5% 1/10W	
R344	1-216-043-00	METAL GLAZE 560 5% 1/10W	
R345	1-216-109-00	METAL GLAZE 330K 5% 1/10W	
R346	1-216-071-00	METAL GLAZE 8.2K 5% 1/10W	
R347	1-249-409-11	CARBON 220 5% 1/4W F	
R348	1-216-097-00	METAL GLAZE 100K 5% 1/10W	
R349	1-216-089-91	METAL GLAZE 47K 5% 1/10W	
R351	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R352	1-216-089-91	METAL GLAZE 47K 5% 1/10W	
R354	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R356	1-216-295-00	METAL GLAZE 0 5% 1/10W	
R374	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R375	1-216-033-00	METAL GLAZE 220 5% 1/10W	
<CRYSTAL>			
X001	1-579-917-21	VIBRATOR, CRYSTAL	
X301	1-567-505-11	OSCILLATOR, CRYSTAL	

REF. NO.	PART NO.	DESCRIPTION	REMARK
*A-1331-327-A	C BOARD, COMPLETE	*****	
	(KV-27V10/27V15/29V10C/29V10M)		
*A-1331-351-A	C BOARD, COMPLETE (KV-32V15)	*****	
<CAPACITOR>			
C700	1-102-074-00	CERAMIC 0.001MF 10% 50V	
C701	1-162-114-00	CERAMIC 0.0047MF 2KV	
C702	1-106-375-12	MYLAR 0.022MF 200V	
C703	1-106-375-12	MYLAR 0.022MF 200V	
C704	1-162-116-00	CERAMIC 680PF 10% 2KV	
C705	1-123-946-00	ELECT 4.7MF 20% 250V	
C706	1-124-916-11	ELECT 22MF 20% 25V	
	(KV-27V10/27V15/29V10C/29V10M)		
	1-126-933-11	ELECT 100MF 20% 16V	(KV-32V15)
C707	1-102-129-00	CERAMIC 0.01MF 10% 50V	(KV-32V15)
C711	1-164-083-11	CERAMIC 680PF 10% 50V	(KV-32V15)
C712	1-164-081-11	CERAMIC 470PF 10% 50V	
C731	1-164-083-11	CERAMIC 680PF 10% 50V	(KV-32V15)
C732	1-164-081-11	CERAMIC 470PF 10% 50V	
C751	1-164-083-11	CERAMIC 680PF 10% 50V	(KV-32V15)
C752	1-164-081-11	CERAMIC 470PF 10% 50V	(KV-27V10/27V15/29V10C/29V10M)
	1-164-083-11	CERAMIC 680PF 10% 50V	(KV-32V15)
<CONNECTOR>			
CN701	1-695-915-11	TAB (CONTACT)	
CN702	1-508-768-00	PIN, CONNECTOR (5MM PITCH) 6P	
CN703	*1-564-509-11	PLUG, CONNECTOR 6P	
<DIODE>			
D711	8-719-911-19	DIODE 1SS119 (KV-32V15)	
D712	8-719-911-19	DIODE 1SS119 (KV-32V15)	
D731	8-719-911-19	DIODE 1SS119 (KV-32V15)	
D732	8-719-911-19	DIODE 1SS119 (KV-32V15)	
D751	8-719-911-19	DIODE 1SS119 (KV-32V15)	
D752	8-719-911-19	DIODE 1SS119 (KV-32V15)	
D770	8-719-911-19	DIODE 1SS119	
D771	8-719-911-19	DIODE 1SS119	
D772	8-719-911-19	DIODE 1SS119	
D773	8-719-911-19	DIODE 1SS119	
D777	8-719-109-72	DIODE RD3.9ESB2	
D790	8-719-911-19	DIODE 1SS119	
D791	8-719-911-19	DIODE 1SS119	
D792	8-719-911-19	DIODE 1SS119	
<JACK>			
J701	Δ 1-540-124-11	SOCKET, PICTURE TUBE	
<COIL>			
L701	1-410-478-11	INDUCTOR 47UH	

C E (KV-32V15)

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
<TRANSISTOR>				<VARIABLE RESISTOR>			
Q711	8-729-326-11	TRANSISTOR 2SC2611		R774	1-249-437-11	CARBON 47K 5% 1/4W	
Q712	8-729-119-78	TRANSISTOR 2SC2785-HFE (KV-32V15)		R775	1-249-417-11	CARBON 1K 5% 1/4W	F
Q731	8-729-326-11	TRANSISTOR 2SC2611		R776	1-249-409-11	CARBON 220 5% 1/4W	F
Q732	8-729-119-78	TRANSISTOR 2SC2785-HFE (KV-32V15)		R790	1-249-413-11	CARBON 470 5% 1/4W	
Q751	8-729-326-11	TRANSISTOR 2SC2611		R791	1-249-412-11	CARBON 390 5% 1/4W	
Q752	8-729-119-78	TRANSISTOR 2SC2785-HFE (KV-32V15)		<CAPACITOR>			
Q770	8-729-119-76	TRANSISTOR 2SA1175-HFE		C1501	1-126-103-11	ELECT 470MF 20% 16V	
Q771	8-729-200-17	TRANSISTOR 2SA1091-0		C1502	1-137-372-11	FILM 0.022MF 5% 50V	
Q772	8-729-200-17	TRANSISTOR 2SA1091-0		C1503	1-102-234-00	CERAMIC 270PF 10% 500V	
Q773	8-729-200-17	TRANSISTOR 2SA1091-0		C1504	1-136-165-00	FILM 0.1MF 5% 50V	
<RESISTOR>				C1505	1-124-907-11	ELECT 10MF 20% 50V	
R700	1-247-739-11	CARBON 100 5% 1/2W		C1507	1-124-907-11	ELECT 10MF 20% 50V	
R701	1-244-941-00	CARBON 680K 5% 1/2W		C1509	1-136-165-00	FILM 0.1MF 5% 50V	
R702	1-249-496-11	CARBON 100K 5% 1/2W		C1510	1-137-370-11	FILM 0.01MF 5% 50V	
R703	1-249-496-11	CARBON 100K 5% 1/2W		C1516	1-136-165-00	FILM 0.1MF 5% 50V	
R704	1-216-398-11	METAL OXIDE 5.6 5% 3W	F	C1519	1-136-104-00	FILM 0.16MF 5% 200V	
R705	1-216-398-11	METAL OXIDE 5.6 5% 3W	F	C1522	1-124-360-00	ELECT 1000MF 20% 16V	
R707	1-249-496-11	CARBON 100K 5% 1/2W	(KV-32V15)	C1523	1-136-177-00	FILM 1MF 5% 50V	
R710	1-247-758-11	CARBON 3.3K 5% 1/2W		C1524	1-124-927-11	ELECT 4.7MF 20% 50V	
R711	1-247-807-31	CARBON 100 5% 1/4W		C1529	1-124-907-11	ELECT 10MF 20% 50V	
R712	1-215-924-71	METAL OXIDE 15K 5% 3W	F	C1530	1-124-907-11	ELECT 10MF 20% 50V	
R714	1-249-425-11	CARBON 4.7K 5% 1/4W		C1532	1-124-927-11	ELECT 4.7MF 20% 50V	
R716	1-249-411-11	CARBON 330 5% 1/4W	(KV-27V10/27V15/29V10C/29V10M)	C1533	1-126-233-11	ELECT 22MF 20% 25V	
	1-249-417-11	CARBON 1K 5% 1/4W	(KV-32V15)	C1542	1-124-477-11	ELECT 47MF 20% 16V	
R717	1-249-393-11	CARBON 10 5% 1/4W	(KV-32V15)	C1550	1-136-756-11	FILM 0.24MF 5% 200V	
R718	1-249-413-11	CARBON 470 5% 1/4W		<CONNECTOR>			
R730	1-247-758-11	CARBON 3.3K 5% 1/2W		CN122	1-573-299-21	CONNECTOR, BOARD TO BOARD 10P	
R731	1-247-807-31	CARBON 100 5% 1/4W		CN123	1-573-299-21	CONNECTOR, BOARD TO BOARD 10P	
R732	1-215-924-71	METAL OXIDE 15K 5% 3W	F	DY-2	1-508-765-00	PIN, CONNECTOR (5MM PITCH) 3P	
R734	1-249-425-11	CARBON 4.7K 5% 1/4W		<DIODE>			
R736	1-249-411-11	CARBON 330 5% 1/4W		D1501	8-719-911-19	DIODE 1SS119	
R737	1-249-393-11	CARBON 10 5% 1/4W		D1502	8-719-801-35	THYRISTOR SHOR3D42	
R750	1-247-758-31	CARBON 3.3K 5% 1/2W		D1503	8-719-980-78	DIODE ERA83-006	
R751	1-247-807-31	CARBON 100 5% 1/4W		D1504	8-719-302-43	DIODE EL1Z	
R752	1-215-924-71	METAL OXIDE 15K 5% 3W	F	D1505	8-719-911-19	DIODE 1SS119	
R754	1-249-425-11	CARBON 4.7K 5% 1/4W		D1506	8-719-911-19	DIODE 1SS119	
R755	1-247-758-11	CARBON 3.3K 5% 1/2W	(KV-27V10/27V15/29V10C/29V10M)	D1507	8-719-911-19	DIODE 1SS119	
R756	1-249-411-11	CARBON 330 5% 1/4W	(KV-32V15)	D1508	8-719-110-17	DIODE RD10ESB2	
	1-249-413-11	CARBON 470 5% 1/4W	(KV-27V10/27V15/29V10C/29V10M)	D1509	8-719-110-17	DIODE RD10ESB2	
R757	1-249-393-11	CARBON 10 5% 1/4W		D1510	8-719-911-19	DIODE 1SS119	
R758	1-249-417-11	CARBON 1K 5% 1/4W	F	D1513	8-719-302-43	DIODE EL1Z	
R770	1-249-433-11	CARBON 22K 5% 1/4W	(KV-27V10/27V15/29V10C/29V10M)	D1515	8-719-911-19	DIODE 1SS119	
R771	1-249-409-11	CARBON 220 5% 1/4W	F	D1516	8-719-987-87	DIODE ERA85-009	
R772	1-249-409-11	CARBON 220 5% 1/4W	F	D1517	8-719-911-19	DIODE 1SS119	
R773	1-249-409-11	CARBON 220 5% 1/4W	F				

The components identified by shading and mark Δ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

KV-27V10/27V15
RM-Y117 RM-Y121/RM-CM101
KV-29V10C/29V10M/32V15
RM-Y117 RM-Y117 RM-Y121 RM-CM101

E (KV-32V15)

D

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
<IC>				R1578	1-249-423-11	CARBON 3.3K 5% 1/4W	
IC1501	8-752-052-88	IC CXA1526P		R1582	1-249-411-11	CARBON 330 5% 1/4W	
IC1502	8-759-701-59	IC NJM78M09FA		R1583	1-249-421-11	CARBON 2.2K 5% 1/4W	
IC1504	8-759-135-80	IC UPC358C		R1585	1-249-441-11	CARBON 100K 5% 1/4W	
<COIL>				R1586	1-247-891-00	CARBON 330K 5% 1/4W	
L1502	1-459-592-11	COIL (WITH CORE) (PMC)		*****			
L1504	1-459-474-11	COIL (WITH CORE)		*A-1346-192-A	D BOARD, COMPLETE (KV-27V10/29V10M)		
<TRANSISTOR>					*****		
Q1501	8-729-119-78	TRANSISTOR 2SC2785-HFE		*A-1346-199-A	D BOARD, COMPLETE (KV-29V10C)		
Q1502	8-729-140-96	TRANSISTOR 2SD774-34			*****		
Q1503	8-729-119-76	TRANSISTOR 2SA1175-HFE		*A-1346-200-A	D BOARD, COMPLETE (KV-27V15)		
Q1506	8-729-119-78	TRANSISTOR 2SC2785-HFE			*****		
Q1507	8-729-119-78	TRANSISTOR 2SC2785-HFE		*A-1346-201-A	D BOARD, COMPLETE (KV-32V15)		

Q1508	8-729-140-93	TRANSISTOR 2SB733-34		4-382-854-11	SCREW (M3X10), P, SW (+)		
Q1509	8-729-140-93	TRANSISTOR 2SB733-34		<CAPACITOR>			
Q1511	8-729-119-76	TRANSISTOR 2SA1175-HFE		C501	1-124-557-11	ELECT 1000MF 20% 25V	
Q1514	8-729-209-15	TRANSISTOR 2SD2012		C502	1-162-131-11	CERAMIC 220PF 10% 2KV	
Q1519	8-729-119-78	TRANSISTOR 2SC2785-HFE		C503	1-124-557-11	ELECT 1000MF 20% 25V	
Q1520	8-729-119-78	TRANSISTOR 2SC2785-HFE		C504	1-137-366-11	FILM 0.0022MF 5% 50V	
				C505	1-124-916-11	ELECT 22MF 20% 25V	
<RESISTOR>				C506	1-128-560-11	ELECT 22MF 20% 100V	
R1501	1-249-409-11	CARBON 220 5% 1/4W		C507	1-123-947-00	ELECT 10MF 20% 160V	
R1502	1-249-409-11	CARBON 220 5% 1/4W		C508	1-129-898-00	FILM 0.0022MF 5% 630V	
R1503	1-249-435-11	CARBON 33K 5% 1/4W			(KV-27V10/27V15/29V10C/29V10M)		
R1504	1-249-429-11	CARBON 10K 5% 1/4W		C509	1-124-916-11	ELECT 22MF 20% 25V	
R1505	1-249-421-11	CARBON 2.2K 5% 1/4W		C511	1-123-024-21	ELECT 33MF 10% 160V	
R1506	1-249-423-11	CARBON 3.3K 5% 1/4W		C512	1-102-212-00	CERAMIC 820PF 10% 500V	
R1507	1-249-410-11	CARBON 270 5% 1/4W		C513	1-102-212-00	CERAMIC 820PF 10% 500V	
R1508	1-249-437-11	CARBON 47K 5% 1/4W		C514	1-102-244-00	CERAMIC 220PF 10% 500V	
R1509	1-249-429-11	CARBON 10K 5% 1/4W		C515	1-137-416-11	FILM 0.01MF 10% 100V	
R1510	1-215-461-00	METAL 47K 1% 1/4W		C517	1-162-116-00	CERAMIC 680PF 10% 2KV	
R1511	1-216-379-11	METAL OXIDE 6.8 5% 2W F		C518	1-162-116-00	CERAMIC 680PF 10% 2KV	
R1513	1-249-423-11	CARBON 3.3K 5% 1/4W		C519 Δ	1-104-771-11	FILM 0.02MF 3% 2KV	
R1514	1-247-885-00	CARBON 180K 5% 1/4W		C520 Δ	1-162-134-91	CERAMIC 470PF 10% 2KV	
R1515	1-215-905-11	METAL OXIDE 10 5% 3W F		C521 Δ	1-136-316-51	FILM 0.056MF 5% 630V	
R1519	1-249-417-11	CARBON 1K 5% 1/4W		C522	1-106-383-00	MYLAR 0.047MF 99% 200V	
R1520	1-249-417-11	CARBON 1K 5% 1/4W		C523	1-102-002-00	CERAMIC 680PF 10% 500V	
R1522	1-249-417-11	CARBON 1K 5% 1/4W		C524	1-102-212-00	CERAMIC 820PF 10% 500V	
R1527	1-249-417-11	CARBON 1K 5% 1/4W F		C525	1-124-902-00	ELECT 0.47MF 20% 50V	
R1528	1-249-438-11	CARBON 56K 5% 1/4W		C526	1-106-395-00	MYLAR 0.15MF 10% 200V	
R1529	1-249-434-11	CARBON 27K 5% 1/4W		C527	1-124-341-00	ELECT 1MF 20% 200V	
R1530	1-249-432-11	CARBON 18K 5% 1/4W		C528	1-136-113-00	FILM 2MF 5% 200V	
R1533	1-249-427-11	CARBON 6.8K 5% 1/4W		C529	1-137-410-11	FILM 0.001MF 10% 100V	
R1534	1-249-424-11	CARBON 3.9K 5% 1/4W		C530	1-104-844-11	FILM 0.62MF 5% 200V	
R1535	1-249-425-11	CARBON 4.7K 5% 1/4W		C531	1-104-664-11	ELECT 47MF 20% 25V	
R1536	1-215-857-11	METAL OXIDE 10 5% 1W F		C532	1-136-165-00	FILM 0.1MF 5% 50V	
R1537	1-249-404-00	CARBON 82 5% 1/4W		C533	1-124-927-11	ELECT 4.7MF 20% 50V	
R1538	1-216-379-11	METAL OXIDE 6.8 5% 2W F		C534	1-136-161-00	FILM 0.047MF 5% 50V	
R1541	1-249-441-11	CARBON 100K 5% 1/4W		C535	1-126-969-11	ELECT 220MF 20% 50V	
R1543	1-249-414-11	CARBON 560 5% 1/4W		C536	1-137-398-11	FILM 0.068MF 10% 100V	
R1546	1-215-885-00	METAL OXIDE 68 5% 2W F		C537	1-126-964-11	ELECT 10MF 20% 50V	
R1552	1-249-426-11	CARBON 5.6K 5% 1/4W		C538	1-136-161-00	FILM 0.047MF 5% 50V	
R1554	1-249-393-11	CARBON 10 5% 1/4W		C540	1-137-366-11	FILM 0.0022MF 5% 50V	
R1556	1-249-438-11	CARBON 56K 5% 1/4W		C541	1-137-366-11	FILM 0.0022MF 5% 50V	
R1559	1-249-429-11	CARBON 10K 5% 1/4W		C542	1-130-481-00	FILM 0.0068MF 5% 50V	
R1564	1-249-435-11	CARBON 33K 5% 1/4W		C545	1-124-927-11	ELECT 4.7MF 20% 50V	
R1568	1-247-891-00	CARBON 330K 5% 1/4W		C547	1-164-079-11	CERAMIC 330PF 10% 50V	
R1569	1-249-413-11	CARBON 470 5% 1/4W		C548 Δ	1-162-116-91	CERAMIC 680PF 10% 2KV	
				C550	1-106-387-00	MYLAR 0.068MF 10% 200V	
				C553	1-164-079-11	CERAMIC 330PF 10% 50V	



ISSUE	REF. NO.	TRF. NO.	DESCRIPTION	ISSUE
1975	1975	1975	1975	1975
1976	1976	1976	1976	1976
1977	1977	1977	1977	1977
1978	1978	1978	1978	1978
1979	1979	1979	1979	1979
1980	1980	1980	1980	1980
1981	1981	1981	1981	1981
1982	1982	1982	1982	1982
1983	1983	1983	1983	1983
1984	1984	1984	1984	1984
1985	1985	1985	1985	1985
1986	1986	1986	1986	1986
1987	1987	1987	1987	1987
1988	1988	1988	1988	1988
1989	1989	1989	1989	1989
1990	1990	1990	1990	1990
1991	1991	1991	1991	1991
1992	1992	1992	1992	1992
1993	1993	1993	1993	1993
1994	1994	1994	1994	1994
1995	1995	1995	1995	1995
1996	1996	1996	1996	1996
1997	1997	1997	1997	1997
1998	1998	1998	1998	1998
1999	1999	1999	1999	1999
2000	2000	2000	2000	2000
2001	2001	2001	2001	2001
2002	2002	2002	2002	2002
2003	2003	2003	2003	2003
2004	2004	2004	2004	2004
2005	2005	2005	2005	2005
2006	2006	2006	2006	2006
2007	2007	2007	2007	2007
2008	2008	2008	2008	2008
2009	2009	2009	2009	2009
2010	2010	2010	2010	2010
2011	2011	2011	2011	2011
2012	2012	2012	2012	2012
2013	2013	2013	2013	2013
2014	2014	2014	2014	2014
2015	2015	2015	2015	2015
2016	2016	2016	2016	2016
2017	2017	2017	2017	2017
2018	2018	2018	2018	2018
2019	2019	2019	2019	2019
2020	2020	2020	2020	2020
2021	2021	2021	2021	2021
2022	2022	2022	2022	2022
2023	2023	2023	2023	2023
2024	2024	2024	2024	2024
2025	2025	2025	2025	2025
2026	2026	2026	2026	2026
2027	2027	2027	2027	2027
2028	2028	2028	2028	2028
2029	2029	2029	2029	2029
2030	2030	2030	2030	2030
2031	2031	2031	2031	2031
2032	2032	2032	2032	2032
2033	2033	2033	2033	2033
2034	2034	2034	2034	2034
2035	2035	2035	2035	2035
2036	2036	2036	2036	2036
2037	2037	2037	2037	2037
2038	2038	2038	2038	2038
2039	2039	2039	2039	2039
2040	2040	2040	2040	2040
2041	2041	2041	2041	2041
2042	2042	2042	2042	2042
2043	2043	2043	2043	2043
2044	2044	2044	2044	2044
2045	2045	2045	2045	2045
2046	2046	2046	2046	2046
2047	2047	2047	2047	2047
2048	2048	2048	2048	2048
2049	2049	2049	2049	2049
2050	2050	2050	2050	2050
2051	2051	2051	2051	2051
2052	2052	2052	2052	2052
2053	2053	2053	2053	2053
205				

4-200-102-1	1 MOUNT, COMPLETE	22-275-000-0000
4-200-103-1	1 MOUNT, COMPLETE	22-280-000
4-200-104-1	1 MOUNT, COMPLETE	22-281-000
4-200-105-1	1 MOUNT, COMPLETE	22-282-000
4-200-106-1	1 MOUNT, COMPLETE	22-283-000

[illegible][illegible]

D

Les composants identifiés par
une trame et une marque Δ
sont critiques pour la sécurité.
Ne les remplacer que par une
pièce portant le numéro spécifié.

The components identified by
shading and mark Δ are critical
for safety.
Replace only with part number
specified.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
C561	1-162-815-11	CERAMIC	47PF 5% 500V	C2215	1-136-169-00	FILM	0.22MF 5% 50V
C595	1-123-932-00	ELECT	4.7MF 20% 160V	C2216	1-126-941-11	ELECT	470MF 20% 25V
C598	1-124-342-00	ELECT	3.3MF 20% 160V	C2217	1-136-169-00	FILM	0.22MF 5% 50V
C600	1-126-964-11	ELECT	10MF 20% 50V	C2218	1-124-557-11	ELECT	1000MF 20% 25V
C601	Δ 1-136-311-51	FILM	0.47MF 20% 125V (KV-27V10/27V15/29V10M/32V15)	C2219	1-124-557-11	ELECT	1000MF 20% 25V
	Δ 1-136-511-61	FILM	0.47MF 20% 300V (KV-29V10C)	C2220	1-124-925-11	ELECT	2.2MF 20% 50V
C602	Δ 1-136-311-51	FILM	0.47MF 20% 125V (KV-27V10/27V15/29V10M/32V15)	<CONNECTOR>			
C603	Δ 1-136-311-51	FILM	0.47MF 20% 125V (KV-27V10/27V15/29V10M/32V15)	CN104	1-573-979-21	CONNECTOR, BOARD TO BOARD 11P	
C604	Δ 1-162-578-81	CERAMIC	0.0047MF 20% 400V	CN107	*1-580-798-11	CONNECTOR PIN (DEFLECTION YOKE) 6P	
C607	1-125-489-00	ELECT	560MF 20% 250V (KV-29V10C)	CN108	1-573-296-21	CONNECTOR, BOARD TO BOARD 10P (KV-32V15)	
	1-125-495-11	ELECT	470MF 20% 200V (KV-27V10/27V15/29V10M/32V15)	CN109	1-573-296-21	CONNECTOR, BOARD TO BOARD 10P (KV-32V15)	
C608	1-125-489-00	ELECT	560MF 20% 250V (KV-29V10C)	CN113	*1-508-765-00	PIN, CONNECTOR (5MM PITCH) 3P	
	1-125-495-11	ELECT	470MF 20% 200V (KV-27V10/27V15/29V10M/32V15)	CN114	*1-580-843-11	PIN, CONNECTOR (POWER)	
C609	1-136-169-00	FILM	0.22MF 5% 50V	CN115	1-573-298-21	CONNECTOR, BOARD TO BOARD 20P	
C610	1-136-169-00	FILM	0.22MF 5% 50V	CN116	*1-691-915-11	CONNECTOR, BOARD TO BOARD 15P	
C611	1-136-169-00	FILM	0.22MF 5% 50V	CN117	1-573-978-21	CONNECTOR, BOARD TO BOARD 11P	
C612	1-136-169-00	FILM	0.22MF 5% 50V	<DIODE>			
C613	1-164-625-11	CERAMIC	680PF 10% 500V	D501	8-719-028-71	DIODE ES1F-LF-G2	
C614	1-164-625-11	CERAMIC	680PF 10% 500V	D502	8-719-979-85	DIODE EGP20G	
C616	1-126-964-11	ELECT	10MF 20% 50V	D503	8-719-979-85	DIODE EGP20G	
C617	1-126-953-11	ELECT	2200MF 20% 35V	D504	Δ 8-719-302-44	DIODE EL1Z-V1	
C618	1-124-557-11	ELECT	1000MF 20% 25V	D505	8-719-302-43	DIODE EL1Z	
C619	1-126-952-11	ELECT	1000MF 20% 16V	D506	8-719-945-80	DIODE ERC06-15S	
C620	1-164-644-11	CERAMIC	330PF 10% 500V	D507	8-719-945-80	DIODE ERC06-15S	
C621	1-126-356-11	ELECT	220MF 20% 160V	D508	8-719-900-26	DIODE ERD29-08J	
C623	1-162-117-00	CERAMIC	100PF 10% 500V	D509	8-719-302-43	DIODE EL1Z	
C624	1-136-155-00	FILM	0.015MF 5% 50V	D510	8-719-936-82	DIODE GP08DPKG3	
C625	1-129-719-00	FILM	0.027MF 10% 400V	D511	8-719-936-82	DIODE GP08DPKG3	
C626	1-104-665-11	ELECT	100MF 20% 25V	D512	8-719-109-84	DIODE RD5.1ESB1	
C628	1-161-740-00	CERAMIC	470PF 10% 400V (KV-29V10C)	D513	8-719-936-82	DIODE GP08DPKG3	
C629	1-108-700-11	MYLAR	470PF 10% 400V (KV-29V10C)	D514	8-719-911-19	DIODE 1SS119	
C630	1-136-165-00	FILM	0.1MF 5% 50V (KV-29V10C)	D515	8-719-911-19	DIODE 1SS119	
C632	1-126-406-11	ELECT	2.2MF 20% 400V (KV-29V10C)	D601	8-719-911-19	DIODE 1SS119	
C633	1-126-933-11	ELECT	100MF 20% 16V (KV-29V10C)	D602	Δ 8-719-510-63	DIODE D4SB60L-F	
C634	1-165-127-11	CERAMIC	470PF 10% 500V	D603	8-719-500-69	DIODE S3V10SS	
C635	1-124-126-00	ELECT	47MF 20% 16V	D605	8-719-500-69	DIODE S3V10SS	
C636	1-137-374-11	FILM	0.047MF 5% 50V	D607	8-719-510-02	DIODE D1NS4	
C637	1-124-916-11	ELECT	22MF 20% 25V	D608	8-719-510-02	DIODE D1NS4	
C639	1-161-740-00	CERAMIC	470PF 10% 400V (KV-27V10/27V15/29V10M/32V15)	D609	8-719-510-02	DIODE D1NS4	
C641	1-126-933-11	ELECT	100MF 20% 10V	D610	8-719-510-02	DIODE D1NS4	
C642	1-137-217-11	FILM	0.01MF 5% 0	D611	8-719-510-02	DIODE D1NS4	
C643	1-137-218-11	FILM	0.012MF 5% 0	D612	8-719-031-79	DIODE D5SC4M	
C645	1-102-125-00	CERAMIC	0.0047MF 10% 50V	D613	8-719-022-97	DIODE D2S4MF	
C646	1-126-933-11	ELECT	100MF 20% 16V	D614	8-719-110-33	DIODE RD12ESB3	
C647	1-124-916-11	ELECT	22MF 20% 25V	D615	8-719-027-43	DIODE S2L20UF	
C684	1-124-667-11	ELECT	10MF 20% 50V	D616	8-719-027-43	DIODE S2L20UF	
C695	1-126-964-11	ELECT	10MF 20% 50V	D617	8-719-027-43	DIODE S2L20UF	
C2205	1-124-925-11	ELECT	2.2MF 20% 50V	D618	8-719-027-43	DIODE S2L20UF	
C2208	1-124-925-11	ELECT	2.2MF 20% 50V	D619	8-719-510-02	DIODE D1NS4	
C2210	1-104-666-11	ELECT	220MF 20% 25V	D621	8-719-028-72	DIODE RGP02-17EL-6433 (KV-29V10C)	
C2211	1-104-664-11	ELECT	47MF 20% 25V	D622	8-719-911-19	DIODE 1SS119	
				D623	8-719-911-19	DIODE 1SS119	
				D624	8-719-911-19	DIODE 1SS119	
				D626	8-719-510-48	DIODE D1N20R	
				D627	8-719-510-48	DIODE D1N20R	
				D628	8-719-911-19	DIODE 1SS119	
				D633	8-719-110-09	DIODE RD8.2ESB3	
				D634	8-719-911-19	DIODE 1SS119	
				D635	8-719-911-19	DIODE 1SS119	
				D636	8-719-510-48	DIODE D1N20R	
				D637	8-719-911-19	DIODE 1SS119	
C2212	1-104-666-11	ELECT	220MF 20% 25V				
C2213	1-136-173-00	FILM	0.47MF 5% 50V				

For more information, contact the American Society of Human Resources, 1001 17th Street, N.W., Washington, D.C. 20036, 202-887-6299.

The company's revenue is expected to grow by 10% in 2014, and it is expected to be profitable by the end of the year.

REF ID	PAGE NO.	RECEIPT NO.	DATE	AMOUNT	DESCRIPTION	REMARKS
1001	1	1001	10/10/2020	100.00	RECEIVED FROM	
1002	2	1002	10/10/2020	200.00	RECEIVED FROM	
1003	3	1003	10/10/2020	300.00	RECEIVED FROM	
1004	4	1004	10/10/2020	400.00	RECEIVED FROM	
1005	5	1005	10/10/2020	500.00	RECEIVED FROM	
1006	6	1006	10/10/2020	600.00	RECEIVED FROM	
1007	7	1007	10/10/2020	700.00	RECEIVED FROM	
1008	8	1008	10/10/2020	800.00	RECEIVED FROM	
1009	9	1009	10/10/2020	900.00	RECEIVED FROM	
1010	10	1010	10/10/2020	1000.00	RECEIVED FROM	
1011	11	1011	10/10/2020	1100.00	RECEIVED FROM	
1012	12	1012	10/10/2020	1200.00	RECEIVED FROM	
1013	13	1013	10/10/2020	1300.00	RECEIVED FROM	
1014	14	1014	10/10/2020	1400.00	RECEIVED FROM	
1015	15	1015	10/10/2020	1500.00	RECEIVED FROM	
1016	16	1016	10/10/2020	1600.00	RECEIVED FROM	
1017	17	1017	10/10/2020	1700.00	RECEIVED FROM	
1018	18	1018	10/10/2020	1800.00	RECEIVED FROM	
1019	19	1019	10/10/2020	1900.00	RECEIVED FROM	
1020	20	1020	10/10/2020	2000.00	RECEIVED FROM	
1021	21	1021	10/10/2020	2100.00	RECEIVED FROM	
1022	22	1022	10/10/2020	2200.00	RECEIVED FROM	
1023	23	1023	10/10/2020	2300.00	RECEIVED FROM	
1024	24	1024	10/10/2020	2400.00	RECEIVED FROM	
1025	25	1025	10/10/2020	2500.00	RECEIVED FROM	
1026	26	1026	10/10/2020	2600.00	RECEIVED FROM	
1027	27	1027	10/10/2020	2700.00	RECEIVED FROM	
1028	28	1028	10/10/2020	2800.00	RECEIVED FROM	
1029	29	1029	10/10/2020	2900.00	RECEIVED FROM	
1030	30	1030	10/10/2020	3000.00	RECEIVED FROM	
1031	31	1031	10/10/2020	3100.00	RECEIVED FROM	
1032	32	1032	10/10/2020	3200.00	RECEIVED FROM	
1033	33	1033	10/10/2020	3300.00	RECEIVED FROM	
1034	34	1034	10/10/2020	3400.00	RECEIVED FROM	
1035	35	1035	10/10/2020	3500.00	RECEIVED FROM	
1036	36	1036	10/10/2020	3600.00	RECEIVED FROM	
1037	37	1037	10/10/2020	3700.00	RECEIVED FROM	
1038	38	1038	10/10/2020	3800.00	RECEIVED FROM	
1039	39	1039	10/10/2020	3900.00	RECEIVED FROM	
1040	40	1040	10/10/2020	4000.00	RECEIVED FROM	
1041	41	1041	10/10/2020	4100.00	RECEIVED FROM	
1042	42	1042	10/10/2020	4200.00	RECEIVED FROM	
1043	43	1043	10/10/2020	4300.00	RECEIVED FROM	
1044	44	1044	10/10/2020	4400.00	RECEIVED FROM	
1045	45	1045	10/10/2020	4500.00	RECEIVED FROM	
1046	46	1046	10/10/2020	4600.00	RECEIVED FROM	
1047	47	1047	10/10/2020	4700.00	RECEIVED FROM	
1048	48	1048	10/10/2020	4800.00	RECEIVED FROM	
1049	49	1049	10/10/2020	4900.00	RECEIVED FROM	
1050	50	1050	10/10/2020	5000.00	RECEIVED FROM	

The components identified by shading and mark Δ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

KV-27V10/27V15
RM-Y117 RM-Y121/RM-CM101
KV-29V10C/29V10M/32V15
RM-Y117 RM-Y117 RM-Y121 RM-CM101

D

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
D638	8-719-911-19	DIODE 1SS119		Q604	8-729-119-78	TRANSISTOR 2SC2785-HFE	
		<FUSE>		Q605	8-729-119-78	TRANSISTOR 2SC2785-HFE	
F601	Δ 1-572-506-51	FUSE 6.3A/250V (KV-29V10C)		Q611	8-729-119-78	TRANSISTOR 2SC2785-HFE	
	Δ 1-576-193-11	FUSE 6.3A/125V (KV-27V10/27V15/29V10M/32V15)		Q613	8-729-924-90	TRANSISTOR 2SB1370-EF	
	1-533-223-11	CLIP, FUSE; F601		Q614	8-729-119-78	TRANSISTOR 2SC2785-HFE	
		<FERRITE BEAD>		Q2202	8-729-119-78	TRANSISTOR 2SC2785-HFE	
FB501	1-412-911-11	INDUCTOR, FERRITE BEAD		Q2203	8-729-119-76	TRANSISTOR 2SA1175-HFE	
FB502	1-412-911-11	INDUCTOR, FERRITE BEAD				<RESISTOR>	
FB601	1-412-911-11	INDUCTOR, FERRITE BEAD		JR624	1-216-359-00	METAL OXIDE 6.8 5% 1W F (KV-29V10C)	
FB602	1-412-911-11	INDUCTOR, FERRITE BEAD		R501	1-249-444-11	CARBON 0.56 5% 1/4W F	
FB603	1-412-911-11	INDUCTOR, FERRITE BEAD		R503	1-215-862-11	METAL OXIDE 68 5% 1W F	
FB604	1-412-911-11	INDUCTOR, FERRITE BEAD		R504	1-215-872-11	METAL OXIDE 3.3K 5% 1W F	
FB605	1-412-911-11	INDUCTOR, FERRITE BEAD		R505	1-249-443-11	CARBON 0.47 5% 1/4W F	
FB606	1-412-911-11	INDUCTOR, FERRITE BEAD		R506	1-215-886-11	METAL OXIDE 100 5% 2W F	
FB613	1-412-911-11	INDUCTOR, FERRITE BEAD		R507	1-249-429-11	CARBON 10K 5% 1/4W	
FB614	1-412-911-11	INDUCTOR, FERRITE BEAD		R508	1-249-425-11	CARBON 4.7K 5% 1/4W	
		<IC>		R509	1-249-389-11	CARBON 4.7 5% 1/4W F	
IC501	8-759-980-58	IC TDA8172		R511	Δ 1-249-389-11	CARBON 4.7 5% 1/4W F	
IC504	8-759-103-93	IC UPC393C		R512	1-249-389-11	CARBON 4.7 5% 1/4W F	
IC601	Δ 1-810-051-11	POWER MODULE DM-48		R513	1-216-385-11	METAL OXIDE 0.47 5% 3W F	
IC603	8-749-923-94	IC STR81159A (KV-29V10C)		R514	1-249-429-11	CARBON 10K 5% 1/4W	
IC604	8-759-924-12	IC LM7805CT		R515	1-216-363-00	METAL OXIDE 0.33 5% 2W F	
IC605	8-759-701-79	IC NJM7812FA		R516	1-249-401-11	CARBON 47 5% 1/4W	
IC606	8-759-701-59	IC NJM78M09FA		R517	1-215-916-00	METAL OXIDE 680 5% 3W F	
IC610	8-759-708-05	IC NJM78L05A		R518	1-215-916-00	METAL OXIDE 680 5% 3W F	
IC2200	8-759-980-43	IC TDA2009A		R519	1-249-426-11	CARBON 5.6K 5% 1/4W F	
		<COIL>		R520	1-249-423-11	CARBON 3.3K 5% 1/4W	
L502	1-421-465-00	COIL, FERRITE CHOKE 68UH		R521	1-249-411-11	CARBON 330 5% 1/4W	
L503	1-412-524-11	INDUCTOR 8.2UH		R522	1-215-886-11	METAL OXIDE 100 5% 2W F	
L504	1-410-669-31	INDUCTOR 33UH		R523	1-215-862-11	METAL OXIDE 68 5% 1W F	
L505	1-459-104-00	COIL, WITH CORE		R524	Δ 1-215-884-11	CARBON 47 5% 2W F (KV-27V10/27V15/29V10C/29V10M)	
L506	1-422-613-11	COIL, AIR CORE		R525	1-215-884-11	METAL OXIDE 47 5% 2W F	
L508	1-412-553-11	INDUCTOR 3.3MMH		R526	1-247-887-00	CARBON 220K 5% 1/4W	
L509	Δ 1-460-173-21	COIL, HORIZONTAL LINEARITY		R527	1-215-861-00	METAL OXIDE 47 5% 1W F	
L510	1-406-607-11	COIL, CHOKE 15MMH		R528	1-247-750-11	CARBON 680 5% 1/2W F	
L513	1-412-524-11	INDUCTOR 8.2UH		R530	1-215-445-00	METAL 10K 1% 1/4W	
		<MODULE>		R531	1-247-903-00	CARBON 1M 5% 1/4W	
PM501	Δ 1-810-061-11	PROTECTOR MODULE PM-38 (KV-27V10/27V15/29V10C/29V10M)		R532	1-215-446-00	METAL 11K 1% 1/4W	
PM501	Δ 1-810-061-21	PROTECTOR MODULE PM-39 (KV-32V15)		R534	1-249-385-11	CARBON 2.2 5% 1/4W F	
		<IC LINK>		R535	1-216-453-00	METAL OXIDE 270 5% 2W F	
PS2201	Δ 1-532-675-91	LINK, IC 1.5A		R536	1-249-389-11	CARBON 4.7 5% 1/4W F (KV-32V15)	
		<TRANSISTOR>		R539	1-215-459-00	METAL 39K 1% 1/4W	
Q502	8-729-119-80	TRANSISTOR 2SC2688-LK		R543	1-249-419-11	CARBON 1.5K 5% 1/4W	
Q503	8-729-809-29	TRANSISTOR 2SC4159-E		R546	1-249-431-11	CARBON 15K 5% 1/4W	
Q505	8-729-119-78	TRANSISTOR 2SC2785-HFE		R547	1-247-883-00	CARBON 150K 5% 1/4W	
Q591	8-729-016-32	TRANSISTOR 2SC4927-01		R550	1-215-875-11	METAL OXIDE 10K 5% 1W F	
Q601	8-729-019-51	TRANSISTOR 2SC4834MNP		R551	1-215-875-11	METAL OXIDE 10K 5% 1W F	
Q602	8-729-019-51	TRANSISTOR 2SC4834MNP		R554	1-216-371-00	METAL OXIDE 1.5 5% 2W F	
Q603	8-729-119-76	TRANSISTOR 2SA1175-HFE		R556	1-249-411-11	CARBON 330 5% 1/4W	
				R557	1-249-415-11	CARBON 680 5% 1/4W F	
				R561	1-249-429-11	CARBON 10K 5% 1/4W	
				R562	1-215-437-00	METAL 4.7K 1% 1/4W	
				R563	1-249-429-11	CARBON 10K 5% 1/4W	
				R564	1-249-433-11	CARBON 22K 5% 1/4W	
				R566	1-249-435-11	CARBON 33K 5% 1/4W	
				R580	1-249-411-11	CARBON 330 5% 1/4W	
				R601	Δ 1-202-888-91	SOLID 2.2M 20% 1/2W	
				R602	Δ 1-202-888-91	SOLID 2.2M 20% 1/2W (KV-27V10/27V15/29V10M/32V15)	
				Δ 1-247-289-11	CARBON 8.2M 5% 1W (KV-29V10C)		

• The components identified by Δ in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.

...and the fact that the...
...and the fact that the...
...and the fact that the...
...and the fact that the...

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----

NON-SMOKING INDUSTRY
NON-SMOKING INDUSTRY

Figure 1

11

[illegible][illegible]

100

1970	1-10-1970	1-10-1970	1-10-1970
1971	1-10-1971	1-10-1971	1-10-1971
1972	1-10-1972	1-10-1972	1-10-1972
1973	1-10-1973	1-10-1973	1-10-1973
1974	1-10-1974	1-10-1974	1-10-1974
1975	1-10-1975	1-10-1975	1-10-1975
1976	1-10-1976	1-10-1976	1-10-1976
1977	1-10-1977	1-10-1977	1-10-1977
1978	1-10-1978	1-10-1978	1-10-1978
1979	1-10-1979	1-10-1979	1-10-1979
1980	1-10-1980	1-10-1980	1-10-1980
1981	1-10-1981	1-10-1981	1-10-1981
1982	1-10-1982	1-10-1982	1-10-1982
1983	1-10-1983	1-10-1983	1-10-1983
1984	1-10-1984	1-10-1984	1-10-1984
1985	1-10-1985	1-10-1985	1-10-1985
1986	1-10-1986	1-10-1986	1-10-1986
1987	1-10-1987	1-10-1987	1-10-1987
1988	1-10-1988	1-10-1988	1-10-1988
1989	1-10-1989	1-10-1989	1-10-1989
1990	1-10-1990	1-10-1990	1-10-1990
1991	1-10-1991	1-10-1991	1-10-1991
1992	1-10-1992	1-10-1992	1-10-1992
1993	1-10-1993	1-10-1993	1-10-1993
1994	1-10-1994	1-10-1994	1-10-1994
1995	1-10-1995	1-10-1995	1-10-1995
1996	1-10-1996	1-10-1996	1-10-1996
1997	1-10-1997	1-10-1997	1-10-1997
1998	1-10-1998	1-10-1998	1-10-1998
1999	1-10-1999	1-10-1999	1-10-1999
2000	1-10-2000	1-10-2000	1-10-2000
2001	1-10-2001	1-10-2001	1-10-2001
2002	1-10-2002	1-10-2002	1-10-2002
2003	1-10-2003	1-10-2003	1-10-2003
2004	1-10-2004	1-10-2004	1-10-2004
2005	1-10-2005	1-10-2005	1-10-2005
2006	1-10-2006	1-10-2006	1-10-2006
2007	1-10-2007	1-10-2007	1-10-2007
2008	1-10-2008	1-10-2008	1-10-2008
2009	1-10-2009	1-10-2009	1-10-2009
2010	1-10-2010	1-10-2010	1-10-2010
2011	1-10-2011	1-10-2011	1-10-2011
2012	1-10-2012	1-10-2012	1-10-2012
2013	1-10-2013	1-10-2013	1-10-2013
2014	1-10-2014	1-10-2014	1-10-2014
2015	1-10-2015	1-10-2015	1-10-2015
2016	1-10-2016	1-10-2016	1-10-2016
2017	1-10-2017	1-10-2017	1-10-2017
2018	1-10-2018	1-10-2018	1-10-2018
2019	1-10-2019	1-10-2019	1-10-2019
2020	1-10-2020	1-10-2020	1-10-2020
2021	1-10-2021	1-10-2021	1-10-2021
2022	1-10-2022	1-10-2022	1-10-2022
2023	1-10-2023	1-10-2023	1-10-2023
2024	1-10-2024	1-10-2024	1-10-2024
2025	1-10-2025	1-10-2025	1-10-2025
2026	1-10-2026	1-10-2026	1-10-2026
2027	1-10-2027	1-10-2027	1-10-2027
2028	1-10-2028	1-10-2028	1-10-2028
2029	1-10-2029	1-10-2029	1-10-2029
2030	1-10-2030	1-10-2030	1-10-2030
2031	1-10-2031	1-10-2031	1-10-2031
2032	1-10-2032	1-10-2032	1-10-2032
2033	1-10-2033	1-10-2033	1-10-2033
2034	1-10-2034	1-10-2034	1-10-2034
2035	1-10-2035	1-10-2035	1-10-2035

100

1-800-455-6666
 1-800-455-6666
 1-800-455-6666
 1-800-455-6666
 1-800-455-6666

11

1000

1999

^a The components identified in [29] in the natural state have previously been adopted for use as a reference safety regulations regarding international flights conducted by military, require only after the above conditions occur.

Figure 1

1990	1991	1992	1993	1994	1995	1996	1997	1998	1999	2000	2001	2002	2003	2004	2005	2006	2007	2008	2009	2010	2011	2012	2013	2014	2015	2016	2017	2018	2019	2020	2021	2022	2023	2024	2025	2026	2027	2028	2029	2030	2031	2032	2033	2034	2035	2036	2037	2038	2039	2040	2041	2042	2043	2044	2045	2046	2047	2048	2049	2050	2051	2052	2053	2054	2055	2056	2057	2058	2059	2060	2061	2062	2063	2064	2065	2066	2067	2068	2069	2070	2071	2072	2073	2074	2075	2076	2077	2078	2079	2080	2081	2082	2083	2084	2085	2086	2087	2088	2089	2090	2091	2092	2093	2094	2095	2096	2097	2098	2099	2100	2101	2102	2103	2104	2105	2106	2107	2108	2109	2110	2111	2112	2113	2114	2115	2116	2117	2118	2119	2120	2121	2122	2123	2124	2125	2126	2127	2128	2129	2130	2131	2132	2133	2134	2135	2136	2137	2138	2139	2140	2141	2142	2143	2144	2145	2146	2147	2148	2149	2150	2151	2152	2153	2154	2155	2156	2157	2158	2159	2160	2161	2162	2163	2164	2165	2166	2167	2168	2169	2170	2171	2172	2173	2174	2175	2176	2177	2178	2179	2180	2181	2182	2183	2184	2185	2186	2187	2188	2189	2190	2191	2192	2193	2194	2195	2196	2197	2198	2199	2200	2201	2202	2203	2204	2205	2206	2207	2208	2209	2210	2211	2212	2213	2214	2215	2216	2217	2218	2219	2220	2221	2222	2223	2224	2225	2226	2227	2228	2229	2230	2231	2232	2233	2234	2235	2236	2237	2238	2239	2240	2241	2242	2243	2244	2245	2246	2247	2248	2249	2250	2251	2252	2253	2254	2255	2256	2257	2258	2259	2260	2261	2262	2263	2264	2265	2266	2267	2268	2269	2270	2271	2272	2273	2274	2275	2276	2277	2278	2279	2280	2281	2282	2283	2284	2285	2286	2287	2288	2289	2290	2291	2292	2293	2294	2295	2296	2297	2298	2299	2300	2301	2302	2303	2304	2305	2306	2307	2308	2309	2310	2311	2312	2313	2314	2315	2316	2317	2318	2319	2320	2321	2322	2323	2324	2325	2326	2327	2328	2329	2330	2331	2332	2333	2334	2335	2336	2337	2338	2339	2340	2341	2342	2343	2344	2345	2346	2347	2348	2349	2350	2351	2352	2353	2354	2355	2356	2357	2358	2359	2360	2361	2362	2363	2364	2365	2366	2367	2368	2369	2370	2371	2372	2373	2374	2375	2376	2377	2378	2379	2380	2381	2382	2383	2384	2385	2386	2387	2388	2389	2390	2391	2392	2393	2394	2395	2396	2397	2398</
------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	--------

Table 1

[illegible]

Year	1990	1991	1992	1993	1994	1995	1996	1997	1998	1999	2000	2001	2002	2003	2004	2005	2006	2007	2008	2009	2010	2011	2012	2013	2014	2015	2016	2017	2018	2019	2020	2021	2022	2023	2024	2025	2026	2027	2028	2029	2030	2031	2032	2033	2034	2035	2036	2037	2038	2039	2040	2041	2042	2043	2044	2045	2046	2047	2048	2049	2050	2051	2052	2053	2054	2055	2056	2057	2058	2059	2060	2061	2062	2063	2064	2065	2066	2067	2068	2069	2070	2071	2072	2073	2074	2075	2076	2077	2078	2079	2080	2081	2082	2083	2084	2085	2086	2087	2088	2089	2090	2091	2092	2093	2094	2095	2096	2097	2098	2099
1990	1991	1992	1993	1994	1995	1996	1997	1998	1999	2000	2001	2002	2003	2004	2005	2006	2007	2008	2009	2010	2011	2012	2013	2014	2015	2016	2017	2018	2019	2020	2021	2022	2023	2024	2025	2026	2027	2028	2029	2030	2031	2032	2033	2034	2035	2036	2037	2038	2039	2040	2041	2042	2043	2044	2045	2046	2047	2048	2049	2050	2051	2052	2053	2054	2055	2056	2057	2058	2059	2060	2061	2062	2063	2064	2065	2066	2067	2068	2069	2070	2071	2072	2073	2074	2075	2076	2077	2078	2079	2080	2081	2082	2083	2084	2085	2086	2087	2088	2089	2090	2091	2092	2093	2094	2095	2096	2097	2098	2099	

	1980	1981	1982	1983	1984	1985	1986	1987	1988	1989	1990	1991	1992	1993	1994	1995	1996	1997	1998	1999	2000	2001	2002	2003	2004	2005	2006	2007	2008	2009	2010	2011	2012	2013	2014	2015	2016	2017	2018	2019	2020	2021	2022	2023	2024	2025	2026	2027	2028	2029	2030	2031	2032	2033	2034	2035	2036	2037	2038	2039	2040	2041	2042	2043	2044	2045	2046	2047	2048	2049	2050	2051	2052	2053	2054	2055	2056	2057	2058	2059	2060	2061	2062	2063	2064	2065	2066	2067	2068	2069	2070	2071	2072	2073	2074	2075	2076	2077	2078	2079	2080	2081	2082	2083	2084	2085	2086	2087	2088	2089	2090	2091	2092	2093	2094	2095	2096	2097	2098	2099	2100	2101	2102	2103	2104	2105	2106	2107	2108	2109	2110	2111	2112	2113	2114	2115	2116	2117	2118	2119	2120	2121	2122	2123	2124	2125	2126	2127	2128	2129	2130	2131	2132	2133	2134	2135	2136	2137	2138	2139	2140	2141	2142	2143	2144	2145	2146	2147	2148	2149	2150	2151	2152	2153	2154	2155	2156	2157	2158	2159	2160	2161	2162	2163	2164	2165	2166	2167	2168	2169	2170	2171	2172	2173	2174	2175	2176	2177	2178	2179	2180	2181	2182	2183	2184	2185	2186	2187	2188	2189	2190	2191	2192	2193	2194	2195	2196	2197	2198	2199	2200	2201	2202	2203	2204	2205	2206	2207	2208	2209	2210	2211	2212	2213	2214	2215	2216	2217	2218	2219	2220	2221	2222	2223	2224	2225	2226	2227	2228	2229	2230	2231	2232	2233	2234	2235	2236	2237	2238	2239	2240	2241	2242	2243	2244	2245	2246	2247	2248	2249	2250	2251	2252	2253	2254	2255	2256	2257	2258	2259	2260	2261	2262	2263	2264	2265	2266	2267	2268	2269	2270	2271	2272	2273	2274	2275	2276	2277	2278	2279	2280	2281	2282	2283	2284	2285	2286	2287	2288	2289	2290	2291	2292	2293	2294	2295	2296	2297	2298	2299	2300	2301	2302	2303	2304	2305	2306	2307	2308	2309	2310	2311	2312	2313	2314	2315	2316	2317	2318	2319	2320	2321	2322	2323	2324	2325	2326	2327	2328	2329	2330	2331	2332	2333	2334	2335	2336	2337	2338	2339	2340	2341	2342	2343	2344	2345	2346	2347	2348	2349	2350	2351	2352	2353	2354	2355	2356	2357	2358	2359	2360	2361	2362	2363	2364	2365	2366	2367	2368	2369	2370	2371	2372	2373	2374	2375	2376	2377	2378	2379	2380	2381	2382	2383	2384	2385	2386	2387	2388	2389	2390	2391	2392	2393	2394	2395	2396	2397	2398	2399	2400	2401	2402	2403	2404	2405	2406	2407	2408	2409	2410	2411	2412	2413	2414	2415	2416	2417	2418	2419	2420	2421	2422	2423	2424	2425	2426	2427	2428	2429	2430	2431	2432	2
--	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	---

[illegible]

D

Les composants identifiés par
une trame et une marque Δ
sont critiques pour la sécurité.
Ne les remplacer que par une
pièce portant le numéro spécifique.

The components identified by
shading and mark Δ are critical
for safety.
Replace only with part number
specified.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
R603	1-249-419-11	CARBON	1.5K 5% 1/4W	R691	1-249-423-11	CARBON	3.3K 5% 1/4W
R605	1-247-893-11	CARBON	390K 5% 1/4W	R692	1-216-341-11	METAL OXIDE	0.22 5% 1W F
R606	1-247-893-11	CARBON	390K 5% 1/4W	R693	1-216-389-11	METAL OXIDE	1 5% 3W F
R607 Δ	1-202-933-61	FUSIBLE	0.1 10% 1/2W F	R699	1-216-492-11	METAL OXIDE	82K 5% 3W F
R608	1-215-860-11	METAL OXIDE	33 5% 1W F	R2209	1-249-427-11	CARBON	6.8K 5% 1/4W
R609	1-216-369-00	METAL OXIDE	1 5% 2W F	R2210	1-249-435-11	CARBON	33K 5% 1/4W
R610	1-216-369-00	METAL OXIDE	1 5% 2W F	R2211	1-249-427-11	CARBON	6.8K 5% 1/4W
R611	1-216-492-11	METAL OXIDE	82K 5% 3W F	R2212	1-249-435-11	CARBON	33K 5% 1/4W
R613	1-215-883-11	METAL OXIDE	33 5% 2W F	R2215	1-249-425-11	CARBON	4.7K 5% 1/4W
R614	1-215-883-11	METAL OXIDE	33 5% 2W F	R2216	1-249-437-11	CARBON	47K 5% 1/4W
R615	1-249-421-11	CARBON	2.2K 5% 1/4W	R2217	1-249-435-11	CARBON	33K 5% 1/4W
R616	1-249-417-11	CARBON	1K 5% 1/4W	R2218	1-249-441-11	CARBON	100K 5% 1/4W
R617	1-249-377-11	CARBON	0.47 5% 1/4W F	R2219	1-249-413-11	CARBON	470 5% 1/4W
R618	1-249-377-11	CARBON	0.47 5% 1/4W F	R2220	1-249-430-11	CARBON	12K 5% 1/4W
R619	1-249-377-11	CARBON	0.47 5% 1/4W F	R2221	1-249-430-11	CARBON	12K 5% 1/4W
R621	1-249-377-11	CARBON	0.47 5% 1/4W F	R2222	1-249-398-11	CARBON	27 5% 1/4W
R622	1-249-377-11	CARBON	0.47 5% 1/4W F	R2223	1-249-418-11	CARBON	1.2K 5% 1/4W
R623	1-249-377-11	CARBON	0.47 5% 1/4W F	R2224	1-249-418-11	CARBON	1.2K 5% 1/4W
R624	1-249-377-11	CARBON	0.47 5% 1/4W F	R2225	1-249-398-11	CARBON	27 5% 1/4W
R625	1-249-377-11	CARBON	0.47 5% 1/4W F	R2226	1-249-385-11	CARBON	2.2 5% 1/4W F
R627	1-249-377-11	CARBON	0.47 5% 1/4W F	R2227	1-249-385-11	CARBON	2.2 5% 1/4W F
R628	1-249-377-11	CARBON	0.47 5% 1/4W F	R2228	1-249-421-11	CARBON	2.2K 5% 1/4W
R629	1-249-388-11	CARBON	3.9 5% 1/4W F	R2229	1-249-421-11	CARBON	2.2K 5% 1/4W
R630	1-215-857-11	METAL OXIDE	10 5% 1W F	<RELAY>			
R632	1-249-417-11	CARBON	1K 5% 1/4W F	RY601 Δ	1-515-684-31	RELAY	
R633	1-249-405-11	CARBON	100 5% 1/4W F	RY602	1-515-684-31	RELAY	
R635	1-249-413-11	CARBON	470 5% 1/4W F	<SWITCH>			
R636	1-249-383-11	CARBON	1.5 5% 1/4W F	S501	1-572-707-11	SWITCH, LEVER	
R637	1-249-421-11	CARBON	2.2K 5% 1/4W	S502	1-572-707-11	SWITCH, LEVER	
R638	1-249-423-11	CARBON	3.3K 5% 1/4W	<TRANSFORMER>			
R639	1-249-423-11	CARBON	3.3K 5% 1/4W	T501 Δ	1-453-416-11	TRANSFORMER ASSY, FLYBACK (NX-2604A3)	
R640 Δ	1-202-893-91	SOLID	8.2M 20% 1/2W	T502 Δ	1-437-195-14	TRANSFORMER, HORIZONTAL DRIVE	
R641	1-249-455-11	CARBON	4.7K 5% 1/4W F (KV-29V10C)	T503 Δ	1-424-545-22	TRANSFORMER, FERRITE (PMT)	
R642	1-249-451-11	CARBON	2.2K 5% 1/4W F (KV-29V10C)	T601 Δ	1-423-593-11	TRANSFORMER, LINE FILTER (LFT)	
R643	1-216-379-11	METAL OXIDE	6.8 5% 2W F	T602 Δ	1-424-220-21	TRANSFORMER, LINE FILTER	
R644 Δ	1-212-853-61	FUSIBLE	6.8 5% 1/4W F	T603 Δ	1-423-563-11	TRANSFORMER, CONVERTER DRIVE	
R645	1-249-377-11	CARBON	0.47 5% 1/4W F	T604 Δ	1-423-615-11	TRANSFORMER, CONVERTER (PIT)	
R646	1-249-429-11	CARBON	10K 5% 1/4W	T605 Δ	1-423-582-21	TRANSFORMER, FERRITE (SBT)	
R647	1-249-433-11	CARBON	22K 5% 1/4W	Δ 1-426-669-11 TRANSFORMER, CONVERTER (SBT) (KV-27V10/29V10C/29V10M/32V15)			
R648	1-249-414-11	CARBON	560 5% 1/4W	<THERMISTOR>			
R649	1-216-431-11	METAL OXIDE	560 5% 1W F	THP601 Δ	1-809-827-21	THERMISTOR, POSITIVE (KV-29V10C)	
R650	1-249-405-11	CARBON	100 5% 1/4W F	Δ 1-809-539-21 THERMISTOR, POSITIVE (KV-27V10/27V15/29V10M/32V15)			
R653	1-249-381-11	CARBON	1 5% 1/4W	<VARISTOR>			
R654	1-216-385-11	METAL OXIDE	0.47 5% 3W F	VDR601	1-807-288-11	VARISTOR	
R655	1-249-417-11	CARBON	1K 5% 1/4W F	VDR602	1-810-053-11	VARISTOR	
R656	1-249-381-11	CARBON	1 5% 1/4W	VDR603	1-810-053-11	VARISTOR	
R657	1-249-417-11	CARBON	1K 5% 1/4W	*****			
R658	1-249-389-11	CARBON	4.7 5% 1/4W F				
R659	1-247-883-00	CARBON	150K 5% 1/4W				
R660	1-249-433-11	CARBON	22K 5% 1/4W				
R661	1-249-406-11	CARBON	120 5% 1/4W				
R663	1-247-737-11	CARBON	68 5% 1/2W F				
R683	1-205-998-11	WIREWOUND	1 5% 1/4W F (KV-29V10C)				
R684	1-205-998-11	WIREWOUND	1 5% 1/4W F (KV-29V10C)				
R687	1-216-359-00	METAL OXIDE	6.8 5% 1W F (KV-27V10/27V15/29V10M/32V15)				
R688	1-215-861-00	METAL OXIDE	47 5% 1W (KV-27V15/32V15)				
R690	1-249-423-11	CARBON	3.3K 5% 1/4W				

The components identified by shading and mark Δ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

KV-27V10/27V15
RM-Y117 RM-Y121/RM-CM101
KV-29V10C/29V10M/32V15
RM-Y117 RM-Y117 RM-Y121
RM-CM101

H L Z (KV-27V15/32V15)

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
	*1-646-717-11	H BOARD *****			S1007 Δ 1-692-431-21	SWITCH, TACTILE	
		<CAPACITOR>			*****		
					*1-651-245-11	L BOARD *****	
		<CAPACITOR>					
C1001	1-124-248-00	ELECT 22MF	20% 25V	C1902	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C1002	1-126-160-11	ELECT 1MF	20% 50V			<CONNECTOR>	
C1003	1-126-160-11	ELECT 1MF	20% 50V	CN1903*1-564-518-11	PLUG, CONNECTOR 3P		
C1004	1-124-584-00	ELECT 100MF	20% 10V			<IC>	
C1005	1-164-005-11	CERAMIC CHIP 0.47MF	25V	IC1903 8-759-189-86	IC IS455J		
		<CONNECTOR>				<RESISTOR>	
CN154	*1-564-520-11	PLUG, CONNECTOR 5P		R1901	1-216-133-00	METAL GLAZE 3.3M 5%	1/10W
CN155	1-564-524-11	PLUG, CONNECTOR 9P		R1902	1-216-025-00	METAL GLAZE 100 5%	1/10W
CN156	*1-564-518-11	PLUG, CONNECTOR 3P			*****		
		<DIODE>			A-1390-411-A	Z BOARD, COMPLETE (KV-27V15/32V15) *****	
D1004	1-810-039-31	LED UNIT				<CAPACITOR>	
		<IC>		C901	1-124-903-11	ELECT 1MF	20% 50V
IC1001	8-741-100-62	IC SBX1618-51		C902	1-124-903-11	ELECT 1MF	20% 50V
		<JACK>		C933	1-126-964-11	ELECT 10MF	20% 50V
J1001	1-695-585-11	JACK BLOCK, PIN (L TYPE) 3P		C934	1-126-964-11	ELECT 10MF	20% 50V
		<TRANSISTOR>				<CONNECTOR>	
Q1001	8-729-216-22	TRANSISTOR 2SA1162-G		CN901	*1-564-520-11	PLUG, CONNECTOR 5P	
Q1002	8-729-422-27	TRANSISTOR 2SD601A-Q		CN905	1-564-517-11	PLUG, CONNECTOR 2P	
Q1003	8-729-422-27	TRANSISTOR 2SD601A-Q				<DIODE>	
		<RESISTOR>		D901	8-719-121-24	DIODE RD9.1ESL	
R1001	1-247-804-11	CARBON 75 5%	1/4W	D902	8-719-404-46	DIODE MA110	
R1002	1-249-425-11	CARBON 4.7K 5%	1/4W	D903	8-719-404-46	DIODE MA110	
R1003	1-216-113-00	METAL GLAZE 470K 5%	1/10W	D904	8-719-109-93	DIODE RD6.2ESB2	
R1004	1-249-425-11	CARBON 4.7K 5%	1/4W	D905	8-719-109-66	DIODE RD3.3ESB2	
R1005	1-216-113-00	METAL GLAZE 470K 5%	1/10W				
R1007	1-216-073-00	METAL GLAZE 10K 5%	1/10W	D906	8-719-121-24	DIODE RD9.1ESL	
R1008	1-216-025-00	METAL GLAZE 100 5%	1/10W	D907	8-719-404-46	DIODE MA110	
R1009	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W	D908	8-719-404-46	DIODE MA110	
R1010	1-216-055-00	METAL GLAZE 1.8K 5%	1/10W	D909	8-719-404-46	DIODE MA110	
R1011	1-216-025-00	METAL GLAZE 100 5%	1/10W	D910	8-719-404-46	DIODE MA110	
R1012	1-216-049-00	METAL GLAZE 1K 5%	1/10W				
R1014	1-216-047-00	METAL GLAZE 820 5%	1/10W	D911	8-719-404-46	DIODE MA110	
R1015	1-216-033-00	METAL GLAZE 220 5%	1/10W	D912	8-719-404-46	DIODE MA110	
R1016	1-216-033-00	METAL GLAZE 220 5%	1/10W	D920	8-719-404-46	DIODE MA110	
R1017	1-216-105-00	METAL GLAZE 220K 5%	1/10W			<JACK>	
R1018	1-216-089-91	METAL GLAZE 47K 5%	1/10W	J901	1-764-873-11	JACK	
R1019	1-216-025-00	METAL GLAZE 100 5%	1/10W	J902	1-764-874-11	JACK	
R1021	1-216-045-00	METAL GLAZE 680 5%	1/10W			<TRANSISTOR>	
		<SWITCH>		Q901	8-729-422-27	TRANSISTOR 2SD601A-Q	
S1001	1-692-431-21	SWITCH, TACTILE					
S1002	1-692-431-21	SWITCH, TACTILE					
S1003	1-692-431-21	SWITCH, TACTILE					
S1004	1-692-431-21	SWITCH, TACTILE					
S1005	1-692-431-21	SWITCH, TACTILE					
S1006	1-692-431-21	SWITCH, TACTILE					

The following table shows the results of the regression analysis for the dependent variable "Number of employees" (in thousands). The independent variables are "Year" (1990, 1991, 1992, 1993, 1994, 1995, 1996, 1997, 1998, 1999, 2000, 2001, 2002, 2003, 2004, 2005, 2006, 2007, 2008, 2009, 2010, 2011, 2012, 2013, 2014, 2015, 2016, 2017, 2018, 2019, 2020, 2021, 2022, 2023, 2024, 2025, 2026, 2027, 2028, 2029, 2030, 2031, 2032, 2033, 2034, 2035, 2036, 2037, 2038, 2039, 2040, 2041, 2042, 2043, 2044, 2045, 2046, 2047, 2048, 2049, 2050, 2051, 2052, 2053, 2054, 2055, 2056, 2057, 2058, 2059, 2060, 2061, 2062, 2063, 2064, 2065, 2066, 2067, 2068, 2069, 2070, 2071, 2072, 2073, 2074, 2075, 2076, 2077, 2078, 2079, 2080, 2081, 2082, 2083, 2084, 2085, 2086, 2087, 2088, 2089, 2090, 2091, 2092, 2093, 2094, 2095, 2096, 2097, 2098, 2099, 2100, 2101, 2102, 2103, 2104, 2105, 2106, 2107, 2108, 2109, 2110, 2111, 2112, 2113, 2114, 2115, 2116, 2117, 2118, 2119, 2120, 2121, 2122, 2123, 2124, 2125, 2126, 2127, 2128, 2129, 2130, 2131, 2132, 2133, 2134, 2135, 2136, 2137, 2138, 2139, 2140, 2141, 2142, 2143, 2144, 2145, 2146, 2147, 2148, 2149, 2150, 2151, 2152, 2153, 2154, 2155, 2156, 2157, 2158, 2159, 2160, 2161, 2162, 2163, 2164, 2165, 2166, 2167, 2168, 2169, 2170, 2171, 2172, 2173, 2174, 2175, 2176, 2177, 2178, 2179, 2180, 2181, 2182, 2183, 2184, 2185, 2186, 2187, 2188, 2189, 2190, 2191, 2192, 2193, 2194, 2195, 2196, 2197, 2198, 2199, 2200, 2201, 2202, 2203, 2204, 2205, 2206, 2207, 2208, 2209, 2210, 2211, 2212, 2213, 2214, 2215, 2216, 2217, 2218, 2219, 2220, 2221, 2222, 2223, 2224, 2225, 2226, 2227, 2228, 2229, 2230, 2231, 2232, 2233, 2234, 2235, 2236, 2237, 2238, 2239, 2240, 2241, 2242, 2243, 2244, 2245, 2246, 2247, 2248, 2249, 2250, 2251, 2252, 2253, 2254, 2255, 2256, 2257, 2258, 2259, 2260, 2261, 2262, 2263, 2264, 2265, 2266, 2267, 2268, 2269, 2270, 2271, 2272, 2273, 2274, 2275, 2276, 2277, 2278, 2279, 2280, 2281, 2282, 2283, 2284, 2285, 2286, 2287, 2288, 2289, 2290, 2291, 2292, 2293, 2294, 2295, 2296, 2297, 2298, 2299, 2300, 2301, 2302, 2303, 2304, 2305, 2306, 2307, 2308, 2309, 2310, 2311, 2312, 2313, 2314, 2315, 2316, 2317, 2318, 2319, 2320, 2321, 2322, 2323, 2324, 2325, 2326, 2327, 2328, 2329, 2330, 2331, 2332, 2333, 2334, 2335, 2336, 2337, 2338, 2339, 2340, 2341, 2342, 2343, 2344, 2345, 2346, 2347, 2348, 2349, 2350, 2351, 2352, 2353, 2354, 2355, 2356, 2357, 2358, 2359, 2360, 2361, 2362, 2363, 2364, 2365, 2366, 2367, 2368, 2369, 2370, 2371, 2372, 2373, 2374, 2375, 2376, 2377, 2378, 2379, 2380, 2381, 2382, 2383, 2384, 2385, 2386, 2387, 2388, 2389, 2390, 2391, 2392, 2393, 2394, 2395, 2396, 2397, 2398, 2399, 2400, 2401, 2402, 2403, 2404, 2405, 2406, 2407, 2408, 2409, 2410, 2411, 2412, 2413, 2414, 2415, 2416, 2417, 2418, 2419, 2420, 2421, 2422, 2423, 2424, 2425, 2426, 2427, 2428, 2429, 2430, 2431, 2432, 2433, 2434, 2435, 2436, 2437, 2438, 2439, 2440, 2441, 2442, 2443, 2444, 2445, 2446, 2447, 2448, 2449, 2450, 2451, 2452, 2453, 2454, 2455, 2456, 2457, 2458, 2459, 2460, 2461, 2462, 2463, 2464, 2465, 2466, 2467, 2468, 2469, 2470, 2471, 2472, 2473, 2474, 2475, 2476, 2477, 2478, 2479, 2480, 2481, 2482, 2483, 2484, 2485, 2486, 2487, 2488, 2489, 2490, 2491, 2492, 2493, 2494, 2495, 2496, 2497, 2498, 2499, 2500, 2501, 2502, 2503, 2504, 2505, 2506, 2507, 2508, 2509, 2510, 2511, 2512, 2513, 2514, 2515, 2516, 2517, 2518, 2519, 2520, 2521, 2522, 2523, 2524, 2525, 2526, 2527, 2528, 2529, 2530, 2531, 2532, 2533, 2534, 2535, 2536, 2537, 2538, 2539, 2540, 2541, 2542, 2543, 2544, 2545, 2546, 2547, 2548, 2549, 2550, 2551, 2552, 2553, 2554, 2555, 2556, 2557, 2558, 2559, 2560, 2561, 2562, 2563, 2564, 2565, 2566, 2567, 2568, 2569, 2570, 2571, 2572, 2573, 2574, 2575, 2576, 2577, 2578, 2579, 2580, 2581, 2582, 2583, 2584, 2585, 2586, 2587, 2588, 2589, 2590, 2591, 2592, 2593, 2594, 2595, 2596, 2597, 2598, 2599, 2600, 2601, 2602, 2603, 2604, 2605, 2606, 2607, 2608, 2609, 2610, 2611, 2612, 2613, 2614, 2615, 2616, 2617, 2618, 2619, 2620, 2621, 2622, 2623, 2624, 2625, 2626, 2627, 2628, 2629, 2630, 2631, 2632, 2633, 2634, 2635, 2636, 2637, 2638, 2639, 2640, 2641, 2642, 2643, 2644, 2645, 2646, 2647, 2648, 2649, 2650, 2651, 2652, 2653, 2654, 2655, 2656, 2657, 2658, 2659, 2660, 2661, 2662, 2663, 2664, 2665, 2666,

H	L	Z
1	2	3
4	5	6
7	8	9
10	11	12
13	14	15
16	17	18
19	20	21
22	23	24
25	26	27
28	29	30
31	32	33
34	35	36
37	38	39
40	41	42
43	44	45
46	47	48
49	50	51
52	53	54
55	56	57
58	59	60
61	62	63
64	65	66
67	68	69
70	71	72
73	74	75
76	77	78
79	80	81
82	83	84
85	86	87
88	89	90
91	92	93
94	95	96
97	98	99
100	101	102
103	104	105
106	107	108
109	110	111
112	113	114
115	116	117
118	119	120
121	122	123
124	125	126
127	128	129
130	131	132
133	134	135
136	137	138
139	140	141
142	143	144
145	146	147
148	149	150
151	152	153
154	155	156
157	158	159
160	161	162
163	164	165
166	167	168
169	170	171
172	173	174
175	176	177
178	179	180
181	182	183
184	185	186
187	188	189
190	191	192
193	194	195
196	197	198
199	200	201
202	203	204
205	206	207
208	209	210
211	212	213
214	215	216
217	218	219
220	221	222
223	224	225
226	227	228
229	230	231
232	233	234
235	236	237
238	239	240
241	242	243
244	245	246
247	248	249
250	251	252
253	254	255
256	257	258
259	260	261
262	263	264
265	266	267
268	269	270
271	272	273
274	275	276
277	278	279
280	281	282
283	284	285
286	287	288
289	290	291
292	293	294
295	296	297
298	299	300
301	302	303
304	305	306
307	308	309
310	311	312
313	314	315
316	317	318
319	320	321
322	323	324
325	326	327
328	329	330
331	332	333
334	335	336
337	338	339
340	341	342
343	344	345
346	347	348
349	350	351
352	353	354
355	356	357
358	359	360
361	362	363
364	365	366
367	3	

Abstract

THE UNIVERSITY OF CHICAGO PRESS

Abstract

© 2004 Blackwell Publishing Ltd *Journal of Internal Medicine* 255: 103–110

THE UNIVERSITY OF CHICAGO

© 2000 by John Wiley & Sons, Inc.

100

2000	2001	2002	2003	2004	2005
------	------	------	------	------	------



1991	1992	1993	1994	1995	1996	1997	1998	1999	2000	2001	2002	2003	2004	2005	2006	2007	2008	2009	2010	2011	2012	2013	2014	2015	2016	2017	2018	2019	2020	2021	2022	2023	2024	2025	2026	2027	2028	2029	2030	2031	2032	2033	2034	2035	2036	2037	2038	2039	2040	2041	2042	2043	2044	2045	2046	2047	2048	2049	2050	2051	2052	2053	2054	2055	2056	2057	2058	2059	2060	2061	2062	2063	2064	2065	2066	2067	2068	2069	2070	2071	2072	2073	2074	2075	2076	2077	2078	2079	2080	2081	2082	2083	2084	2085	2086	2087	2088	2089	2090	2091	2092	2093	2094	2095	2096	2097	2098	2099	2100	2101	2102	2103	2104	2105	2106	2107	2108	2109	2110	2111	2112	2113	2114	2115	2116	2117	2118	2119	2120	2121	2122	2123	2124	2125	2126	2127	2128	2129	2130	2131	2132	2133	2134	2135	2136	2137	2138	2139	2140	2141	2142	2143	2144	2145	2146	2147	2148	2149	2150	2151	2152	2153	2154	2155	2156	2157	2158	2159	2160	2161	2162	2163	2164	2165	2166	2167	2168	2169	2170	2171	2172	2173	2174	2175	2176	2177	2178	2179	2180	2181	2182	2183	2184	2185	2186	2187	2188	2189	2190	2191	2192	2193	2194	2195	2196	2197	2198	2199	2200	2201	2202	2203	2204	2205	2206	2207	2208	2209	2210	2211	2212	2213	2214	2215	2216	2217	2218	2219	2220	2221	2222	2223	2224	2225	2226	2227	2228	2229	2230	2231	2232	2233	2234	2235	2236	2237	2238	2239	2240	2241	2242	2243	2244	2245	2246	2247	2248	2249	2250	2251	2252	2253	2254	2255	2256	2257	2258	2259	2260	2261	2262	2263	2264	2265	2266	2267	2268	2269	2270	2271	2272	2273	2274	2275	2276	2277	2278	2279	2280	2281	2282	2283	2284	2285	2286	2287	2288	2289	2290	2291	2292	2293	2294	2295	2296	2297	2298	2299	2300	2301	2302	2303	2304	2305	2306	2307	2308	2309	2310	2311	2312	2313	2314	2315	2316	2317	2318	2319	2320	2321	2322	2323	2324	2325	2326	2327	2328	2329	2330	2331	2332	2333	2334	2335	2336	2337	2338	2339	2340	2341	2342	2343	2344	2345	2346	2347	2348	2349	2350	2351	2352	2353	2354	2355	2356	2357	2358	2359	2360	2361	2362	2363	2364	2365	2366	2367	2368	2369	2370	2371	2372	2373	2374	2375	2376	2377	2378	2379	2380	2381	2382	2383	2384	2385	2386	2387	2388	2389	2390	2391	2392	2393	2394	2395	2396	2397	2398	2399</
------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	--------

100

[illegible]

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	111	112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127	128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143	144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159	160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175	176	177	178	179	180	181	182	183	184	185	186	187	188	189	190	191	192	193	194	195	196	197	198	199	200	201	202	203	204	205	206	207	208	209	210	211	212	213	214	215	216	217	218	219	220	221	222	223	224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	239	240	241	242	243	244	245	246	247	248	249	250	251	252	253	254	255	256	257	258	259	260	261	262	263	264	265	266	267	268	269	270	271	272	273	274	275	276	277	278	279	280	281	282	283	284	285	286	287	288	289	290	291	292	293	294	295	296	297	298	299	300	301	302	303	304	305	306	307	308	309	310	311	312	313	314	315	316	317	318	319	320	321	322	323	324	325	326	327	328	329	330	331	332	333	334	335	336	337	338	339	340	341	342	343	344	345	346	347	348	349	350	351	352	353	354	355	356	357	358	359	360	361	362	363	364	365	366	367	368	369	370	371	372	373	374	375	376	377	378	379	380	381	382	383	384	385	386	387	388	389	390	391	392	393	394	395	396	397	398	399	400	401	402	403	404	405	406	407	408	409	410	411	412	413	414	415	416	417	418	419	420	421	422	423	424	425	426	427	428	429	430	431	432	433	434	435	436	437	438	439	440	441	442	443	444	445	446	447	448	449	450	451	452	453	454	455	456	457	458	459	460	461	462	463	464	465	466
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----

1990	1991	1992	1993	1994	1995	1996	1997	1998	1999	2000	2001	2002	2003	2004	2005	2006	2007	2008	2009	2010	2011	2012	2013	2014	2015	2016	2017	2018	2019	2020	2021	2022	2023	2024	2025	2026	2027	2028	2029	2030	2031	2032	2033	2034	2035	2036	2037	2038	2039	2040	2041	2042	2043	2044	2045	2046	2047	2048	2049	2050	2051	2052	2053	2054	2055	2056	2057	2058	2059	2060	2061	2062	2063	2064	2065	2066	2067	2068	2069	2070	2071	2072	2073	2074	2075	2076	2077	2078	2079	2080	2081	2082	2083	2084	2085	2086	2087	2088	2089	2090	2091	2092	2093	2094	2095	2096	2097	2098	2099	2100	2101	2102	2103	2104	2105	2106	2107	2108	2109	2110	2111	2112	2113	2114	2115	2116	2117	2118	2119	2120	2121	2122	2123	2124	2125	2126	2127	2128	2129	2130	2131	2132	2133	2134	2135	2136	2137	2138	2139	2140	2141	2142	2143	2144	2145	2146	2147	2148	2149	2150	2151	2152	2153	2154	2155	2156	2157	2158	2159	2160	2161	2162	2163	2164	2165	2166	2167	2168	2169	2170	2171	2172	2173	2174	2175	2176	2177	2178	2179	2180	2181	2182	2183	2184	2185	2186	2187	2188	2189	2190	2191	2192	2193	2194	2195	2196	2197	2198	2199	2200	2201	2202	2203	2204	2205	2206	2207	2208	2209	2210	2211	2212	2213	2214	2215	2216	2217	2218	2219	2220	2221	2222	2223	2224	2225	2226	2227	2228	2229	2230	2231	2232	2233	2234	2235	2236	2237	2238	2239	2240	2241	2242	2243	2244	2245	2246	2247	2248	2249	2250	2251	2252	2253	2254	2255	2256	2257	2258	2259	2260	2261	2262	2263	2264	2265	2266	2267	2268	2269	2270	2271	2272	2273	2274	2275	2276	2277	2278	2279	2280	2281	2282	2283	2284	2285	2286	2287	2288	2289	2290	2291	2292	2293	2294	2295	2296	2297	2298	2299	2300	2301	2302	2303	2304	2305	2306	2307	2308	2309	2310	2311	2312	2313	2314	2315	2316	2317	2318	2319	2320	2321	2322	2323	2324	2325	2326	2327	2328	2329	2330	2331	2332	2333	2334	2335	2336	2337	2338	2339	2340	2341	2342	2343	2344	2345	2346	2347	2348	2349	2350	2351	2352	2353	2354	2355	2356	2357	2358	2359	2360	2361	2362	2363	2364	2365	2366	2367	2368	2369	2370	2371	2372	2373	2374	2375	2376	2377	2378	2379	2380	2381	2382	2383	2384	2385	2386	2387	2388	2389	2390	2391	2392	2393	2394	2395	2396	2397	2398</
------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	--------

1991 1992 1993

DOI: 10.1002/anie.200500000

Z (KV-27V15/32V15)

UA

REF.NO.	PART NO.	DESCRIPTION	REMARK		
Q902	8-729-216-22	TRANSISTOR 2SA1162-G			
Q903	8-729-216-22	TRANSISTOR 2SA1162-G			
Q904	8-729-422-27	TRANSISTOR 2SD601A-Q			
Q905	8-729-422-27	TRANSISTOR 2SD601A-Q			
Q906	8-729-422-27	TRANSISTOR 2SD601A-Q			
Q907	8-729-216-22	TRANSISTOR 2SA1162-G			
Q908	8-729-216-22	TRANSISTOR 2SA1162-G			
Q909	8-729-216-22	TRANSISTOR 2SA1162-G			
Q910	8-729-422-27	TRANSISTOR 2SD601A-Q			
Q911	8-729-140-93	TRANSISTOR 2SB733-34			
Q912	8-729-216-22	TRANSISTOR 2SA1162-G			
<RESISTOR>					
JR901	1-216-295-00	METAL GLAZE	0	5%	1/10W
JR902	1-216-295-00	METAL GLAZE	0	5%	1/10W
JR903	1-216-295-00	METAL GLAZE	0	5%	1/10W
JR907	1-216-295-00	METAL GLAZE	0	5%	1/10W
R901	1-249-405-11	CARBON	100	5%	1/4W F
R902	1-216-033-00	METAL GLAZE	220	5%	1/10W
R903	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R904	1-216-105-00	METAL GLAZE	220K	5%	1/10W
R905	1-216-105-00	METAL GLAZE	220K	5%	1/10W
R906	1-216-089-91	METAL GLAZE	47K	5%	1/10W
R907	1-216-089-91	METAL GLAZE	47K	5%	1/10W
R908	1-216-005-00	METAL GLAZE	15	5%	1/10W
R909	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R910	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R911	1-216-105-00	METAL GLAZE	220K	5%	1/10W
R912	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W
R913	1-216-101-00	METAL GLAZE	150K	5%	1/10W
R914	1-216-089-91	METAL GLAZE	47K	5%	1/10W
R915	1-216-089-91	METAL GLAZE	47K	5%	1/10W
R916	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R917	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R918	1-216-105-00	METAL GLAZE	220K	5%	1/10W
R919	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W
R921	1-216-089-91	METAL GLAZE	47K	5%	1/10W
R922	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R923	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R924	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R925	1-216-041-00	METAL GLAZE	470	5%	1/10W
R926	1-216-025-00	METAL GLAZE	100	5%	1/10W
R927	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R928	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R929	1-249-405-11	CARBON	100	5%	1/4W F
R935	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R936	1-216-089-91	METAL GLAZE	47K	5%	1/10W

*A-1394-527-A	UA BOARD, COMPLETE(KV-27V15)				

*A-1394-529-A	UA BOARD, COMPLETE(KV-32V15)				

*A-1394-552-A	UA BOARD, COMPLETE				

	(KV-27V10/29V10C/29V10M)				
<CAPACITOR>					
C401	1-163-031-11	CERAMIC CHIP	0.01MF		50V
C402	1-124-916-11	ELECT	22MF	20%	25V
C405	1-124-916-11	ELECT	22MF	20%	25V
C406	1-124-903-11	ELECT	1MF	20%	50V
C407	1-124-903-11	ELECT	1MF	20%	50V

REF. NO.	PART NO.	DESCRIPTION			REMARK
C408	1-124-916-11	ELECT	22MF	20%	25V
C409	1-124-903-11	ELECT	1MF	20%	50V
C410	1-124-903-11	ELECT	1MF	20%	50V
C411	1-104-665-11	ELECT	100MF	20%	50V
			(KV-27V10/29V10C/29V10M)		
C412	1-124-916-11	ELECT	22MF	20%	25V
C413	1-126-964-11	ELECT	10MF	20%	50V
C414	1-124-499-11	ELECT	1MF	20%	50V
C415	1-124-499-11	ELECT	1MF	20%	50V
C416	1-126-964-11	ELECT	10MF	20%	50V
C417	1-124-902-00	ELECT	0.47MF	20%	50V
C418	1-124-902-00	ELECT	0.47MF	20%	50V
C419	1-124-126-00	ELECT	47MF	20%	16V
C420	1-163-031-11	CERAMIC CHIP	0.01MF		50V
C421	1-124-902-00	ELECT	0.47MF	20%	50V
			(KV-27V10/29V10C/29V10M)		
	1-124-916-11	ELECT	22MF	20%	25V
				(KV-27V15/32V15)	
C430	1-124-499-11	ELECT	1MF	20%	50V
				(KV-32V15)	
C431	1-124-499-11	ELECT	1MF	20%	50V
				(KV-32V15)	
C432	1-124-916-11	ELECT	22MF	20%	25V
				(KV-32V15)	
C433	1-104-663-11	ELECT	33MF	20%	25V
				(KV-27V15/32V15)	
C434	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
				(KV-27V15/32V15)	
C441	1-124-126-00	ELECT	47MF	20%	16V
C442	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
				(KV-27V15/32V15)	
C462	1-126-933-11	ELECT	100MF	20%	16V
				(KV-27V15/32V15)	
<FILTER>					
CM401	1-467-554-11	FILTER BLOCK, COMB			
<CONNECTOR>					
CN141	*1-564-520-11	PLUG, CONNECTOR 5P			
CN142	1-564-517-11	PLUG, CONNECTOR 2P (KV-27V15/32V15)			
CN143	1-750-395-11	SOCKET, CONNECTOR 32P			
CN144	*1-564-521-11	PLUG, CONNECTOR 6P (KV-32V15)			
CN146	1-573-300-21	CONNECTOR, BOARD TO BOARD 18P			
				(KV-27V15/32V15)	
CN147	1-750-395-11	SOCKET, CONNECTOR 32P			
CN148	1-564-517-11	PLUG, CONNECTOR 2P			
CN149	*1-564-519-11	PLUG, CONNECTOR 4P (KV-32V15)			
<DIODE>					
D401	8-719-110-17	DIODE	RD10ESB2		
D402	8-719-110-17	DIODE	RD10ESB2		
D403	8-719-110-17	DIODE	RD10ESB2		
D404	8-719-110-17	DIODE	RD10ESB2		
D405	8-719-110-17	DIODE	RD10ESB2		
D408	8-719-110-17	DIODE	RD10ESB2		
D409	8-719-110-17	DIODE	RD10ESB2		
D410	8-719-110-17	DIODE	RD10ESB2		
D411	8-719-110-17	DIODE	RD10ESB2		
D429	8-719-110-17	DIODE	RD10ESB2		
D430	8-719-110-17	DIODE	RD10ESB2		
D431	8-719-110-17	DIODE	RD10ESB2		

UA

REF.NO.	PART NO.	DESCRIPTION	REMARK
D436	8-719-110-17	DIODE RD10ESB2 (KV-27V15/32V15)	
D437	8-719-110-17	DIODE RD10ESB2 (KV-27V15/32V15)	
<IC>			
IC401	8-759-637-10	IC M52470AP (KV-27V10/29V10C/29V10M)	
IC402	8-752-067-28	IC CXA1545AS (KV-27V15/32V15)	
IC403	8-759-088-00	IC MM1114XFF (KV-27V10/29V10C/29V10M)	
IC404	8-759-164-18	IC MM1118XFF (KV-27V10/20V10C/29V10M)	
<JACK>			
J401	1-750-515-11	TERMINAL BLOCK, S 3P	
J402	1-750-517-11	JACK BLOCK, PIN 3P	
J404	1-750-516-11	JACK BLOCK, PIN 2P	
<COIL>			
L401	1-410-473-11	INDUCTOR 18UH (KV-27V15/32V15)	
L403	1-410-476-11	INDUCTOR 33UH (KV-27V15/32V15)	
L404	1-410-669-31	INDUCTOR 33UH (KV-27V15/32V15)	
<TRANSISTOR>			
Q401	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q405	8-729-216-22	TRANSISTOR 2SA1162-G	
Q406	8-729-216-22	TRANSISTOR 2SA1162-G	
Q410	8-729-422-27	TRANSISTOR 2SD601A-Q (KV-32V15)	
Q415	8-729-422-27	TRANSISTOR 2SD601A-Q (KV-32V15)	
Q416	8-729-216-22	TRANSISTOR 2SA1162-G (KV-32V15)	
Q417	8-729-216-22	TRANSISTOR 2SA1162-G (KV-32V15)	
Q418	8-729-216-22	TRANSISTOR 2SA1162-G (KV-32V15)	
<RESISTOR>			
JR402	1-216-295-00	METAL GLAZE 0 5% 1/10W	
JR408	1-216-295-00	METAL GLAZE 0 5% 1/10W	
JR409	1-216-295-00	METAL GLAZE 0 5% 1/10W	
JR410	1-216-295-00	METAL GLAZE 0 5% 1/10W	
JR411	1-216-295-00	METAL GLAZE 0 5% 1/10W	
JR412	1-216-295-00	METAL GLAZE 0 5% 1/10W	
JR415	1-216-295-00	METAL GLAZE 0 5% 1/10W	
JR416	1-216-295-00	METAL GLAZE 0 5% 1/10W	
JR418	1-216-295-00	METAL GLAZE 0 5% 1/10W	
JR419	1-216-295-00	METAL GLAZE 0 5% 1/10W	
JR422	1-216-295-00	METAL GLAZE 0 5% 1/10W	
JR423	1-216-295-00	METAL GLAZE 0 5% 1/10W	
JR424	1-216-295-00	METAL GLAZE 0 5% 1/10W	
JR428	1-216-295-00	METAL GLAZE 0 5% 1/10W	
JR429	1-216-295-00	METAL GLAZE 0 5% 1/10W	
JR430	1-216-295-00	METAL GLAZE 0 5% 1/10W	
JR431	1-216-295-00	METAL GLAZE 0 5% 1/10W	
JR434	1-216-295-00	METAL GLAZE 0 5% 1/10W	
JR435	1-216-295-00	METAL GLAZE 0 5% 1/10W	
JR498	1-216-295-00	METAL GLAZE 0 5% 1/10W	
JR499	1-216-295-00	METAL GLAZE 0 5% 1/10W	
JR901	1-216-295-00	METAL GLAZE 0 5% 1/10W	
JW454	1-249-429-11	CARBON 10K 5% 1/4W	
JW456	1-249-429-11	CARBON 10K 5% 1/4W	

REF.NO.	PART NO.	DESCRIPTION	REMARK
R401	1-247-804-11	CARBON 75 5% 1/4W	
R402	1-216-113-00	METAL GLAZE 470K 5% 1/10W	
R403	1-216-113-00	METAL GLAZE 470K 5% 1/10W	
R404	1-247-804-11	CARBON 75 5% 1/4W	
R405	1-216-113-00	METAL GLAZE 470K 5% 1/10W	
R406	1-216-113-00	METAL GLAZE 470K 5% 1/10W	
R407	1-247-804-11	CARBON 75 5% 1/4W	
R408	1-216-113-00	METAL GLAZE 470K 5% 1/10W	
R409	1-216-113-00	METAL GLAZE 470K 5% 1/10W	
R410	1-249-425-11	CARBON 4.7K 5% 1/4W	
R411	1-249-425-11	CARBON 4.7K 5% 1/4W	
R412	1-249-425-11	CARBON 4.7K 5% 1/4W	
R413	1-249-425-11	CARBON 4.7K 5% 1/4W	
R414	1-247-804-11	CARBON 75 5% 1/4W	
R415	1-249-425-11	CARBON 4.7K 5% 1/4W	
R416	1-216-647-11	METAL CHIP 680 0.50% 1/10W	
R417	1-216-645-11	METAL CHIP 560 0.50% 1/10W	
R418	1-216-025-00	METAL GLAZE 100 5% 1/10W	
R421	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R425	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R431	1-216-045-00	METAL GLAZE 680 5% 1/10W	
R432	1-216-045-00	METAL GLAZE 1K 5% 1/10W	
R433	1-216-045-00	METAL GLAZE 680 5% 1/10W	
R434	1-216-045-00	METAL GLAZE 680 5% 1/10W	
R435	1-216-045-00	METAL GLAZE 680 5% 1/10W	
R439	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R440	1-216-025-00	METAL GLAZE 100 5% 1/10W	
R441	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R442	1-216-025-00	METAL GLAZE 100 5% 1/10W	
R443	1-216-025-00	METAL GLAZE 100 5% 1/10W	
R444	1-216-095-00	METAL GLAZE 82K 5% 1/10W	
R445	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R446	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R450	1-216-025-00	METAL GLAZE 100 5% 1/10W	
R451	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R452	1-216-025-00	METAL GLAZE 100 5% 1/10W	
R453	1-216-645-11	METAL CHIP 560 0.50% 1/10W	
R454	1-216-025-00	METAL GLAZE 100 5% 1/10W	

UA

Les composants identifiés par
une trame et une marque Δ
sont critiques pour la sécurité.
Ne les remplacer que par une
pièce portant le numéro spécifié.

The components identified by
shading and mark Δ are critical
for safety.
Replace only with part number
specified.

REF.NO.	PART NO.	DESCRIPTION	REMARK
	1-216-295-00	METAL GLAZE 0 5% 1/10W (KV-27V15/32V15)	
R456	1-216-041-00	METAL GLAZE 470 5% 1/10W (KV-27V15/32V15)	
R457	1-216-033-00	METAL GLAZE 220 5% 1/10W (KV-27V15/32V15)	
R458	1-216-033-00	METAL GLAZE 220 5% 1/10W (KV-27V15/32V15)	
R459	1-216-081-00	METAL GLAZE 22K 5% 1/10W (KV-32V15)	
R460	1-216-037-00	METAL GLAZE 330 5% 1/10W (KV-32V15)	
R461	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W (KV-32V15)	
R462	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W (KV-32V15)	
R463	1-216-045-00	METAL GLAZE 680 5% 1/10W (KV-32V15)	
R464	1-216-045-00	METAL GLAZE 680 5% 1/10W (KV-32V15)	
R476	1-216-081-00	METAL GLAZE 22K 5% 1/10W (KV-32V15)	
R478	1-216-041-00	METAL GLAZE 470 5% 1/10W (KV-27V15/32V15)	
R479	1-216-081-00	METAL GLAZE 22K 5% 1/10W (KV-32V15)	
R480	1-216-081-00	METAL GLAZE 22K 5% 1/10W (KV-32V15)	
R481	1-216-081-00	METAL GLAZE 22K 5% 1/10W (KV-32V15)	
R482	1-249-417-11	CARBON 1K 5% 1/4W	
R483	1-249-417-11	CARBON 1K 5% 1/4W	
R488	1-216-081-00	METAL GLAZE 22K 5% 1/10W (KV-32V15)	
R489	1-216-081-00	METAL GLAZE 22K 5% 1/10W (KV-32V15)	
R490	1-216-295-00	METAL GLAZE 0 5% 1/10W	
R491	1-216-295-00	METAL GLAZE 0 5% 1/10W	
R492	1-216-295-00	METAL GLAZE 0 5% 1/10W	
R1438	1-216-081-00	METAL GLAZE 22K 5% 1/10W (KV-27V15/32V15)	

MISCELLANEOUS

Δ 1-402-952-12	COIL, DEMAGNETIZATION (KV-32V15)
Δ 1-406-726-22	COIL, DEMAGNETIZATION (KV-27V10/27V15/29V10M)
Δ 1-406-726-41	COIL, DEMAGNETIZATION (KV-29V10C)
1-417-178-11	SELECTOR, ANTENNA (AS-2) (KV-32V15)
1-504-524-11	SPEAKER (8CM)
1-569-007-11	ADAPTER, CONVERSION 2P (KV-29V10C)
1-573-657-11	PLAUG, F-PIN (KV-27V10/27V15/29V10C/29V10M)
Δ 1-751-056-11	CORD, POWER (WITH CONNECTOR) 6A/250V (KV-29V10C)
Δ 1-751-059-11	CORD, POWER (WITH CONNECTOR) 10A/125V (KV-27V10/27V15/29V10M/32V15)
*1-751-135-11	CABLE, PIN (KV-32V15)
*1-751-136-11	CABLE, PIN (KV-32V15)
Δ 8-451-275-42	DEFLECTION YOKE Y28PFA(VTM) (KV-27V10/27V15/29V10C/29V10M)
Δ 8-451-315-41	DEFLECTION YOKE Y34FXA(VTM) (KV-32V15)

REF.NO.	PART NO.	DESCRIPTION	REMARK
V901	Δ 8-733-723-05	PICTURE TUBE (A80JYV50X) (KV-32V15)	
	Δ 8-733-848-05	PICTURE TUBE (A68KZJ50X) (KV-27V10/27V15/29V10C/29V10M)	

ACCESSORIES AND PACKING MATERIALS			

	1-467-626-11	MOUSE, INTERIJEENT CABLE (RM-CM101) (KV-27V15/32V15)	
	1-569-007-11	ADAPTER, CONVERSION 2P (KV-29V10C)	
	3-758-286-21	MANUAL, INSTRUCTION (ENGLISH) (KV-27V10/29V10M)	
	3-758-286-31	MANUAL, INSTRUCTION (FRENCH) (KV-27V10(CND))	
	3-758-286-41	MANUAL, INSTRUCTION (SPANISH) (KV-29V10M)	
	3-758-287-21	MANUAL, INSTRUCTION, CABLE MOUSE (KV-27V15/32V15)	
	3-758-287-31	MANUAL, INSTRUCTION, CABLE MOUSE (KV-27V15(CND)/32V15(CND))	
	3-758-287-41	MANUAL, INSTRUCTION, CABLE MOUSE (KV-27V15(US)/32V15(US))	
	3-758-289-21	MANUAL, INSTRUCTION (ENGLISH) (KV-27V15/32V15)	
	3-758-289-31	MANUAL, INSTRUCTION (FRENCH) (KV-27V15(CND)/32V15(CND))	
	3-758-289-41	MANUAL, INSTRUCTION (SPANISH) (KV-27V15(US)/32V15(US))	
	3-758-336-41	MANUAL, INSTRUCTION (KV-29V10C)	
	3-758-336-51	MANUAL, INSTRUCTION (KV-29V10C)	
	4-043-736-01	FILTER, MOUSE (KV-27V15/32V15)	
	4-043-737-01	HOLDER, FILTER (KV-27V15/32V15)	
	*4-041-255-01	BAG, PROTECTION (KV-27V10/27V15/29V10C/29V10M)	
	*4-041-259-01	BAG, PROTECTION (KV-32V15)	
	*4-043-483-01	INDIVIDUAL CARTON (KV-27V10/27V15/29V10C/29V10M)	
	*4-043-484-01	CUSHION (UPPER) (ASSY) (KV-27V10/27V15/29V10C/29V10M)	
	*4-043-485-01	CUSHION (LOWER) (ASSY) (KV-27V10/27V15/29V10C/29V10M)	
	*4-043-597-01	CUSHION (UPPER) (ASSY) (KV-32V15)	
	*4-043-598-01	CUSHION (LOWER) (ASSY) (KV-32V15)	
	*4-043-599-01	INDIVIDUAL CARTON (KV-32V15)	

REMOTE COMMANDER

1-467-060-13	REMOTE COMMANDER (RM-Y117) (KV-27V10/29V10C/29V10M)
9-903-826-01	COVER, BATTERY (FOR RM-Y117) (KV-27V10/29V10C/29V10M)
1-467-621-11	REMOTE COMMANDER (RM-Y121) (KV-27V15/32V15)
9-907-089-01	COVER, BATTERY (FOR RM-Y121) (KV-27V15/32V15)

