


This file is provided FREE OF CHARGE from the
electromaniacs.com community


You are free to distribute this file to other persons
who needs it , but without of charge


Also on <http://electromaniacs.com> you can find
thousands of service manuals , schematics free of
charge




MODEL FS-1502SK SCHEMATIC DIAGRAM

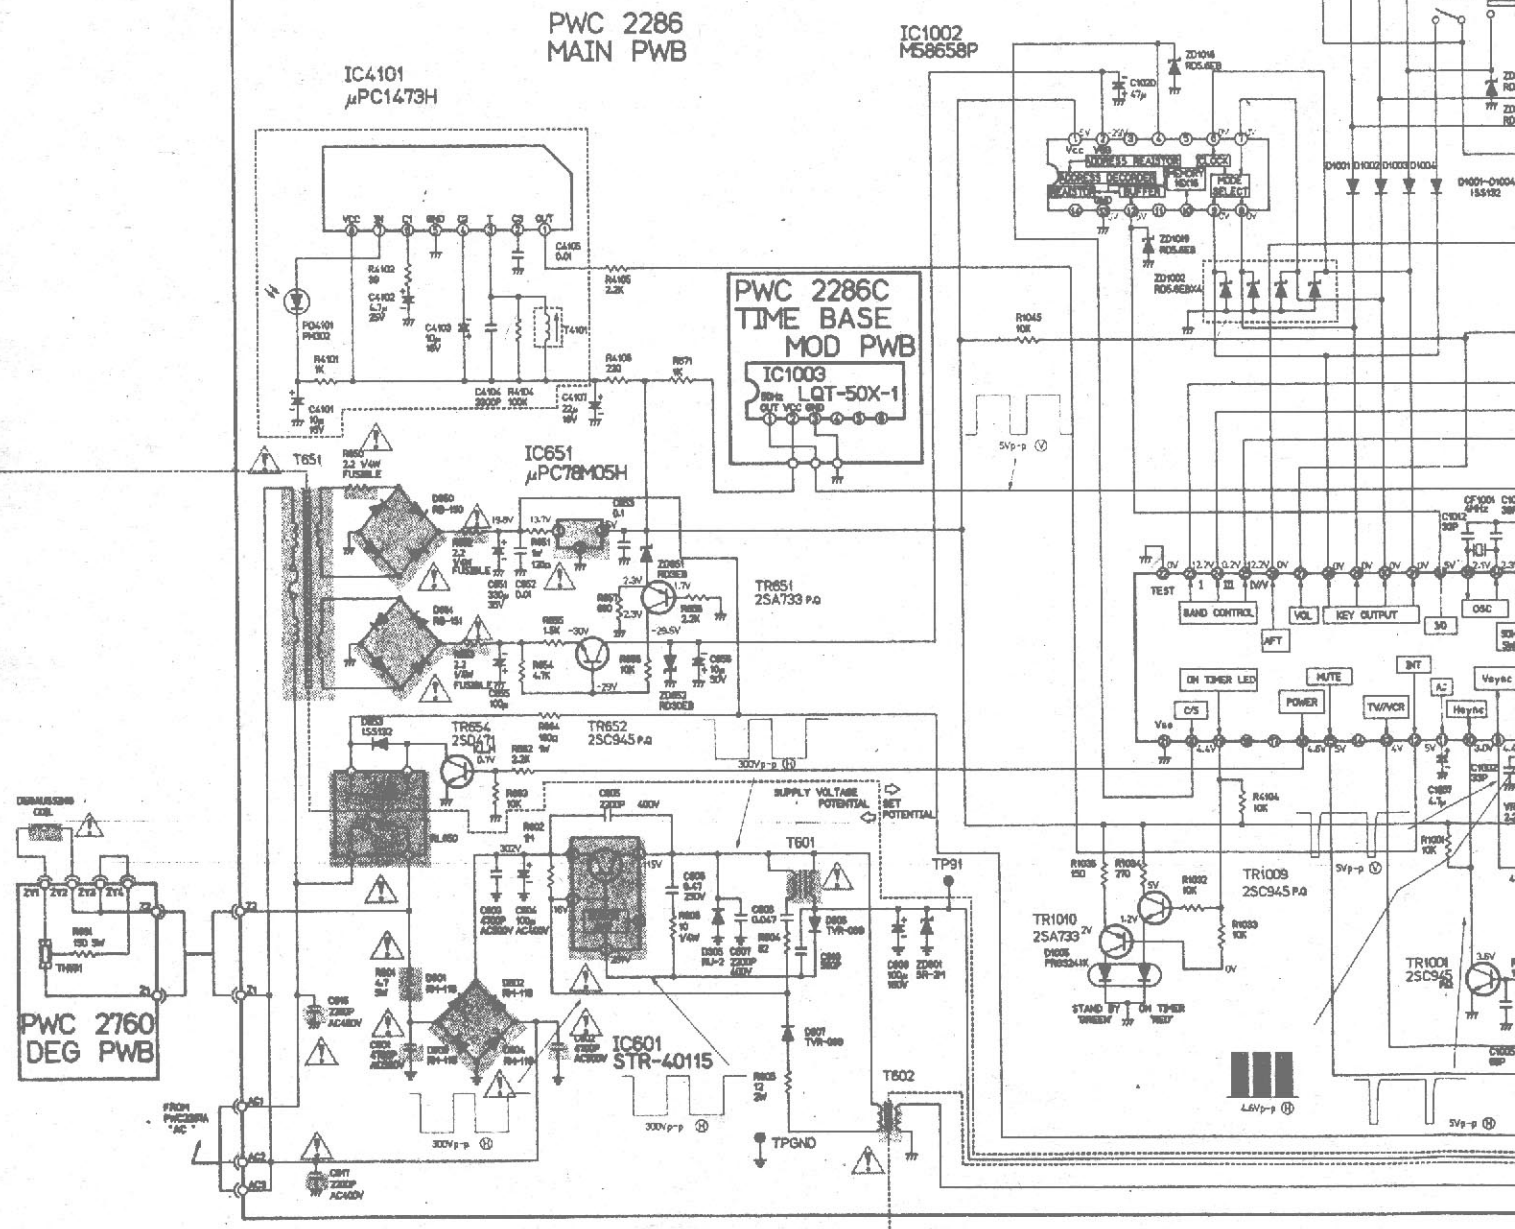


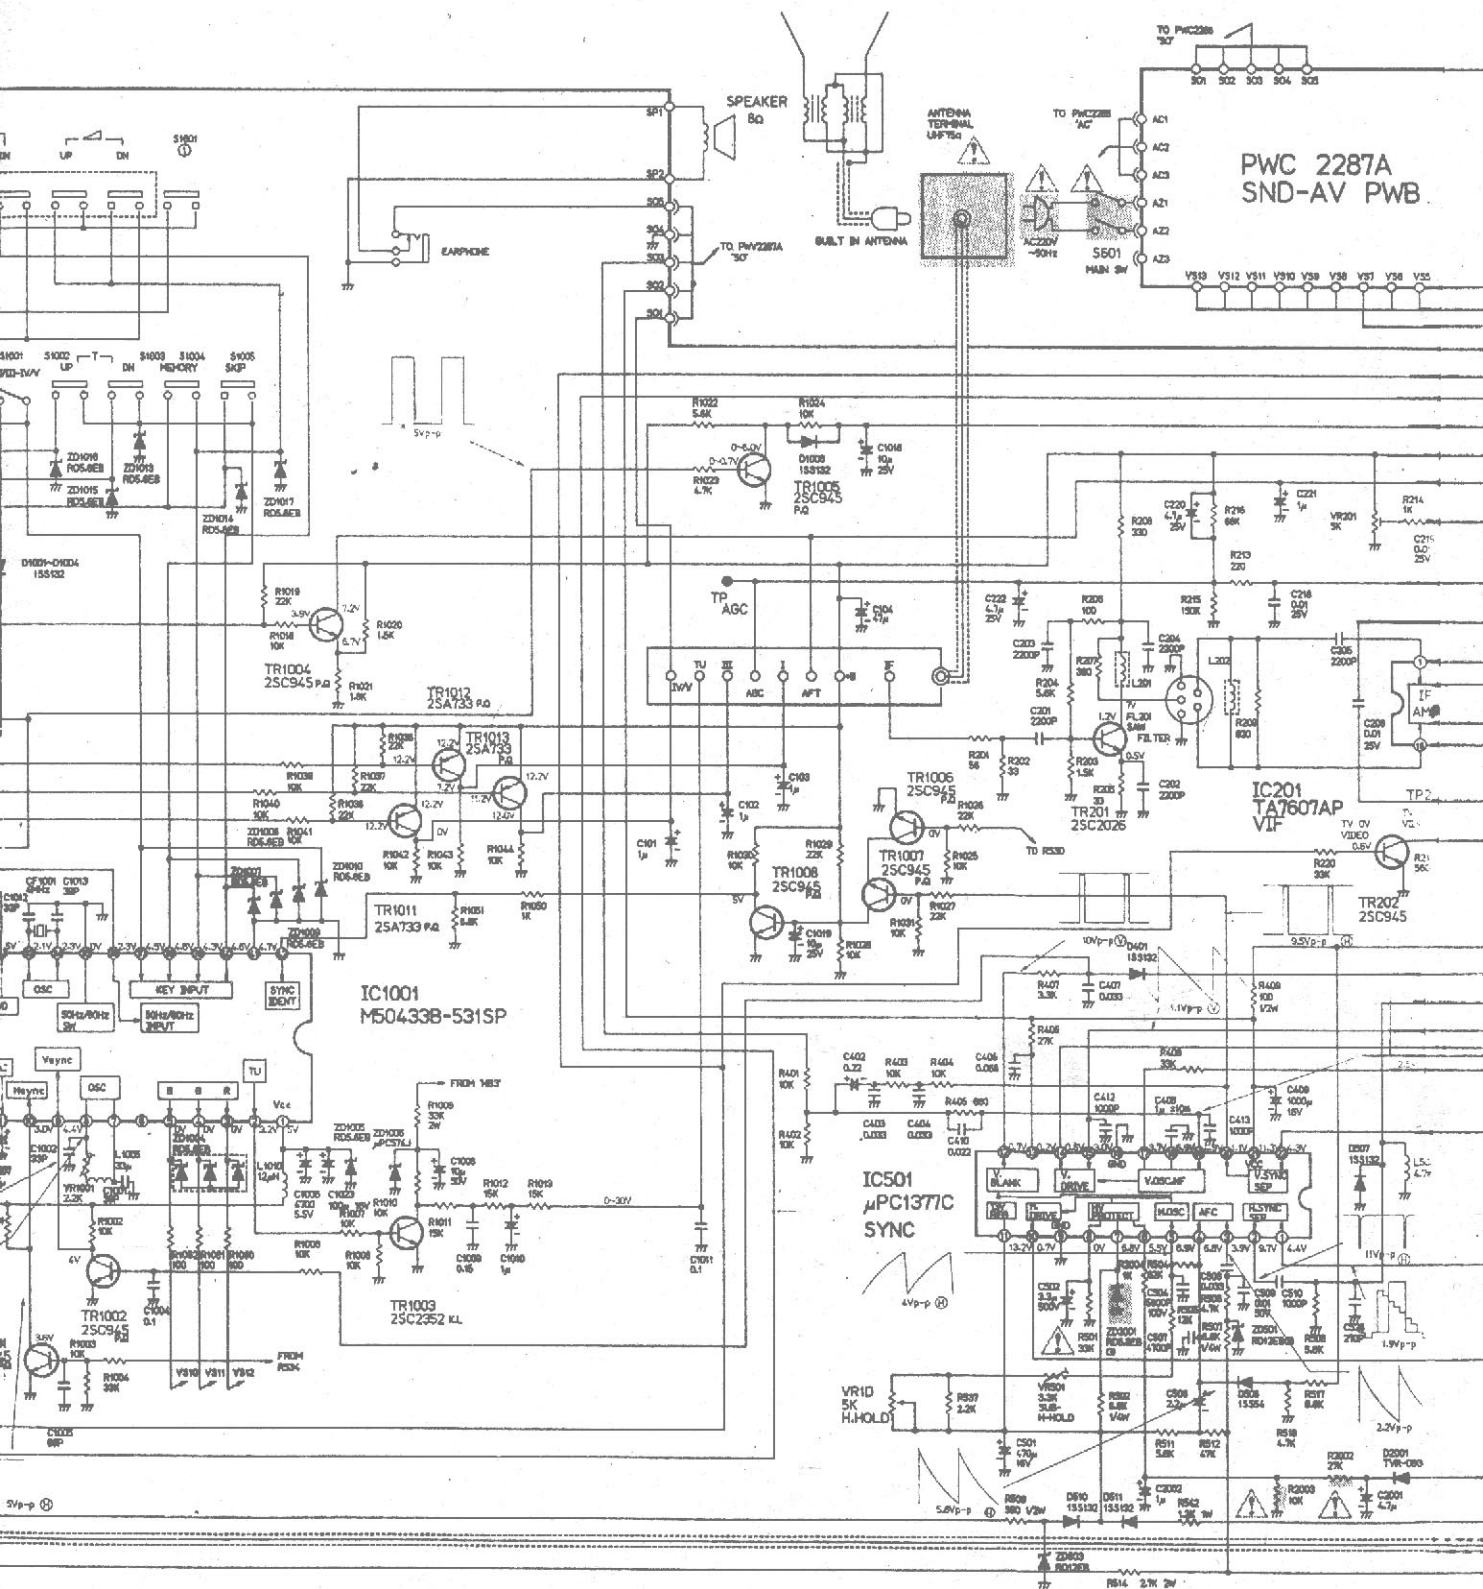

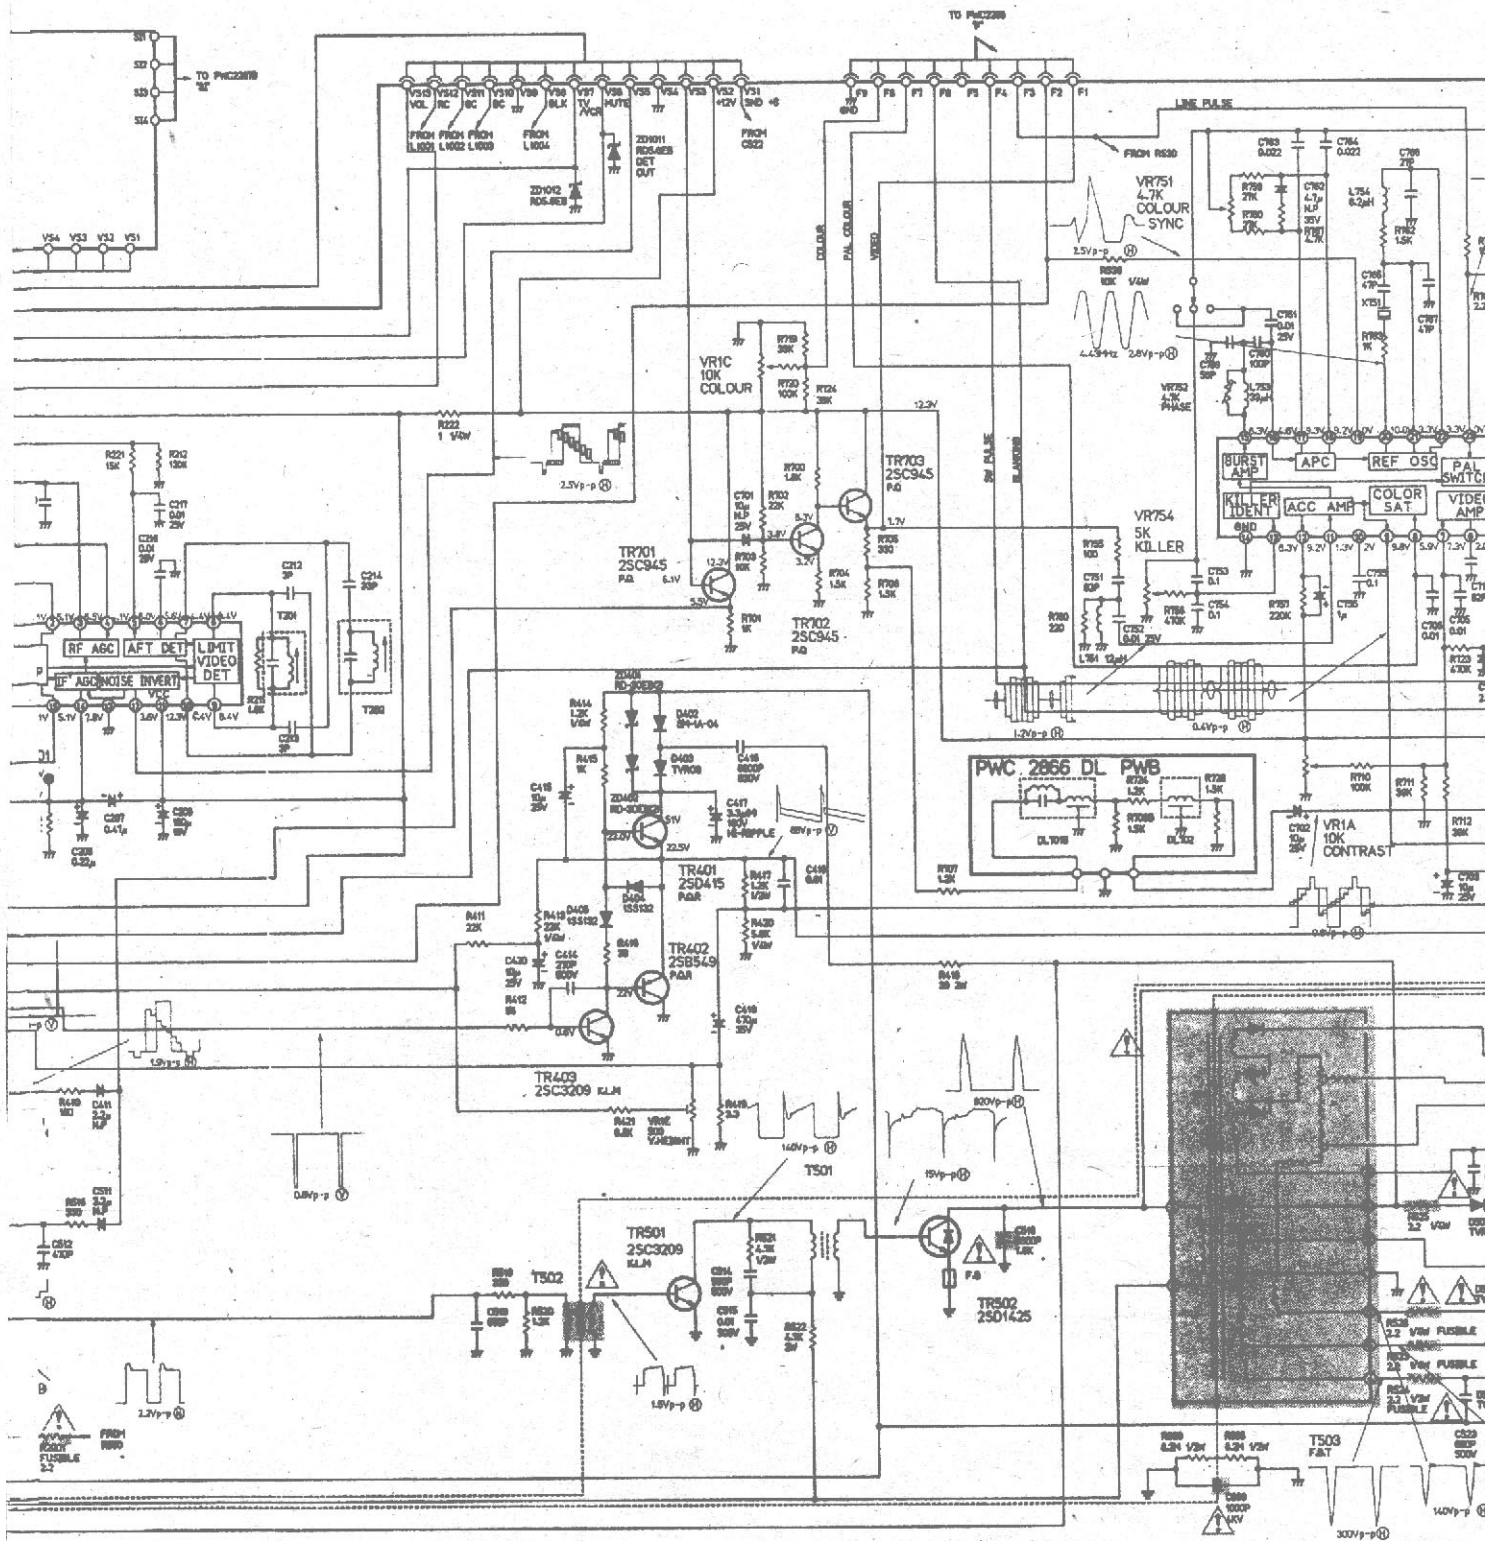


MODEL FS-1502SK
SND-AV
SCHEMATIC DIAGRAM

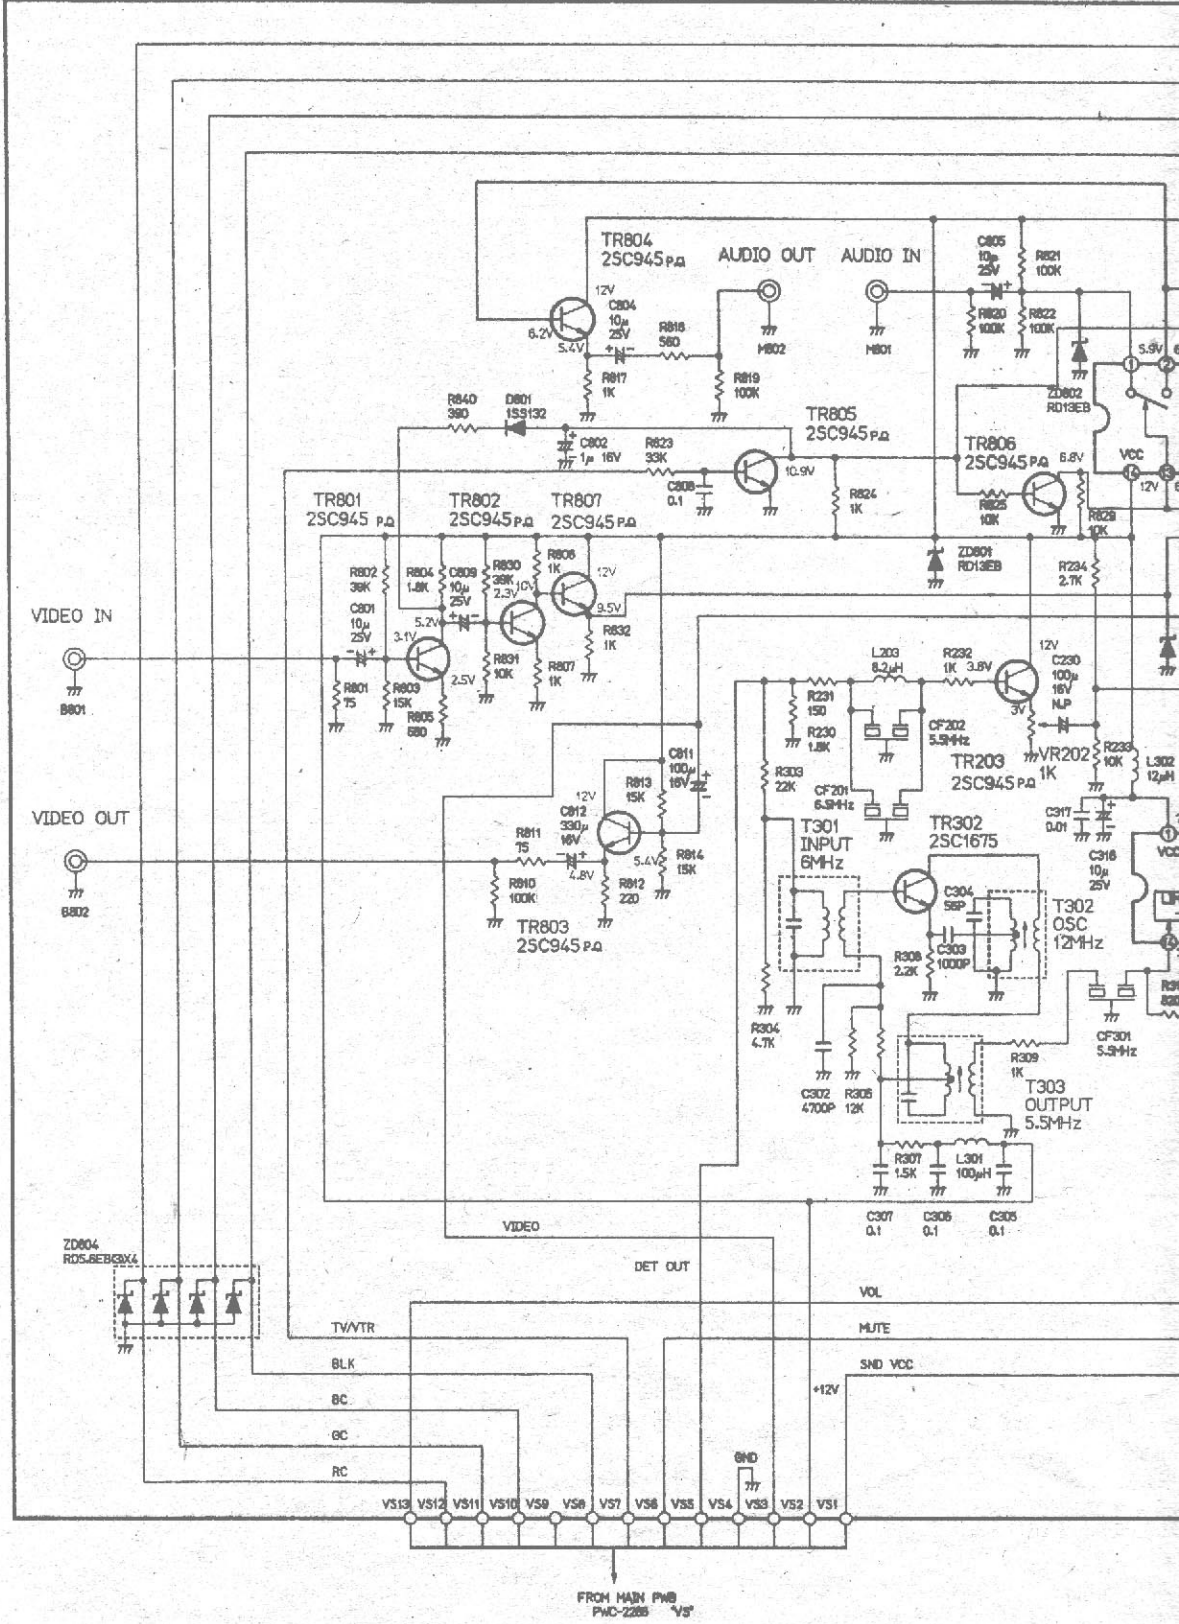

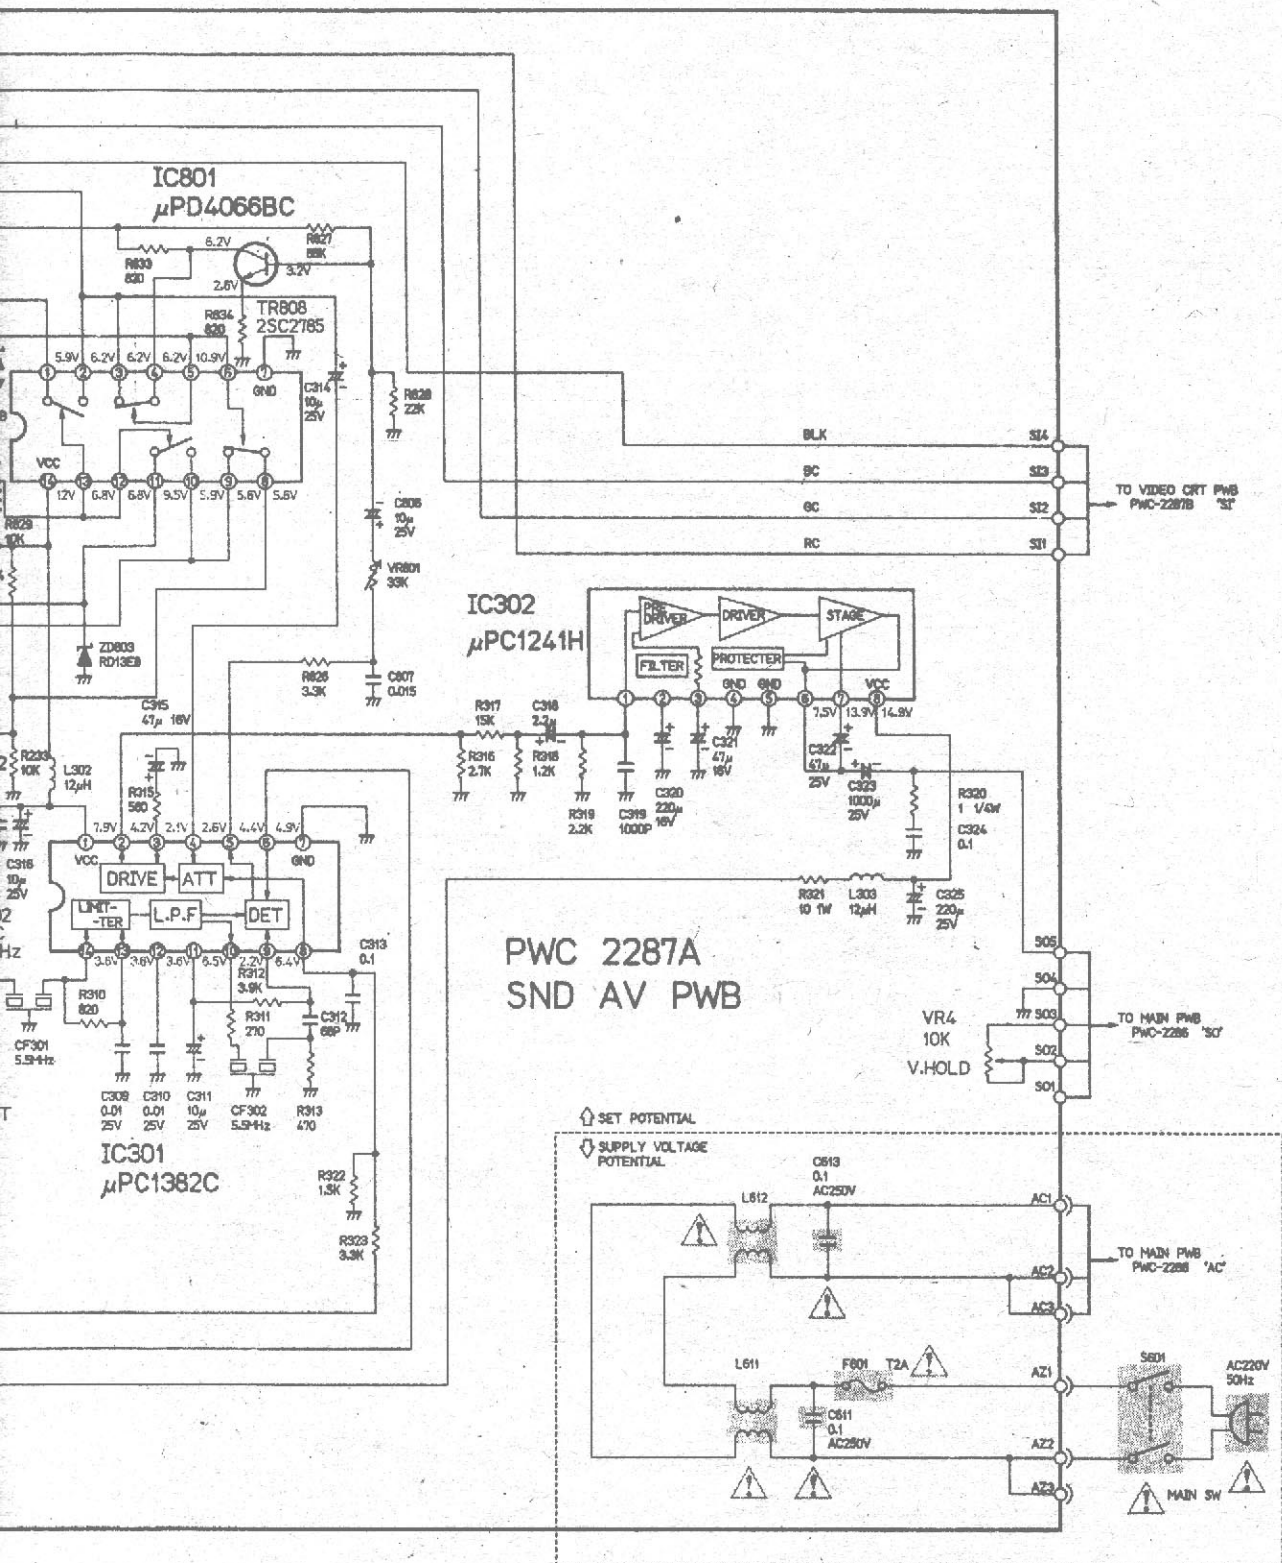


SECAM CONVERTER

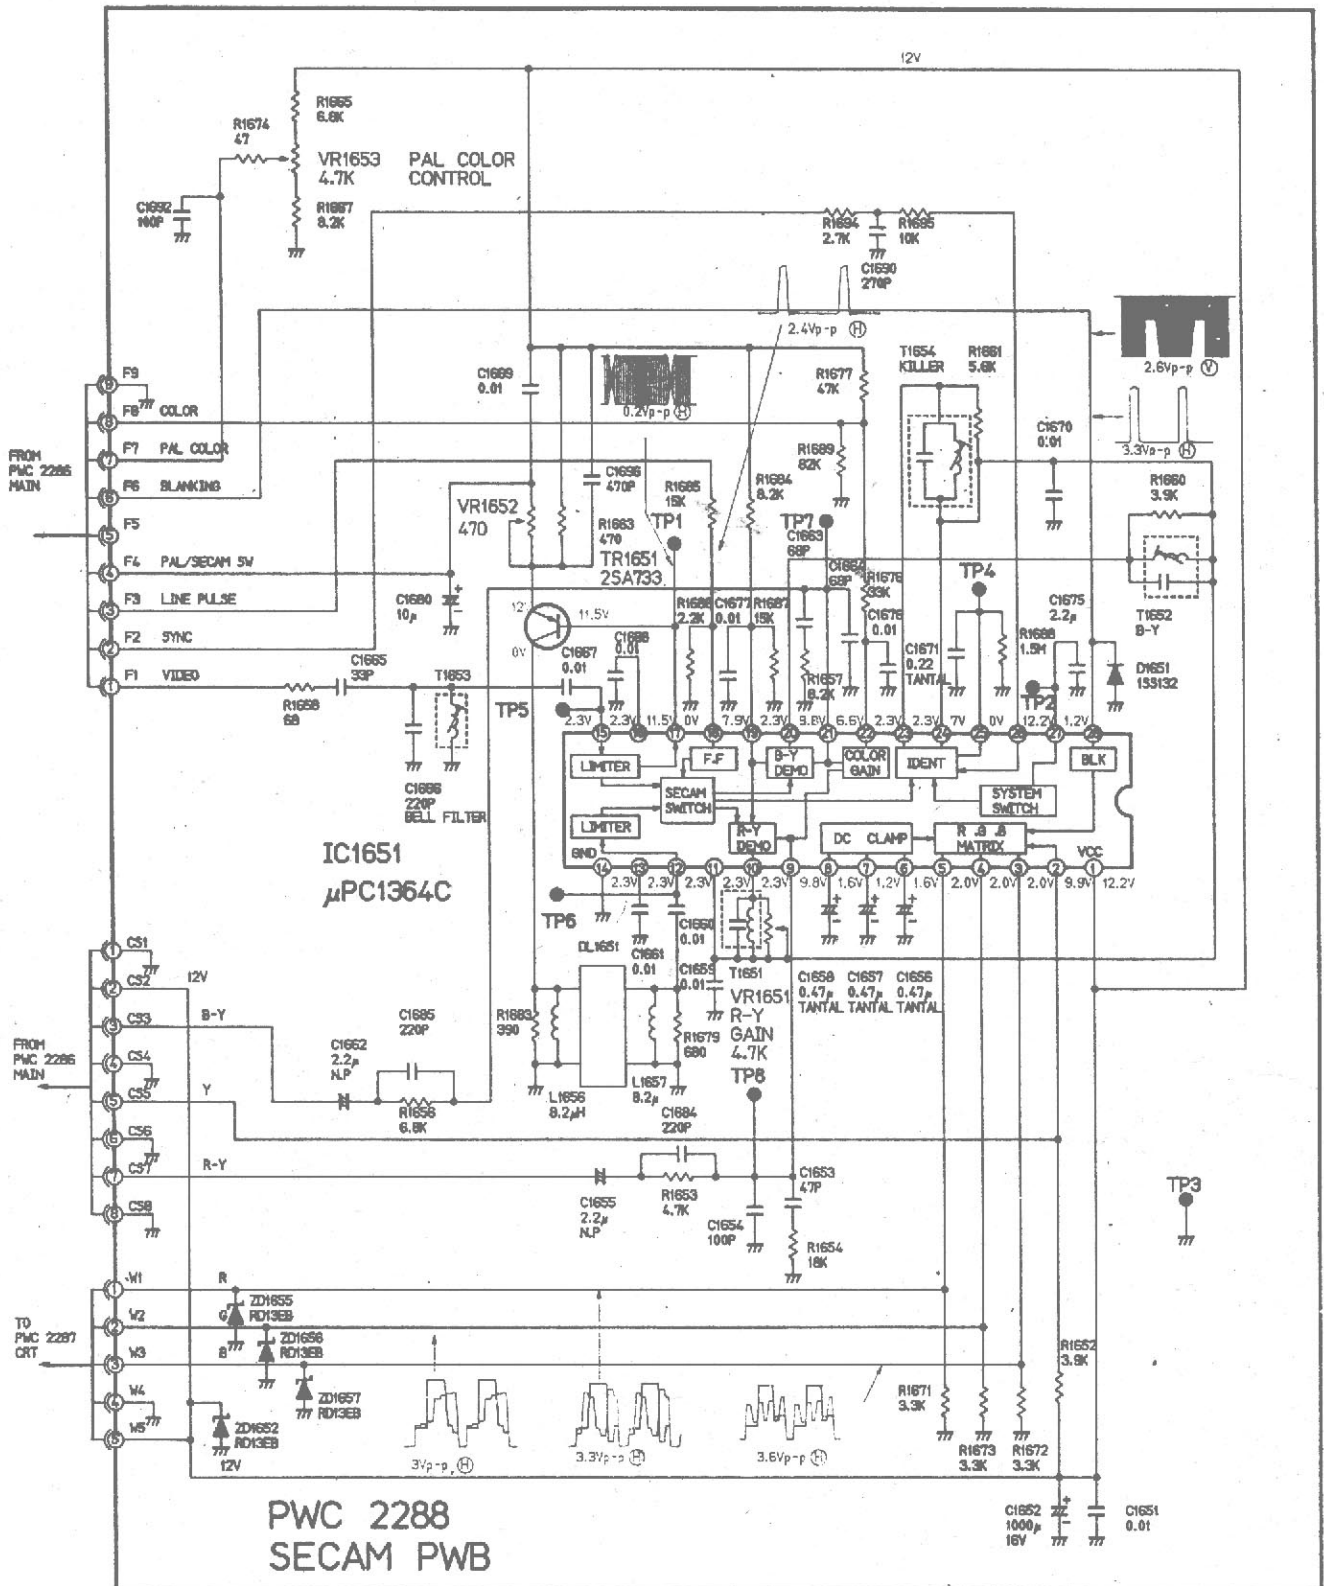

MODEL RD-1605E

REMOTE CONTROL UNIT

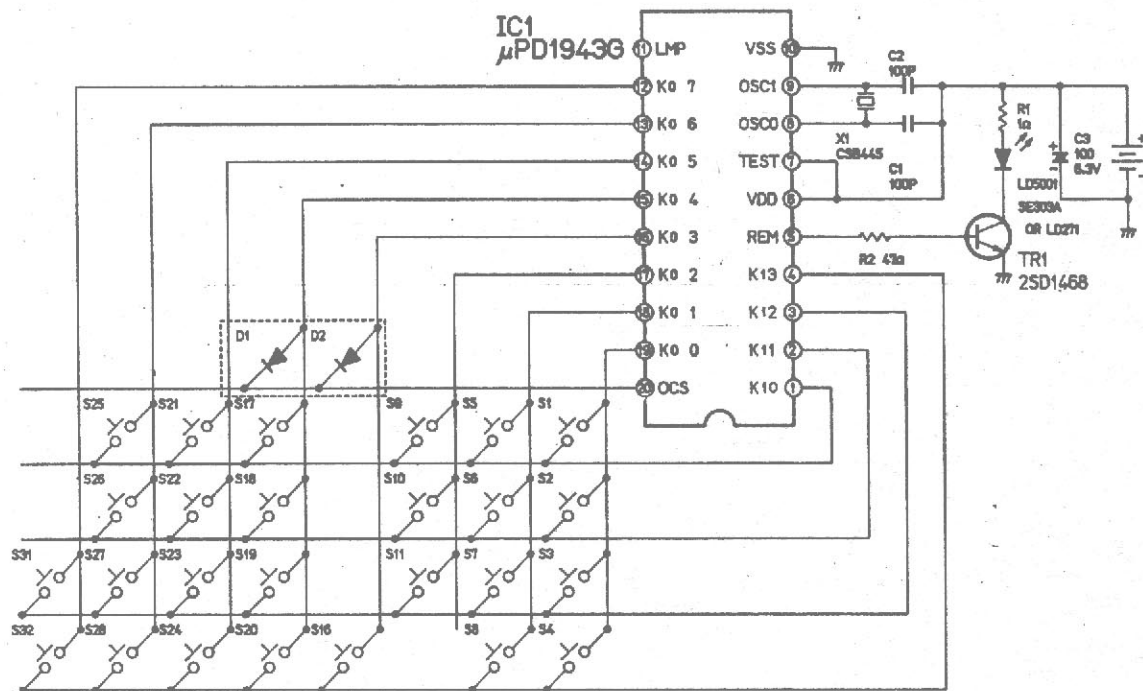

FUNCTION TABLE

Key	Function	Key	Function
S1	CH ▲ CHANNEL UP	S18	2
S2	CH ▼ CHANNEL DOWN	S19	3
S3	▲ VOLUME UP	S20	4
S4	▼ VOLUME DOWN	S21	5
S5	13	S22	6
S6	14	S23	7
S7	15	S24	8
S8	16	S25	9
S9	Ⓚ POWER	S26	10
S10	Ⓚ MUTE	S27	11
S11	Ⓚ / ∞ TV/VTR	S28	12
S16	CHCALL CH-CALL	S31	OFF TIMER
S17	1	S32	ON TIMER