

VR352

VOLTAGE CHARTS

Hi-Fi AUDIO

MODE	IC HI-FI AUDIO (IC251)						
PIN No.	STOP	REC	PLAY	REW/ F.FWD	REV/FWD SEARCH	REC PAUSE	PLAY PAUSE
1	2.8	1.7	2.0	2.8	2.0	2.8	2.0
2	0.2	0	0.5	0.2	0.4	0.1	0
3	2.0	2.5	2.2	2.0	2.2	2.2	2.5
4	2.0	2.0	2.7	2.0	2.7	1.9	2.0
5	2.5	2.5	2.3	2.5	2.4	2.5	2.5
6	0	0	0	0	0	0	0
7	0	0	0	0	0	0	0
8	0	0	0	0	5.1	0	5.0
9	0.2	0.2	0.6	0.2	0.5	0.2	0.4
10	2.5	2.5	2.5	2.5	2.6	2.5	2.6
11	2.5	2.5	2.7	2.5	2.7	2.5	2.6
12	2.5	2.5	2.7	2.5	2.7	2.5	2.6
13	2.5	2.5	2.5	2.5	2.5	2.5	2.5
14	5.1	5.1	5.1	5.1	5.1	5.0	5.0
15	2.5	2.5	2.6	2.5	2.7	2.5	2.6
16	2.5	2.5	2.7	2.5	2.7	2.5	2.6
17	0	0	4.0	0	0	0	0
18	4.2	4.2	2.8	4.2	2.8	4.2	2.8
19	4.2	4.2	2.8	4.2	2.8	4.2	2.8
20	5.1	5.1	5.1	5.1	5.1	5.1	5.1
21	0.3	2.5	0	0.3	0	2.8	0
22	2.0	4.2	2.0	2.0	2.0	2.0	2.0
23	0	0	0	0	0	0	0
24	0	2.5	0	0	0	0	0
25	2.0	4.2	2.0	2.0	2.0	2.0	2.0
26	2.0	4.1	2.0	2.0	2	2.0	2.0
27	0	2.3	0	0	0	2.5	0
28	0.1	1.5	3.0	0.1	3.0	1.7	2.8
29	2.5	2.5	2.6	2.5	2.5	2.5	2.5
30	5.1	5.0	5.1	5.1	5.0	5.0	5.1
31	4.0	4.5	4.3	4.0	4.5	3.9	4.2
32	4.3	4.3	4.6	4.3	4.7	3.8	4.3

MODE	IC HI-FI AUDIO (IC251)						
PIN No.	STOP	REC	PLAY	REW/ F.FWD	REV/FWD SEARCH	REC PAUSE	PLAY PAUSE
33	0	0	0.7	0	0.1	1.1	0
34	0	0	0	0	0	0	0
35	2.0	2.0	1.9	2.0	2.0	2.0	2.0
36	5.1	5.1	5.1	5.1	5.1	5.1	5.1
37	2.5	2.5	2.7	2.5	2.8	2.5	2.7
38	2.5	2.5	2.8	2.5	2.7	2.5	2.7
39	2.5	2.3	2.7	2.5	2.8	2.5	2.7
40	2.5	2.5	2.8	2.5	2.8	2.5	2.7
41	2.5	2.5	2.7	2.5	2.8	2.5	2.7
42	0.2	0.1	0.6	0.2	0.5	0.1	0.4
43	0	0	0	0	0	0	0
44	0	0	0	0	0	0	0
45	2.5	2.5	1.9	2.5	2.4	2.5	2.5
46	2.0	1.9	2.8	2.0	2.8	2.0	2.7
47	0	0	0	0	0	0	0
48	0	0	0	0	0	0	0
49	0	0	0.2	0	0.1	0	0.2
50	2.0	2.4	2.4	2.0	2.3	2.5	2.1
51	0	1.8	2.3	0	2.4	0	1.6
52	0	0	0.1	0	0	0	0.1
53	1.3	1.2	1.3	1.3	1.3	1.3	1.3
54	1.9	2.5	2.2	1.9	2.4	2.5	2.1
55	0	0	0	0	0	0	0
56	4.2	4.2	4.3	4.2	4.2	4.2	4.2
57	2.7	2.7	2.7	2.7	2.6	2.7	2.4
58	4.2	4.2	4.2	4.2	4.2	4.2	4.2
59	0	0	0	0	0	0	0
60	8.9	9.0	9.0	9	9.0	9.0	9.0
61	0	0	0	0	0	0	0
62	5.2	5.1	5.1	5.3	5.1	5.1	5.1
63	0	0	0	0	0	0	0
64	2.5	2.5	2.5	2.5	2.5	2.5	2.5