



## MAIN CIRCUIT BOARD WAVEFORMS


## MAIN C.B.A.

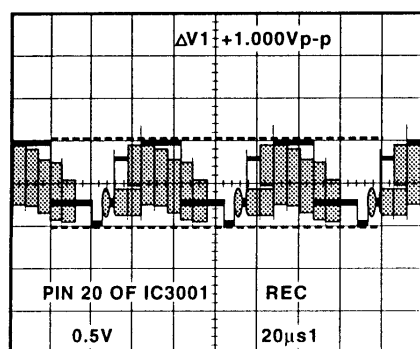


WF1

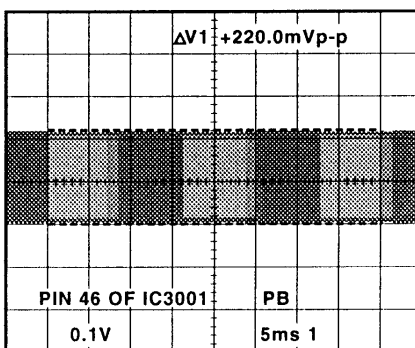


WF5

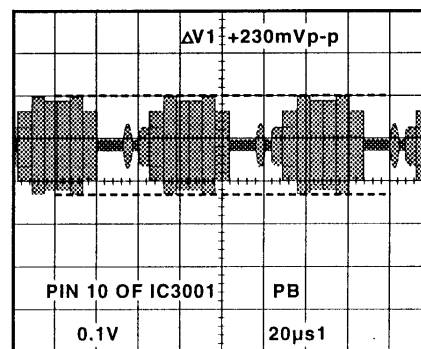


WF7

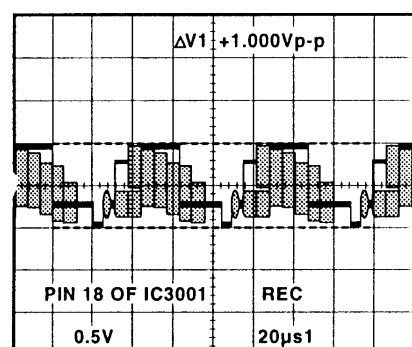


WF2

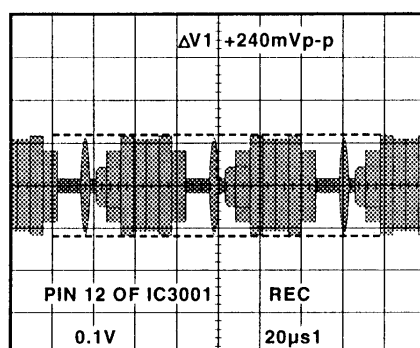


WF6

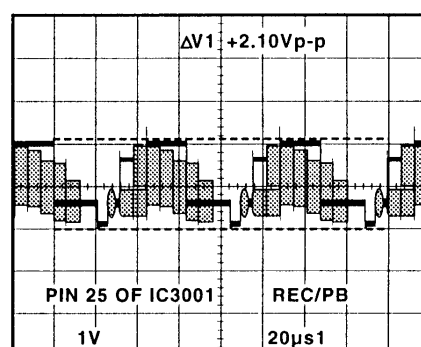


WF8

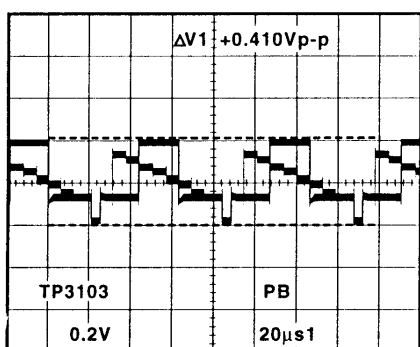


WF3

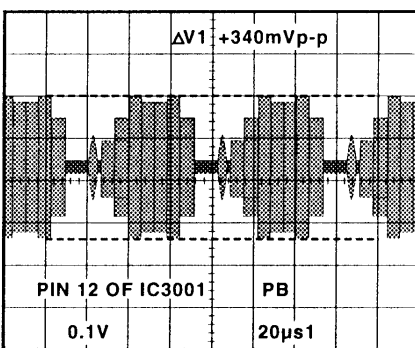


WF6

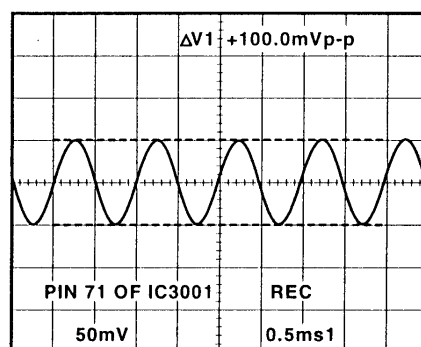


WF9

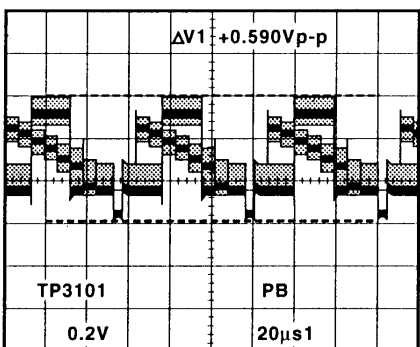

WF4

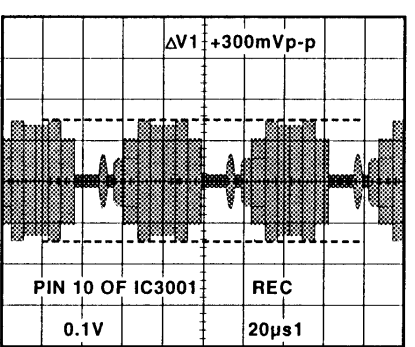


WF7

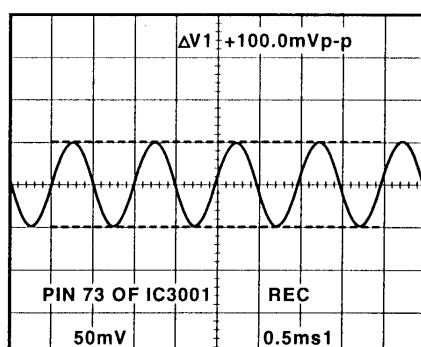


WF10


## MAIN CIRCUIT BOARD WAVEFORMS (Continued)

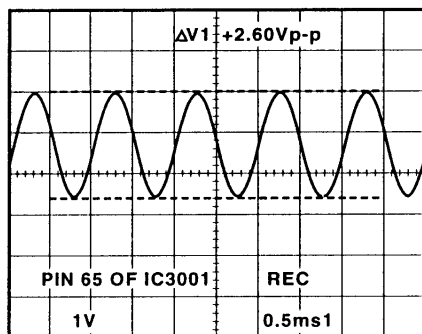

WF11

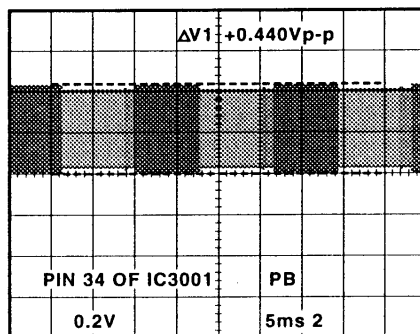


WF15

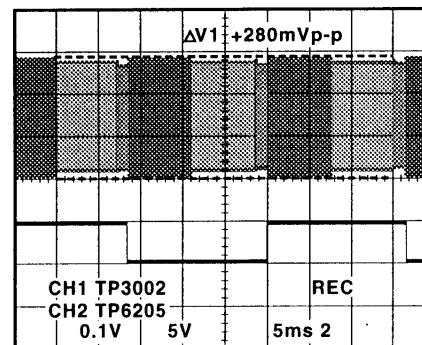


CH1 WF18


CH2 WF22

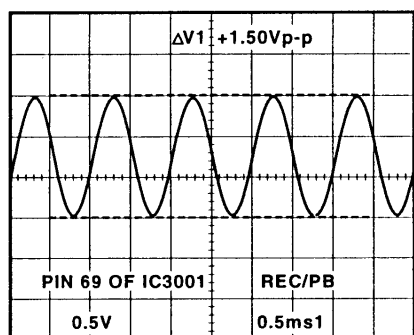(FOR MODELS  
VG2042,VR349)

WF12

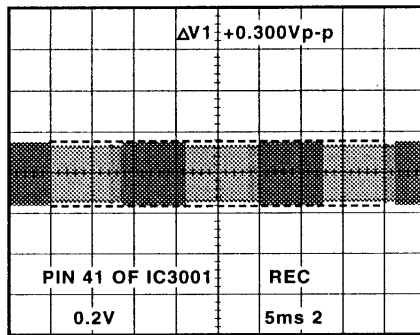


WF16

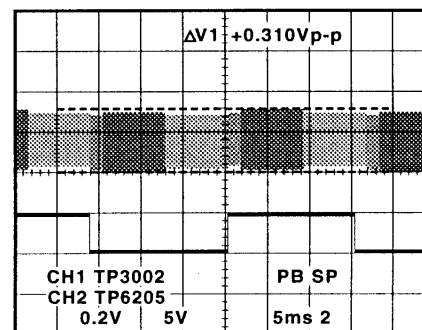


CH1 WF18


CH2 WF22

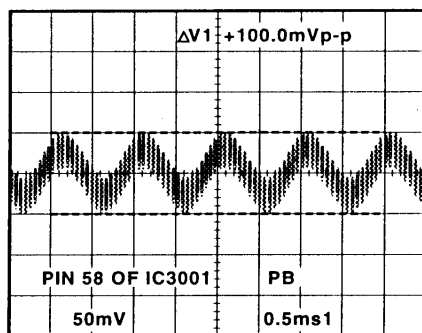(FOR MODELS  
VG2042,VR349)


WF13

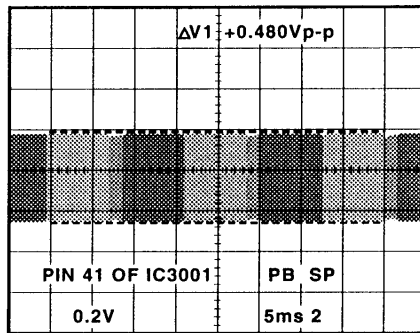


WF16

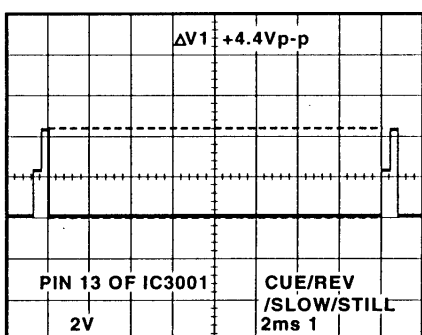

WF14

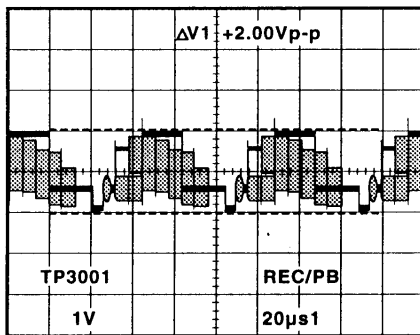

WF17

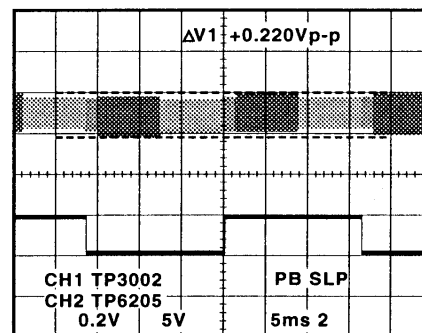


CH1 WF18


CH2 WF22

(FOR MODELS  
VG2042,VR349)


## MAIN CIRCUIT BOARD WAVEFORMS (Continued)

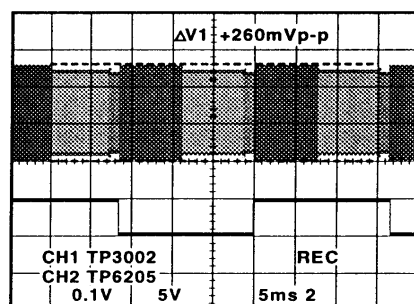


CH1 WF18  
CH2 WF22  
(FOR MODELS  
VG4241, VR622HF)

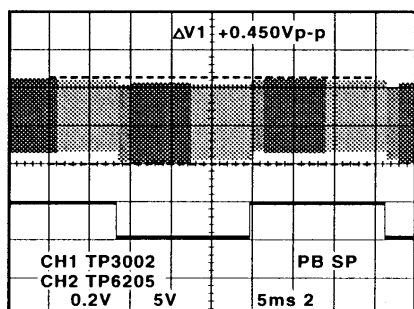


CH1 WF18  
CH2 WF22  
(FOR MODELS  
VG4241, VR622HF)

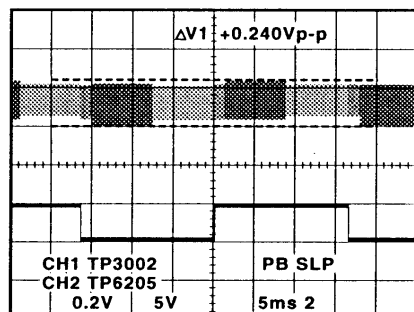


CH1 WF18  
CH2 WF22  
(FOR MODELS  
VG4241, VR622HF)

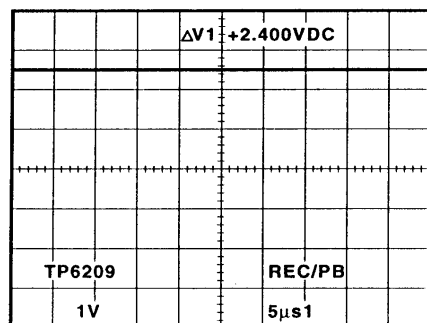


WF19

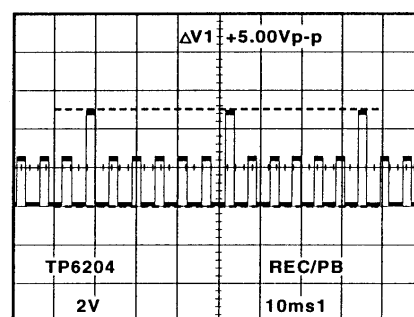


WF21

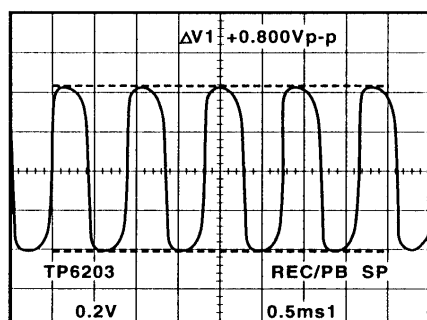


WF20

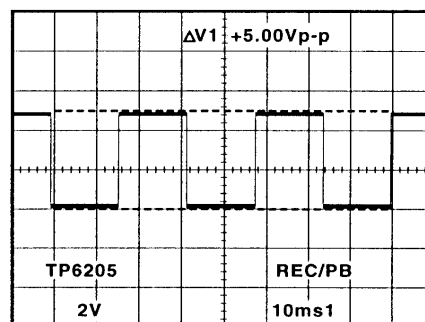


WF22

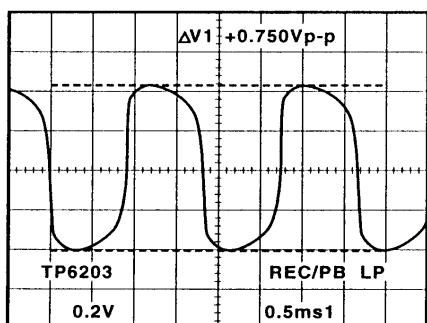


WF20

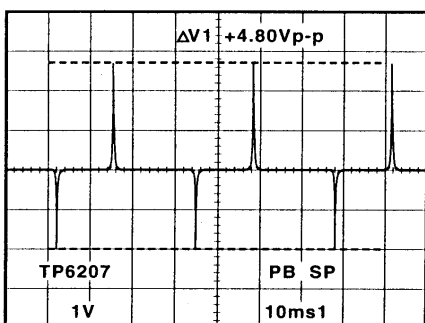

WF23

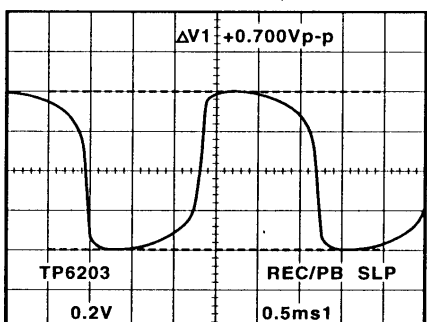


WF20

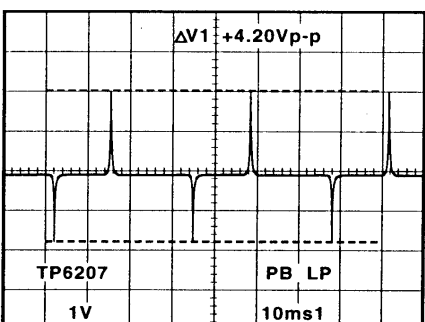


WF23


## MAIN CIRCUIT BOARD WAVEFORMS (Continued)

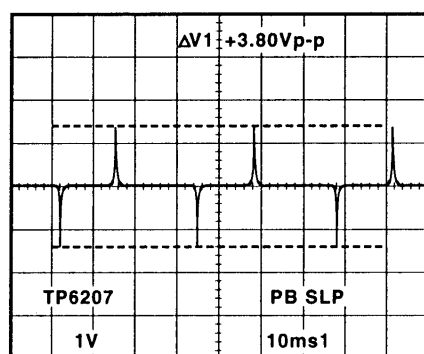


WF23

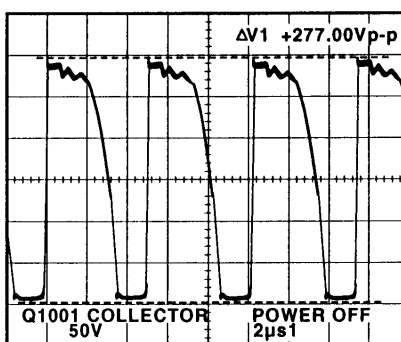


WF27

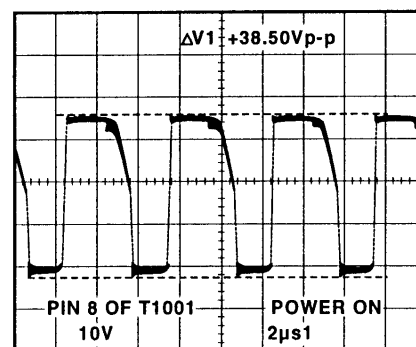


WF30

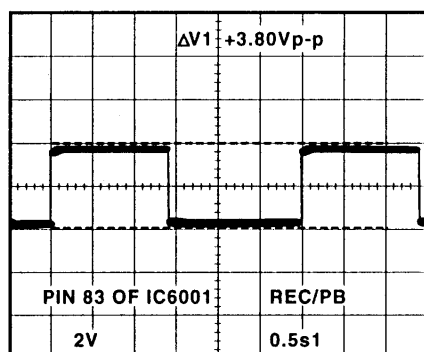


WF24

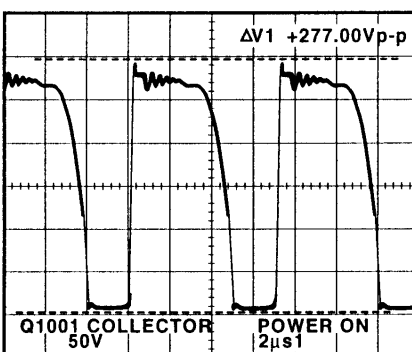


WF27

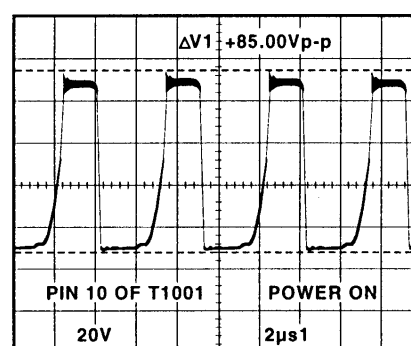


WF31

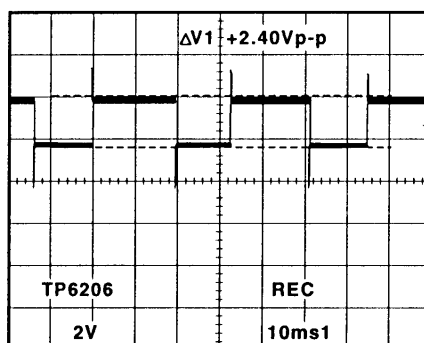


WF25

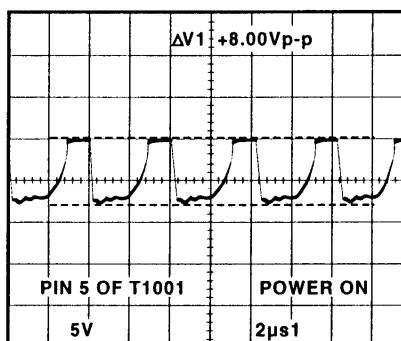


WF28

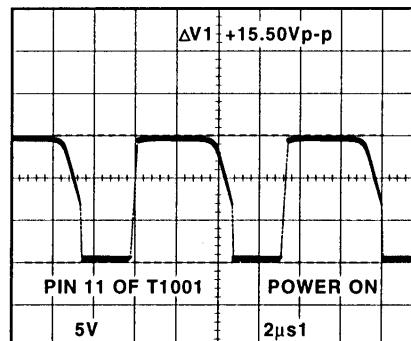


WF32

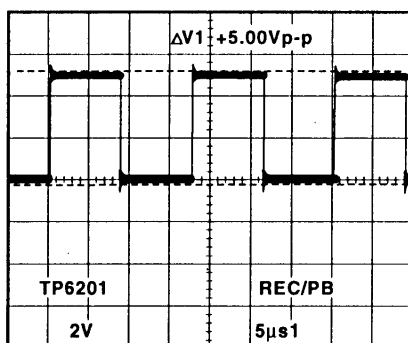

WF26

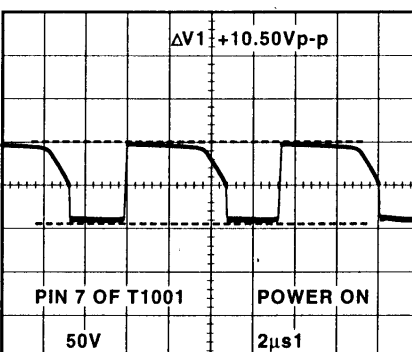


WF29

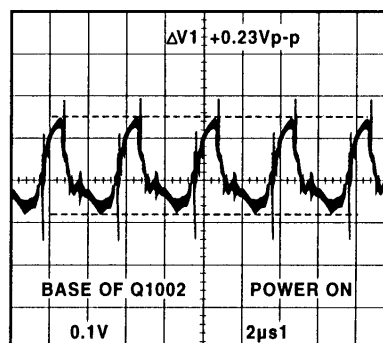


WF33


## MAIN CIRCUIT BOARD WAVEFORMS (Continued)

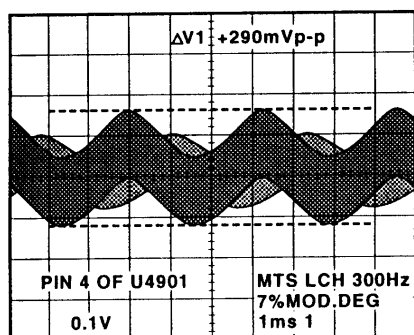


**WF34**  
(FOR MODELS  
VG4241, VR622HF)

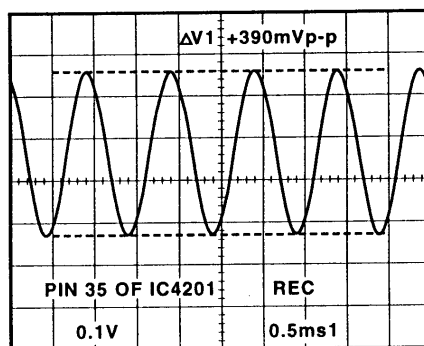


**WF37**  
(FOR MODELS  
VG4241, VR622HF)

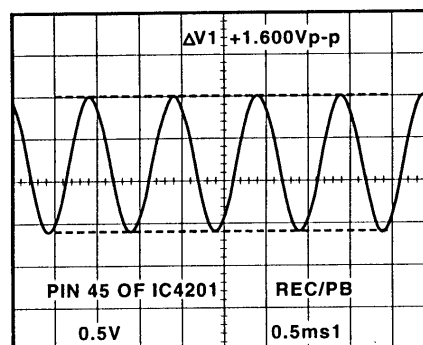


**WF40**  
(FOR MODELS  
VG4241, VR622HF)

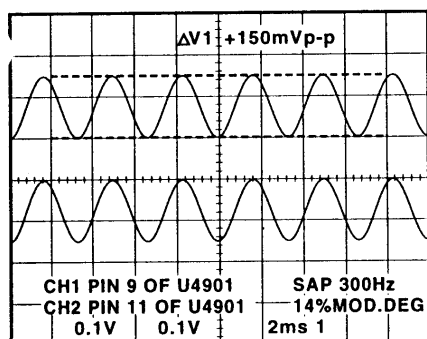


**CH1 WF35**  
**CH2 WF36**  
(FOR MODELS  
VG4241, VR622HF)

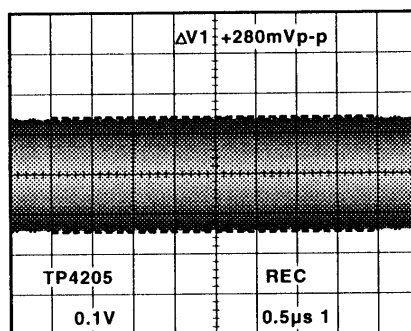


**WF38**  
(FOR MODELS  
VG4241, VR622HF)

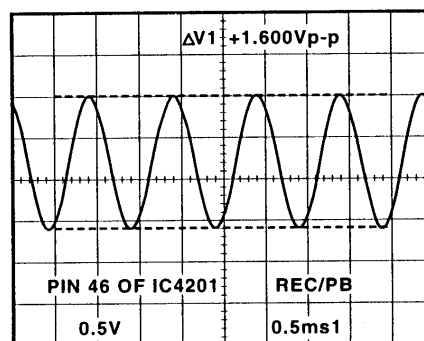


**WF41**  
(FOR MODELS  
VG4241, VR622HF)

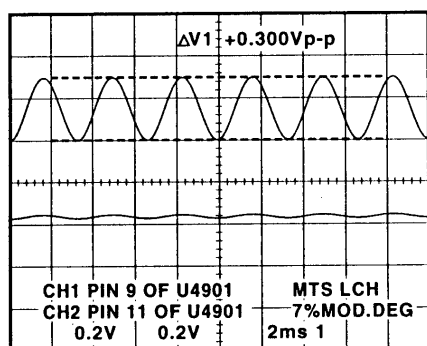

**CH1 WF35**  
**CH2 WF36**  
(FOR MODELS  
VG4241, VR622HF)

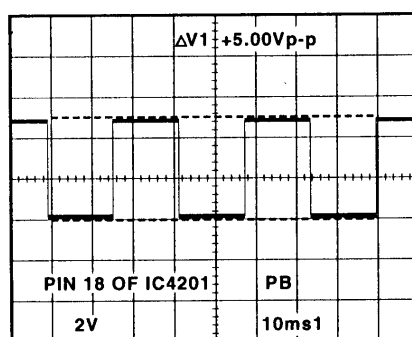


**WF39**  
(FOR MODELS  
VG4241, VR622HF)

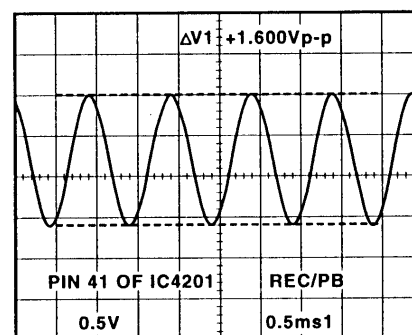


**WF42**  
(FOR MODELS  
VG4241, VR622HF)

MAIN CIRCUIT BOARD (Continued)/HEAD AMPLIFIER CIRCUIT BOARD WAVEFORMS

(FOR MODELS  
VG2042, VR349)  
HEAD AMP C.B.A.

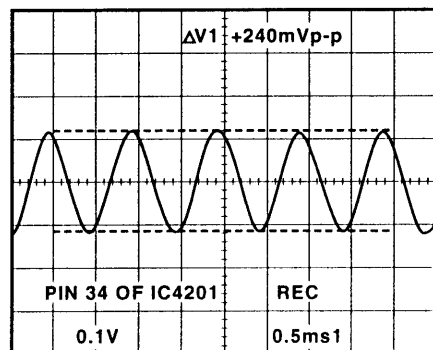


WF43  
(FOR MODELS  
VG4241, VR622HF)

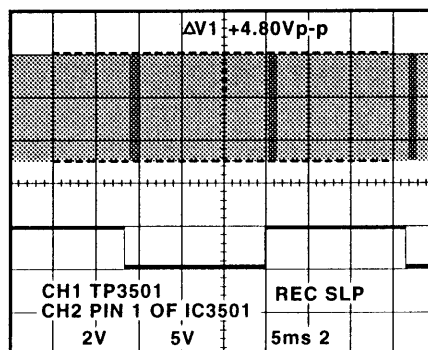


CH1 WF45  
CH2 WF46

(FOR MODELS  
VG4241, VR622HF)  
Hi-Fi AUDIO/VIDEO  
HEAD AMP C.B.A.

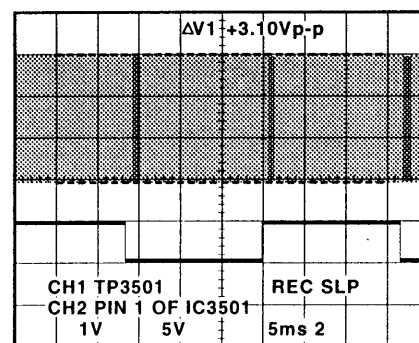

CH1 WF49  
CH2 WF50

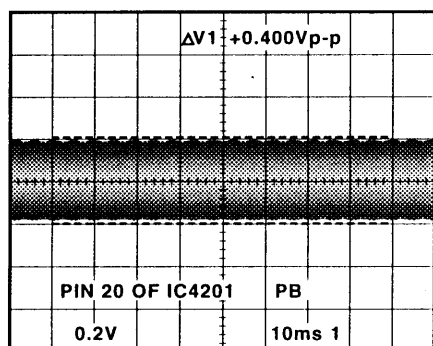

WF44  
(FOR MODELS  
VG4241, VR622HF)