

# **Hi-Fi AUDIO/VIDEO HEAD AMPLIFIER (VG4241/VR622HF) CIRCUIT VOLTAGE CHARTS**

(FOR MODELS VG4241, VR622HF)

Hi-Fi AUDIO/VIDEO HEAD AMP CIRCUIT

MODE PIN NO.	REC	PLAY	MODE PIN NO.	REC	PLAY
IC2601			9	2.6	2.6
1	13.0	13.0	10	5.1	5.1
2	13.0	13.0	11	0	0
3	13.5	13.5	12	0	0
4	1.2	1.2	13	3.9	3.9
5	5.1	5.1	14	3.9	3.9
6	0.9	0.9	15	0.1	0.1
7	1.0	1.0	16	13.0	13.0
8	0.7	0.7			
9	2.6	2.6	TP3501	0	0
10	1.5	1.5	TP4402	4.0	0
11	0	0	TP4405	0	0
12	3.9	3.9	TP4406	2.6	2.6
13	3.9	3.9			
14	3.9	3.9			
15	0.1	0.1			
16	13.2	13.2			
IC3501					
1	2.6	2.6			
2	0	4.2			
3	0.3	1.4			
4	0	0.7			
5	0	0			
6	0	0.7			
7	0.2	1.4			
8	0	0			
9	0	0			
10	0.2	2.2			
11	0	0			
12	0	0			
13	0	0			
14	0.2	2.2			
15	---	---			
16	6.3	0			
17	6.3	0			
18	6.3	0			
19	---	---			
20	---	---			
21	---	---			
22	---	---			
23	---	---			
24	---	---			
25	11.9	0.5			
26	5.0	5.0			
27	0	0			
28	0	0			
29	0	0			
30	2.7	2.3			
31	5.1	0.1			
32	0.1	0.1			
33	0	0			
34	0.1	0.7			
35	12.0	12.0			
36	0.1	5.0			
IC4401					
1	0	2.6			
2	4.0	0			
3	0.6	0			
4	0	0			
5	0.6	0.7			
6	4.0	0			
7	1.0	1.0			
8	0.7	0.7			