



TROUBLESHOOTING SUBINDEX


No Output Voltage
Digitron Does Not Operate
LED or Digitron Is Lit But Key Does Not Operate
1 Minute Back Up Timer Does Not Operate
Channel Broadcast Signal Is Not Received
LED Is Inoperative
Playback Picture Is Not Good (Noise After Tracking Adjustment)
Playback Picture Is Not Good (Noise Over Entire Screen)
VCR Goes Into Auto Stop During Playback
Drum Motor Does Not Rotate
Capstan Motor Does Not Rotate
VCR Goes Into The Emergency Mode
Cassette Loading Inoperative
EE Mode Picture NG
PB Video Signal Missing (2-Head Model)
Record Video Signal NG (2-Head Model)
PB Video Signal Missing (4-Head Model)
Record Video Signal NG (4-Head Model)
OSD Character Incorrect
No Sound In The EE Mode
No Sound In Playback Mode
No Sound In The Playback Mode After Recording

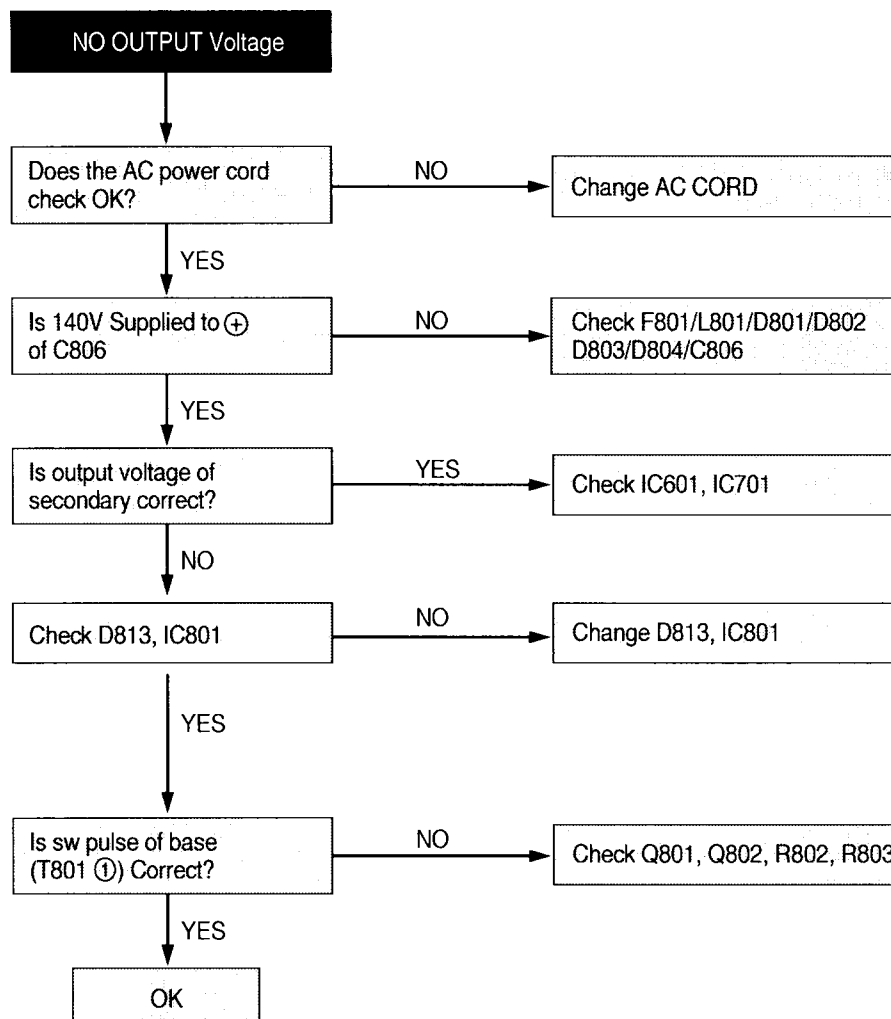

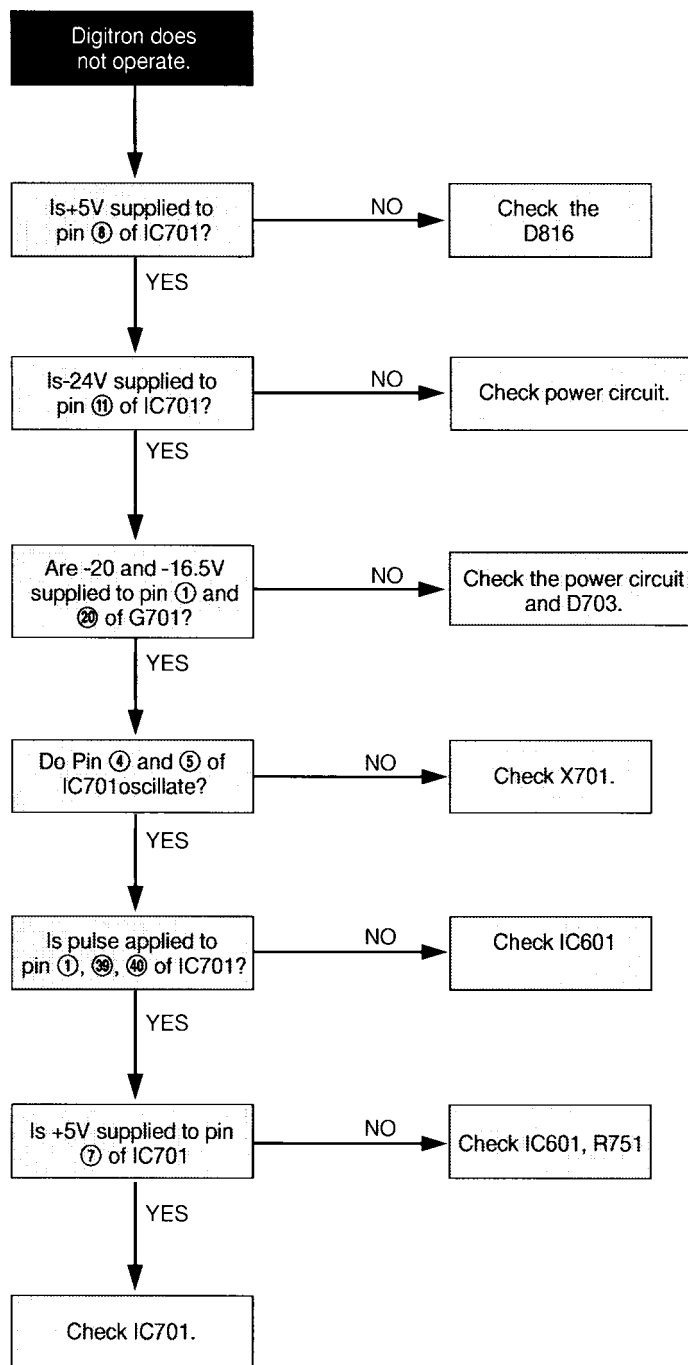


TROUBLESHOOTING GUIDES

LED or Digitron Is Lit But Key Does Not Operate

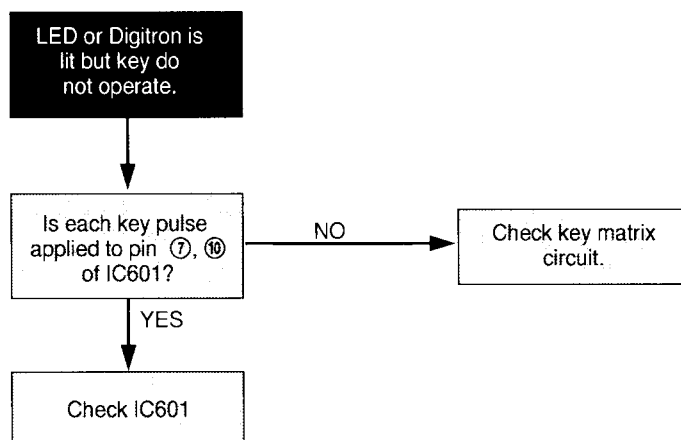


TROUBLESHOOTING GUIDES

1 Minute Back Up Timer Does Not Operate

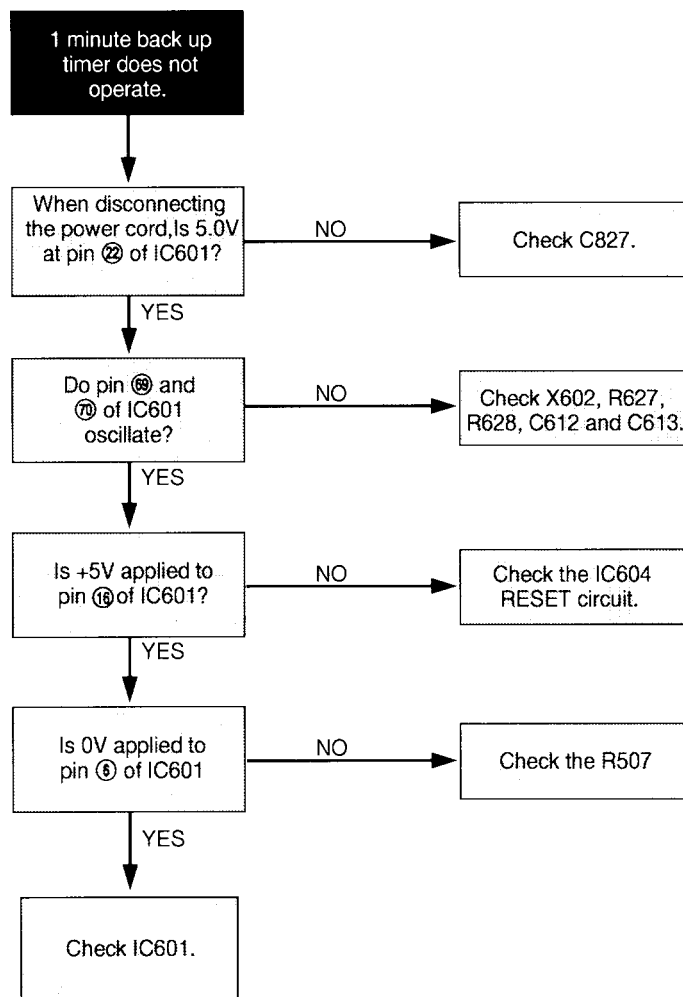


TROUBLESHOOTING GUIDES

Channel Broadcast Signal Is Not Received

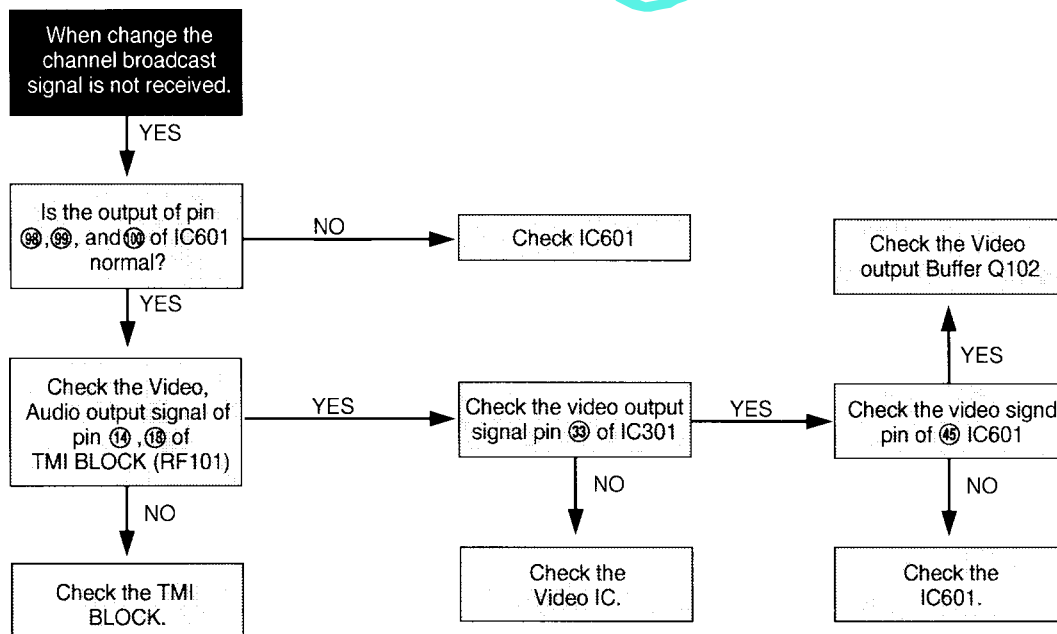


TROUBLESHOOTING GUIDES

LED Is Inoperative

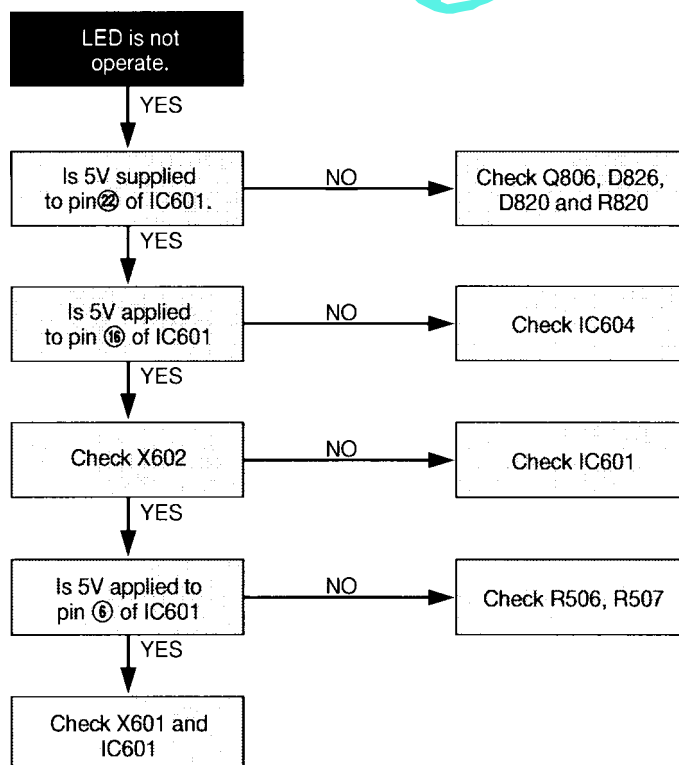


TROUBLESHOOTING GUIDES


Playback Picture Is Not Good (Noise After Tracking Adjustment)

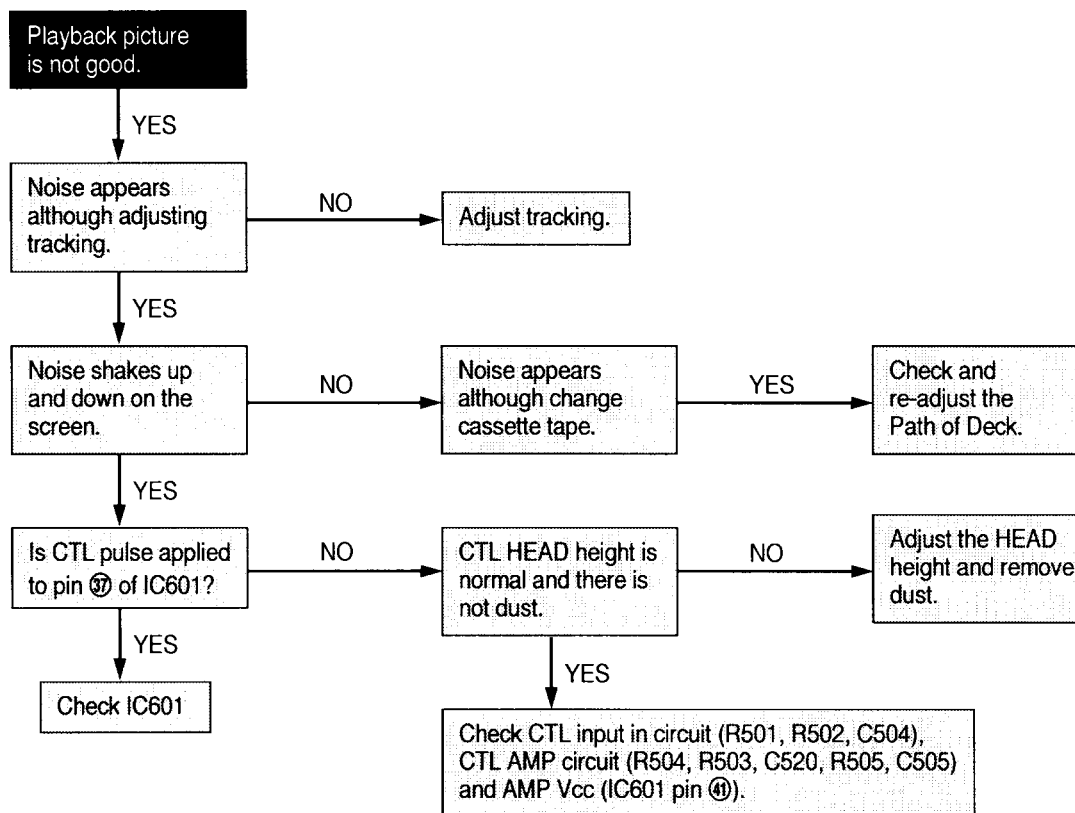


TROUBLESHOOTING GUIDES

Playback Picture Is Not Good (Noise Over Entire Screen)

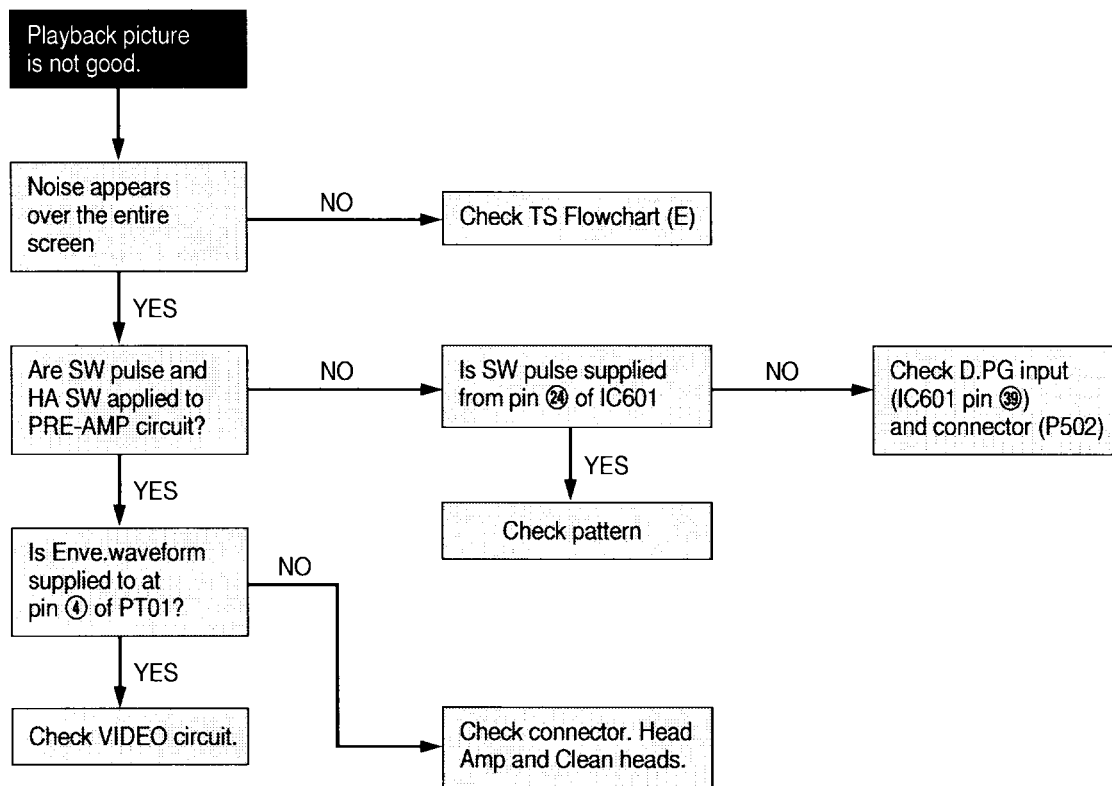


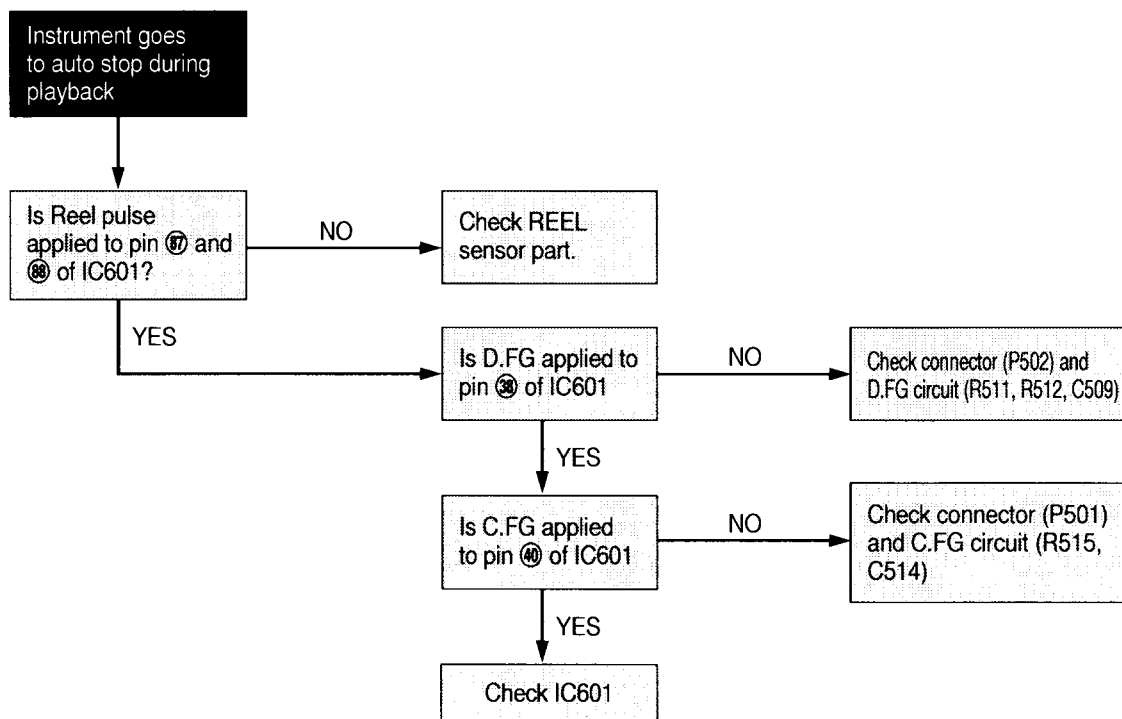

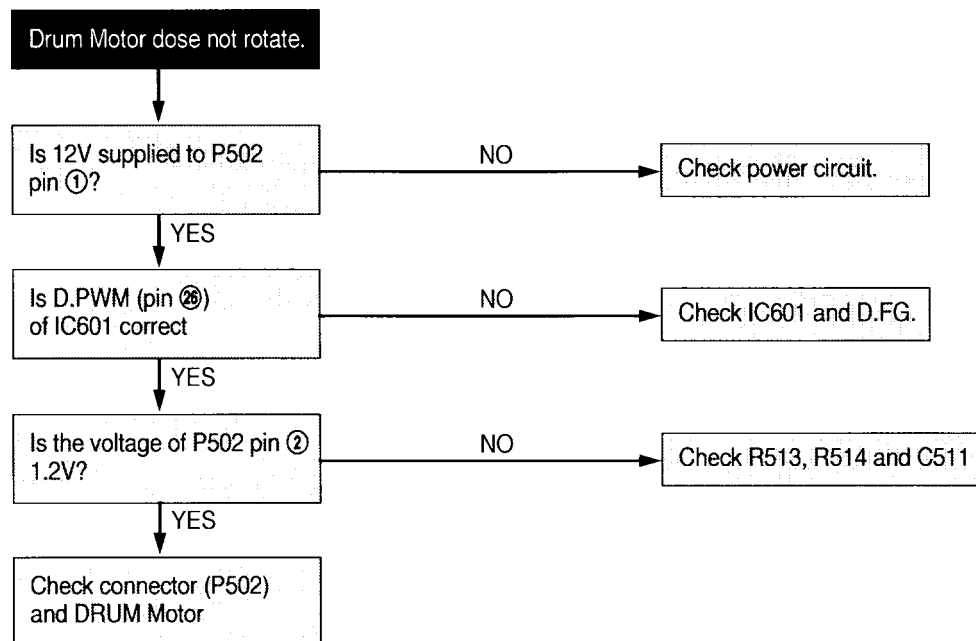


TROUBLESHOOTING GUIDES


Capstan Motor Does Not Rotate

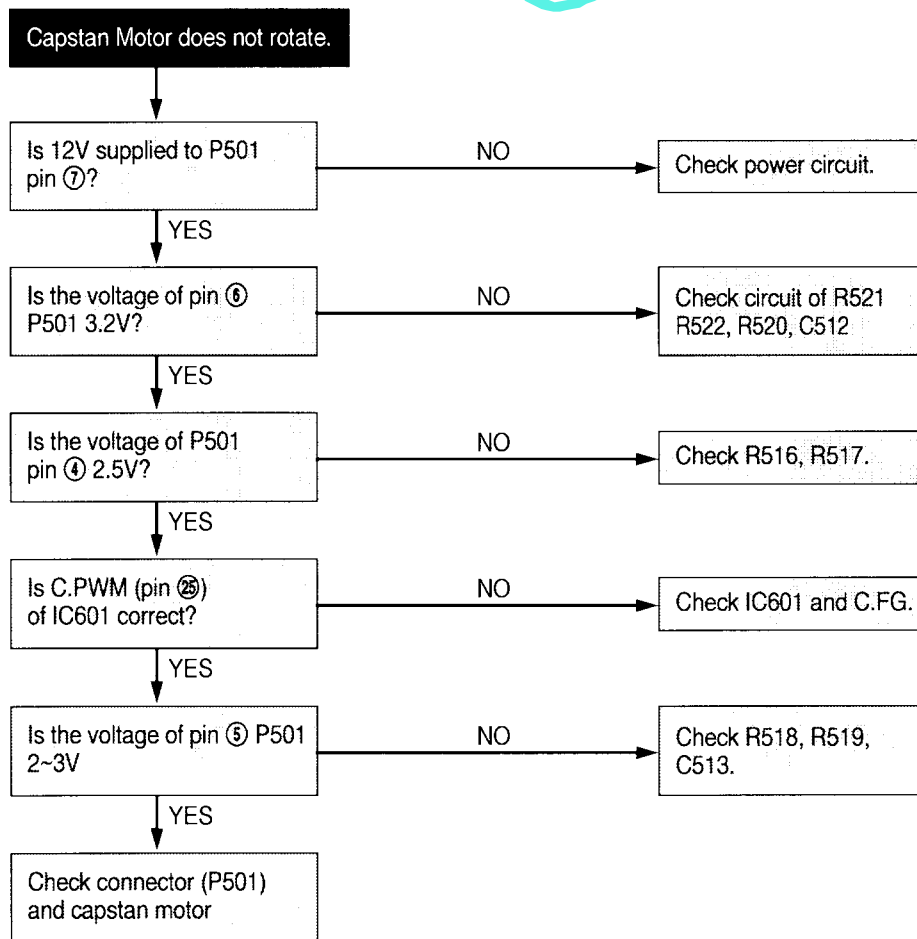


TROUBLESHOOTING GUIDES

VCR Goes Into The Emergency Mode

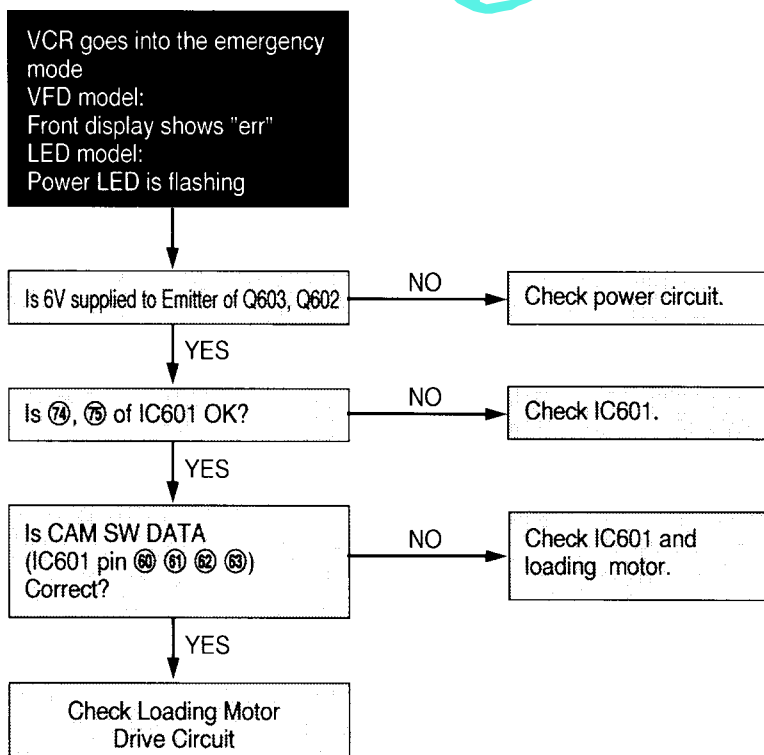


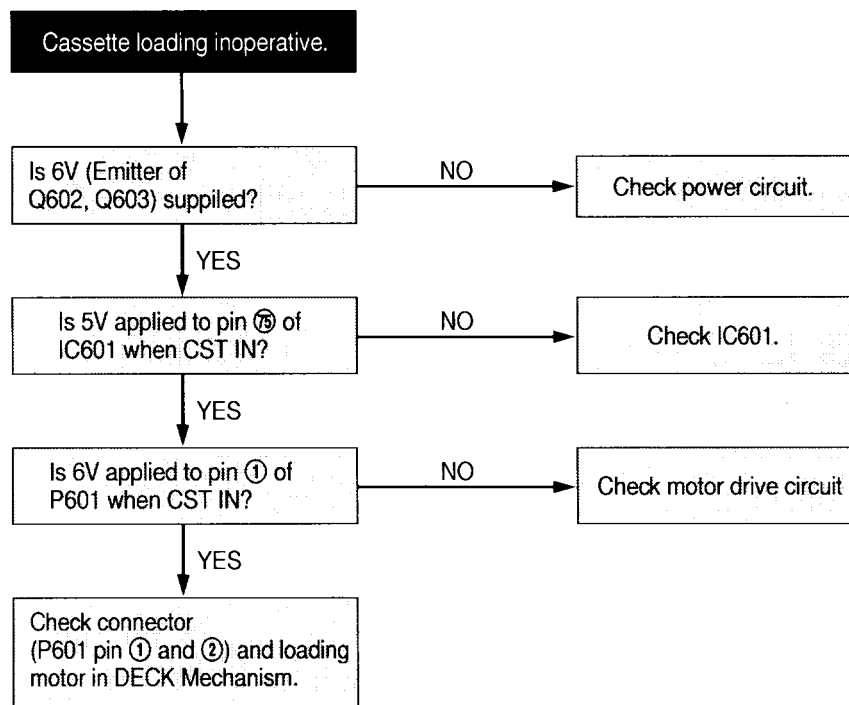


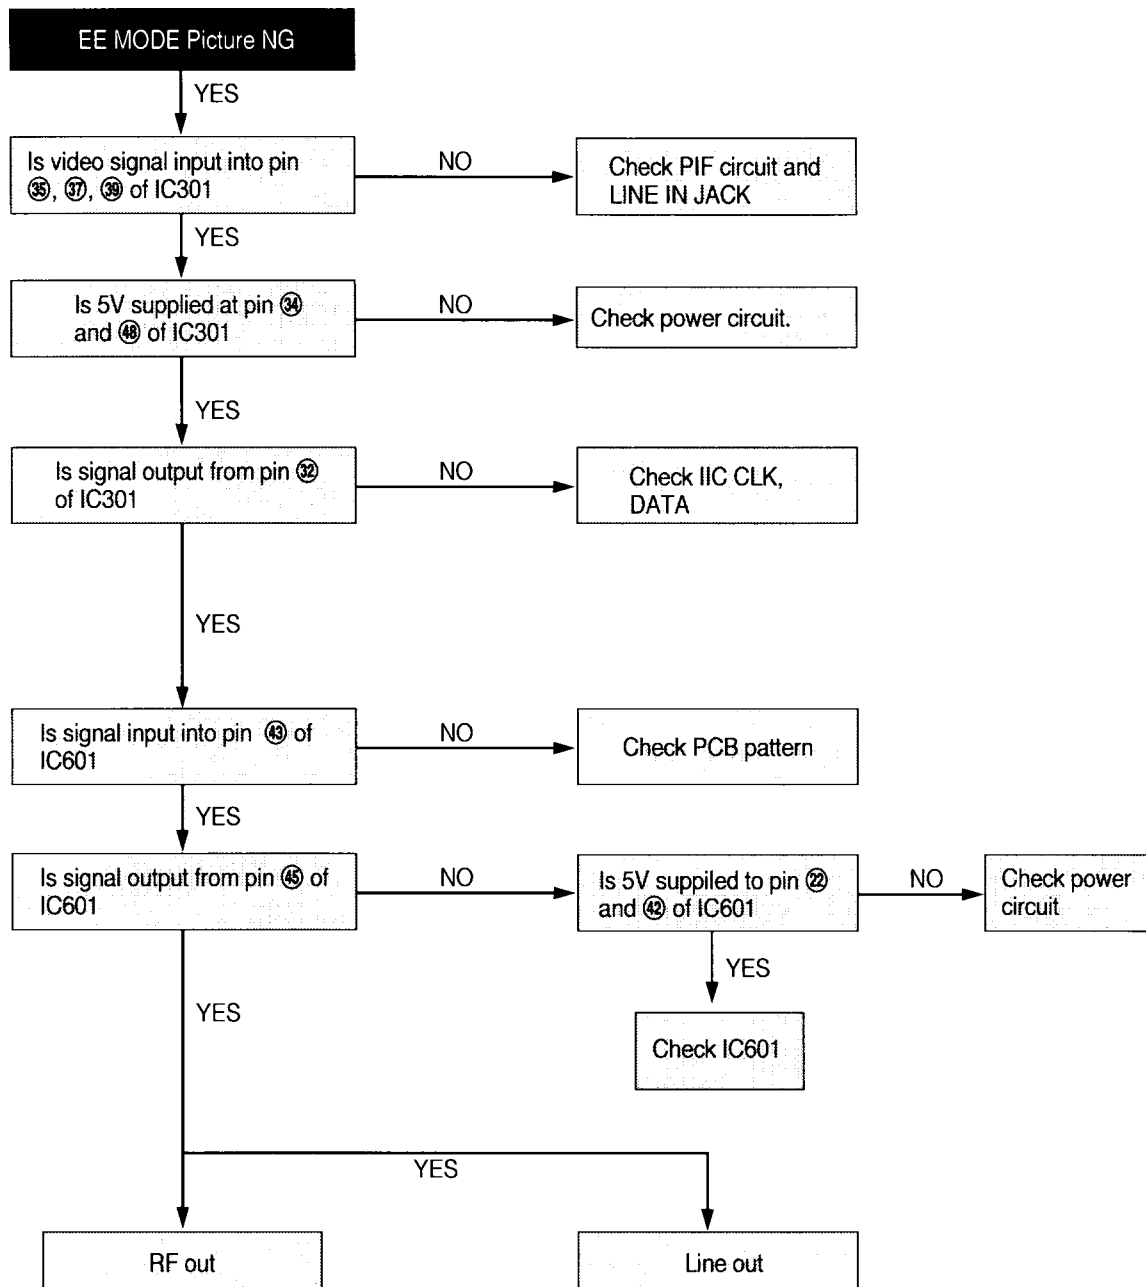

TROUBLESHOOTING GUIDES


PB Video Signal Missing (2-Head Model)

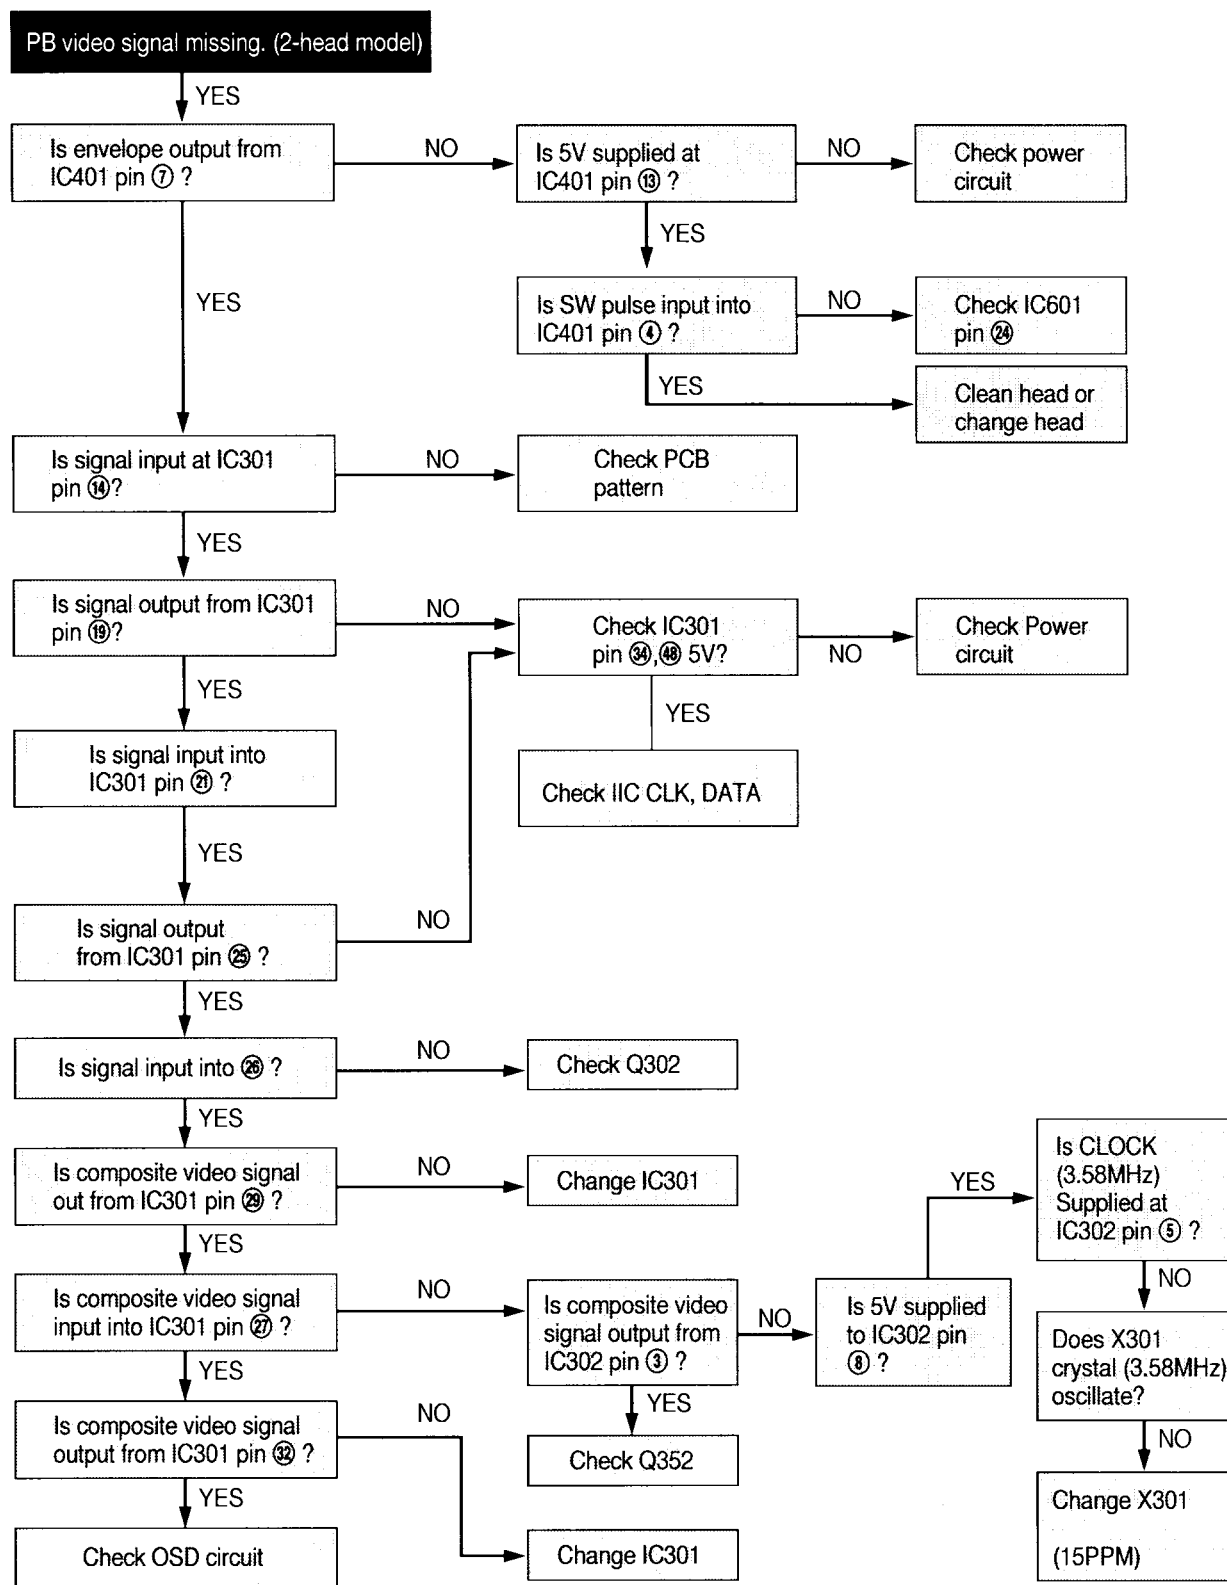


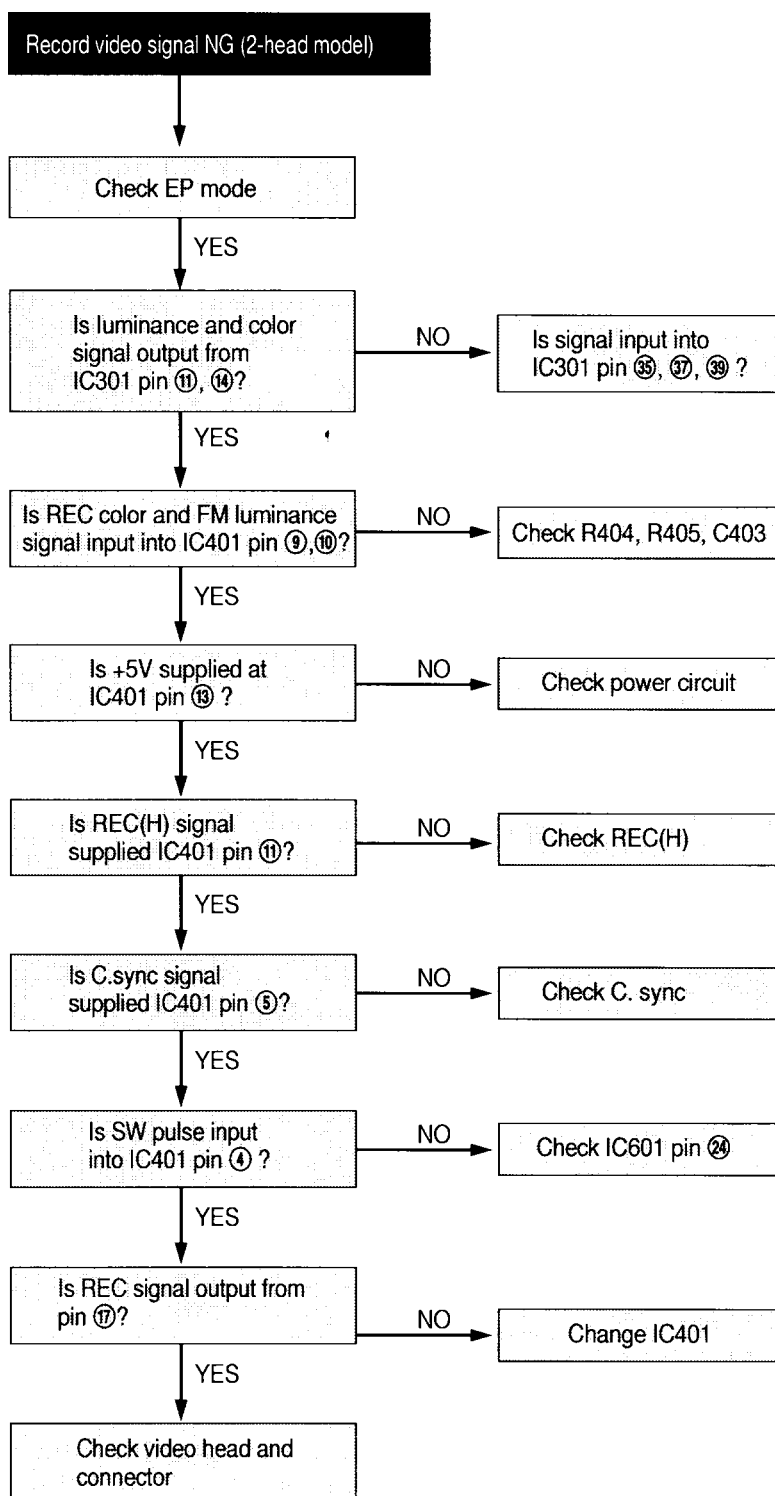



TROUBLESHOOTING GUIDES


PB Video Signal Missing (4-Head Model)

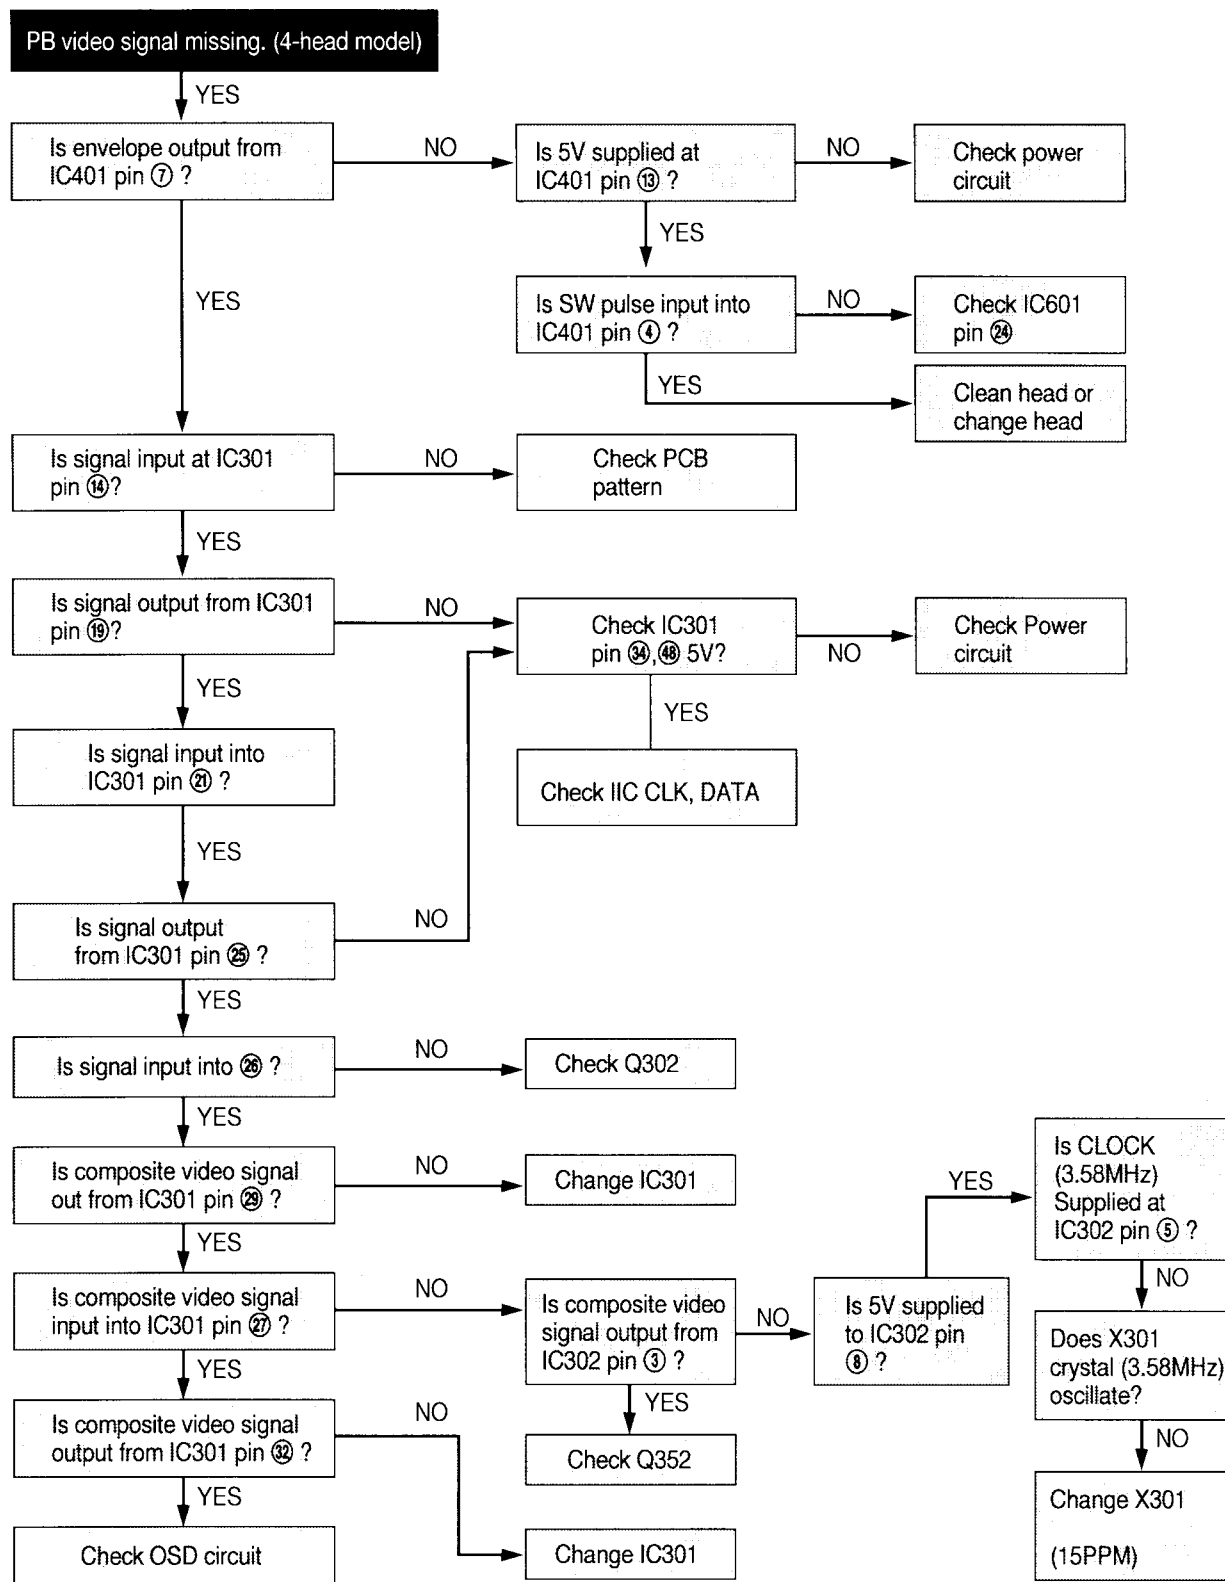

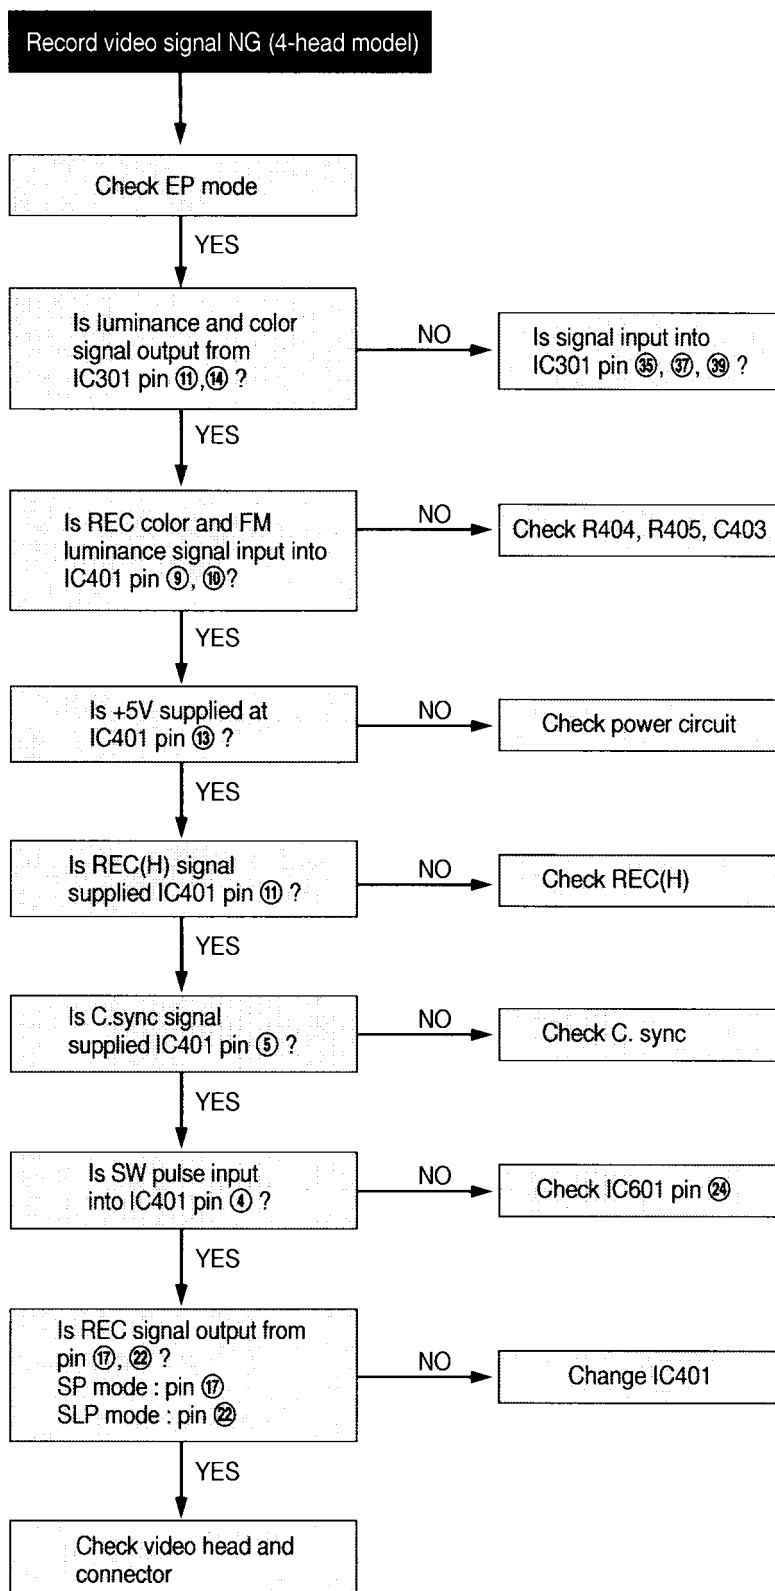

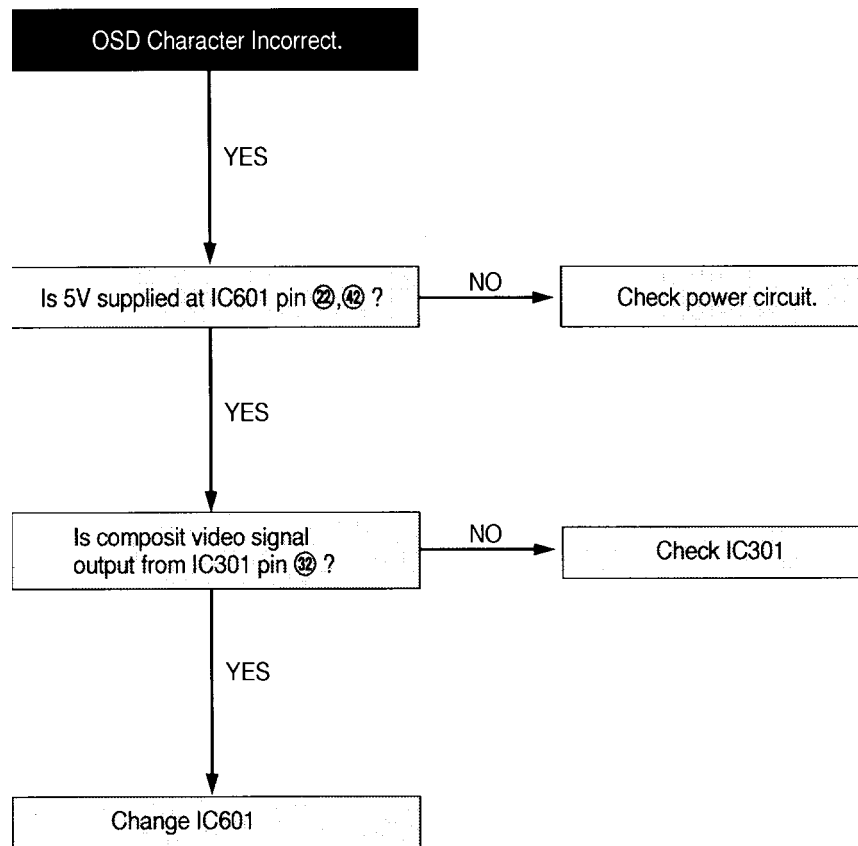

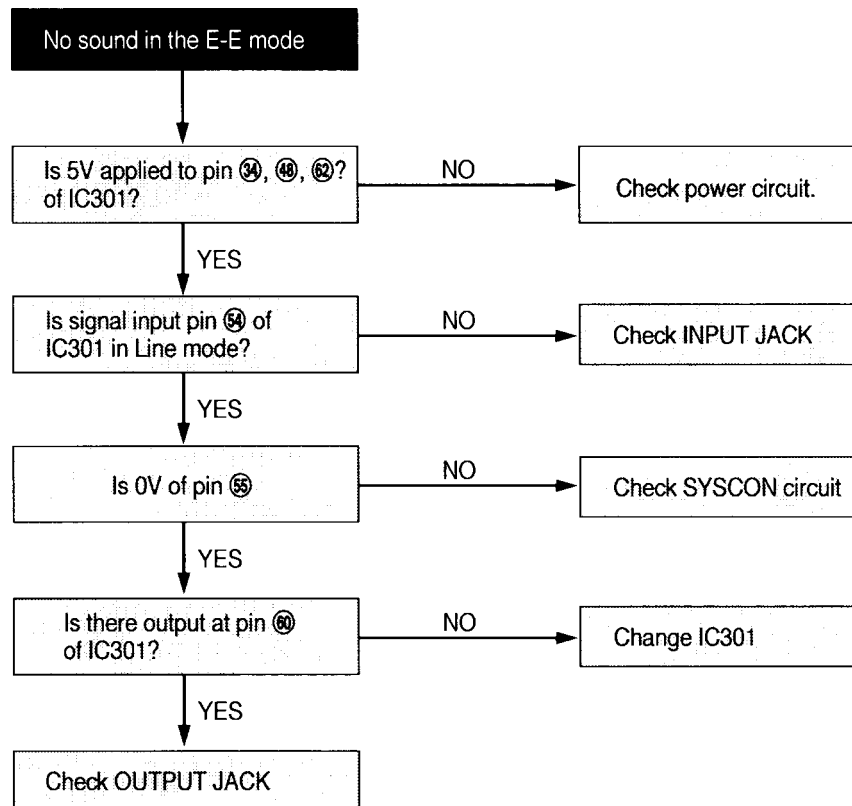

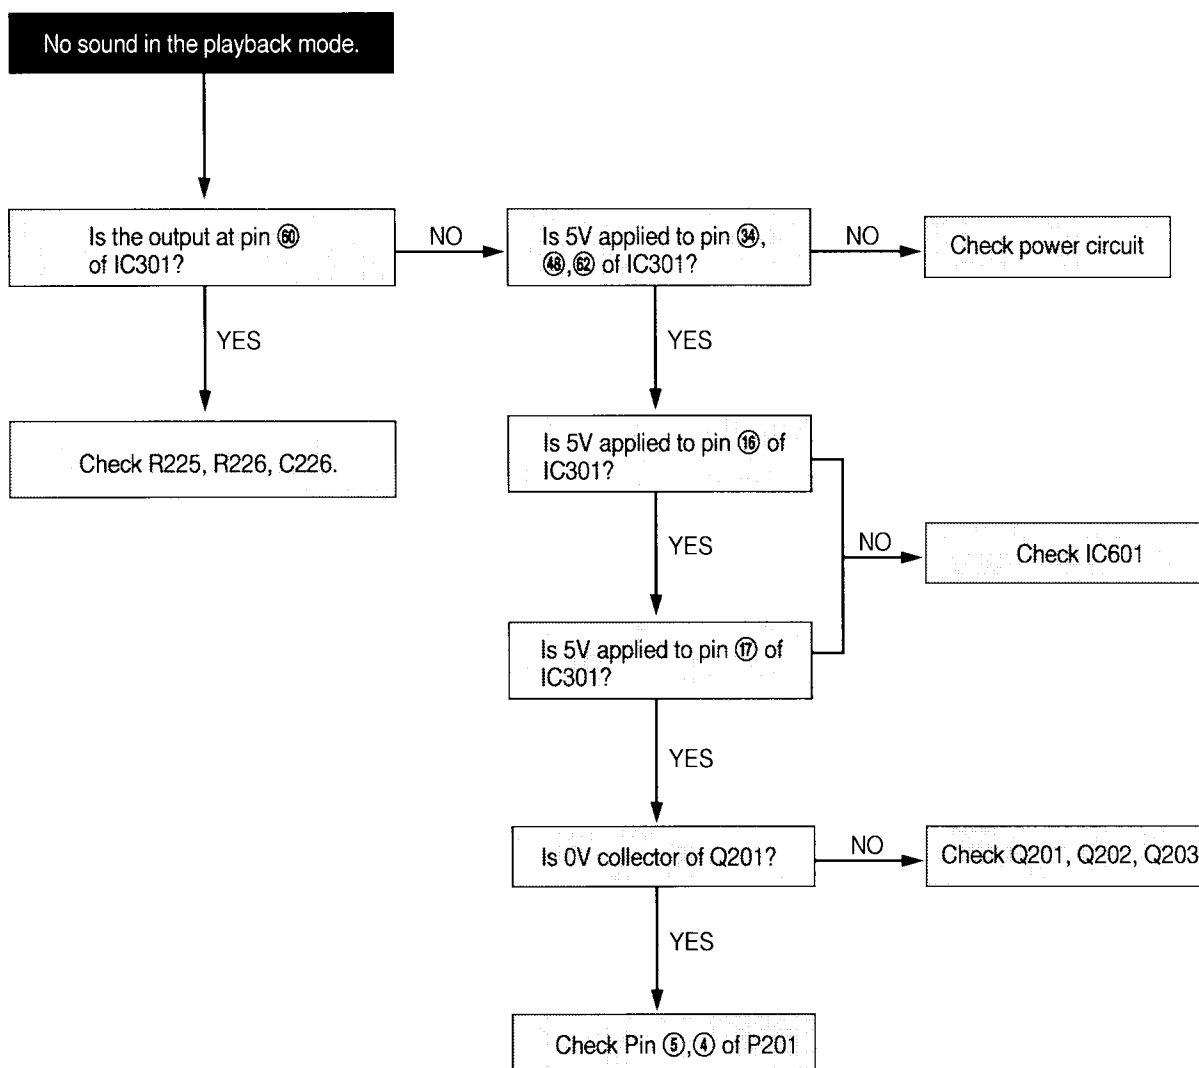

TROUBLESHOOTING GUIDES

No Sound In The Playback Mode After Recording

