


## TROUBLESHOOTING SUBINDEX


No Output Voltage  
Digitron Does Not Operate  
LED or Digitron Is Lit But Key Does Not Operate  
1 Minute Back Up Timer Does Not Operate  
Channel Broadcast Signal Is Not Received  
LED Is Inoperative  
Playback Picture Is Not Good (Noise After Tracking Adjustment)  
Playback Picture Is Not Good (Noise Over Entire Screen)  
VCR Goes Into Auto Stop During Playback  
Drum Motor Does Not Rotate  
Capstan Motor Does Not Rotate  
VCR Goes Into Emergency Mode  
Cassette Loading Inoperative  
EE Mode Picture NG  
PB Video Signal Missing  
Record Video Signal NG  
OSD Character Incorrect  
No Sound In The EE Mode  
No Hi-Fi Sound In The Playback Mode Of Hi-Fi Recorded Tape  
No Hi-Fi Sound In The Playback Mode After Hi-Fi Recording  
No Sound In The Linear Playback Mode  
No Linear Sound In The Playback Mode After Linear Recording

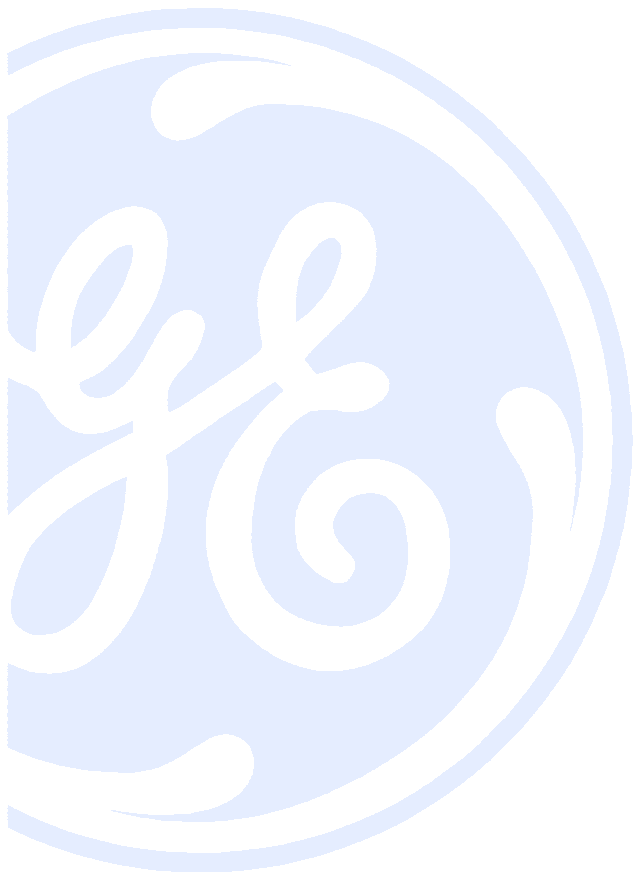

Z  
A  
C  
S  
O  
R  
P


## TROUBLESHOOTING GUIDES

## No Output Voltage

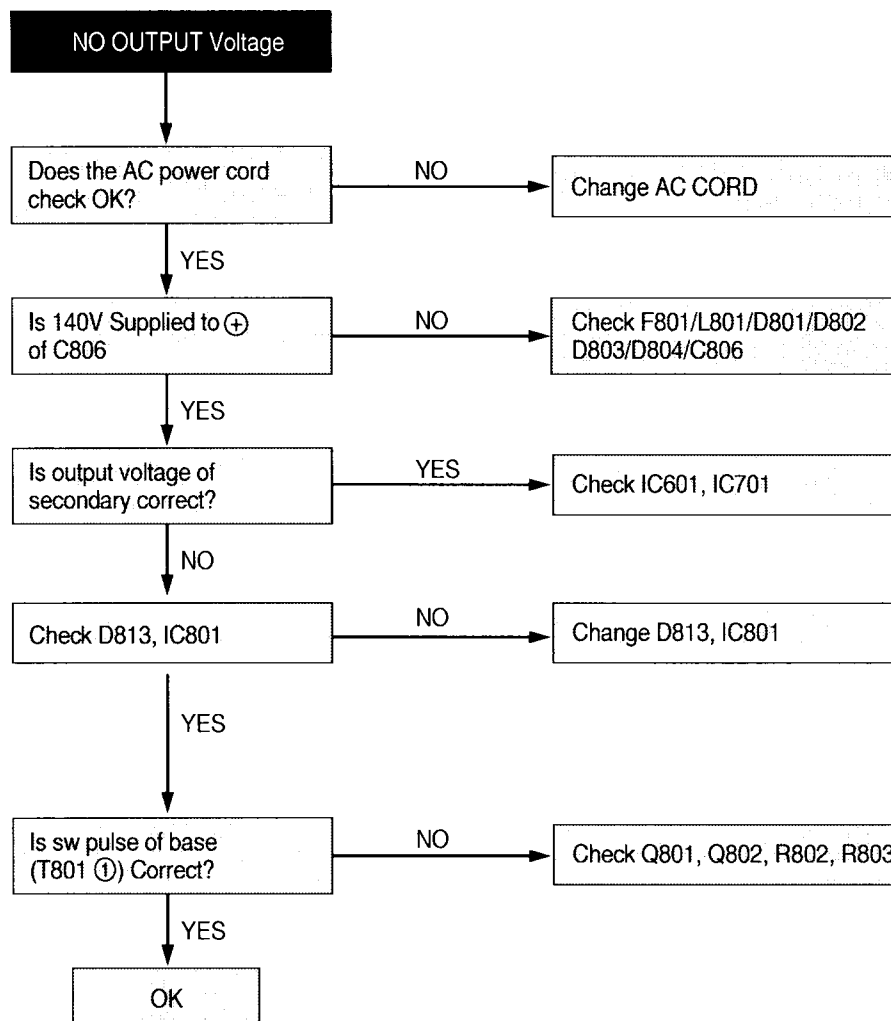


## TROUBLESHOOTING GUIDES

Digitron Does Not Operate

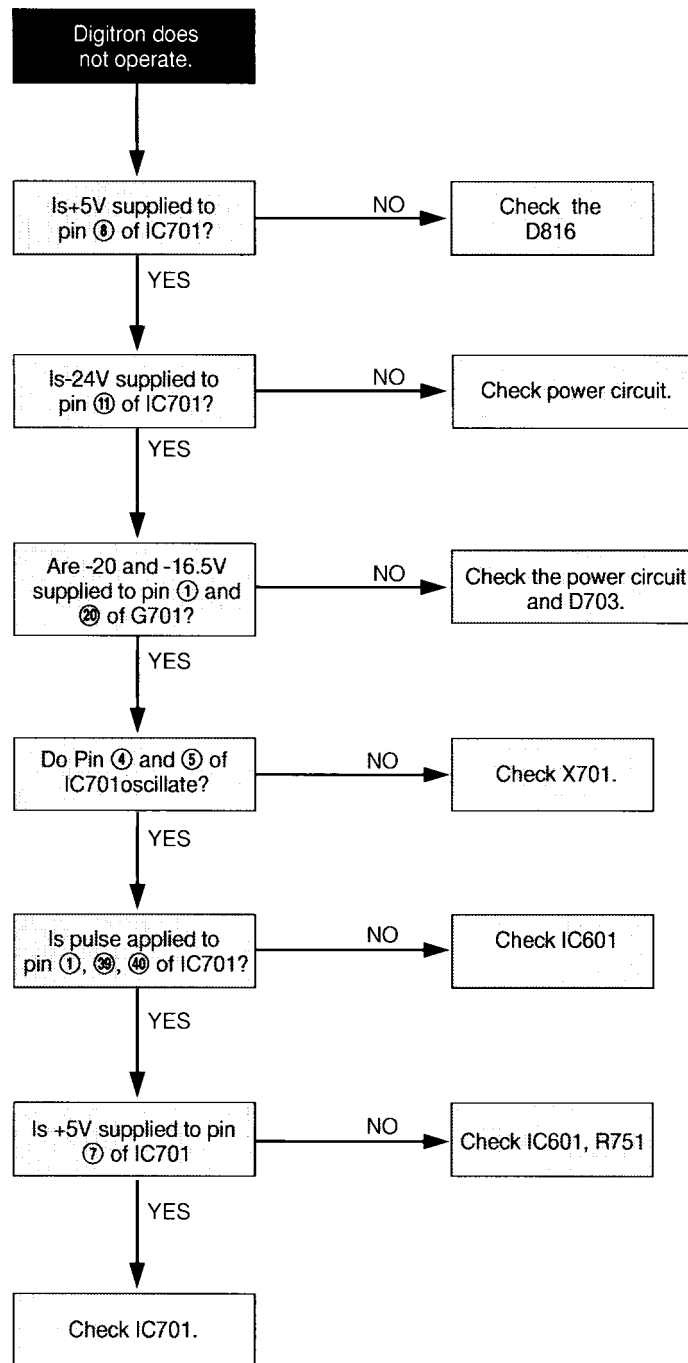


## TROUBLESHOOTING GUIDES

LED or Digitron Is Lit But Key Does Not Operate

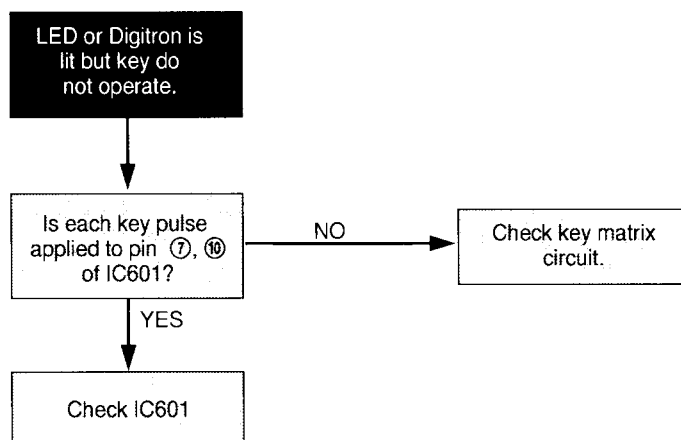


## TROUBLESHOOTING GUIDES

## 1 Minute Back Up Timer Does Not Operate

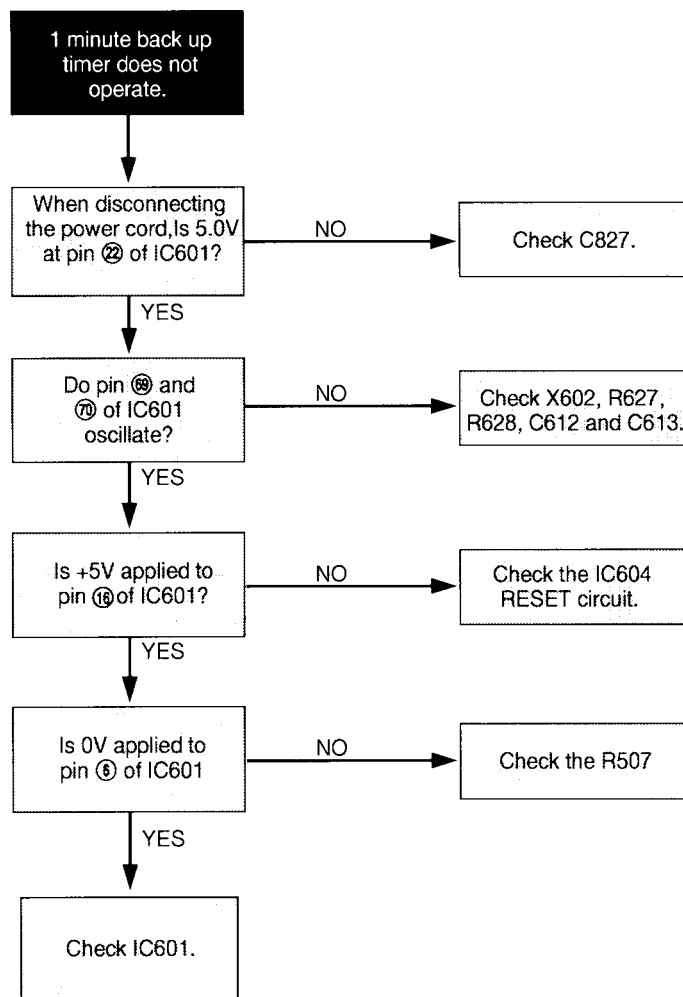


## TROUBLESHOOTING GUIDES

## Channel Broadcast Signal Is Not Received

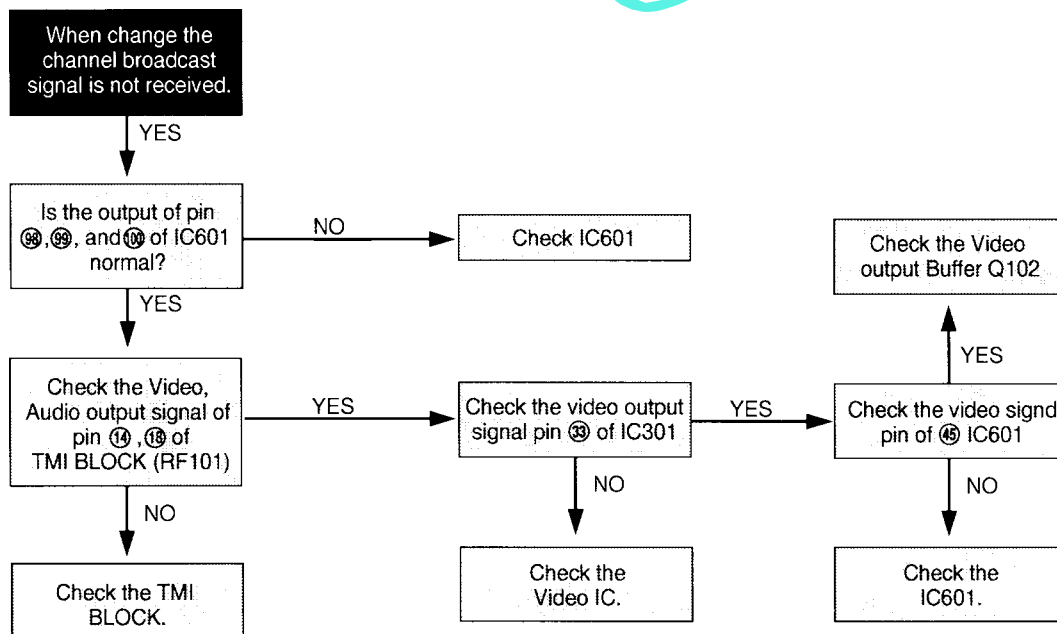


## TROUBLESHOOTING GUIDES

## LED Is Inoperative

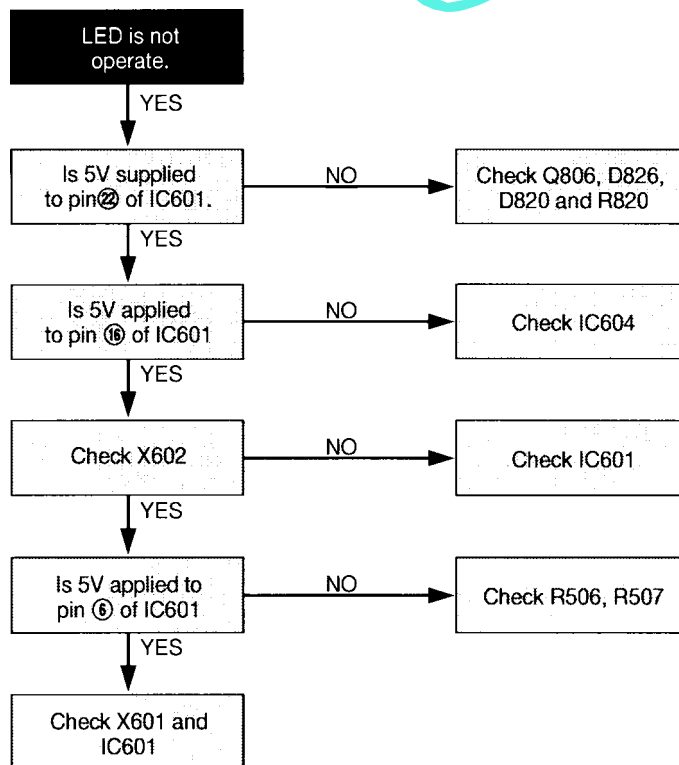


## TROUBLESHOOTING GUIDES

Playback Picture Is Not Good (Noise After Tracking Adjustment)

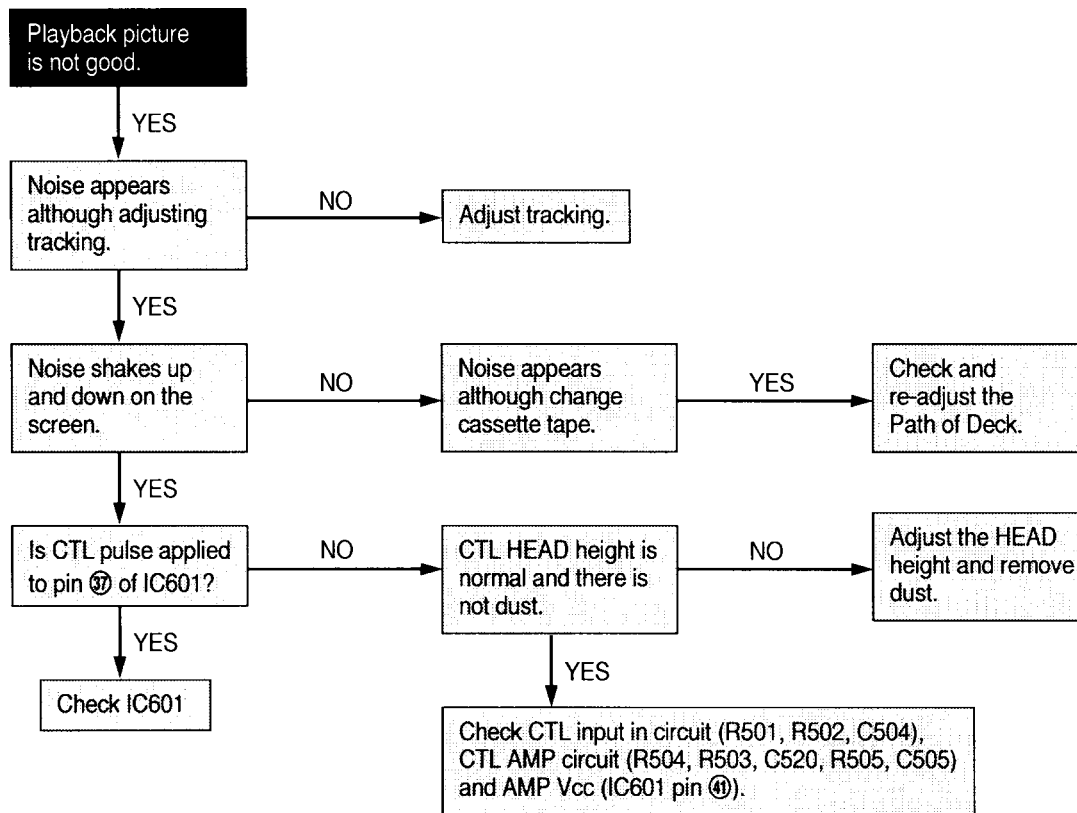


## TROUBLESHOOTING GUIDES

Playback Picture Is Not Good (Noise Over Entire Screen)

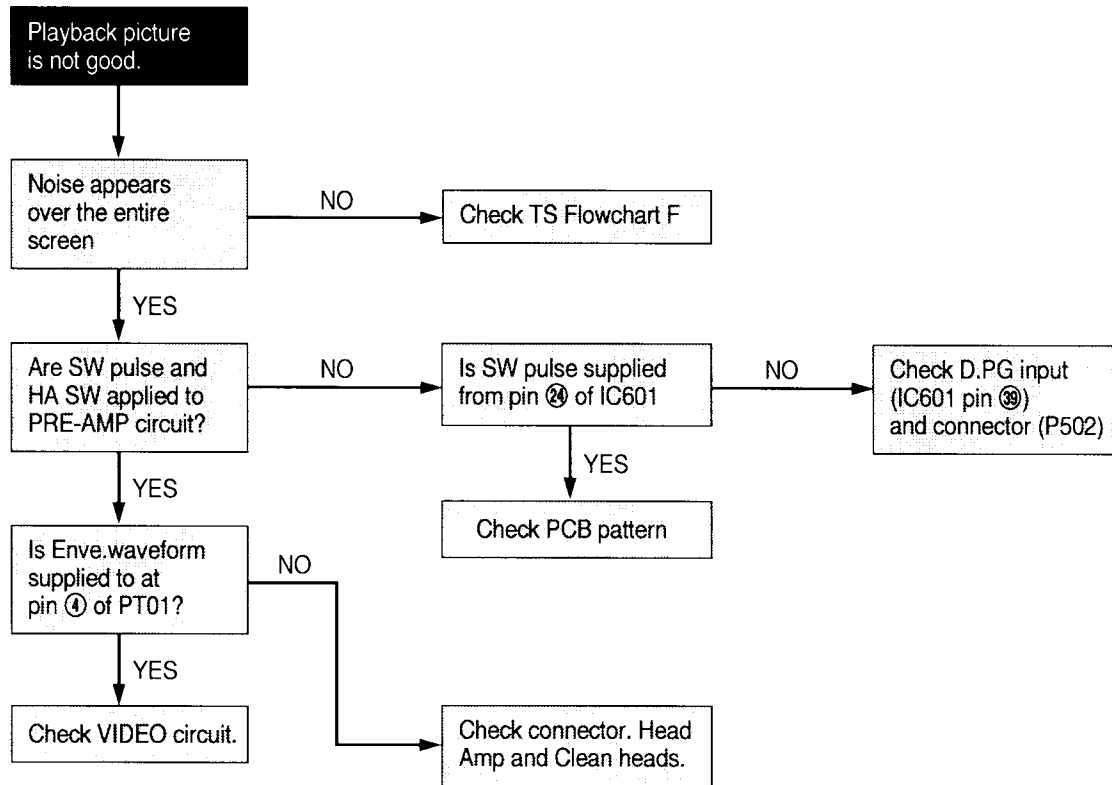


## TROUBLESHOOTING GUIDES

VCR Goes Into Auto Stop During Playback

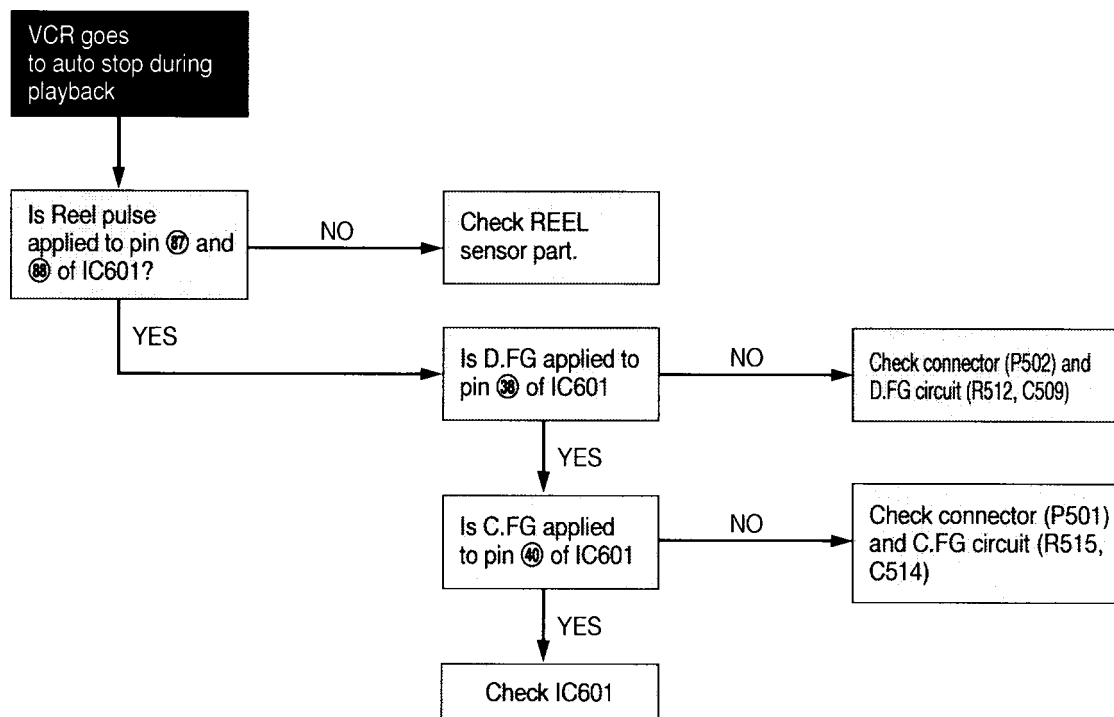


# TROUBLESHOOTING GUIDES

## Drum Motor Does Not Rotate

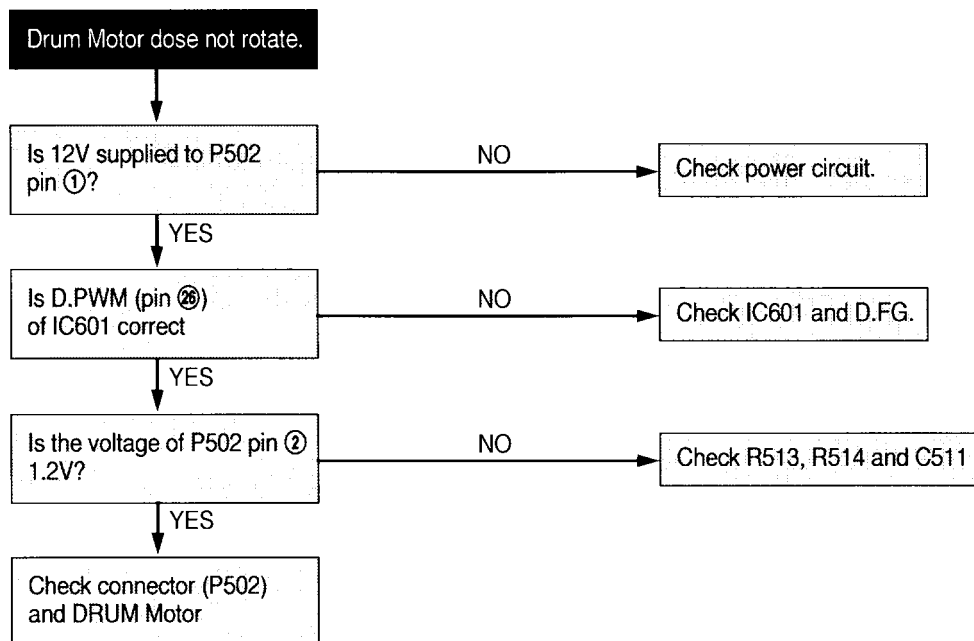


## TROUBLESHOOTING GUIDES

## Capstan Motor Does Not Rotate

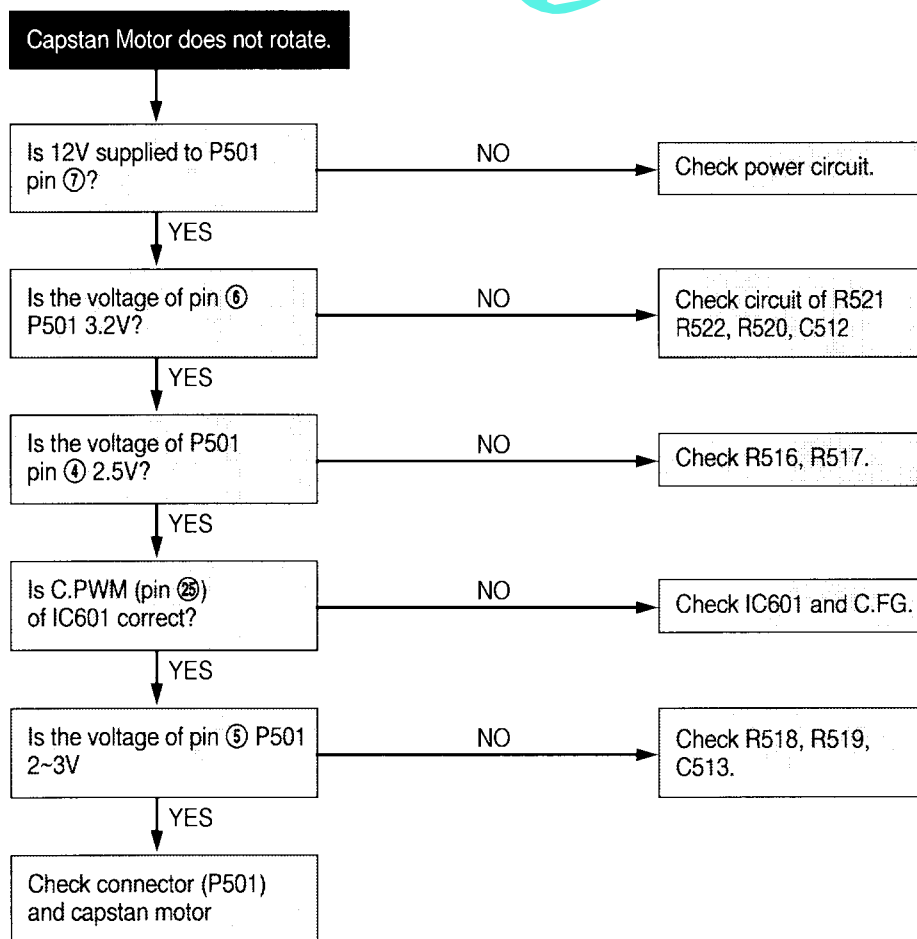


## TROUBLESHOOTING GUIDES

## VCR Goes Into Emergency Mode

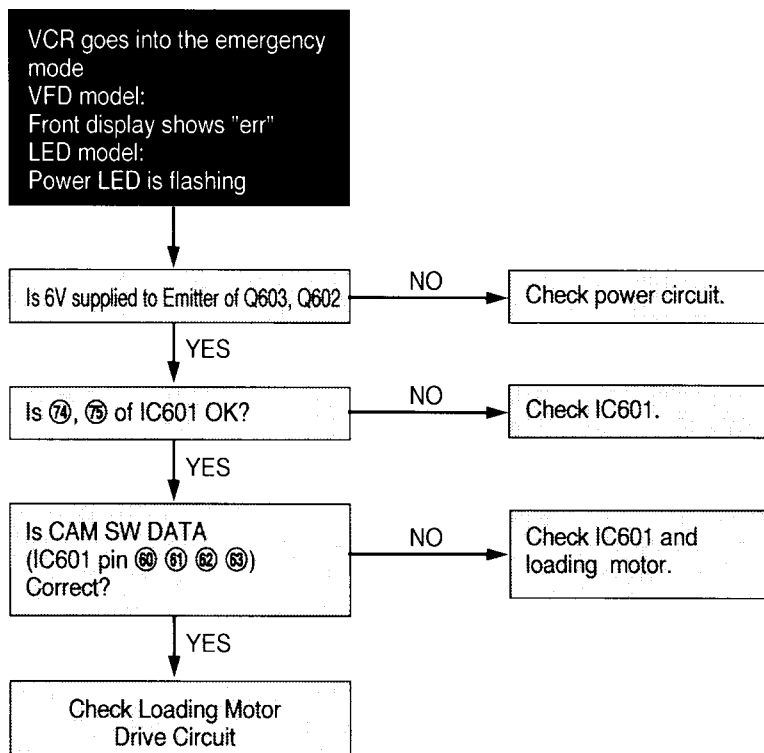


## TROUBLESHOOTING GUIDES

## Cassette Loading Inoperative

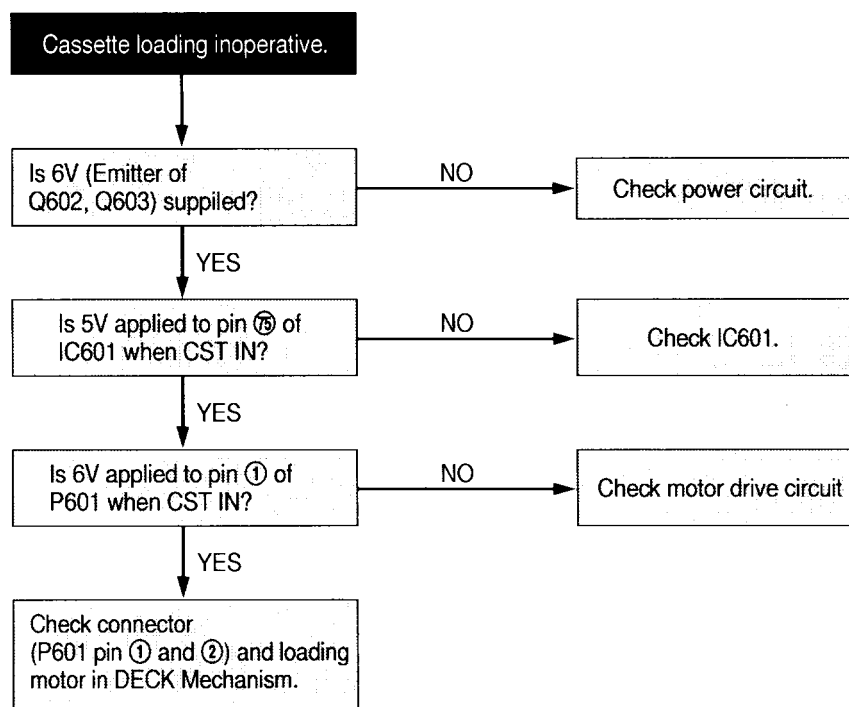


## TROUBLESHOOTING GUIDES

EE Mode Picture NG

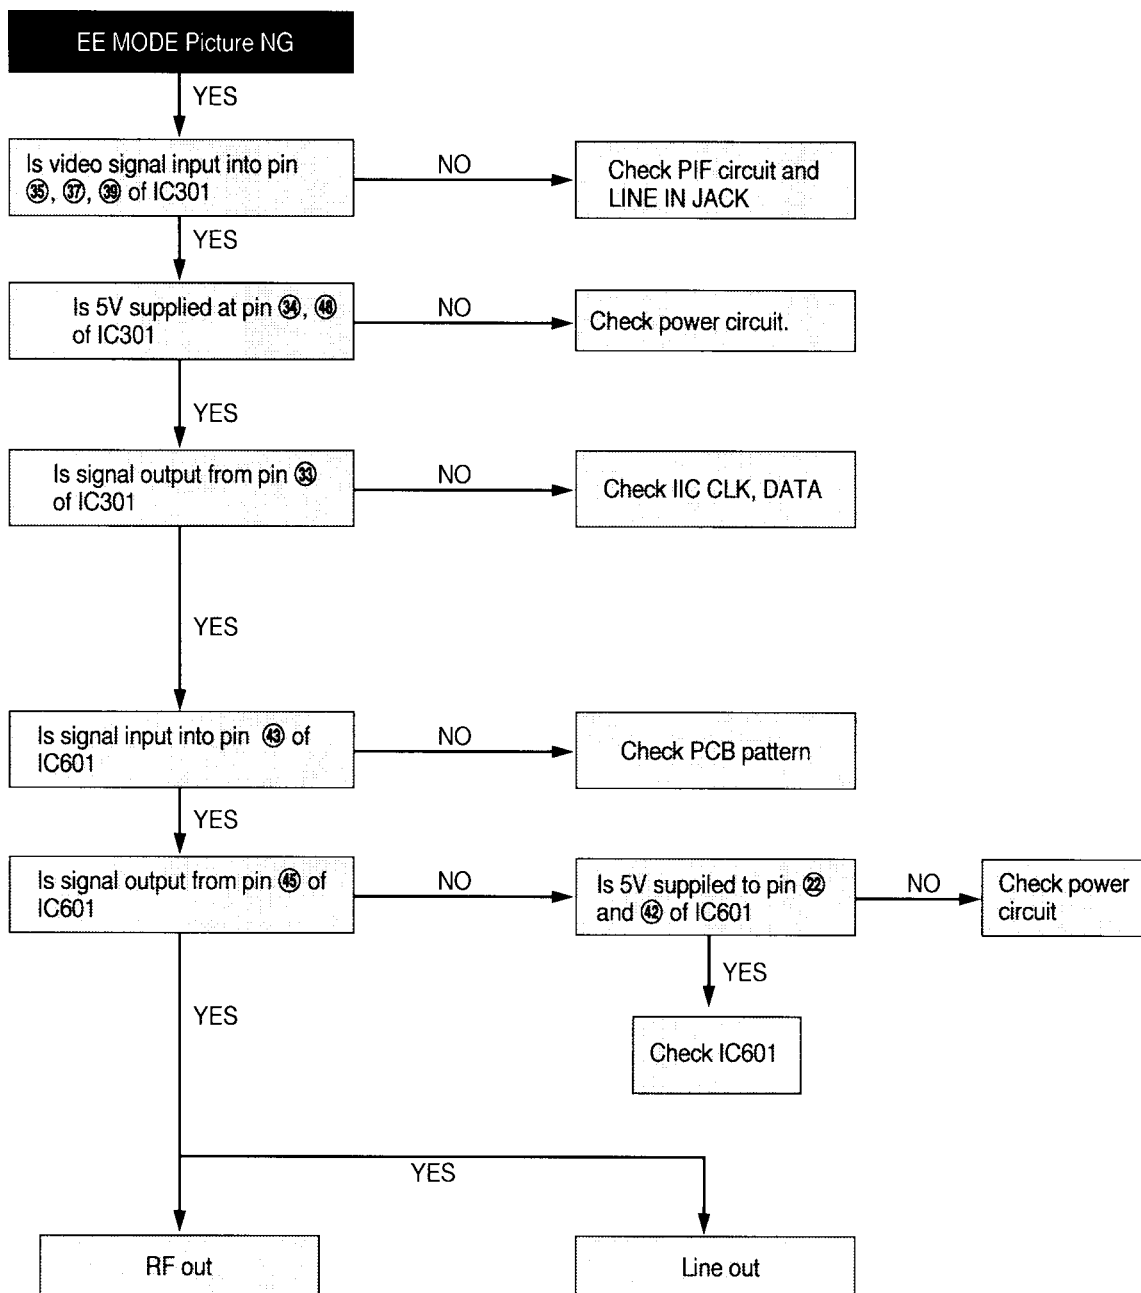


## TROUBLESHOOTING GUIDES

## PB Video Signal Missing

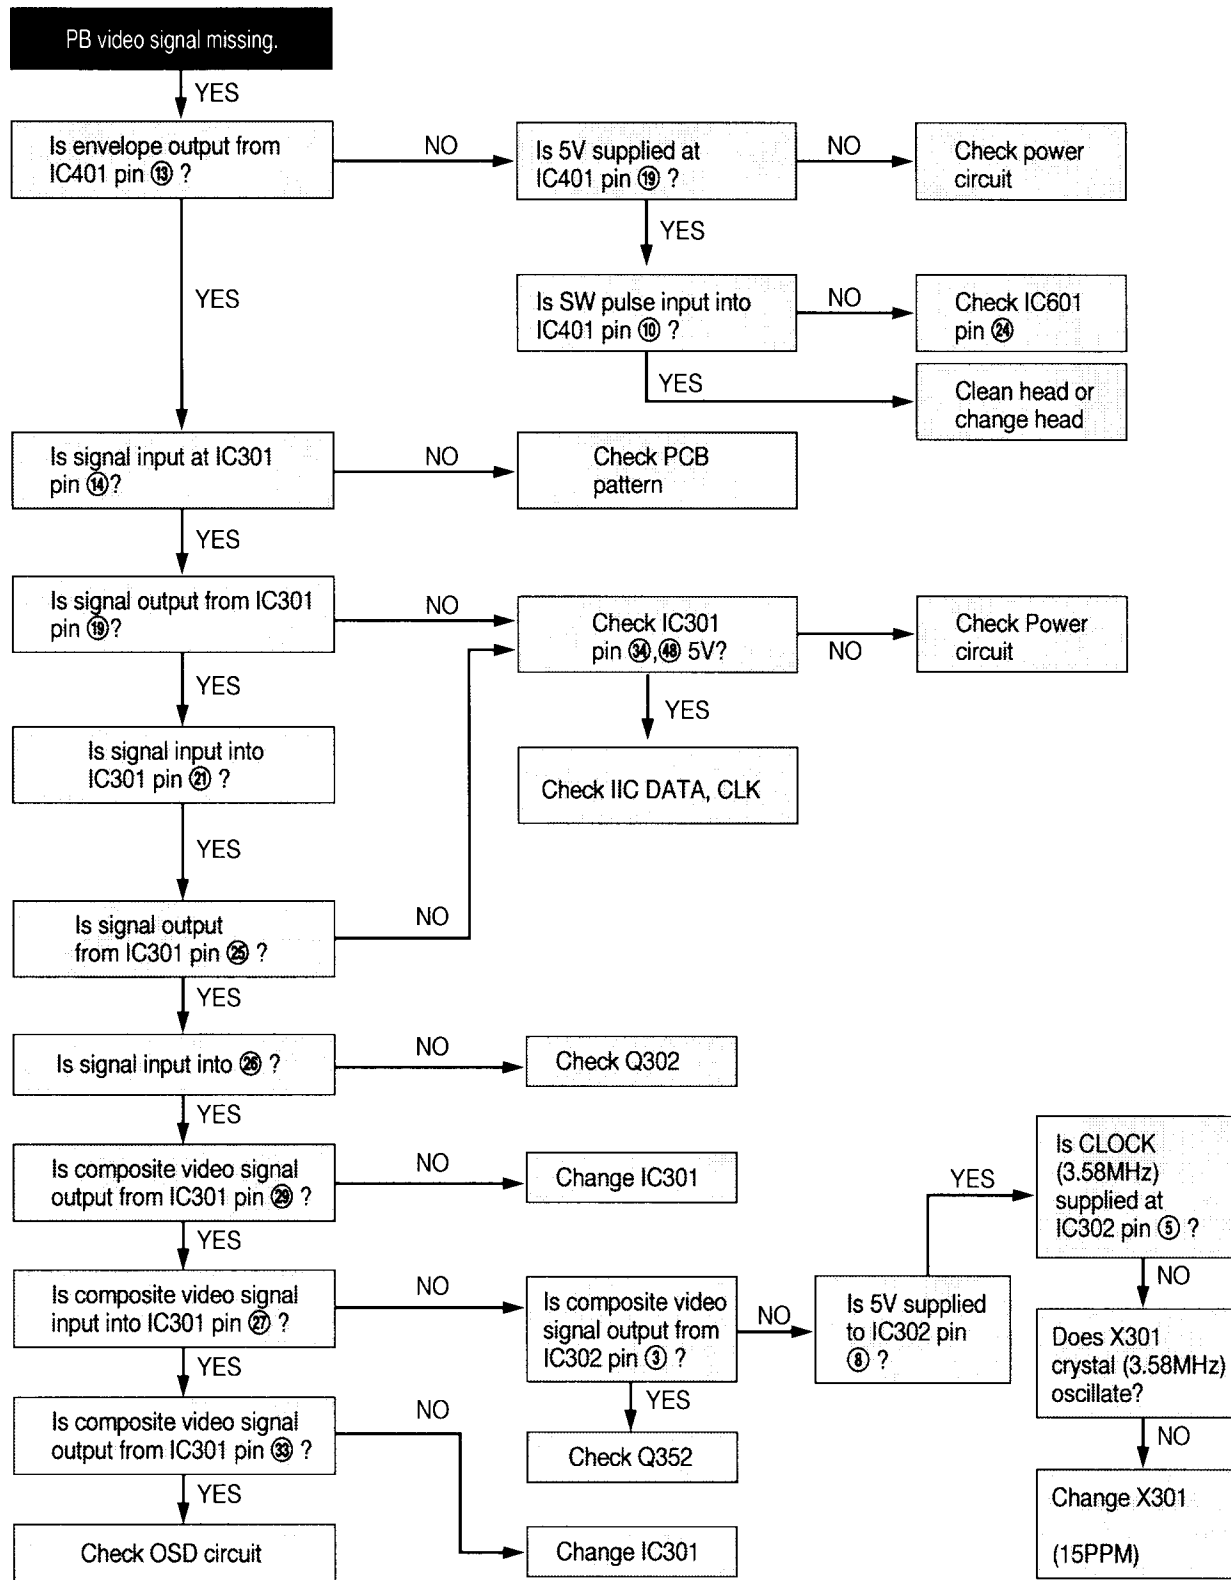


## TROUBLESHOOTING GUIDES

Record Video Signal NG

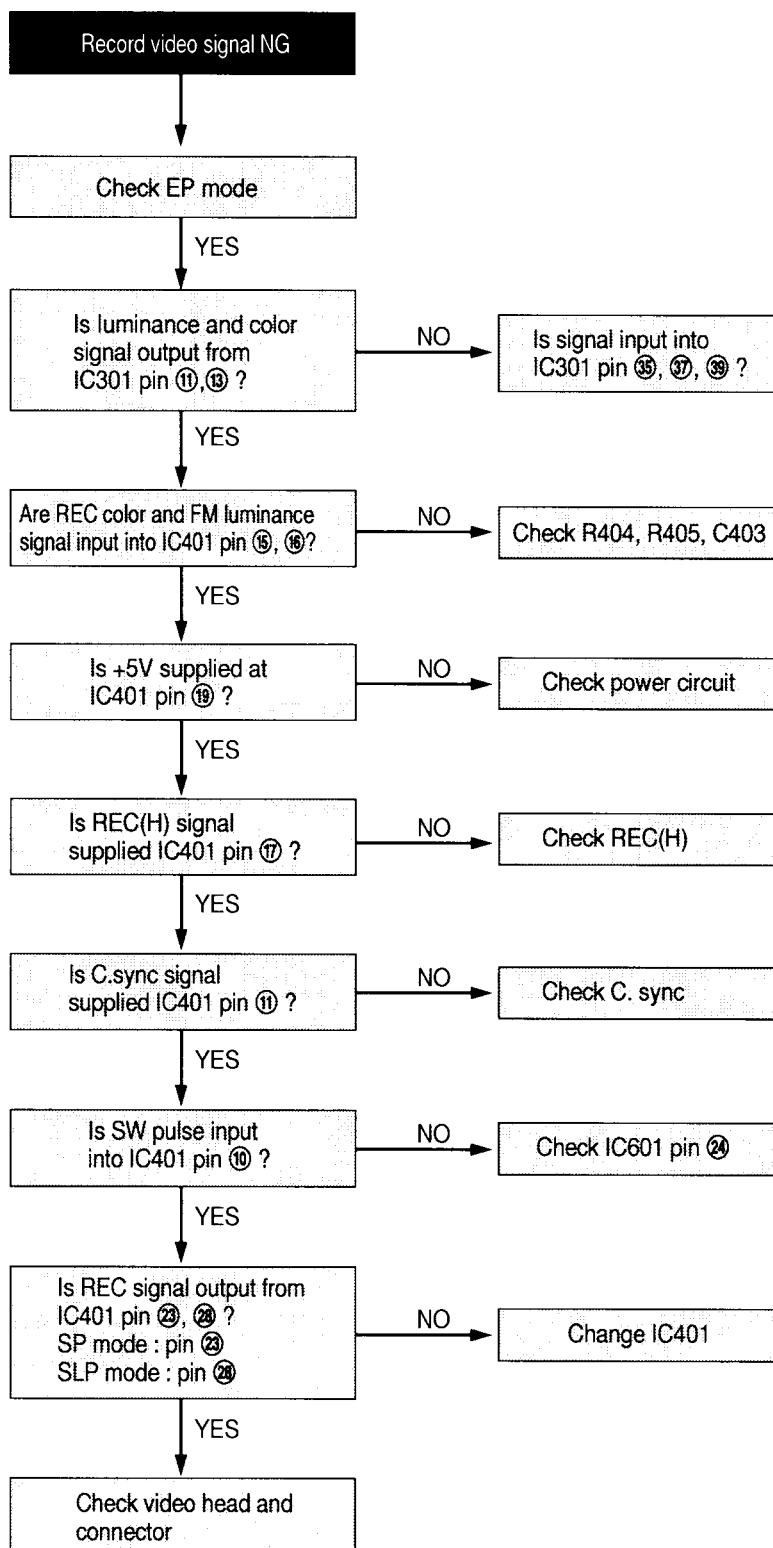


# TROUBLESHOOTING GUIDES

## OSD Character Incorrect

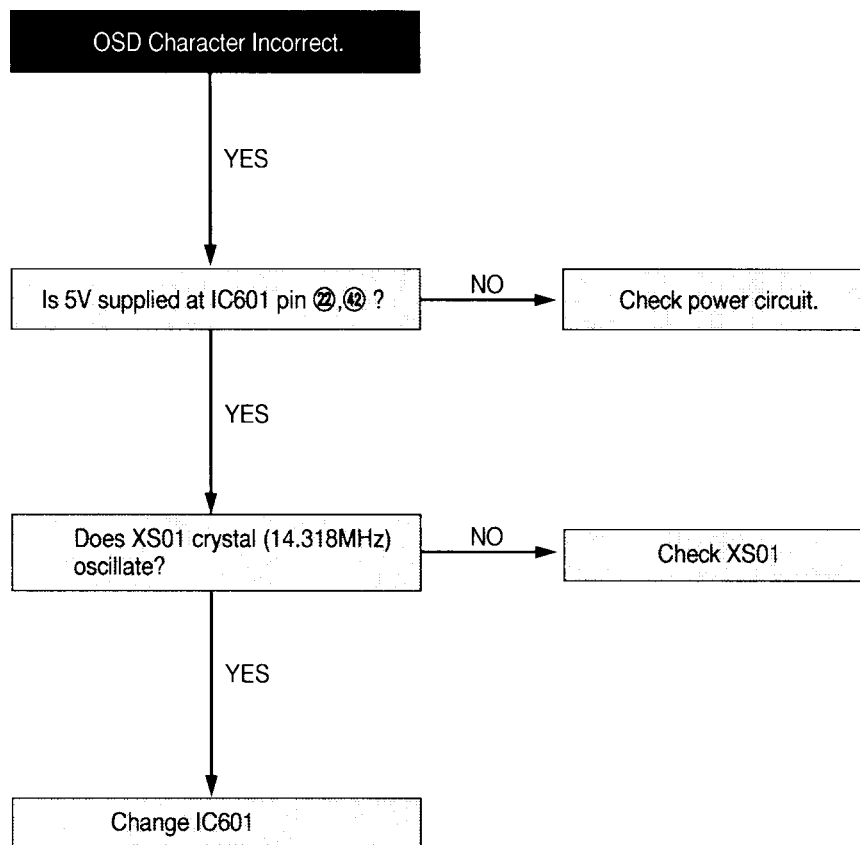


## TROUBLESHOOTING GUIDES

## No Sound In The EE Mode

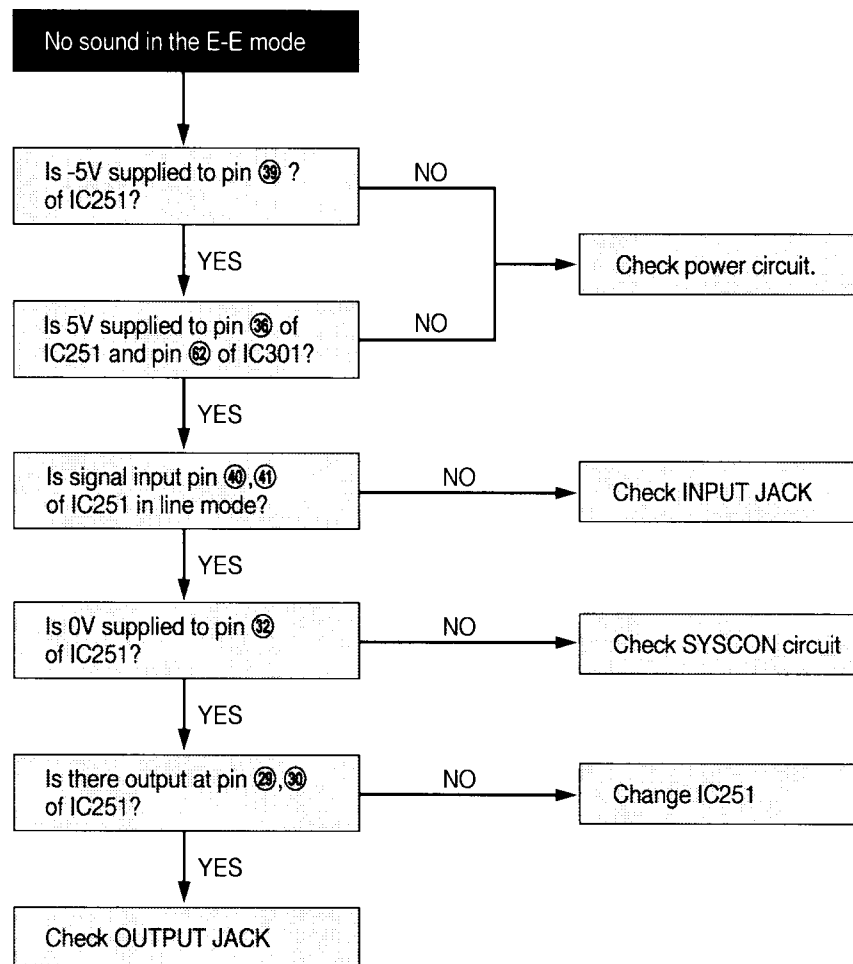


## TROUBLESHOOTING GUIDES

No Hi-Fi Sound In The Playback Mode Of Hi-Fi Recorded Tape

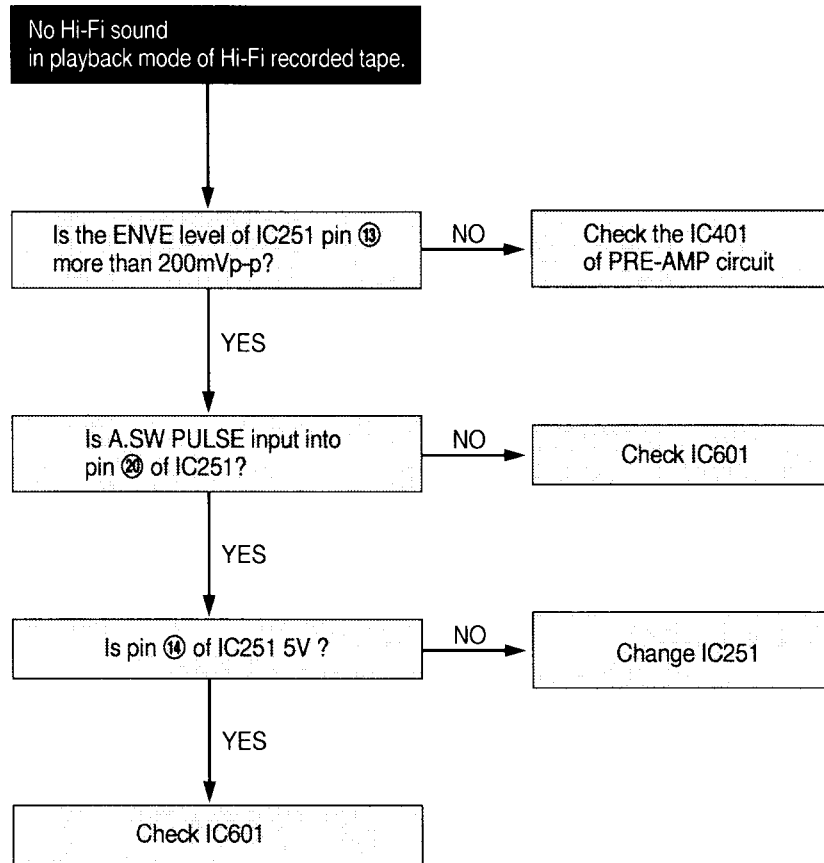


## TROUBLESHOOTING GUIDES

## No Hi-Fi Sound In The Playback Mode After Hi-Fi Recording

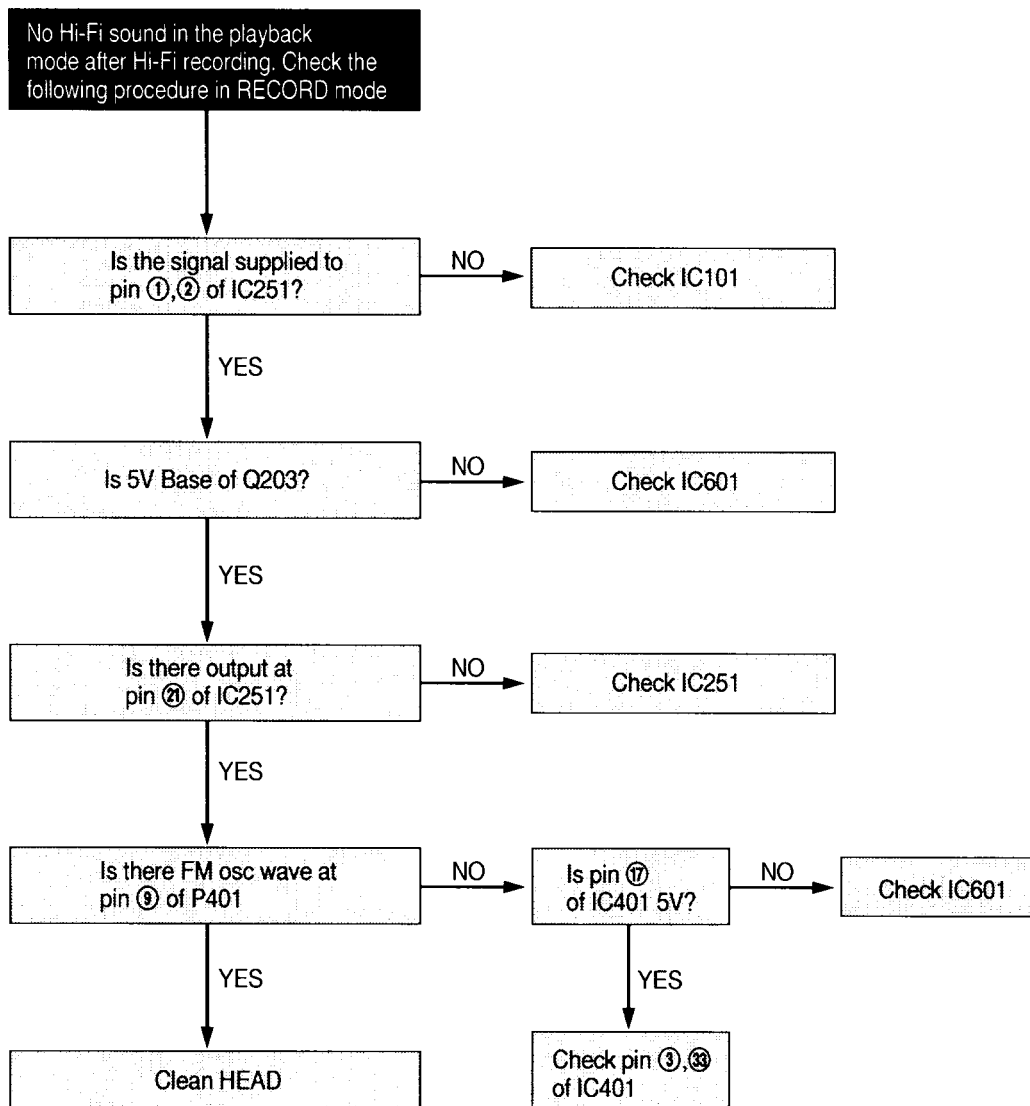

## TROUBLESHOOTING GUIDES

## No Sound In The Linear Playback Mode

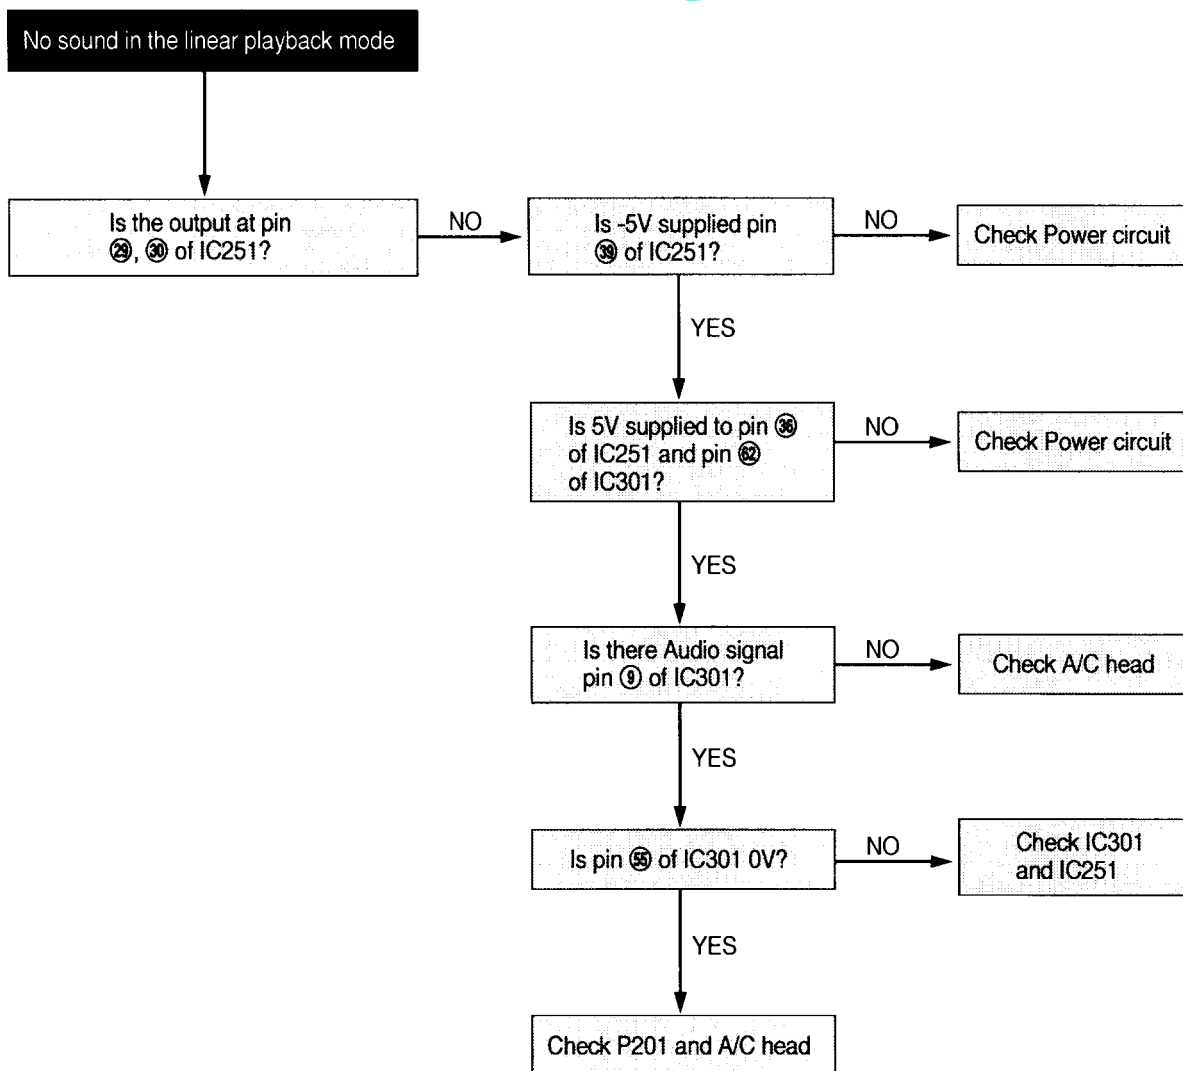

## TROUBLESHOOTING GUIDES

No Linear Sound In The Playback Mode After  
Linear Recording