


# **RCA**

## **video cassette recorder user's guide**

**VR645HF**

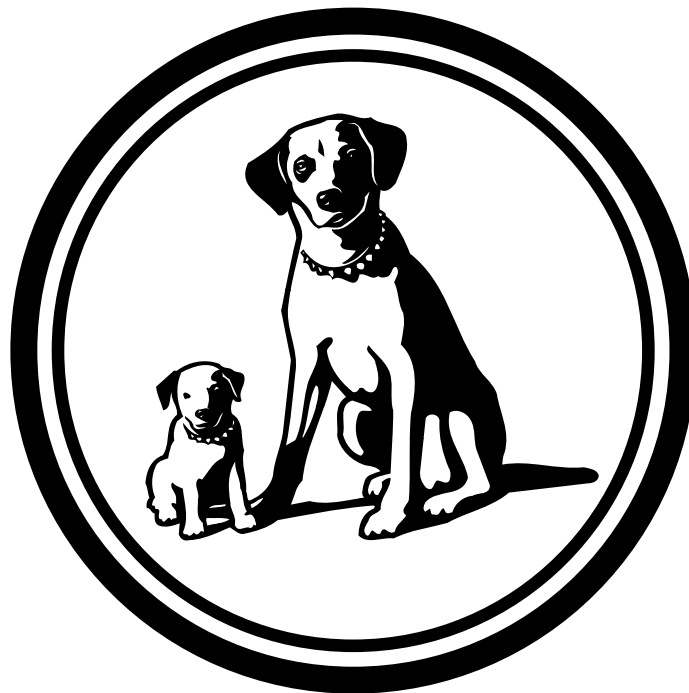

# IMPORTANT INFORMATION

## WARNING

RISK OF ELECTRIC  
SHOCK DO NOT OPEN

To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.




This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

## WARNING

To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.

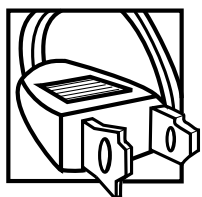

**Caution:** To reduce the risk of electric shock, match wide blade of plug to wide slot, fully insert.

**Attention:** Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

Refer to the identification/rating label located on the back panel of your product for its proper operating voltage.

FCC Regulations state that unauthorized changes or modifications to this equipment may void the user's authority to operate it.

**Cable TV Installer:** This reminder is provided to call your attention to Article 820-40 of the National Electrical Code (Section 54 of the Canadian Electrical Code, Part 1) which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

## Product Registration

Please fill out the product registration card and return it immediately. Returning this card allows us to contact you if needed.

Keep your sales receipt to obtain warranty parts and service and for proof of purchase. Attach it here and record the serial and model numbers in case you need them. The numbers are located on the back of the product.

Model No. VR645HF

Serial No. \_\_\_\_\_

Purchase Date: \_\_\_\_\_

Dealer/Address/Phone: \_\_\_\_\_

\_\_\_\_\_

# TABLE OF CONTENTS

<b>First Things First .....</b>	<b>3</b>
<b>Setting up the VCR .....</b>	<b>7</b>
Using the QuickSet Guide .....	8
Using the Menu to Set Up features .....	8
Language .....	8
Cable Box Setup .....	9
VCR Channels List.....	10
To Auto Channel Search .....	10
To Change the Signal Type.....	11
To Add or Remove Channels .....	12
Time and Date.....	12
Set Daylight-Saving Time .....	12
Set the Time and Date .....	13
VCR Plus+ Channels .....	14
Additional Set-Up Features in the PREFERENCES menu .....	16
Remote VCR1/VCR2 Option .....	16
Auto Play.....	17
Auto TV/VCR.....	17
EnergySaver .....	18
Front Panel (VCR Display) .....	18
Preferred Tape Speed .....	18
<b>VCR Basics .....</b>	<b>19</b>
Remote Buttons.....	20
Component Buttons .....	20
VCR Function Buttons.....	20
TV Function Buttons .....	21
Playing a Tape .....	22
Automatic Rewind .....	23
Tape Eject .....	23
Recording .....	23
Check the Safety Tab .....	23
<b>Recording .....</b>	<b>25</b>
Recording features .....	26
Express Recording (XPR) .....	26
Timer Recording .....	27
Timer Recording with VCR Plus+ .....	28
Setting Up the Channel List.....	28
Using VCR Plus+ .....	28
Stopping a Timer Recording .....	30
Reviewing and Clearing Programs .....	30
Recording Broadcast Stereo TV or SAP (Second Audio Program) .....	30
Recording Audio Only .....	31
Playing Back Audio Only .....	31
Using Two VCRs for Copying and Editing Tapes .....	32

# TABLE OF CONTENTS

<b>Programming the Remote .....</b>	<b>33</b>
About Programming the Remote .....	34
Programming the Remote to Control a TV .....	34
Operate the TV .....	34
TV Codes .....	35
<b>Other Features .....</b>	<b>37</b>
COMMERCIAL▶▶ADVANCE .....	38
MOVIE▶▶ADVANCE .....	41
Picture Search Options .....	43
Forward and Reverse Search .....	43
Slow Motion .....	43
Frame Advance .....	44
Index Search .....	44
Go-To Search .....	45
Blank Search .....	45
Tracking .....	45
Auto Repeat .....	46
Pro-Tect Plus™ Locking Feature .....	47
Time Counter .....	47
On-Screen Displays .....	48
Audio Set-Up Features .....	48
Reception .....	49
Tape Playback .....	49
Low Voltage Detection .....	49
<b>Connections .....</b>	<b>51</b>
Things to Know Before Connecting Components .....	51
Connecting Your VCR .....	52
Jacks and Cables .....	52
Choosing a VCR Connection .....	53
Advantages of Audio/Video Cable Connections .....	53
Don't Forget About the AUTO TV/VCR Feature .....	53
TV with RF Jack Only .....	54
TV with Audio/Video Jacks .....	55
TV with Audio/Video Jacks and Cable Box to Unscramble Pay Channels Only .....	56
<b>Appendix: Reference .....</b>	<b>57</b>
Front Panel .....	58
Display Panel .....	59
Back Panel .....	60
Troubleshooting Tips .....	61
Questions and Answers About COMMERCIAL▶▶ADVANCE .....	65
Limited Warranty .....	66
Specifications .....	67
Cleaning the VCR .....	67
<b>Index .....</b>	<b>68</b>

# FIRST THINGS FIRST

## HI, MY NAME IS LIZ...

and I wrote this User's Guide. It's my job to see that you have a rewarding user manual experience. You'll find that I've arranged this manual to clearly explain all of your VCR's features.

## READ THE FIRST THREE SECTIONS

The first three sections of the manual introduce you to your VCR, and show you how to set the VCR up and use the on-screen menus. Reading these sections gives you the basic information you need to use your VCR.

## WHAT'S LEFT?

The rest of the book highlights playback and recording information, contains a detailed connections section, and a reference section that includes troubleshooting tips, limited warranty, and index.

### 1 FIRST THINGS FIRST



### 2 SETTING UP THE VCR



### 3 VCR BASICS



### 4 RECORDING



### 5 PROGRAMMING THE REMOTE



### 6 OTHER FEATURES



### 7 CONNECTIONS

#### READ ME!

These note boxes give you tips for your new video cassette recorder.

# FIRST THINGS FIRST

## STEP 1: UNPACK WHAT'S IN THE BOX

The following items come packed in the box:

- VCR
- Remote control
- RF coaxial cable

## STEP 2: INSTALL BATTERIES IN THE REMOTE CONTROL


Follow these steps whenever you need to install or change the batteries in your VCR remote.

1. Remove the cover of the battery compartment.
2. Place the batteries in the remote, matching the + and – ends of each battery to the diagram inside the compartment.
3. Replace the cover.

## STEP 3: CONNECT YOUR VCR

If you connect your VCR to your home antenna or cable system and then to your TV, use the VCR's ANT. IN and RF OUT jacks for a good signal as shown.


If you have a TV with AUDIO/VIDEO jacks, use the jacks for a better connection. Refer to the *Connections* section, toward the back of the manual.

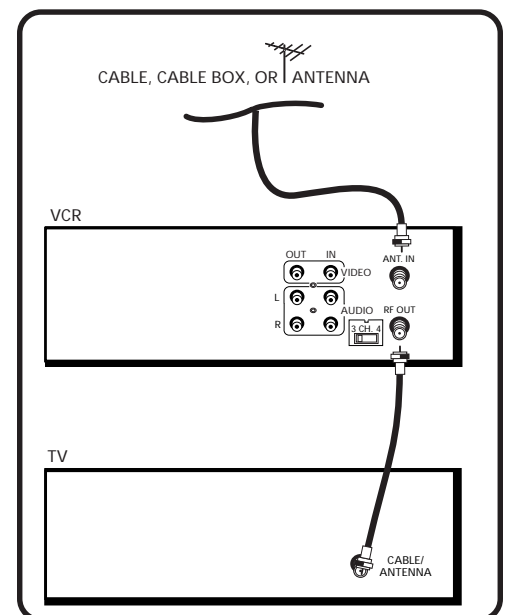

# FIRST THINGS FIRST

## STEP 4: PLUG IN THE VCR

Match the wide blade of the plug with the wide slot in the outlet. Be sure to insert the plug completely.

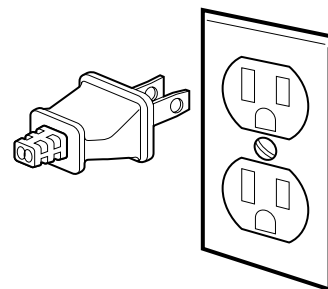

## STEP 5: TUNE THE TV

Tune the TV to the VCR viewing channel. The VCR viewing channel is channel 3 or 4 or the TV's video input.

- If you connect your VCR using the ANTENNA connectors with RF coaxial cable, set the 3 CH. 4 switch to channel 3 or channel 4 — the channel you want to use on your TV.
- If you connect your VCR using the AUDIO/VIDEO jacks with audio/video cables, select the TV's video input to see the signal. See the *TV Owner's Manual*.

## STEP 6: TURN ON THE VCR

The first time you connect your VCR and turn it on, a menu screen appears. This is the beginning of the QuickSet Guide which helps you to set up specific features of the VCR. If you choose not to use this Guide, you can set up each feature individually.

Go to the next step to understand how to move through and change items in the menu system.

## STEP 7: ACCESS THE MENUS

The MENU and number buttons let you access, select and change menu items. For example, to change the Auto Play setting, you would do the following:

### VCR Viewing Channel

When using the ANT. IN and RF OUT jacks to connect your VCR, tune your TV to channel 3 or 4.

When using the AUDIO/VIDEO jacks to connect your VCR, tune your TV to the TV's video input.

# FIRST THINGS FIRST

1. Press MENU to display the VCR MAIN MENU.

```
VCR MAIN MENU
1 VCR Plus+
2 Timer Recordings
3 Time
4 Channels
5 Setup
6 Preferences
7 Audio
8 Language
0 Exit
```

2. Press 6 to display the PREFERENCES menu.

```
PREFERENCES
1 Remote Control : VCR1
2 Auto Play: ON
3 Auto TV/VCR: ON
4 EnergySaver: 2:00
5 Front Panel : AUTO
6 Tape Speed: SLP
7 Set Auto Repeat
8 Commercial Advance
0 Exit
```

3. Press 2 to switch Auto Play to ON or OFF.

```
PREFERENCES
1 Remote Control : VCR1
2 Auto Play: OFF
3 Auto TV/VCR: ON
4 EnergySaver: 2:00
5 Front Panel : AUTO
6 Tape Speed: SLP
7 Set Auto Repeat
8 Commercial Advance
0 Exit
```

See *Additional Set-Up Features* for detailed information about the Auto Play feature.

## STEP 8: SET UP THE VCR

Once you understand how to move around through the menus, go to the next section to set up your VCR.

# SETTING UP THE VCR

## ON-SCREEN GUIDE AND ADDITIONAL SET-UP FEATURES

Below is a list of set-up features that you may want to set up before you begin using your VCR for the first time.

- Using QuickSet Guide
- Select a Language
- Set up for a Cable Box
- Set up VCR Channel List (Auto Channel Search)
- Set Automatic Daylight-Savings time
- Set Time and Date
- Set up VCR Plus+ Channels
- Set the Remote VCR1/VCR2 feature
- Set the Auto Play feature
- Set the Auto TV/VCR feature
- Set the EnergySaver feature
- Set the Front Panel feature
- Set the Preferred Tape Speed feature

## 1 FIRST THINGS FIRST



## 2 SETTING UP THE VCR



## 3 VCR BASICS



## 4 RECORDING



## 5 PROGRAMMING THE REMOTE



## 6 OTHER FEATURES



## 7 CONNECTIONS

# SETTING UP THE VCR

## USING THE QUICKSET GUIDE

The QuickSet Guide is an automated procedure that helps you set up your VCR. The first time you turn on your VCR, the first screen of the Guide appears.

Select a language.  
Selecione un idioma.  
Choisissez une langue.

- 1 English
- 2 Español
- 3 Français

Just follow the step-by-step procedures until setup is complete. Some of the feature options may not apply to your VCR configuration.

If the menu does not appear:

- Make sure TV is tuned to the same channel as the 3 CH. 4 switch or TV's video line input.
- Make sure VCR indicator is on in the VCR display if you connected your VCR using the ANT. IN and RF OUT jacks.
- Check your connections.

If you choose to set up the VCR options individually, then go to the next section.

If you ever need to manually enter setup.

1. Press MENU to display the VCR MAIN MENU.
2. Press 5 to display the Setup menu.

## USING THE MENU TO SET UP FEATURES

You can set up features by using the menu system. Each feature that appears in the Quickset Guide is explained in this section as well as a few others you may want to set up before you begin using your VCR.

### LANGUAGE

Select your preferred language, and the on-screen displays will appear in that language.

#### On-Screen Menus

Not all the VCR screens are shown in this manual when explaining the features.

# SETTING UP THE VCR

1. Press MENU to display the VCR MAIN MENU.

```
VCR MAIN MENU
1 VCR Plus+
2 Timer Recordings
3 Time
4 Channels
5 Setup
6 Preferences
7 Audio
8 Language
0 Exit
```

2. Press 8 to select the LANGUAGE menu.

```
LANGUAGE
Select a language.
1>English
2 Español
3 Français
Press MENU to continue
```

3. Select English, Español (Spanish), or Français (French).

## CABLE BOX SETUP

This setup applies only when all channels are received through the cable box. The VCR will automatically enter the output channel of the cable box when programming your VCR for timer recordings.

1. Press MENU to display the VCR MAIN MENU.

```
VCR MAIN MENU
1 VCR Plus+
2 Timer Recordings
3 Time
4 Channels
5 Setup
6 Preferences
7 Audio
8 Language
0 Exit
```

2. Press 4 to display the CHANNELS menu.

```
CHANNELS
1 Auto Channel Search
2 Add/Remove Channels
3 Signal Type: CABLE
4 VCR Plus+ Channel List
5 Cable Box Setup
0 Exit
```

# SETTING UP THE VCR

3. Press 5 to display CABLE BOX SETUP. Then select one of the three choices.

CABLE BOX SETUP

Do you use your cable box to receive ALL channels or only SOME channels?

- 1 ALL channels
- 2 Only SOME channels
- 3 Cancel setup

4. If you selected ALL channels, enter the output channel of your cable box, usually 03, 04, or video line input and press MENU.

CABLE BOX SETUP

On what channel does the VCR receive signals from the cable box? (usually 3, 4, or Video)

04

Press CLEAR to correct  
Press MENU to continue

CABLE BOX SETUP

The VCR will now receive all signals from the cable box on channel 04.

Press MENU to continue

Once you complete the setup, the VCR confirms that Cable Box Setup is complete.

## VCR CHANNELS LIST

If you use a cable box for *all channels*, this step is not necessary. Your VCR may come with a channel list preset at the factory. Even though your VCR may come with a list, it's possible that you may want to add or eliminate some channels depending on whether they are active.

### To Auto Channel Search

1. Press MENU to display the VCR MAIN MENU.

VCR MAIN MENU

- 1 VCR Plus+
- 2 Timer Recordings
- 3 Time
- 4 Channels
- 5 Setup
- 6 Preferences
- 7 Audio
- 8 Language
- 0 Exit

#### Cable Box Setup

**ALL channels:** enter two numbers for output channel of your cable box or press INPUT.

**Only SOME channels:** if you only use the cable box to tune premium channels.

**Cancel setup:** select to cancel.

# SETTING UP THE VCR

2. Press 4 to display the CHANNELS menu.

```
CHANNELS
1 Auto Channel Search
2 Add/Remove Channels
3 Signal Type: CABLE
4 VCR Plus+ Channel List
5 Cable Box Setup

0 Exit
```

3. Press 1 to display the AUTO CHANNEL SEARCH menu.

```
AUTO CHANNEL SEARCH

What type of signal
are you using?

1 Cable TV
2 Antenna
3>Detect Automatically

0 Cancel
```

4. Select one of the three AUTO CHANNEL SEARCH options.

Choices one and two are self-explanatory. If you choose Detect Automatically, the VCR automatically detects which signal system you have attached to your VCR.

```
AUTO CHANNEL SEARCH

Now scanning channel 14

Press any key to cancel
```

The VCR begins scanning for the available channels--this takes about one to two minutes. The lowest channel is tuned once the search is complete. Now pressing CHAN up or down should only select the active channels.

## To Change the Signal Type

1. Press MENU to display the VCR MAIN MENU.
2. Press 4 to display the CHANNELS menu.
3. Press 3 to change the Signal Type between CABLE and ANTENNA.

### Auto Channel Search

Use the Auto Channel Search feature to place all available channels in memory.

If you ever change cable or antenna signals, you may need to Auto Channel Search again.

### Detect Automatically

A strong cable or antenna signal in your area may cause Auto Detect to mis-detect. If this should happen, select 1 or 2 for the system you have.

# SETTING UP THE VCR

## To Add or Remove Channels

You may want to add or remove channels after you Auto Channel Search, especially if some of the channels have weak signals or you don't want to watch them.

1. Press MENU to display the VCR MAIN MENU.
2. Press 4 to display the CHANNELS menu.
3. Press 2 to display the ADD/REMOVE CHANNELS screen. Use CHAN up or down or number buttons to go to the channels you want to remove or add.

```
ADD/REMOVE CHANNELS

Channel 115
is presently ADDED

Press CLEAR to remove
Press MENU to exit
```

```
ADD/REMOVE CHANNELS

Channel 115
is presently REMOVED

Press INFO to add
Press MENU to exit
```

## TIME AND DATE

Before you set the time and date, set the Auto DST (Daylight-Saving Time) feature to ON or OFF for your area.

### Set Daylight-Saving Time

1. Press MENU to display the VCR MAIN MENU.

```
VCR MAIN MENU
1 VCR Plus+
2 Timer Recordings
3 Time
4 Channels
5 Setup
6 Preferences
7 Audio
8 Language
0 Exit
```

2. Press 3 to display the TIME menu.

```
TIME

1 Set Time and Date
2 Auto Clock Set: ON
3 Set Time Zone
4 Set Daylight Savings

0 EXIT
```

### Selecting Channels

The CHANNEL up and down buttons access those channels active in your VCR channel list.

You can still access channels not in the channel list by using the number buttons on the remote.

# SETTING UP THE VCR

3. Press 2 to turn Auto DST: ON or OFF.
  - Select ON if you want the VCR's clock to automatically adjust for daylight-saving time.
  - Select OFF if you do not want the VCR's clock to adjust for daylight-saving time.

## Set the Time and Date

1. Press MENU to display the VCR MAIN MENU.
2. Press 3 to display the TIME menu.
3. Press 1 to display the SET TIME AND DATE menu.

SET TIME AND DATE

Time --:--  
(hh: mm)

Date --/--/--

Press MENU to cancel

4. Enter the data using the number buttons. Press 0 before single-digit numbers and follow the on-screen directions.

SET TIME AND DATE

Time 12: 34 PM

Date 11/18/98 Wednesday

Press CLEAR to correct  
Press MENU to set

### Spring forward; Fall backward

In the Spring, daylight-saving time begins on the first Sunday in April. Because the clock automatically changes from 2:00 AM to 3:00 AM (forward one hour), remember to include the extra hour for timer recording falling within this time frame.

In the Autumn, daylight-saving time ends on the last Sunday in October. The VCR clock automatically changes from 2:00 AM to 1:00 AM (back one hour). Therefore, it can affect your recording length.

### Time/Date Display

Pressing INFO on the remote displays the time and date on the screen.

# SETTING UP THE VCR

## VCR PLUS+ CHANNELS

Using VCR Plus+ can make programming timer recordings for cable or off-air antenna easier, but you have to put in a little time right now to set up a channel list. A worksheet and abbreviated codes for typical cable services in the U.S. and Canada are provided.

1. Press MENU to display the VCR MAIN MENU.

```

VCR MAIN MENU
1 VCR Plus+
2 Timer Recordings
3 Time
4 Channels
5 Setup
6 Preferences
7 Audio
8 Language
0 Exit
    
```

2. Press 4 to display the CHANNELS menu.

```

CHANNELS
1 Auto Channel Search
2 Add/Remove Channels
3 Signal Type: CABLE
4 VCR Plus+ Channel List
5 Cable Box Setup

0 Exit
    
```

3. Press 4 to display the VCR Plus+ Channel List screen.

```

VCR+ Channel My Channel
5          --
4          --
3 -> -> -> --
2          --
1          --

Use CH+/- to select
Press 0-9 to change
Press MENU to save
    
```

4. Enter the data following the on-screen directions using your worksheet.

```

VCR+ Channel My Channel
5          46
4          --
3 -> -> -> 23
2          --
1          --

Use CH+/- to select
Press 0-9 to change
Press MENU to save
    
```

## Two-Digit VCR Plus+ Channel Numbers for Cable TV (USA List)

35	American Movie Classics
39	Arts &-Entertainment
57	Black Entertainment
54	Bravo
42	Cable News Network
45	Cinemax
98	Cinemax 2
37	The Discovery Channel
53	The Disney Channel
63	Entertainment Television
34	ESPN Sports Network
47	The Family Channel
33	Home Box Office
95	Home Box Office 2
96	Home Box Office 3
51	The Learning Channel
46	Lifetime
58	The Movie Channel
48	Music Television
49	The Nashville Network
38	Nickelodeon
64	Nostalgia Television
99	Quality Value Cable
41	Showtime
97	Showtime 2
59	Sports Channel
52	Turner Network Television
44	USA-Network
62	Video Hits 1
93	Viewer's Choice 1
94	Viewer's Choice 2
55	WGN Chicago
43	WTBS Atlanta
60	WWOR-New York

See next page for Canadian List

## VCR Plus+ Channel List

Refer to your local television list for a complete VCR Plus+ channel list for your viewing area or contact your cable company. Using the list may save you some time.

# SETTING UP THE VCR

## VCR PLUS+ WORKSHEET

[illegible]

## Two-Digit VCR Plus+ Channel Numbers for Cable TV (Canadian List)

- |    |  |
|----|--|
| 67 | Allarcom Pay Television/<br>Superchannel |
| 44 | Arts & Entertainment                     |
| 72 | Cable News Network-Headline<br>News      |
| 61 | Cable News Network                       |
| 70 | Canadian Home Shopping Network           |
| 56 | Canal Famille                            |
| 69 | Cathay International Television Inc      |
| 68 | Chinavision Canada Corp                  |
| 60 | Country Music Television                 |
| 63 | Family Channel                           |
| 62 | First Choice                             |
| 96 | First Choice Two                         |
| 97 | First Choice Three                       |
| 99 | First Choice Four                        |
| 90 | House of Commons                         |
| 91 | La Chaine Francaise                      |
| 51 | The Learning Channel                     |
| 65 | MeteoMedia/The Weather Network           |
| 48 | MuchMusic Network                        |
| 55 | MusiquePlus                              |
| 52 | Nashville Network                        |
| 73 | Newsworld/CBC                            |
| 53 | Le Reseau des Sports                     |
| 43 | The Sports Network                       |
| 64 | Super Ecran                              |
| 37 | Super Ecran B                            |
| 98 | Super Ecran C                            |
| 66 | Telatino Network                         |
| 46 | TV5 Montreal                             |
| 92 | Viewer's Choice 1                        |
| 93 | Viewer's Choice 2                        |
| 94 | Viewer's Choice 3                        |
| 95 | Viewer's Choice 4                        |
| 71 | Vision TV: Canada's Faith Network        |
| 38 | Youth TV, Canada Inc.                    |

\*Check your local or cable listing for the channel number you receive this station on.

**\*\*Check your local listing for broadcast or VCR Plus+ channel number assigned.**

# SETTING UP THE VCR

## ADDITIONAL SET-UP FEATURES IN THE PREFERENCES MENU

The features in this section are all accessed through the PREFERENCES menu.

1. Press MENU to display the VCR MAIN MENU.

```
VCR MAIN MENU
1 VCR Plus+
2 Timer Recordings
3 Time
4 Channels
5 Setup
6 Preferences
7 Audio
8 Language
0 Exit
```

2. Press 6 to display the PREFERENCES menu.

```
PREFERENCES
1 Remote Control: VCR1
2 Auto Play: ON
3 Auto TV/VCR: ON
4 EnergySaver: 2:00
5 Front Panel: AUTO
6 Tape Speed: SLP
7 Set Auto Repeat
8 Commercial Advance
0 Exit
```

Now you are ready to select an item from the menu to set up.

## REMOTE VCR1/VCR2 OPTION

If you own a compatible RCA, GE, or ProScan remote that has a VCR2, VCR2•LD, or VCR2•DVD button, this feature allows you to set this VCR to respond to that button.

Press 1 to select the Remote Control item. Then press the VCR2, VCR2•LD, or VCR2•DVD button to change.

```
PREFERENCES
(PRESS VCR2 TO CHANGE)
2 Auto Play: ON
3 Auto TV/VCR: ON
4 EnergySaver: 2:00
5 Front Panel: AUTO
6 Tape Speed: SLP
7 Set Auto Repeat
8 Commercial Advance
0 Exit
```

```
PREFERENCES
1 Remote Control: VCR2
2 Auto Play: ON
3 Auto TV/VCR: ON
4 EnergySaver: 2:00
5 Front Panel: AUTO
6 Tape Speed: SLP
7 Set Auto Repeat
8 Commercial Advance
0 Exit
```

### Remote Control Option

Changing the remote option to VCR2 disables the remote that came with your VCR.

# SETTING UP THE VCR

The VCR will only respond to the compatible remote's VCR2, VCR2•LD, or VCR2•DVD button. If you change the remote setting to VCR2, the remote that came with your VCR will no longer control it.

Use the compatible remote to change the remote setting back to VCR1. Display the PREFERENCES menu, press 1, and then press VCR on the VCR's remote.

## AUTO PLAY

This feature allows the VCR to automatically start playing when you insert a tape with the safety tab removed. Press 2 to switch between ON or OFF.

- Select ON if you want a tape with its safety tab removed to start playing automatically when the tape is inserted.
- Select OFF if you *do not* want a tape with its safety tab removed to start playing automatically.

## AUTO TV/VCR

This feature controls whether the TV/VCR switch changes automatically to the VCR mode. Press 3 to switch between ON and OFF.

- Select ON if you want the VCR to switch to the VCR mode when the VCR is turned on or a cassette is inserted. *This only applies if you connect the ANT. IN and RF OUT jacks of your VCR and TV and watch your VCR on channel 3 or 4 of your TV.*
- Select OFF if you want the VCR to remain in the TV mode. This is useful if you watch your VCR on the TV's video input and you don't want your antenna/cable signal interrupted by the VCR. Refer to the Connections section, toward the back of the manual.

### Auto TV/VCR

Pressing TV•VCR will still switch between the VCR and TV mode.

VCR mode: VCR indicator in the display panel lights.

TV mode: VCR indicator turns off.

# SETTING UP THE VCR

## ENERGYSAVER

By default, this VCR automatically turns off after two hours of inactivity. Press 4 to change the time delay, or to disable the feature.

- OFF: The VCR will remain turned on until you shut it off.
- 1:00, 2:00, or 3:00: The VCR turns off after one, two, or three hours of inactivity.

Thirty seconds before shutting off, the VCR will warn you with a screen reading, "The VCR will turn off in 30 seconds. Press any key to cancel."

If you use the VCR's tuner instead of your TV to tune channels, you may want to turn this feature off.

## FRONT PANEL (VCR DISPLAY)

You can change the brightness level of the fluorescent display panel on the front of the VCR. Press 5 to switch between the options.

- AUTO brightens the display when the VCR is on and dims the display when the VCR is off.
- BRIGHT keeps the display bright.
- DIM keeps the display at a low brightness level.

## PREFERRED TAPE SPEED

You can set a preferred tape speed that is established each time the VCR is turned on and as the initial setting for timer programming. Press 6 to switch between the two recording speeds.

- SP sets the preferred recording speed to SP.
- SLP sets the preferred recording speed to SLP.

The preferred setting can be overridden using the SPEED button on the remote.

### Tape Speeds

#### SP (Standard Play)

Gives the best quality recording, but fewer programs can be recorded on the tape. Special effects such as pause, slow motion, picture search, and frame advance work well when you play back tapes recorded in this speed.

#### LP (Long Play)

Your VCR is capable of playing back tapes recorded in LP. You cannot record in the LP speed.

#### SLP (Super Long Play)

Gives three times the recording time of tapes recorded in SP. Special effects such as pause, slow motion, picture search, and frame advance work well when you play back tapes recorded in this speed.

Cassette	Recording Time	
	SP	SLP
T-120	2Hr	6Hr
T-160	2Hr 40Min	8Hr

# VCR BASICS

## LEARN THE BASICS TO GET YOU STARTED

These VCR basics should be enough for you to begin enjoying your VCR. Learning the remote control functions, playing a recorded tape, and recording a program should do just that.

However, there are other features that enhance the enjoyment of your VCR, but they aren't necessary to get you started. If you want to learn more about your VCR, just keep reading.

### 1 FIRST THINGS FIRST



### 2 SETTING UP THE VCR



### 3 VCR BASICS



### 4 RECORDING



### 5 PROGRAMMING THE REMOTE



### 6 OTHER FEATURES



### 7 CONNECTIONS

VCR Basics tells you what you need to know in order to watch a movie or tape your favorite show.

# VCR BASICS

## REMOTE BUTTONS

The remote control is capable of controlling your VCR and many brands of televisions. If you have an RCA, ProScan, or GE TV, you may be able to control it without having to program the remote.

## COMPONENT BUTTONS

**OFF** Turns off VCR when remote is set to control the VCR. Also turns some compatible components on and off.

**TV** Turns on a compatible RCA, ProScan, or GE TV and sets the remote to control the TV. Also used with the OFF button to turn on a different brand of TV (if programmed) and sets the remote to control the TV.

**VCR** Turns on a compatible RCA, ProScan, or GE VCR and sets the remote to control the VCR.

## VCR FUNCTION BUTTONS

**CHAN Up or Down** Selects next higher or lower channel in the VCR's channel memory.

**CLEAR** Resets time counter to 0:00:00. Allows you to change entries when setting the clock or a timer recording.

**F.ADV** Lets you view one frame with each press of the button when tape is in pause.

**FORWARD** Fast forwards the tape when the VCR is stopped. Searches forward through a tape during playback. Starts slow motion during play-pause and increases slow-motion speed.

**GO BACK** Switches between two channels. Select one channel and then select another using the number buttons. Press GO BACK to switch between the two channels.

**INFO** Shows the status displays on the TV screen.

**INPUT** Selects between the line input and the VCR's tuner. Line input refers to the signal coming from the component connected to the AUDIO/VIDEO IN jacks on the VCR.

**MENU** Brings up VCR MAIN MENU on the TV screen.



# VCR BASICS

**Numbers (0 through 9)** Select a channel up to 99 by pressing two numbers. Select a cable channel over 99 by pressing and holding 1 until 1 – – appears on the screen. Then press the other two numbers.

**OFF** Turns off the VCR when the remote is set to control the VCR.

**PAUSE** Pauses playback or recording. Press PAUSE again to return to playback or recording.

**PLAY** Plays a tape.

**RECORD** Starts VCR recording. Also used for express recording.

**REVERSE** Rewinds the tape when the VCR is stopped. Searches backward through a tape during playback. Starts slow motion during play-pause and decreases slow-motion speed.

**SEARCH** Displays MOVIE▶▶ADVANCE screen for prerecorded movies or displays Index, Go-To, and Blank Search menus on TV screen. Starts COMMERCIAL▶▶ADVANCE skipping during playback.

**SPEED** Selects a recording speed (SP or SLP).

**STOP** Stops the current VCR function such as record, playback, rewind, or fast forward.

**TRACKING Up or Down** Lets you manually reduce the streaks that may appear on the picture during play, slow motion, or pause. Reduces picture “jitter” during stop-action playback.

**TV•VCR** Switches the picture signal so that it either comes from the VCR or cable/antenna system.

## TV FUNCTION BUTTONS

**CHAN Up or Down** Selects next higher or lower channel in the TV's channel memory.

**CLEAR** Removes menus or status displays from the screen.

**GO BACK** Switches between two channels. Select one channel and then select another using the number buttons. Press GO BACK to switch between the two channels.

**INFO** Shows the TV's status displays on the TV screen.

**MUTE** Reduces volume to minimum level.

### TV Buttons

The TV buttons may not control all features of all models of RCA, ProScan and GE TVs.

# VCR BASICS


**Numbers (0 through 9)** Select a channel up to 99 by pressing two numbers. Select a cable channel over 99 by pressing and holding 1 until 1 -- appears on the screen. Then press the other two numbers.

**OFF** Turns a compatible TV off and on.

**VOL Up and Down** Raises and lowers sound of TV.

## PLAYING A TAPE

1. Tune the TV to your VCR viewing channel (3, 4, or TV's video input).
2. Insert a tape in the VCR.

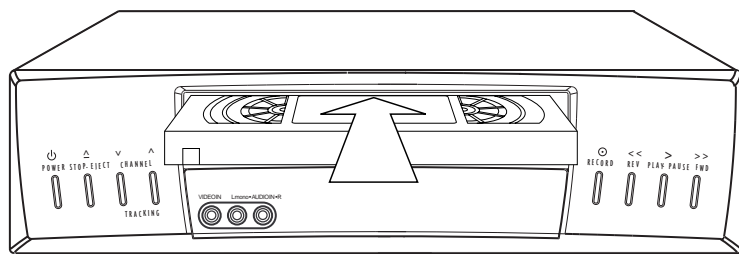

If the Auto Play feature is set to ON, the tape automatically begins playback (if the safety tab on the cassette is removed).

- Press FWD or REV (FORWARD or REVERSE on remote) to position the tape.
- Press PLAY•PAUSE (if necessary) on the VCR (PLAY on remote) to begin tape play.
- Press PLAY•PAUSE (PAUSE on remote) for stop action.
- Press TRACKING up or down to remove any streaks from the picture, if necessary.
- Press STOP•EJECT on VCR (STOP on remote) to stop playback.

### Pause

If you pause, the VCR automatically switches from pause to stop after a few minutes to reduce tape wear.

### Automatic Tracking

The VCR has automatic tracking which adjusts the picture when playing back a tape recorded on another VCR. Automatic tracking is turned on whenever a tape is inserted or the VCR's power is turned on.

# VCR BASICS

## AUTOMATIC REWIND

The VCR automatically rewinds the tape if it reaches the end of the tape during playback. While rewinding, you can press POWER and the VCR will turn off after rewinding.

## TAPE EJECT

Press STOP•EJECT on the VCR (STOP on remote) when it is stopped to eject the tape.

## RECORDING

If you want to record something that you're watching, you can use basic recording.

1. Set the tape speed by pressing the SPEED button on the remote (see "Preferred Tape Speed" in *Setting Up the VCR* section for information about tape speed settings).
2. Press the RECORD button to begin recording.
3. Press STOP to stop recording.

If you just want to pause the recording for a short time (such as during a commercial), press PAUSE instead of STOP.

## CHECK THE SAFETY TAB

No matter which recording option you use, you need to make sure there is a tape in the VCR, and that the tape's safety tab is in place. You cannot record on a tape with the safety tab removed.



If the safety tab is removed and you want to record over it, simply cover the hole with vinyl tape.



# RECORDING

## SEVERAL RECORDING OPTIONS

Now that you've gone through the necessary steps to operate your VCR, I'll explain the different recording features that are available to suit your needs.

Recording Features:

- Recording (explained in *VCR Basics* section)
- Express Recording
- Timer Recording
- Timer Recording with VCR Plus+
- Broadcast Stereo or Second Audio Program (SAP)
- Audio Only Recording
- Copying and Editing Tapes

**1** FIRST THINGS FIRST



**2** SETTING UP THE VCR



**3** VCR BASICS



**4** RECORDING



**5** PROGRAMMING THE REMOTE



**6** OTHER FEATURES



**7** CONNECTIONS

# RECORDING

## RECORDING FEATURES



There are four ways to record programs:

- **Recording** lets you press one button to start recording a program. (See *VCR Basics* section.)
- **Express Recording** lets you start recording a program you are watching, and then set the VCR to automatically stop recording after a designated period of time.
- **Timer Recording** lets you program the VCR to automatically start and stop recording at a predetermined time.
- **Timer Recording with VCR Plus+** lets you program the VCR just by entering a PlusCode number found in TV guides.

## EXPRESS RECORDING (XPR)

Use express recording when you want to quickly record the remaining portion of the program you are watching.

1. Set the tape speed by pressing the SPEED button on the remote.
2. Press the RECORD button to begin recording.
3. Repeatedly press the RECORD button to set up the recording duration.

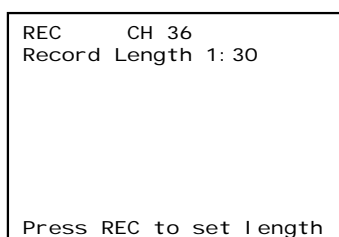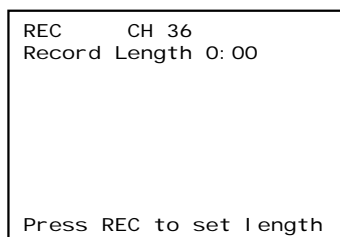

Each time you press the RECORD button, you increase the recording time (up to 4 hours).

The VCR continues to record for the amount of time you indicate, and then automatically turns off.

To stop an express recording, press and hold STOP for a few seconds.

### Express Recording

Express recording is a great way to tape the last quarter of the game, or the last part of a movie when you have to leave.

# RECORDING

## TIMER RECORDING

You can set up as many as eight timer recording programs.

1. Press MENU to display the VCR MAIN MENU.

```
VCR MAIN MENU
1 VCR Plus+
2 Timer Recordings
3 Time
4 Channels
5 Setup
6 Preferences
7 Audio
8 Language
0 Exit
```

2. Press 2 to display the TIMER RECORDINGS menu.

```
TIMER RECORDINGS
1 Create a New Program
2 Review Existing Progs.
3 Use VCR PLUS+ Code

0 Exit
```

3. Select 1 to Create a New Program.

```
How often should this
program record?

1 One time
2 Daily (every day)
3 Weekdays (M-F)
4 Weekly (once per week)

0 Cancel
```

4. Select how often you want the program to record.

```
Program 1 (One time)

Channel  --
Start Time  --:--
End Time  --:--
Start Date --/--/--
Tape Speed SLP

Press MENU to cancel
```

5. Enter the data for the program with the number buttons.

The data includes the channel number (press INPUT to select the line input), start time including AM or PM, and end time. The start date is automatically entered based on the VCR clock. The date and/or speed can be changed when flashing.

### Timer Recording Information

Clock must be set correctly.

Insert a tape with the safety tab in place and enough tape to record the program.

PROGRAMS OVERLAP appears if you have entered two programs where the times overlap.

The TIMER indicator appears in the display when you turn off the VCR and a timer recording has been set. It flashes if there is no tape in the VCR.

When recording from a cable box turn it on and tune it to the channel you want to record before the recording is to begin. The VCR channel should be set to the cable box's output channel, usually Channel 3 or 4.

# RECORDING

- Review the information to make sure it is correct, and then press MENU to save.

Program 1 (One time)

Channel 104 Cable  
Start Time 12:00 AM  
End Time 01:30 AM  
Start Date 11/18/98 Wed  
Tape Speed SLP

Press CLEAR to correct  
Press MENU for next prog

Program 1 has been saved

Remember to insert a recordable tape and turn the VCR off before the program start time. Remember to leave your cable box on and tuned to the desired channel. Press MENU to continue

## TIMER RECORDING WITH VCR PLUS+

You can use VCR Plus+ to simplify timer programming by entering the TV shows PlusCode number found in most TV and cable listings.

### Setting Up the Channel List

If you did not set up the VCR Plus+ channel list, you can do it now.

- Display the CHANNELS menu from the VCR MAIN MENU.
- Display the VCR Plus+ Channel List menu.
- Go to *Setting Up Your VCR* if you need more information on setting up your VCR Plus+ channel list.

### Using VCR Plus+

- Press MENU to bring up the VCR MAIN MENU.

VCR MAIN MENU  
1 VCR Plus+  
2 Timer Recordings  
3 Time  
4 Channels  
5 Setup  
6 Preferences  
7 Audio  
8 Language  
0 Exit

- Press 1 to display the VCR PLUS+ menu.

VCR PLUS+  
Enter PlusCode Number  
(from TV listing)  
—  
Press MENU to cancel

VCR MAIN MENU  
1 VCR Plus+  
2 Timer Recordings  
3 Time  
4 Channels

CHANNELS  
1 Auto Channel Search  
2 Add/Remove Channels  
3 Signal Type: CABLE  
4 VCR Plus+ Channel List

VCR+	Channel	My Channel
5		46
4		--
3	-> -> ->	23
2		--
1		--

Use CH+/- to select  
Press 0-9 to change  
Press MENU to save

# RECORDING

3. Enter the VCR PlusCode shown in your local television programming guide.

VCR PLUS+

Enter PlusCode Number  
(from TV listing)  
128768

Press CLEAR to correct  
Press MENU when done

4. Press MENU to enter the VCR PlusCode number.

How often should this  
program record?

1 One time  
2 Daily (every day)  
3 Weekdays (M-F)  
4 Weekly (once per week)

0 Cancel

5. Indicate how often you want the program to be recorded.

Program 1 (One time)

Channel 03 Cable  
Start Time 08:00 PM  
End Time 09:30 PM  
Start Date 11/18/98 Wed  
Tape Speed SLP

Press CLEAR to adjust  
Press MENU to save

6. Change the speed with the SPEED button on the remote or the program end time with the CLEAR button on the remote (if necessary).

Changing the end time comes in handy when you are recording a program, such as a sporting event, that may exceed the scheduled broadcast time.

7. Press MENU to save the program.

Program 1 has been saved

Remember to insert a  
recordable tape and  
turn the VCR off before  
the program start time.  
Remember to leave your  
cable box on and tuned  
to the desired channel.  
Press MENU to continue

## VCR Plus+ Recording

Clock must be set correctly.

Insert a tape with the safety tab in place and enough tape to record the program.

The TIMER indicator appears in the display when you turn off the VCR and a timer recording has been set. It flashes if there is no tape in the VCR.

PROGRAMS OVERLAP appears if you have entered two programs where the times overlap.

UNRECOGNIZED NUMBER... PLEASE RE-ENTER appears when the VCR does not recognize the PlusCode number.

Turn on the cable box and tune it to the channel you want to record before the recording is to begin.

Timer recordings will not be lost in the event of an extended power outage.

# RECORDING

## STOPPING A TIMER RECORDING


To stop or cancel a timer recording in progress (even an express recording):

- Press and hold the STOP button for a few seconds.


## REVIEWING AND CLEARING PROGRAMS

To review programs that you have already set up:

1. Press 2 when the VCR MAIN MENU is displayed to display the TIMER RECORDINGS menu.

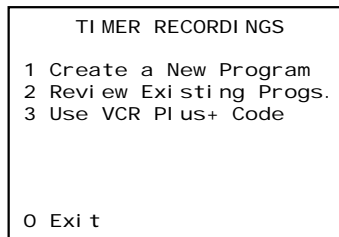

2. Press 2 to display the Review Existing Progs. screen.

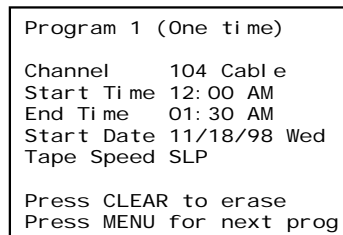

3. Press CLEAR to erase or MENU to see the next program.


## RECORDING BROADCAST STEREO TV OR SAP (SECOND AUDIO PROGRAM)

Some TV programs are broadcast with stereo audio or SAP (Second Audio Program).

1. Turn on the TV and tune it to the VCR viewing channel (either 3, 4, or TV's video input).
2. Insert a tape with safety tab in place.

# RECORDING

3. If your VCR viewing channel is 3 or 4, make sure the VCR indicator appears in the VCR's display panel. If not, press the TV•VCR button on the remote to turn it on.
4. Use the SPEED button on the remote to select a recording speed. The tape speed indicator appears on the TV screen.
5. Select the channel or line input to be recorded.
6. Set the Reception: STEREO/MONO/SAP feature for the type of audio you want to record. See "Audio Set-Up Features" in the *Other Features* section.

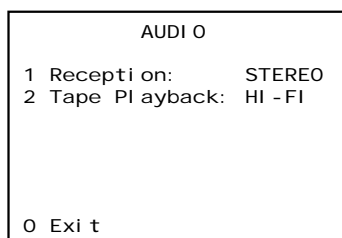

7. Press RECORD to start recording.
8. Press STOP when you are finished.

## RECORDING AUDIO ONLY

You can record audio only from another audio source connected to the AUDIO IN (R and L) jacks on the back of the VCR or the AUDIO IN (R and Lmono) jacks on the front panel.

1. Press the INPUT button on the remote to select the line input. Select L1 to record from the jacks on the back of the VCR or L2 to record from the jacks on the front of the VCR.

The VCR will record audio from the audio equipment connected to the AUDIO IN jacks.

2. Use SPEED on the remote to select the recording speed.
3. Start audio source playing and press RECORD to begin recording.
4. Press STOP when you are finished.



## Playing Back Audio Only

To get stereo sound, connect the AUDIO OUT jacks of the VCR to the appropriate input on your amplifier or receiver. Do not use the phono input. Refer to your amplifier or receiver user's guide.

**Recording audio only will erase anything that was previously recorded on the tape.**

## Audio Connection

BACK of VCR

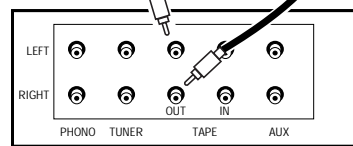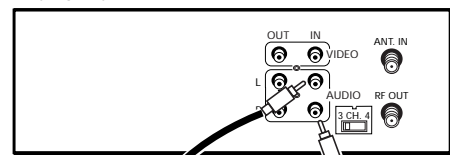

BACK of AMPLIFIER / RECEIVER

# RECORDING

## USING TWO VCRs FOR COPYING AND EDITING TAPES

Use one VCR as the *playback VCR* and the other as the *recording VCR*.

1. Connect the VCRs using the diagram below.
2. Turn on both VCRs and TV.
3. Tune the TV to the VCR viewing channel (either 3, 4, or TV's video input).
4. If you are using coaxial cables for the connection, tune *recording VCR* to channel 3 or 4—the one selected on the *playback VCR*.


If you are using audio/video cables, select L1 to record from the jacks on the back of the VCR or L2 to record from the jacks on the front of the *recording VCR*.

5. Insert the tape you want to copy into *playback VCR*. Insert a blank tape with its safety tab in place into *recording VCR*.
6. Use visual search to locate the segment you want to copy on the *playback VCR*. Pause the tape at this location.
7. Press RECORD on the *recording VCR*, then PAUSE.
8. Press PAUSE on both VCRs to begin copying.
9. Press PAUSE on both VCRs to stop copying.
10. Repeat steps 6–9 to copy or edit additional segments.

### Caution:

The unauthorized recording of satellite broadcasts, television programs, or other copyrighted materials may infringe the rights of others.

### Two VCR Connection

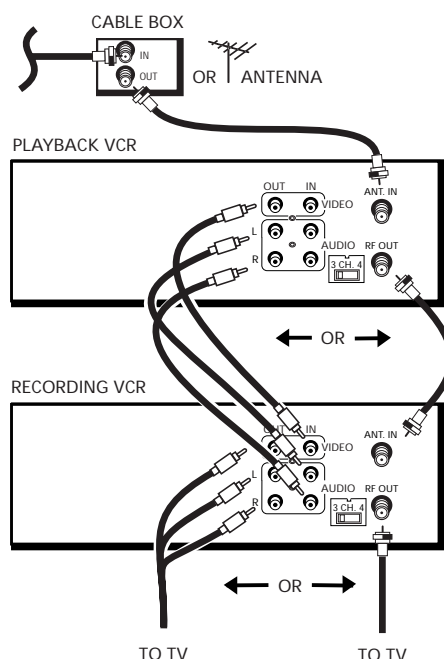

# PROGRAMMING THE REMOTE

## CONTROL YOUR TV

The remote can be programmed to control a television.

It is programmed to control an RCA, GE, or ProScan TV. Other manufacturer's brands need to be programmed.

## 1 FIRST THINGS FIRST



## 2 SETTING UP THE VCR



## 3 VCR BASICS



## 4 RECORDING



## 5 PROGRAMMING THE REMOTE



## 6 OTHER FEATURES



## 7 CONNECTIONS

# PROGRAMMING THE REMOTE

## ABOUT PROGRAMMING THE REMOTE

The remote can be programmed to control other brands of remote-controllable TVs. It is already programmed to operate most RCA, ProScan, and GE televisions.

## PROGRAMMING THE REMOTE TO CONTROL A TV

If the TV does not turn on when you press the TV button, the remote needs to be programmed.

Follow these steps to program the remote to control your particular TV:

1. Turn on the TV.
2. Find your TV brand and code number(s) on the code list on the next page.
3. Press and hold the TV button on the remote.
4. Enter the two-digit code from the code list.
5. Release TV, and then press CHAN up or down. If the TV responds to the remote commands, the remote is programmed.
6. If the TV does not respond, repeat these steps using the next code in the list.

## OPERATE THE TV

After you set up the remote, see which buttons operate your TV.

1. Point the remote at the TV, and press the TV button.  
If the TV does not turn on, press the TV button and then press the OFF button.
2. You may want to experiment to see which buttons operate your TV. Try pressing buttons, such as VOL and MUTE. See "TV Function Buttons" in the *VCR Basic Section* for details.



This remote may not operate all models of the brands that are shown. Note the difference between the TV and VCR on-screen displays to see which one the remote is operating.

# PROGRAMMING THE REMOTE

## TV Codes

Akai ..... 03	NAD ..... 07
AOC ..... 06,12	NEC ..... 06
Candle ..... 06	Panasonic ..... 04,08,11
Citizen ..... 06	Philco ..... 04,06,12
Colortyme ..... 06	Philips ..... 03,04,06,12
Concerto ..... 06	Pioneer ..... 06
Curtis Mathes ..... 01,06	Portland ..... 06,12
Daewoo ..... 06,12	ProScan ..... 01
Daytron ..... 06	Proton ..... 06
Electrohome ..... 06,12	Quasar ..... 11
Emerson ..... 06	Radio Shack ..... 01,05,13
Envision ..... 05,06	RCA ..... 01,06,12
Fisher ..... 05,08	Realistic ..... 05
GE ..... 00,01,06,11	Sampo ..... 06
Goldstar ..... 06,12	Samsung ..... 06,09,12
Hallmark ..... 06	Sanyo ..... 05,08
Hitachi ..... 06,14	Sears ..... 01,05,06,07, 08,10,12
Infinity ..... 04	Sharp ..... 06,13
J C Penney ..... 00,01,06,09,12	Sony ..... 03
JBL ..... 04	Soundesign ..... 06
Jensen ..... 06	Sylvania ..... 04,06,12
JVC ..... 10,11	Technics ..... 11
Kawasho ..... 03,06	Techwood ..... 06
Kenwood ..... 06,12	Teknika ..... 06
Loewe ..... 04	TMK ..... 06
Luxman ..... 06	Toshiba ..... 05,07,08,09
LXI ..... 04,05,07	Universal ..... 00
Magnavox ..... 04,06,12	Victor ..... 10
Marantz ..... 04,06	Wards ..... 00,01,04,06,12,13
MGA ..... 06,12	Yamaha ..... 12
Mitsubishi ..... 06,12	Zenith ..... 02
MTC ..... 06	



# OTHER FEATURES

## FEATURES TO ENHANCE VCR OPERATION

- **COMMERCIAL▶▶ADVANCE**
- **MOVIE▶▶ADVANCE**
- **Picture Search Options**
- **Tracking**
- **Auto Repeat**
- **Pro-Tect Plus™ Locking**
- **Time Counter**
- **On-Screen Displays**
- **Audio Reception**
- **Audio Playback**
- **Low Voltage Detection**

## 1 FIRST THINGS FIRST



## 2 SETTING UP THE VCR



## 3 VCR BASICS



## 4 RECORDING



## 5 PROGRAMMING THE REMOTE



## 6 OTHER FEATURES



## 7 CONNECTIONS

# OTHER FEATURES


## COMMERCIAL▶▶ADVANCE

COMMERCIAL ▶▶ADVANCE is a patented technology that detects and marks most commercials on your tape for any recording that is more than 15 minutes long. After recording, the VCR rewinds the tape to the beginning of the recording and determines where the commercials are located. It then marks the beginning and end of the detected commercial segments, and when finished returns the tape to the end of the recording. **It does not erase the commercials from the tape.**

During playback, the VCR automatically skips the detected commercial segments, or you can choose to manually skip them. This feature reduces three minutes of commercials to approximately 8-12 seconds of fast forwarding in the SLP speed. You can select a background display of blue or see the video as the commercials are skipped.

Because television signals do not indicate where commercials are located, this feature finds and marks them through a set of formulas based on how television is broadcast today. Since television stations broadcast differently and insert their own commercials, you may experience some variations in this feature's effectiveness. Station promotions, identifications, and announcements are not considered commercials--but might be skipped. For more information--see "Questions and Answers about COMMERCIAL ▶▶ADVANCE" in the *References* section. All of the COMMERCIAL ▶▶ADVANCE features are accessed through the COMMERCIAL ADVANCE menu.

1. Press MENU to display the VCR MAIN MENU.

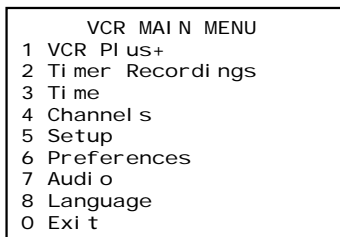

2. Press 6 to display the PREFERENCES menu.

*COMMERCIAL ▶▶ADVANCE is a registered trademark in the U.S. of SRT, Inc.*

# OTHER FEATURES

PREFERENCES	
1 Remote Control :	VCR1
2 Auto Play:	ON
3 Auto TV/VCR:	ON
4 EnergySaver:	2:00
5 Front Panel :	AUTO
6 Tape Speed:	SLP
7 Set Auto Repeat	
8 Commercial Advance	
0 Exit	

- Press 8 to display the COMMERCIAL ADVANCE menu.

COMMERCIAL ADVANCE	
1 Marking:	ON
2 Playback:	MANUAL
3 Display:	BLUE
0 Exit	

Now, you can select one of the COMMERCIAL ►►ADVANCE features.

## COMMERCIAL ►►ADVANCE Marking

Press 1 to turn commercial Marking ON or OFF .

- Select ON, and the VCR will mark commercials within approximately 30 seconds for the following types of recording:
  - Timer, Timer with VCR Plus+, or Express Recording**  
The VCR automatically marks the commercials after the power is turned off.
  - Recording** When you stop the recording, the VCR prompts you to mark the commercials.

The VCR is waiting to mark commercials in the program you recorded.	
1 Mark them now	
2 Mark them later	
3 Don't mark commercials	
The VCR will begin marking in 30 seconds. . .	

- Select OFF and the VCR will not mark the commercials.

# OTHER FEATURES

## COMMERCIAL▶▶ADVANCE Playback

Press 2 to switch between Playback: AUTO and MANUAL.

- Select AUTO to have the VCR automatically advance through the blocks of marked commercials.

It works with most 30, 45, and 60-second commercials.

A commercial group starting within the first two minutes or last two minutes of a recording will not be automatically skipped.

A commercial will not be skipped if the recording starts in the middle of a commercial segment, one isolated commercial is shown without others, or a commercial is longer than one minute. Press FWD to scan through the commercial.

Part of a recorded program may be skipped if the program segment is between commercials and less than one minute or there are frequent dark and quiet scenes. If part of the program is skipped, rewind the tape to the beginning of the skipped program segment and press PLA Y.

- Select MANU AL and the VCR won't advance through the blocks of marked commercials until you press SEARCH.

If you press SEARCH during playback of material other than commercials, the VCR advances to the end of the next "marked" commercial block and resumes playback.

The VCR resumes playback when it reaches the end of the marked commercials.

## COMMERCIAL▶▶ADVANCE Display

Press 3 to switch between Display: BLUE or VIDEO.

- Select BLUE to display a BLUE background when the VCR advances through the block of marked commercials.
- Select VIDEO to display the recorded video when the VCR advances through the block of marked commercials.

# OTHER FEATURES

## MOVIE▶▶ADVANCE

MOVIE▶▶ADVANCE helps you locate certain parts of prerecorded movies (rented or purchased). This feature works two ways: 1) you can go to the beginning of the movie or 2) you can skip from one preview to the next. MOVIE▶▶ADVANCE works only on cassettes recorded in the SP speed with the safety tab removed.

1. To select MOVIE ▶▶ADVANCE, insert a tape with the safety tab removed and press SEARCH. The following menu appears.

What type of tape  
is this?

1 Purchased/Rented Movie  
2 Home Recording  
3 Other

Press CLEAR to cancel

2. Press 1 if the tape is a purchased or rented movie, press 2 if it's a recording made at home, or press 3 if it is something else, you don't know, or you do not want to select MOVIE ▶▶ADVANCE.

Pressing 2 or 3 gives the same response and takes you to a different search feature. If you accidentally make a wrong selection, press STOP•EJECT on the VCR and reinsert the tape. Press SEARCH.

If you press 1, the MOVIE ADVANCE menu appears.

MOVIE ADVANCE

Would you like to go to  
the start of the movie  
or to the next preview?

1 Go to movie  
2 Go to preview


Press CLEAR to cancel

3. Press 1 to advance directly to the beginning of the movie or press 2 to view the first (next) preview.


MOVIE▶▶ADVANCE works only on cassettes recorded in the SP speed with the safety tab removed.

# OTHER FEATURES

- Press 1 to Go to movie. The following screen appears with a blue background.

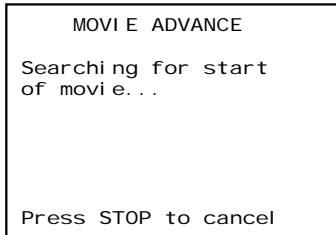


When the movie is found, the following screen is displayed.

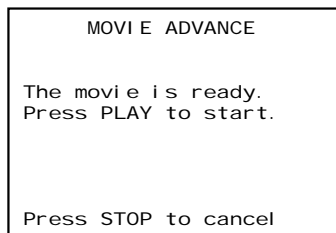


*This display will time out after a few minutes and the VCR will enter the stop mode.*

- Press 2 to Go to preview. The following screen appears with a video background.

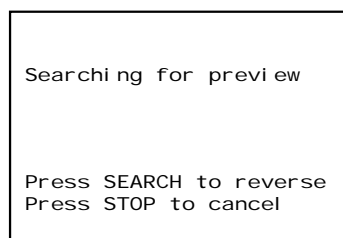

When a preview is detected, the VCR cues it and begins playing.

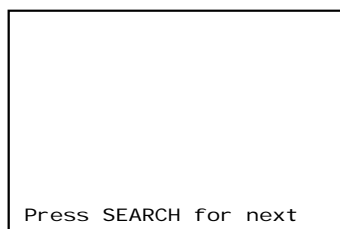

## Preview Search Note

Any time during the preview search mode, pressing SEARCH will reverse the search direction.

# OTHER FEATURES

## PICTURE SEARCH OPTIONS

The most basic way to search during playback is using the FORWARD or REVERSE buttons. This section contains several other options available for searching a tape.

### FORWARD AND REVERSE SEARCH

You can search a tape during playback. Sound is turned off during picture search. Search works well for tapes recorded at either the SP or SLP speed.

1. Press FORWARD to search forward or REVERSE to search in reverse.
2. Press FORWARD or REVERSE again or press PLAY to return to normal playback.

### SLOW MOTION

You can view a tape during play or play-pause using slow motion. Slow motion works well for tapes recorded at the SP or SLP speed.

1. During playback, press PAUSE and then FORWARD or REVERSE to begin slow-motion playback,
2. Press FORWARD to increase or REVERSE to decrease the speed of the search.
3. Use TRACKING up or down to remove any streaks from the picture.
4. Press PLAY to return to normal playback.

The VCR switches automatically from slow-motion playback to stop after a few minutes.

# OTHER FEATURES

## FRAME ADVANCE

Frame advance lets you view one-stop action frame after another during playback. Frame advance works well for tapes recorded at the SP or SLP speed.

1. Press PAUSE or F .ADV to “freeze” the action.
2. Press F.ADV each time you want to view a frame of the scene.
3. Press PAUSE or PLAY to return to normal playback.

## INDEX SEARCH

The VCR has a “VHS Index Search System” that automatically records an index mark on the tape every time you start a recording. During playback you can locate the program you want to play by the number of index marks or by scanning. The VCR will search forward or reverse from the location you are on the tape.

### To Search:

1. Press STOP.
2. Press SEARCH on the remote to display the INDEX SEARCH menu on the TV screen.
3. If you want to search through a certain number of index marks, press two number buttons to enter the number of marks you want to search. Press CLEAR on the remote to correct an entry.
4. Press FORWARD to search forward or REVERSE to search in reverse. The VCR will locate your index mark and begin playback. If you did not enter a specific index number, the VCR will locate the next index mark and begin playback.
5. Press STOP to stop index searching.

Some index marks may be missed by the VCR:

- A mark too close to your location on the tape.
- The mark at the beginning of a recorded segment of five minutes or less.
- The first index mark on the tape when you start at the beginning of the tape.

INDEX SEARCH

Press REV OR FWD  
to begin scanning  
OR  
enter a specific  
index number  
— —

Press SEARCH to exit

INDEX SEARCH

Searching for  
index number 12...

Press STOP to cancel

INDEX SEARCH

Searching for  
index marks...

Press STOP to cancel

# OTHER FEATURES

## GO-TO SEARCH

The Go-To search feature enables the VCR to quickly locate a counter reading anywhere on the tape. When the VCR locates the counter reading, it will begin playback.

1. Press STOP.
2. Press SEARCH on the remote until the GO-TO SEARCH menu appears on the screen.
3. Press number buttons to enter the hour(s) and/or minutes of the counter reading you want the VCR to "go to". Press CLEAR on the remote to correct an entry.
4. Press FORWARD to search forward or REVERSE to search in reverse.
5. Press STOP to stop Go-To searching.

GO-TO SEARCH  
Current tape counter is  
2:17:25  
Press REV or FWD  
to go to --:--:00  
Press SEARCH to exit.

## BLANK SEARCH

The VCR searches for blank portions of the tape that are more than six seconds in length.

1. Insert a recorded tape and press STOP.
2. Press SEARCH on the remote until the BLANK SEARCH menu appears.
3. Press FORWARD to begin searching. A message appears on the screen if a blank area is not found.
4. Press STOP to stop blank searching.

BLANK SEARCH  
Press FWD to begin  
searching for blank  
section of tape.  
Press SEARCH to exit

BLANK SEARCH  
Searching for  
blank tape...  
Press STOP to cancel

## TRACKING

Your VCR has automatic tracking which removes the streaks or snow from the picture. Automatic tracking is activated when you insert a tape or turn on the VCR. Occasionally you may need to manually adjust tracking, especially if the tape was recorded on a different VCR. Just use the TRACKING buttons to remove the streaks or snow. You can also use tracking when you pause a tape to reduce jittering of the picture.

When you manually adjust the picture, automatic tracking is turned off. To turn automatic tracking back on, press both TRACKING buttons on the front of the VCR at the same time, or eject the tape and re-insert it.

Tracking has no effect during recording--only playback.

If you insert a pre-recorded tape with the safety tab removed, Index, Go-To, and Blank Search are not available.

# OTHER FEATURES

## AUTO REPEAT

The VCR will automatically repeat a segment of tape.

1. Locate the beginning of the segment you want the VCR to repeat, and press STOP.
2. Press INFO twice to display the time counter, and press CLEAR to reset it to 0:00:00.
3. Press MENU to display the VCR MAIN MENU.

```
VCR MAIN MENU
1 VCR Plus+
2 Timer Recordings
3 Time
4 Channels
5 Setup
6 Preferences
7 Audio
8 Language
0 Exit
```

4. Press 6 to display the PREFERENCES menu.

```
PREFERENCES
1 Remote Control: VCR1
2 Auto Play: ON
3 Auto TV/VCR: ON
4 EnergySaver: 2:00
5 Front Panel: AUTO
6 Tape Speed: SLP
7 Set Auto Repeat
8 Commercial Advance
0 Exit
```

5. Press 7 to display the AUTO REPEAT screen.

```
AUTO REPEAT

Set the length of time
you want the tape to
play in a repeating loop

Loop from 0:00 to --:--
(h:mm)

Press MENU to exit
```

6. Use the number buttons to enter the length of time (in hours and minutes) of the segment you want the VCR to repeat.
7. The VCR will play the tape until the specified counter reading is reached, rewind the tape and replay the segment over and over.
8. To stop auto repeat, display the AUTO REPEAT screen and press CLEAR or eject the cassette.

# OTHER FEATURES

## PRO-TECT PLUS™ LOCKING FEATURE

To disable the usage of the VCR, or to protect your timer recordings, you can lock the VCR so that the buttons on the VCR or remote won't work.


- **To Lock:** Press and hold the VCR button on the remote for approximately six seconds. The VCR turns off. SAFE appears in the display if any button is pressed to let you know the feature is activated.
- **To Lock While a Timer Recording Is In Progress:** Press and hold the VCR button on the remote for approximately six seconds. SAFE appears in the display to let you know the feature is activated.
- **To Unlock:** Press and hold the VCR button on the remote for approximately six seconds. The VCR turns on.

## TIME COUNTER

The time counter shows the actual time it takes to record a program or play back a segment of a recorded tape. It helps locate the beginning or end of programs you taped. The time counter resets to 0:00:00 whenever the tape is ejected from the VCR.

For example, if you record a 30-minute program at the beginning of the tape and you want to go to the end of that program to begin another recording, you would:

1. Press INFO **twice** to display the time counter.
2. Press CLEAR to reset the time counter to 0:00:00.
3. Press FOR WARD to forward the tape until the time counter reads 0:30:00.
4. Press STOP. This is the approximate end of the program. (You may want to press PLAY to verify.) Now, you can begin recording at this spot.
5. Press INFO to remove the time counter from the screen and return to the normal display mode.

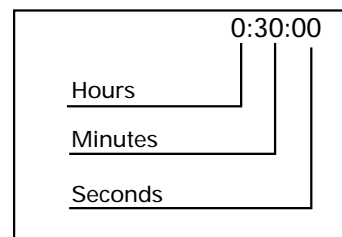

### Locking Your VCR:

If a timer recording is programmed, make sure your VCR is turned off. Locking your VCR prevents the VCR from being accidentally turned on.


# OTHER FEATURES

## ON-SCREEN DISPLAYS


The INFO button shows the status of the VCR (Stop, Play, Rec, etc.), channel number (Video1 or Video2 for the line input), time counter, date, time, and tape speed on the TV screen. The date and time must be set before they can be displayed.

1. Press INFO to see the on-screen displays.
2. Press INFO again to have only the time counter remain on the screen.
3. Press INFO again to return to the normal display mode.

Turning off the VCR also resets the displays.

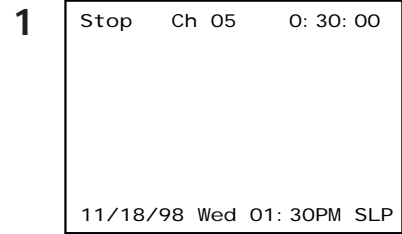

*On-screen display  
(times out)*

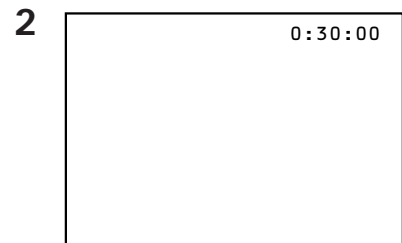

*Time counter only  
(does not time out)*




*Normal display mode  
(status displays will appear)*


## AUDIO SET-UP FEATURES

The audio set-up features enhance your tape playback and recordings. The features in this section are accessed through the AUDIO menu and are shown in the displays below.

1. Press MENU to display the VCR MAIN MENU.

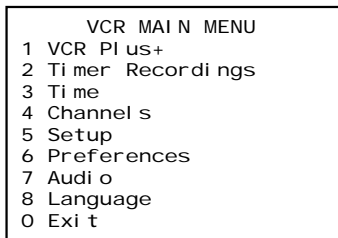

2. Press 7 to display the AUDIO menu.

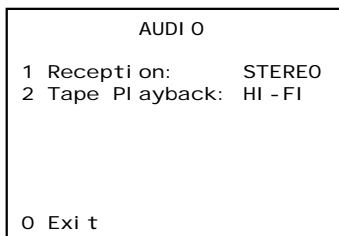

Now you are ready to select an item from the menu to set up.

# OTHER FEATURES

## RECEPTION

Some TV programs are broadcast with stereo audio or a second audio program (SAP) which offers a second language. The Reception feature lets you select the type of audio you want to record. Press 1 to switch between Reception: STEREO, MONO, and SAP.

- Select STEREO for normal or stereo broadcast TV recording.
- Select MONO if the stereo signal is weak and the sound is too noisy.
- Select SAP to record a second audio program instead of the normal audio on both the hi-fi and linear tracks.

## TAPE PLAYBACK

The VCR records the same audio on both the Hi-Fi and linear tracks on the tape. Hi-Fi sound is recorded on separate left and right stereo channels. Monaural sound is recorded on the linear track. Press 2 to switch between Tape Playback: HI-FI, LINEAR and MIX.

To enjoy Hi-Fi sound, connect your VCR to a stereo television or amplifier/receiver using the audio/video jacks. The Tape Playback feature lets you select which audio you play back.

- Select HI-FI to play back sound recorded on the Hi-Fi track and for normal use.
- Select LINEAR to play back the sound recorded on the linear monaural track, such as a second audio program (SAP) or a dubbed voice-over.
- Select MIX to play back the sound recorded on both the linear track and the Hi-Fi track, sound-on-sound.

## LOW VOLTAGE DETECTION

When the remote control's batteries begin to fail, the message "Remote batteries are low" appears on the TV screen with the on-screen display when you press the INFO button. Replace the batteries (see *First Things First Section*) before they completely fail.

To receive Hi-Fi stereo sound, use audio-video cables with a compatible TV or receiver. Using only the RF OUT jack will not produce stereo sound.



# CONNECTIONS

## THINGS TO KNOW BEFORE CONNECTING COMPONENTS

### Protect Your Components from Power Surges

- Connect all components before plugging any power cords into the wall outlet.
- Always turn off theTV and other components before you connect or disconnect any cables.

### Position Cables Correctly to Avoid Audio Hum or Interference

- Insert all cable plugs firmly into their jacks.
- Place the audio/video cables to the sides of theTV's back panel instead of straight down the middle after you connect your components.
- Try not to coil any twin-lead cables and keep them away from the audio/video cables as much as possible.
- Make sure all antennas and cables are properly grounded. Refer to the Safety Tips sheet packed with your unit.

### Protect Your Components from Overheating

- Do not block ventilation holes in any of the components. Arrange the components so that air can circulate freely.
- Do not stack components.
- Allow adequate ventilation when placing your components in a stand.
- Place an amplifier or satellite receiver on the top shelf of the stand so heated air rising from it will not flow around other components.

## 1 FIRST THINGS FIRST



## 2 SETTING UP THE VCR



## 3 VCR BASICS



## 4 RECORDING



## 5 PROGRAMMING THE REMOTE



## 6 OTHER FEATURES



## 7 CONNECTIONS

# CONNECTIONS

## CONNECTING YOUR VCR

Refer to these pages to help you connect your VCR.

### JACKS AND CABLES


#### RF Jacks and Coaxial Cables (F-type)

The RF jacks provide good picture and mono sound quality, and must be used if audio/video connections are not available for your TV.

These jacks are required for antenna or cable-TV connections. The RF jacks on the VCR are labeled ANT. IN and RF OUT. The coaxial cable supplied with your VCR is used to connect the VCR's RF OUT jack and your TV's antenna input.



RF Jack

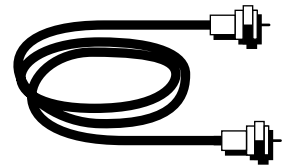


#### Audio/Video Jacks and Cables (RCA-type)

The AUDIO/VIDEO jacks provide very good picture quality and stereo sound, and can be used if your TV has audio/video input jacks.

These jacks are used for most audio/video connections between components. The VCR AUDIO/VIDEO jacks are color coded (yellow for video, red for right audio, and white for left audio). If your TV only has one input for audio (mono), you may need a Y-adaptor to hear sound from both channels.



Audio/Video Jack

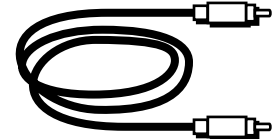

# CONNECTIONS

## CHOOSING A VCR CONNECTION

There are several different ways to connect your VCR, depending on whether or not you have cable service, and if you have a cable box, and whether some of the channels are scrambled, and maybe you have cable (but no cable box), or no cable or...well, you get the picture.

These connections are described in this section and one of them should provide you with a VCR connection that works.

- TV with RF jack only
- TV with audio/video jacks
- TV with audio/video jacks and cable box to unscramble pay channels only

If you need to connect additional components not shown in the diagrams here (and are unsure of how to connect them), refer to the instruction manual that came with that particular component.

## ADVANTAGES OF AUDIO/VIDEO CABLE CONNECTIONS

Using a simple coaxial cable connection gives you good picture quality. If your television has audio/video jacks, I highly recommend using them to get even better picture quality and stereo sound when recording and playing back videotapes. These connections give you more convenient operation by not having to share the TV's antenna signal.

## DON'T FORGET ABOUT THE AUTO TV/VCR FEATURE

The TV/VCR switch controls whether the picture signal is coming from the VCR or the TV.

You can change the setting manually by using the TV•VCR button on the remote or you can set the Auto TV/VCR feature to ON when using only the ANT. IN and RF OUT jacks and OFF when using the AUDIO/VIDEO output jacks – so your TV signal is not interrupted when the VCR is turned on.

# CONNECTIONS

## TV WITH RF JACK ONLY

This connection assumes:

- You are connecting antenna, cable, or cable box system.
- Your television has only an RF input jack.

This connection provides:

- Mono sound playback from VCR.
- Record one channel while watching another (except when using a cable box for all channels).

To use this connection, you must have:

- (1) coaxial cable for cable or antenna connection; (2) for cable box.

To connect:

1. Connect cables as shown.
2. Return to *First Things First*, then follow the steps.

## Using This Connection

Tune your TV to channel 3 or 4, whichever one you selected with the 3 CH. 4 switch on the back of the VCR.

**Auto TV/VCR Setting:**


- Set the Auto TV/VCR feature to ON.

**To play a tape:**

1. Insert a tape.
2. If necessary, press PLAY.

**To record one program and watch another:**

1. Begin recording a program using one of the recording features.
2. Press the TV•VCR button on the remote and select a different channel on the TV.

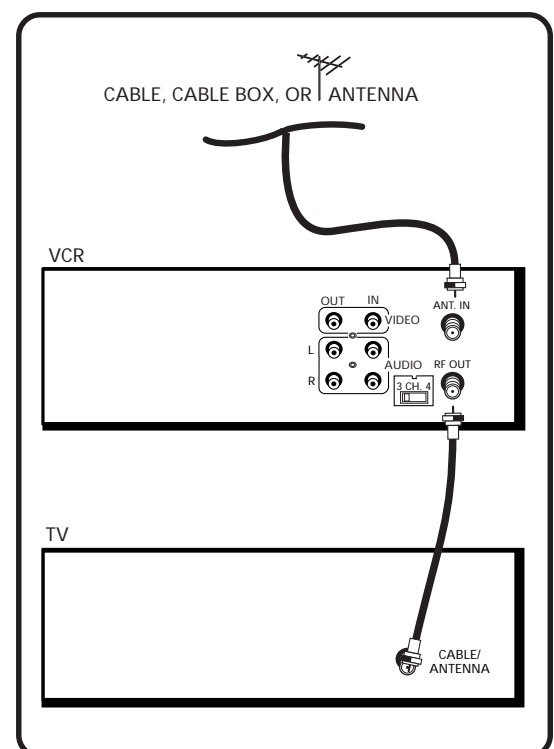

# CONNECTIONS

## TV WITH AUDIO/VIDEO JACKS

This connection assumes:

- You are connecting an antenna, cable, or cable box system.
- Your television has audio/video jacks.

This connection provides:

- Stereo sound playback from VCR.
- Record one channel while watching another (except when using a cable box for all channels).

To use this connection, you must have:

- (1) coaxial cable for cable/antenna connection; (2) for cable box
- (3) audio/video cables

To connect:

1. Connect cables as shown.
2. Return to *First Things First*, then follow the steps.

## Using This Connection

Tune your TV to its video input channel. Use of TV•VCR button is not required.

Auto TV/VCR Setting:


- Set the Auto TV/VCR feature to OFF.

To play a tape:

1. Insert a tape.
2. If necessary, press PLAY.

To record one program and watch another:

1. Begin recording a program using one of the recording features.
2. Select a different channel on the TV.

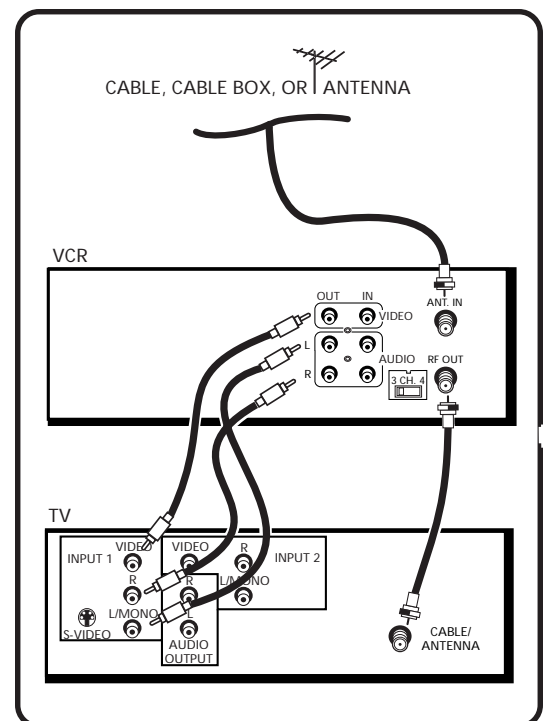

# CONNECTIONS

## TV WITH AUDIO/VIDEO JACKS AND CABLE BOX TO UNSCRAMBLE PAY CHANNELS ONLY

This connection assumes:

- You are using a cable box only to unscramble premium channels.
- Your TV has audio/video input jacks.

This connection provides:

- Stereo sound playback from VCR.
- Recording a scrambled or unscrambled channel through the cable box while watching an unscrambled channel.

To use this connection, you must have:

- (3) coaxial cables
- (3) audio/video cables
- (1) splitter

To connect:

1. Connect cables as shown.
2. Return to *First Things First*, then follow the steps.

### Using This Connection

Tune your TV to its video input channel. Use of TV•VCR button is not required.

Auto TV/VCR Setting:

- Set the Auto TV/VCR feature to OFF.


To play a tape:

1. Insert a tape.
2. If necessary, press PLAY.

To record a scrambled or unscrambled program and watch another unscrambled program:

1. Begin recording a scrambled or unscrambled program through the cable box using one of the recording features.
2. Select an unscrambled channel on the TV.

All scrambled channels must be viewed through the VCR.

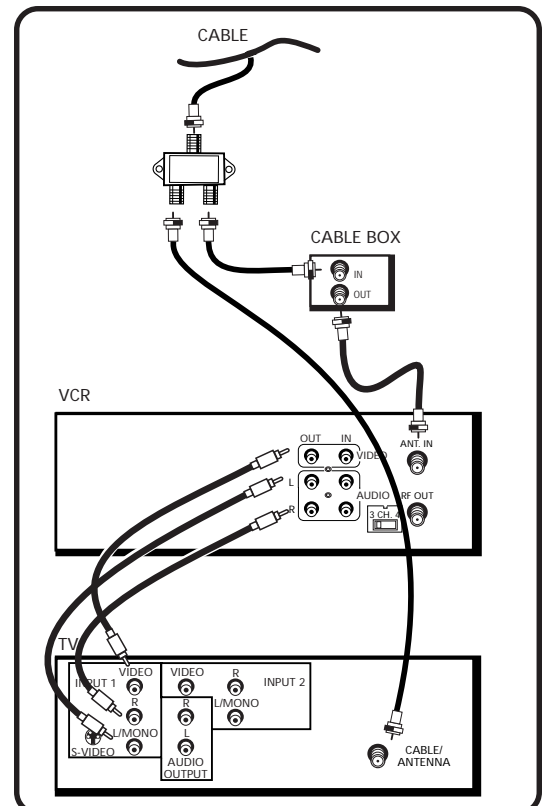

## APPENDIX: REFERENCE


This section gives you some additional information about the VCR, including a description of the unit's controls and display.

You also will find a *Troubleshooting Tips* section and Questions and Answers about COMMERCIAL►► ADVANCE in this Appendix, which might help to resolve some of those simple problems.

Finally, this section contains your warranty information.

# APPENDIX: REFERENCE

## FRONT PANEL

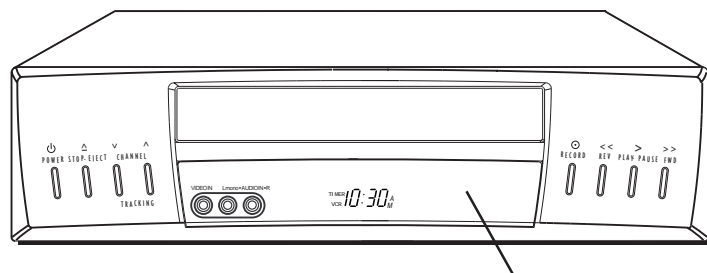

Remote Sensor

**AUDIO (R and Lmono) and VIDEO IN Jacks** Receives signals from another component, like a VCR or camcorder, when it is connected to these jacks. Use INPUT on the remote to select "L2" to record from these jacks.

**CHANNEL•TRACKING Up or Down** Selects next higher or lower channel in the VCR's channel memory. Adjusts tracking when a tape is playing. Press both together to recenter tracking.

**FWD** Forwards the tape when the VCR is stopped. Searches the picture forward during playback. Starts slow motion during play-pause and increases slow-motion speed.

**PLAY•PAUSE** Plays a tape. Pauses action for viewing during playback. Pauses recording to prevent recording of unwanted scenes.

**POWER** Turns the VCR on or off.

**RECORD** Starts VCR recording. Used for express recording.

**Remote Sensor** Receives signals from the remote control. Aim the remote at this sensor.

**REV** Rewinds the tape when the VCR is stopped. Searches the picture in reverse during playback. Starts slow motion during play-pause and decreases slow-motion speed.

**STOP•EJECT** Stops the normal functions such as record, playback, rewind, fast-forward, or pause. Ejects the tape when the VCR is stopped.

# APPENDIX: REFERENCE

## DISPLAY PANEL



Time, Channel Number, Line Input Indicator (L1 or L2), Tape Speed Indicator, or Status Indicator

**Channel Number or Line Input Indicator** The channel number appears when the VCR is tuned to a channel. The line indicator (L1 or L2) appears when a line input is selected.

**Time** The current time appears. Only an AM indicator appears with the time. There is no indicator for PM.

**Tape Speed Indicator (SP and SLP)** Press SPEED on the remote to change.

**Status Indicators** Show what the VCR is doing.

- C-Ad Flashes during commercial marking
- HI and BYE Turned on/unlocked; turned off
- FF Fast forwarding
- PLAY In playback (flashes during play-pause and slow)
- REC Recording (flashes when in record pause mode)
- REW Rewinding
- R0:30 Express recording in progress
- SAFE Pro-Tect Plus turned on
- SCH and SCH- Forward and reverse search during playback
- STOP Tape is stopped


**TIMER** Lights during express recording and when VCR is turned off and set for timer recording. Flashes when timer recording is set and there is no cassette in the VCR.

**VCR Indicator** (Applies only if the VCR Viewing Channel is 3 or 4). Press the TV•VCR button to turn on or off.

- VCR indicator on: Picture from VCR.
- VCR indicator off: Picture from TV channel.

# APPENDIX: REFERENCE

## BACK PANEL

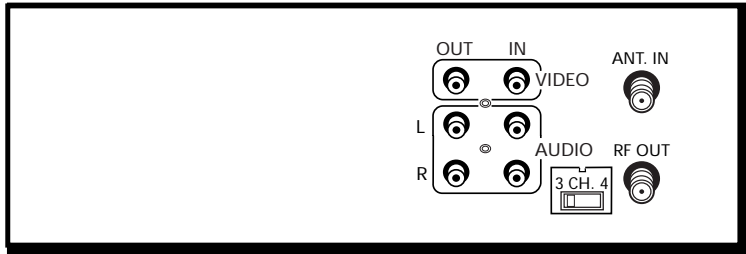

**3 CH. 4 Switch** Selects the channel to which you will tune the TV to see the VCR picture if you connect the VCR using one of the basic hookups.

**AUDIO (R and L) and VIDEO IN Jacks** Receives signals from another component, like a VCR or camcorder, when it is connected to these jacks. Use INPUT on the remote to select "L1" to record from these jacks.

**AUDIO (R and L) and VIDEO OUT Jacks** Sends signals from VCR to another component, like a TV or VCR, when it is connected to these jacks.

**ANT. IN Jack** Receives a signal from an antenna or cable system when attached.

**RF OUT Jack** Passes signal to TV using the cable supplied.

# APPENDIX: REFERENCE

## TROUBLESHOOTING TIPS

### No power

- Check to make sure it is plugged into an operating outlet.
- Check to make sure your connections are correct.

### VCR does not respond to remote

- Press VCR to set remote to control the VCR.
- Check to make sure there are no objects between the VCR and remote.
- The batteries may need changing.
- Make sure the Remote VCR1/VCR2 setting is set to VCR1 so the remote that came packed with your VCR can operate it.

### Remote no longer controls an RCA, ProScan, or GE TV

- Press TV to set remote to control a compatible TV.
- Check to make sure the remote is programmed to control an RCA, ProScan, or GE TV.

### Remote no longer controls a compatible TV

- Press TV to set remote to control the corresponding component.
- Check to make sure there are no objects between the component and remote.
- The batteries may need changing.
- Reprogram remote after batteries have been changed.
- Remove batteries and hold number button 1 for at least 60 seconds to drain the microprocessor inside the remote. Release number 1, replace the batteries, and (if necessary) reprogram the remote.

### Poor or no picture for normal TV viewing

- Check to make sure the VCR indicator is off.
- Check to make sure the TV is switched to an active channel.
- Check to make sure the antenna connections are secure and correct.

### Snowy or no picture during playback

- Press TV•VCR to turn VCR indicator on.
- Check TV channel selected (3 or 4) to make sure it matches the channel selected with 3 CH. 4 switch on back of VCR.
- Check to make sure the TV's fine tuning is correct for the channel you have selected.
- Check video cable connections between VCR and TV monitor.
- Check to make sure the TV monitor is set to video input.
- Try another tape.
- Some snow/streaks are normal during search, stop action, frame advance, and slow-motion playback.

continued on next page

# APPENDIX: REFERENCE

## Streaks in picture during normal playback

- Press one of the TRACKING buttons to move streaks up or down for the best picture.
- Check to make sure the tape is of good quality and not worn out.

## Time counter not working or time counter not working in search modes

- The time counter does not advance during unrecorded portions of tape. When an unrecorded segment of tape is encountered, the time counter will hold its count until recorded material is detected again.
- A minus (-) will appear in front of the time if you rewind the tape farther back than a counter reading of 0:00:00.
- The time counter disappears during search; this is normal.

## Will not record or play

- Check to make sure there is a tape in the VCR.
- Try ejecting and reinserting the cassette.
- Check to make sure the tape is not broken.
- Check to make sure the VCR is not in pause mode. Press PAUSE or PLAY to return to normal playback.
- Check the ProTect Plus™ feature.

## Rewind does not operate

- Check to make sure the tape is not already rewound.

## VCR Plus+ or timer recording not made or wrong program recorded

- Check to make sure the correct VCR Plus+ code is entered.
- Check to make sure the cable box was turned on when recording was to begin.
- Check to make sure the program was entered correctly (wrong channel or times).
- Power interruption. Reset the clock.
- Check to see if time and date are correct – including AM/PM.
- Check to make sure the program did not exceed the tape's length or the tape was not rewound beforehand.
- Check to make sure the VCR was turned off at the time recording was to start.
- Check to make sure there was a tape in the VCR and the cassette's safety tab was intact.
- VCR ejects cassette when the end of the tape is reached during a timer recording.
- Check to make sure VCR Plus+ setup was completed correctly.

## Will not record

- Check to make sure the safety tab is intact.
- Check to make sure the VCR is not in the line mode. Press INPUT on the remote.

# APPENDIX: REFERENCE

## **Clock shows incorrect time or date**

- Power interruption.
- Check to make sure the clock is set accurately (check AM/PM and date).
- Check Daylight-Saving setting. The clock may have adjusted for daylight-saving time.

## **Time did not adjust for daylight-saving time**

- Check to make sure daylight-saving feature is set correctly.

## **VCR makes noise when stopped**

- VCR is removing tape from heads. This is normal. The head cylinder inside the VCR will continue to rotate for a few minutes after you put the VCR in the stop mode.

## **Will not AUTO CHANNEL SEARCH active channels correctly**

- Check to make sure the antenna connections are secure and correct.
- Check to make sure the Signal Type: CABLE/ANTENNA feature is set correctly.
- If Detect Automatically was selected for the Signal Type in the AUTO CHANNEL SEARCH menu, try using either CABLE TV or ANTENNA instead.
- May not be necessary if using a cable box for all channels. Contact your local cable company for more information.

## **Tape plays back in slow motion**

- Press PLAY to return to normal playback.

## **Cannot select channels over 69**

- Cable channels over 69 can only be selected if Signal Type: CABLE/ANTENNA feature is set to CABLE.

## **Cassette with safety tab removed does not start to play automatically**

- Check to make sure the Auto Play ON/OFF feature is set to ON.

## **TIMER indicator flashes**

- Check to make sure there is a cassette in the VCR when a timer recording is set.

## **Time counter disappears during searching**

- This is normal.

## **On-screen menus appear in English, French, or Spanish**

- Check LANGUAGE feature.

## **Tape or sections of tape repeat**

- Check Auto Repeat feature.

## **No stereo sound during playback**

- Check to make sure the Tape Playback feature is set to HI-FI to hear stereo sound during playback. The tape you are playing must be recorded in HI-FI in order to play back in HI-FI.
- Must use the AUDIO/VIDEO jacks on the back of the VCR to hear stereo sound.

# APPENDIX: REFERENCE

## **Stereo audio too noisy**

- Stereo signal is weak. Set Reception: STEREO/SAP/MONO feature to MONO.
- Press one of the TRACKING up or down buttons to minimize the noise.

## **Index, Go-To, and Blank Search features do not operate**

- Check to see if MOVIE▶▶ADVANCE feature is activated.

## **Cannot access MOVIE▶▶ADVANCE feature**

- Cassette must have safety tab removed and be recorded in SP speed.
- Home Recording was selected for the tape type in the menu. Eject cassette and reinsert.

## **VCR forwards through commercials or momentarily displays a blue screen during playback.**

- Commercial Advance Playback feature is set to AUTO. Set it to MANUAL.

## **COMMERCIAL▶▶ADVANCE feature does not mark commercials when:**

- The Marking feature is set to OFF in the COMMERCIAL ADVANCE menu. Set it to ON.
- A recording is less than 15 minutes or the commercial is longer than one minute.
- A single isolated commercial can not be marked.
- Recording started in the middle of a commercial segment.
- A commercial group within the first or last two minutes of a recording.
- Accuracy and effectiveness can vary depending upon program content and the characteristics of the commercials.
- A commercial is between 30-and-45 seconds and 45-and-60 seconds.
- Effectiveness may vary when local television stations insert their own commercials.

## **Commercials recorded even though COMMERCIAL▶▶ADVANCE feature was set to ON.**

- COMMERCIAL▶▶ADVANCE is designed to record the commercials, mark them, and then skip over the marked commercials during playback.

# APPENDIX: REFERENCE

## QUESTIONS AND ANSWERS ABOUT COMMERCIAL▶▶ADVANCE

**Will commercials be scanned through only on playback of recordings?**

Yes. The VCR does not rewind and mark commercial segments until after recording is finished.

**How fast does the COMMERCIAL▶▶ADVANCE VCR scan through the commercial breaks?**

In SLP tape speed, a 3-minute commercial break is scanned through in approximately 8-12 seconds. In SP, it takes about 25-35 seconds.

**Are commercials still recorded if I want to watch them?**

Yes. The recorded program, including commercials, can be viewed by setting the Playback feature to MANUAL.

**What if the VCR scans forward through part of my program?**

Simply rewind the tape to just before the skipped segment, and press PLAY to view the program.

**Once a recording has been marked, does COMMERCIAL▶▶ADVANCE work each time the tape is played?**

Yes. If the Playback feature is set to AUTO, the marked commercials should be skipped each time the tape is played in a COMMERCIAL▶▶ADVANCE VCR.

**After marking commercials, is the tape left at the beginning or end of the recording?**

The tape is left at the end of the recording so it is in position to begin additional programmed recordings.

**Does the marking process interfere with other programmed recordings?**

No. If two or more recordings are programmed together without sufficient time to mark the first recording, marking will take place after all recordings have completed.

**What happens if the marking process is interrupted?**

Marking can be interrupted to allow use of the VCR. Marking will resume again when the VCR's power is turned off as long as the tape has not been ejected from the VCR.

**Does COMMERCIAL▶▶ADVANCE work in all recording speeds?**

Yes, COMMERCIAL▶▶ADVANCE works in SP and SLP.

**Will COMMERCIAL▶▶ADVANCE marked recordings work in non-Commercial Advance VCRs?**

A COMMERCIAL▶▶ADVANCE marked recording will play in a non-commercial advance VCR, but commercials will not automatically be skipped.

# APPENDIX: REFERENCE

## LIMITED WARRANTY

### What your warranty covers:

- Any defect in materials or workmanship.

### For how long after your purchase:

- Ninety days for labor charges.
- One year for parts.

The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.

### What we will do:

- Pay any Authorized RCA VCR Service Center the labor charges to repair your VCR.
- Pay any Authorized RCA VCR Service Center for the new or, at our option, refurbished replacement parts required to repair your VCR.

### How you get service:

- Take your VCR to any Authorized RCA VCR Service Center. To identify your nearest Authorized RCA VCR Service Center, ask your dealer, look in the Yellow Pages, or call 1-800-336-1900.
- Show the Authorized Service Center Representative your evidence or purchase date or first rental.
- Pick up your VCR when repairs are completed.

### What your warranty does not cover:

- Customer instruction. (Your Owner's Manual clearly describes how to install, adjust, and operate your VCR. Any additional information should be obtained from your Dealer.)
- Installation and related adjustments.
- Signal reception problems not caused by your VCR.
- Damage from misuse or neglect.
- Cleaning of video/audio heads.
- Batteries.
- A VCR that has been modified or incorporated into other products or is used for institutional or other commercial purposes.
- A VCR purchased or serviced outside the USA.
- Acts of God, such as but not limited to lightning damage.

### Product Registration:

- Please complete and mail the Product Registration Card packed with your VCR. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

### How state law relates to this warranty:

- This warranty gives you specific legal rights and you also may have other rights that vary from state to state.

### If you purchased your VCR outside the United States:

- This warranty does not apply. Contact your dealer for warranty information.

# APPENDIX: REFERENCE

## SPECIFICATIONS

<b>Format:</b>	VHS
<b>Record/Playback System:</b>	Video: 4-head Audio: 2 Hi-Fi record/playback system
<b>Video Signal System:</b>	EIA standard: NTSC color
<b>Antenna:</b>	75-ohm external VHF/UHF combined antenna terminal
<b>Tuner:</b>	USA: 181 channels capability* (125 cable channels)  Canada: 178 channels capability* (122 cable channels)
<b>Type:</b>	AutoProgramming frequency synthesis
<b>Power Requirement:</b>	120V AC, 60 Hz
<b>Power Consumption:</b>	19 watts (Standby: < 4 watts)
<b>Dimensions:</b>	3.54 inches high (90 mm) 14.2 inches wide (360 mm) 10.75 inches deep (273 mm)
<b>Weight:</b>	8.1 pounds (3.7 kg)
<b>Storage Temperature Range:</b>	- 22°F to +149°F (-30°C to +65°C)
<b>Operating Temperature Range:</b>	+41°F to +104°F (+5°C to +40°C)

\*Check your cable company's compatibility requirements.

## CLEANING THE VCR

Use a soft cloth or dusting attachment of your vacuum cleaner to dust your VCR. Remove dust from the ventilation holes on the top, back, sides, and bottom of the cabinet.

Plastic surfaces are easily scratched and can be marred by alcohol and various solvents. Avoid excessive use of oil-based furniture polishes since the materials used in the cabinet will accumulate more dust. We recommend using a nonabrasive, antistatic cleaner and polisher.

Specifications are subject to change.

# INDEX

3 CH. 4 switch 5, 8, 54, 60

## A

Accessing menus 5

Add or remove channels 12

ADD/REMOVE CHANNELS screen 12

ANT. IN and RF OUT jacks

4, 5, 8, 17, 52, 53, 60

Audio features, set-up 48

AUDIO menu 48

Audio only

playing back 31

recording 31

Audio playback

Hi-Fi 49

linear 49

mix 49

SAP 49

Audio reception 49

Audio record

mono 49

stereo 49

AUDIO/VIDEO cables 32

AUDIO/VIDEO jacks

4, 5, 20, 31, 52, 55, 56, 58, 60

Auto channel search 10

AUTO CHANNEL SEARCH menu 11

Auto play feature 6, 17, 22

Auto repeat feature 46

AUTO REPEAT screen 46

AUTO TV/VCR feature 17, 53, 54, 55, 56

Automatic rewind 23

Automatic tracking 22, 45

## B

Back panel controls 60

Basics, learn the 19

Batteries

installing in the remote 4

replace 49

Blank search 45

BLANK SEARCH menu 45

Broadcast stereo TV recording 30

## C

Cable box setup 9

CABLE BOX SETUP menu 10

Cables

connecting 52

positioning 51

CHAN buttons 12, 20, 21, 34

Channel number display 59

Channel, VCR viewing 5

CHANNEL•TRACKING button 58

Channels, add or remove 12

Channels list, VCR 10

CHANNELS menu 9, 11, 12, 14, 28

Choosing a VCR connection 53

Cleaning the VCR 67

CLEAR button 20, 21, 29, 44, 45, 46, 47

Clearing programs 30

COMMERCIAL▶▶ADVANCE 38

display 40

marking 39

menu 39, 40

playback 40

questions and answers 65

Component buttons 20

Connecting your VCR 4, 52

Connections 51

audio only 31

audio/video cables 53

choosing 53

TV with audio/video jacks 55

TV with audio/video jacks and cable box to  
unscramble pay channels only 56

TV with RF jack only 54

two VCRs 32

Contents 1

Copying and editing tapes 32

# INDEX

## D

Date and time setting 12  
Daylight-saving time, set 12  
Design specifications 67  
Display panel 59  
Displays, on screen 48

## E

Editing tapes 32  
Eject, tape 23  
EnergySaver feature 18  
Express recording 26

## F

F.ADV button 20, 44  
First setup 3  
Forward and reverse search 43  
FORWARD button 22, 43, 44, 45, 47  
Frame advance 44  
Front panel  
    controls 58  
    VCR display brightness feature 18  
FWD button 20, 22, 45, 58

## G

GO BACK button 20, 21  
Go-to search feature 45  
GO-TO SEARCH menu 45

## H

Hi-fi playback 49

## I

Important information inside front cover  
Index search 44  
INDEX SEARCH menu 44

continued on next page

INFO button 13, 20, 21, 46, 47, 48

INPUT button 20, 27, 31, 60

## J

Jacks

    ANT. IN and RF OUT 4, 5, 8, 17, 52, 53, 60

    AUDIO/VIDEO 4, 5, 20, 31, 52, 55, 56, 58, 60

    types of 52

## L

L1 and L2 indicators 31, 32, 59, 60

Language feature 8

LANGUAGE menu 9

Limited warranty 66

Line input indicators 31, 32, 48, 59, 60

Linear playback 49

Locking feature 47

Low voltage detection 49

## M

MENU button

    5, 8, 9, 10, 11, 12, 14, 16, 20, 27,  
    28, 29, 38, 46, 48

Mono audio 49

MOVIE▶▶ADVANCE feature 41

MOVIE ADVANCE menu 41

MUTE button 21

## N

Number buttons 5, 13, 21, 22, 45

## O

OFF button 20, 21, 22, 34

On-screen displays 34, 48

On-screen menus 8

Overheating 51

# INDEX

## P

PAUSE button 21, 22, 23, 32, 44  
Pause the tape 23  
Picture search options 43  
PLAY button 21, 22, 43, 54, 55, 56, 58  
PLAY•PAUSE button 22  
Playing a tape 22  
Playing back audio only 31  
Plug in the VCR 5  
PlusCodes for VCR Plus+ 29  
POWER button 23, 58  
Power surges 51  
PREFERENCES menu 16, 38, 46  
Preferred tape speed feature 18  
Pro-TECT plus locking feature 47  
Problem solving 61  
Product registration inside front cover  
Programming the remote  
    to operate a TV 34  
PROGRAMS OVERLAP message 27, 29

## Q

QuickSet guide 5, 8

## R

Reception  
    mono 49  
    SAP 49  
    stereo 49  
Reception: STEREO/MONO/SAP feature 31  
RECORD button 21, 23, 26, 31, 32, 58  
Record-protect tab 23, 32, 41  
Recording 25  
    audio only 31  
    broadcast stereo TV 30  
    copying and editing tapes 32  
    express (XPR) 26  
    SAP 30  
    speeds 18  
    timer 27

types of 26

VCR plus+ 28

XPR (express) 26

Registration, product inside front cover

Remote

    batteries are low message 49

    buttons 20

    component buttons 20

    installing batteries 4

    sensor 58

    TV function buttons 21

    VCR function buttons 20

    VCR1/VCR2 option feature 16

Remove or add channels 12

REV button 22, 58

REVERSE button 21, 22, 43, 44, 45

Review programs screen 30

Rewind, automatic 23

## S

SAFE indicator 47

Safety tab 23, 32, 41

SAP playback 49

SAP recording 30

Search

    blank 45

    forward 43

    frame advance 44

    go-to 45

    index 44

    MOVIE▶▶ADVANCE 41

    reverse 43

    slow-motion 43

SEARCH button 21, 41, 42, 44, 45

Set time and date manually 13

SET TIME AND DATE menu 13

Set up

    audio features 48

    cable box 9

    features 7

# INDEX

- first 3
- language 8
- using menus 8
- Setup menu 8
- Signal type
  - CABLE or ANTENNA 11
  - changing 11
- Skipping commercials 38
- Slow-motion search 43
- SLP recording speed 18
- Solving problems 61
- SP recording speed 18
- Specifications 67
- Speed
  - LP 18
  - SLP 18
  - SP 18
- SPEED button 21, 23, 26, 29, 31
- Speeds, recording 18
- Status indicators
  - BYE 59
  - C-Ad 59
  - FF 59
  - HI 59
  - PLAY 59
  - R0:30 59
  - REC 59
  - REW 59
  - SAFE 59
  - SCH and SCH- 59
  - STOP 59
- Stereo audio 49
- STOP button 21, 22, 23, 26, 30, 31, 44, 45, 47
- STOP•EJECT button 22, 23, 41, 58
- Stop-action pause 23
- Stopping a timer recording 30

## T

- Tab, safety 23, 32, 41
- Table of contents 1
- Tape eject 23

continued on next page

- Tape playback 49
- Tape playback: HI-FI, LINEAR and MIX feature 49
- Tape, playing a 22
- Tape speed indicators 59
- Tape speeds 18, 59
- Time and date feature 12
- Time and date setting 12
- Time counter 47
- Time display 59
- TIME menu 12
- TIMER indicator 27, 29, 59
- Timer recording 27
  - clearing programs 30
  - reviewing programs 30
  - setting 27
  - stopping 30
- TIMER RECORDINGS menu 27, 30
- Tips, troubleshooting 61
- Tracking 45
- TRACKING buttons 21, 22, 43, 45
- Troubleshooting tips 61
- TV button 20, 34
- TV codes for programming remote 35
- TV function buttons 21
- TV•VCR button
  - 21, 31, 53, 54, 55, 56, 59
- Types of recordings 26

## U

- Unpack 4

## V

- VCR button 20, 47
- VCR channel list 10
- VCR cleaning 67
- VCR function buttons 20
- VCR indicator 31, 59

# INDEX

## VCR MAIN MENU

8, 9, 10, 11, 12, 14, 16, 27, 28, 30, 38, 46, 48

## VCR Plus+

channel list 14

channel list for Canada 15

channel list for USA 14

channel list screen 14

channels 14

setting up channels 14

worksheet for channels 14

## VCR Plus+ recording

channel list 28

clearing programs 30

menu 28

PlusCode 29

reviewing programs 30

set a recording 29

stopping 30

## VCR viewing channel 5

## Video1 and Video2 line indicators 48

## VOL buttons 22

# W

Warranty, limited 66

# X

XPR (express recording) 26



If your VCR needs service, please contact your dealer or the nearest Servicenter from the yellow pages. Please do not send any products to the Indianapolis address listed in this manual or on the carton. This will only add delays in service for your product.

 **THOMSON CONSUMER ELECTRONICS**  
10330 North Meridian Street  
Indianapolis, IN 46290

©1998 Thomson Consumer Electronics, Inc.  
Trademark(s)® Registered  
Marca(s) Registrada(s)  
Printed in Japan  
TOCOM 15313920



As an ENERGY STAR® Partner, Thomson Consumer Electronics has determined that this product or product model meets the ENERGY STAR® guidelines for energy efficiency.