

## HEAD AMPLIFIER/Hi-Fi AUDIO/VIDEO HEAD AMPLIFIERCIRCUIT

## VOLTAGE CHARTS

(FOR MODEL VR346)  
HEAD AMP CIRCUIT

MODE PIN NO.	REC	PLAY
IC2601		
1	13.0	13.0
2	13.0	13.0
3	13.5	13.5
4	1.2	1.2
5	5.1	5.1
6	0.9	0.9
7	1.0	1.0
8	0.7	0.7
9	2.6	2.6
10	1.5	1.5
11	0	0
12	3.9	3.9
13	3.9	3.9
14	3.9	3.9
15	0.1	0.1
16	13.2	13.2
IC3501		
1	2.6	2.6
2	0	0
3	0.3	1.4
4	0	0.7
5	0	0
6	0	0.7
7	0.2	1.4
8	0	0
9	0	0
10	0	0
11	0	0
12	0	0
13	---	---
14	6.3	0
15	6.3	0
16	6.3	0
17	6.3	0
18	6.3	0
19	---	---
20	---	---
21	---	---
22	0	0
23	0	0
24	0	0
25	11.9	0.5
26	0	0
27	0	0
28	0	0
29	0	0
30	2.7	2.3
31	5.1	0.1
32	0	0
33	0	0
34	0	0
35	12.0	12.0
36	0.1	5.0

(FOR MODELS  
VG4062, VR527, VR540)  
HEAD AMP CIRCUIT

MODE PIN NO.	REC	PLAY
IC2601		
1	13.0	13.0
2	13.0	13.0
3	13.5	13.5
4	1.2	1.2
5	5.1	5.1
6	0.9	0.9
7	1.0	1.0
8	0.7	0.7
9	2.6	2.6
10	1.5	1.5
11	0	0
12	3.9	3.9
13	3.9	3.9
14	3.9	3.9
15	0.1	0.1
16	13.2	13.2
IC3501		
1	2.6	2.6
2	0	4.2
3	0.3	1.4
4	0	0.7
5	0	0
6	0	0.7
7	0.2	1.4
8	0	0
9	0	0
10	0.2	2.2
11	0	0
12	0	0
13	0	0
14	0.2	2.2
15	---	---
16	6.3	0
17	6.3	0
18	6.3	0
19	---	---
20	---	---
21	---	---
22	---	---
23	---	---
24	---	---
25	11.9	0.5
26	5.0	5.0
27	0	0
28	0	0
29	0	0
30	2.7	2.3
31	5.1	0.1
32	0.1	0.1
33	0	0
34	0.1	0.7
35	12.0	12.0
36	0.1	5.0