 
 


## MAIN CIRCUIT BOARD WAVEFORMS


## MAIN C.B.A.

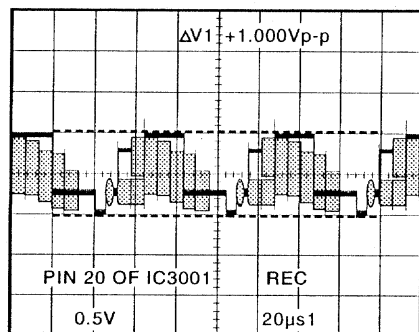


WF1

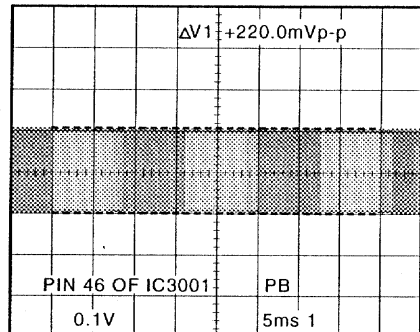

 
WF5

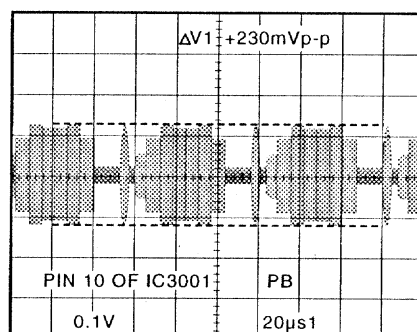


WF7

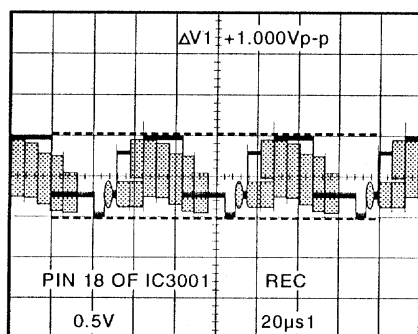 


WF2

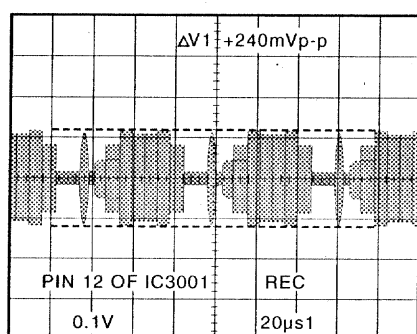 


WF6

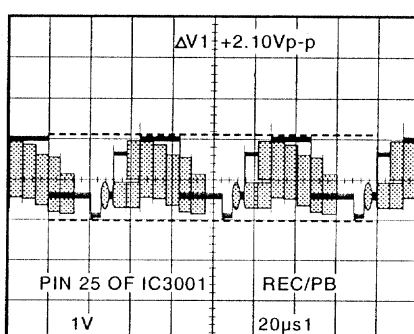 



WF8

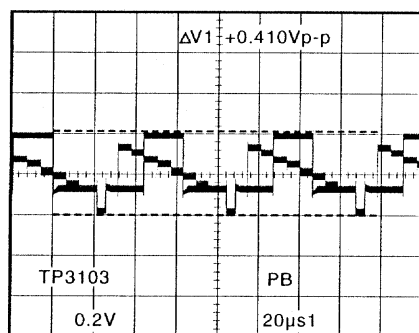 


WF3

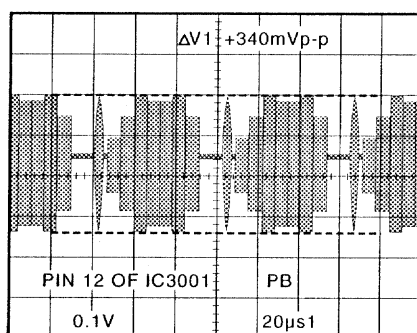 


WF6

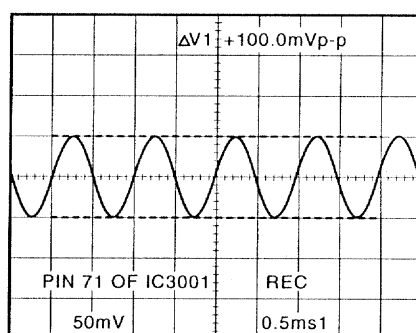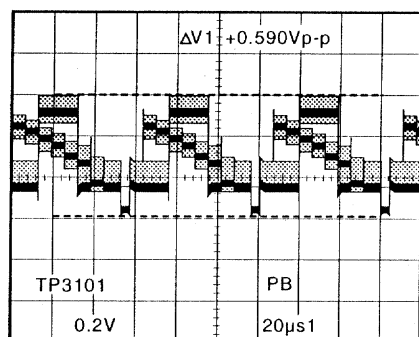  WF9  
(FOR MODEL VG4043)

 WF4

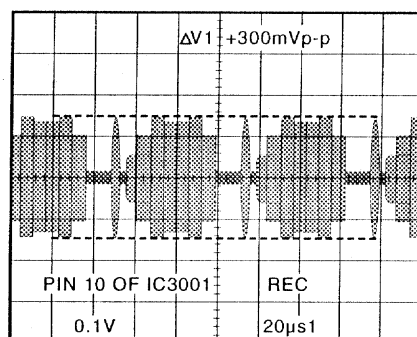


WF7

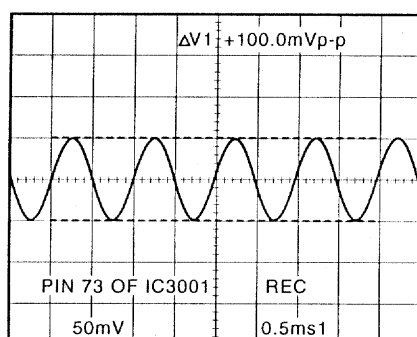 


WF10


## MAIN CIRCUIT BOARD WAVEFORMS (Continued)

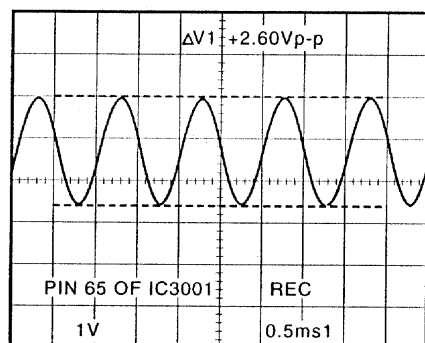 

WF11

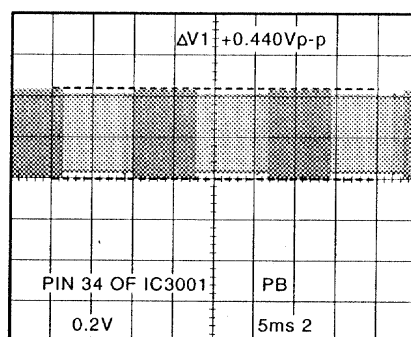 


WF15

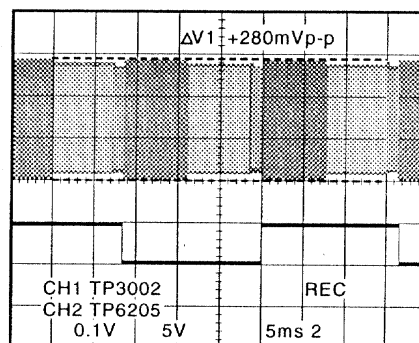 


WF18

WF22

 
(FOR MODEL VG4043)

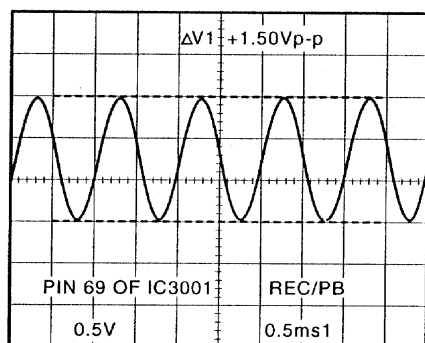


WF12

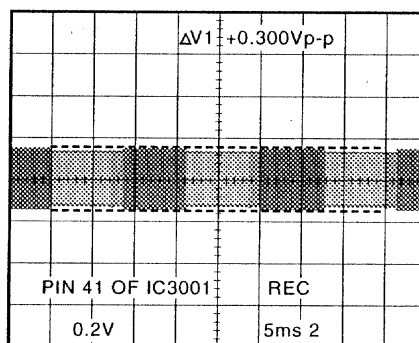 


WF16

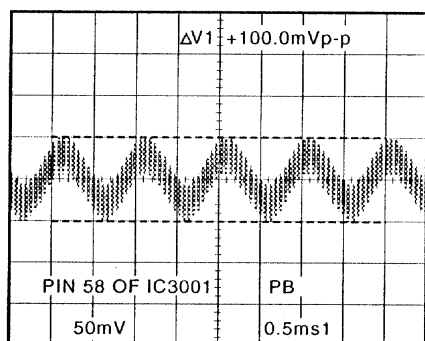 

WF13

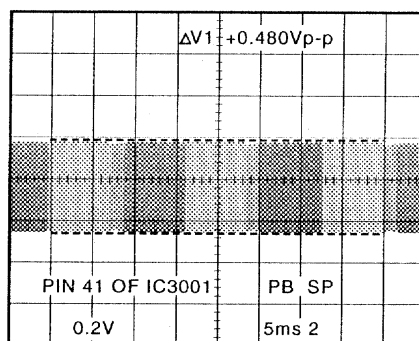 


WF16

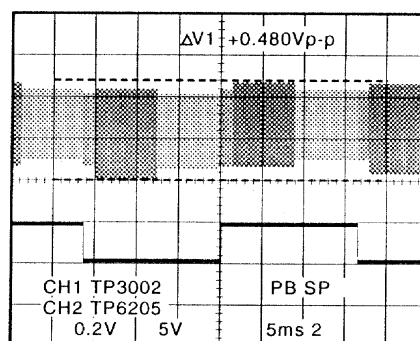 


CH1 WF18

CH2 WF22

 (FOR MODEL VG4043)

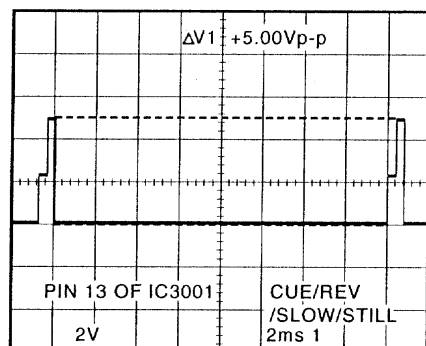


WF14

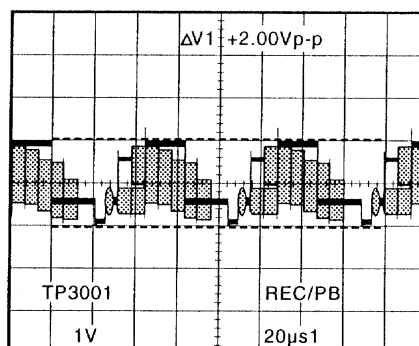 


WF17

## MAIN CIRCUIT BOARD WAVEFORMS (Continued)

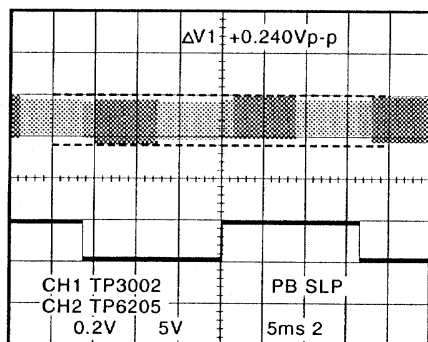 


CH1 WF18  
CH2 WF22

 (FOR MODEL VG4043)

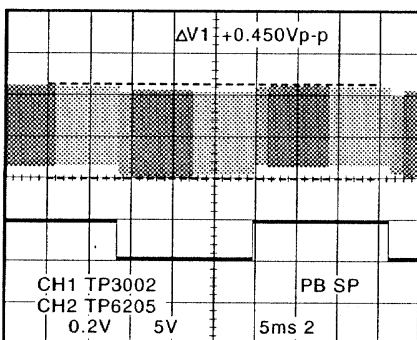


CH1 WF18  
CH2 WF22

 
(FOR MODELS  
VR632HF, VR692HF)

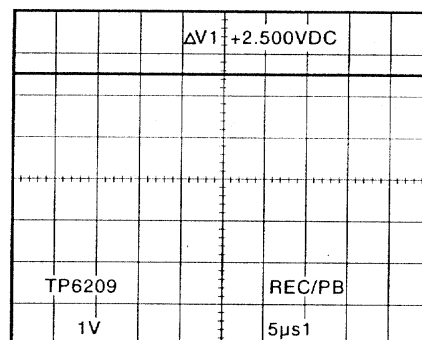

WF19

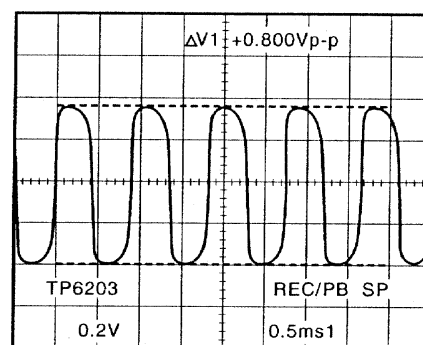 


WF20

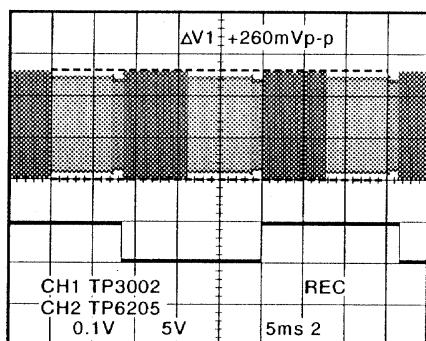 


CH1 WF18  
CH2 WF22

 (FOR MODELS  
VR632HF, VR692HF)

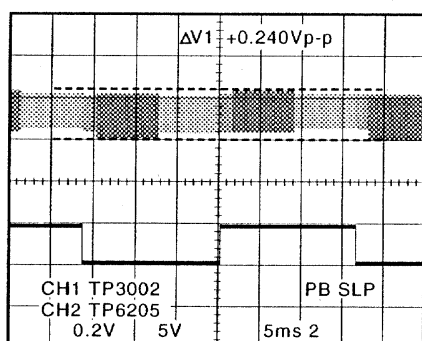


CH1 WF18  
CH2 WF22

 (FOR MODELS  
VR632HF, VR692HF)

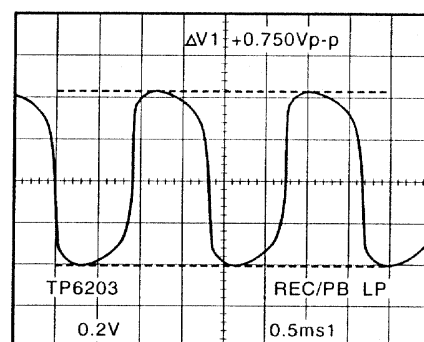


WF20

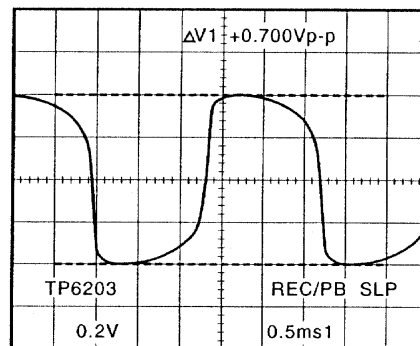 


WF20


## MAIN CIRCUIT BOARD WAVEFORMS (Continued)

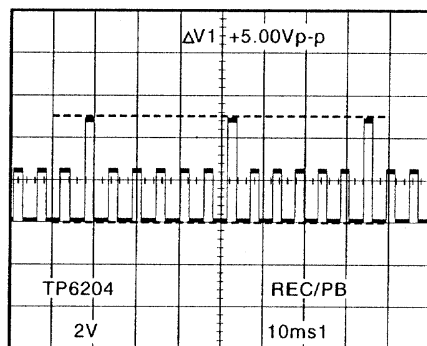 


WF21

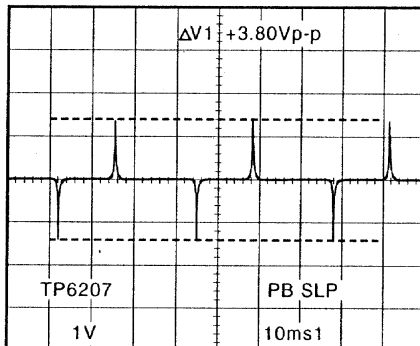 


WF23

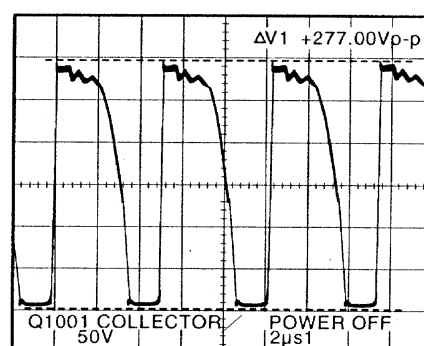 


WF27

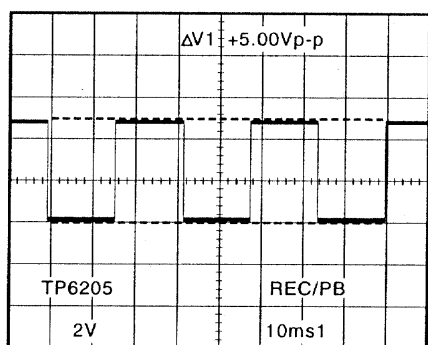 


WF22

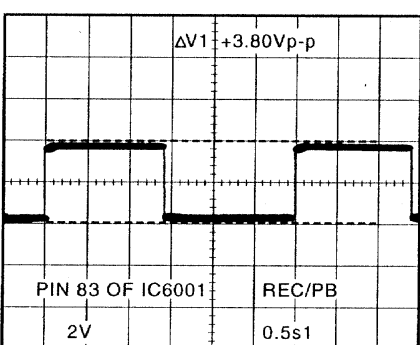 


WF24

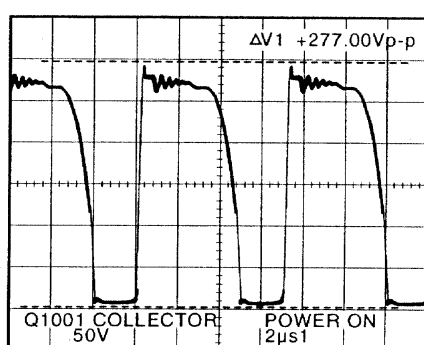 


WF27

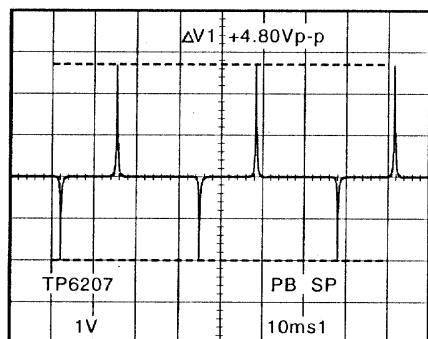 


WF23

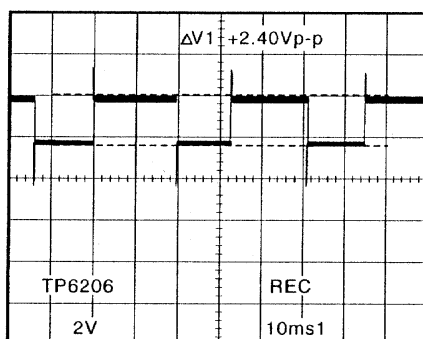 


WF25

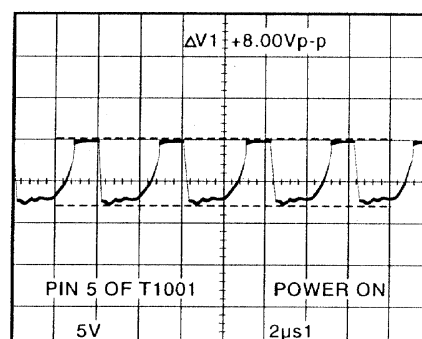 


WF28

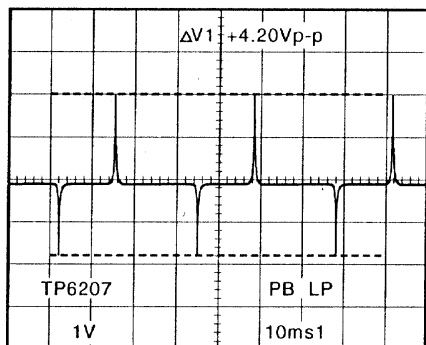 

WF23

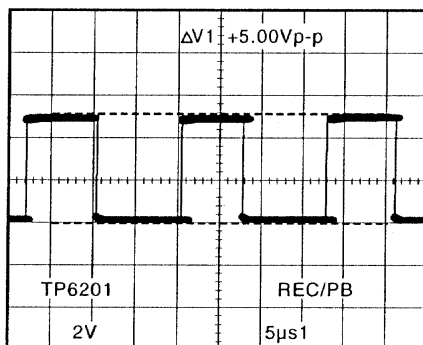 


WF26

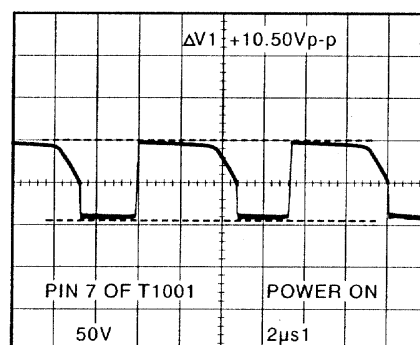 


WF29


## MAIN CIRCUIT BOARD WAVEFORMS (Continued)

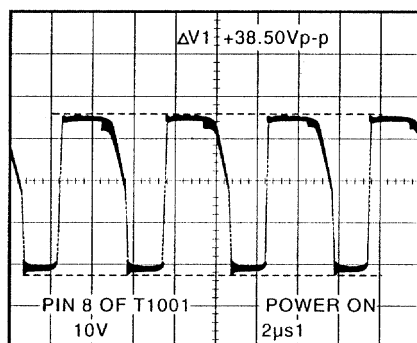 

WF30

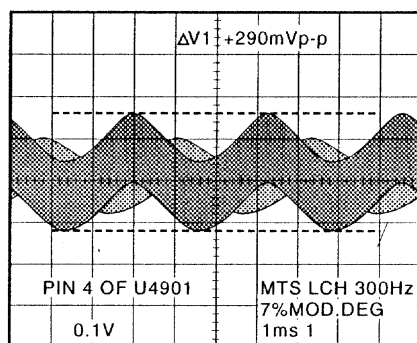 


WF34

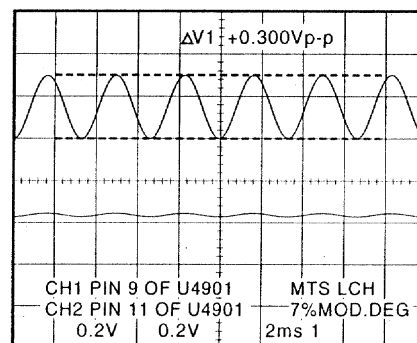 
(FOR MODELS  
VR632HF, VR692HF)

CH1 WF35

 
CH2 WF36

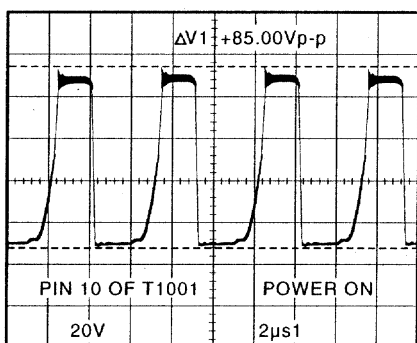(FOR MODELS  
VR632HF, VR692HF)

 WF31

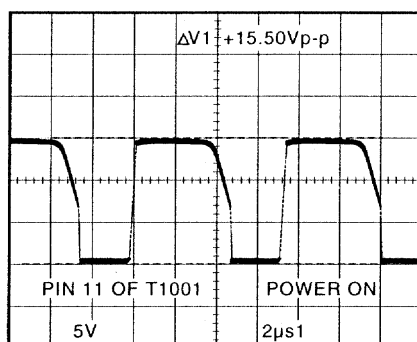


WF32

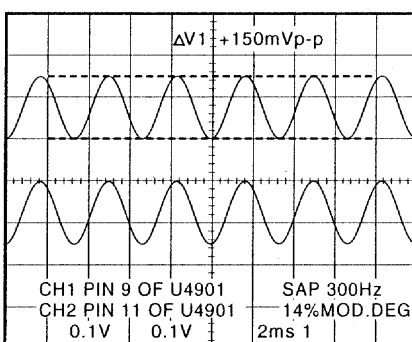 


CH1 WF35

 
CH2 WF36

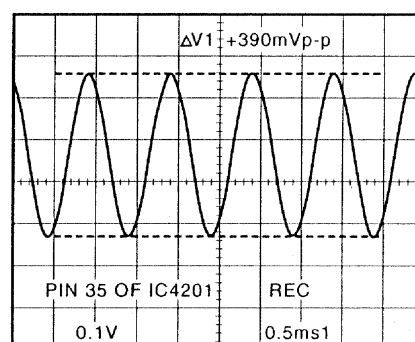(FOR MODELS  
VR632HF, VR692HF)

 WF37








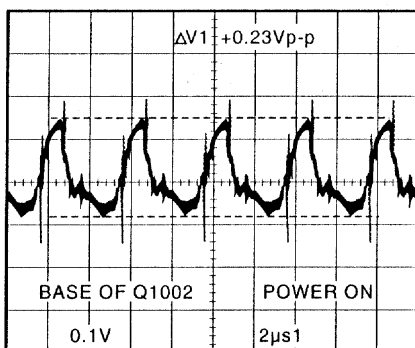
(FOR MODELS  
VR632HF, VR692HF)

 WF33

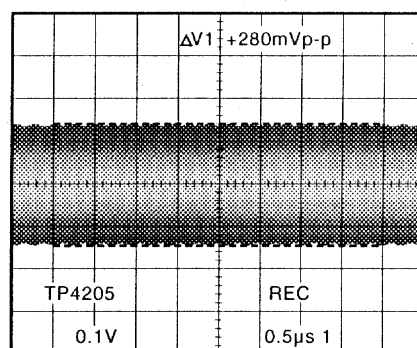


WF38

## MAIN CIRCUIT BOARD WAVEFORMS (Continued)

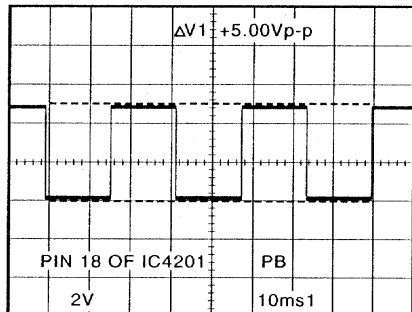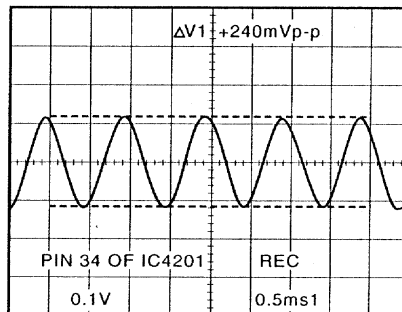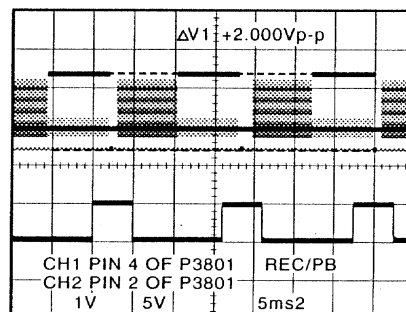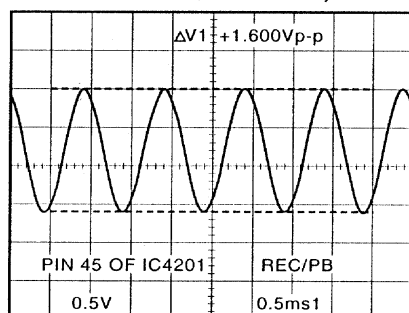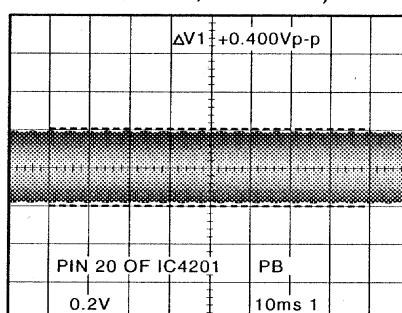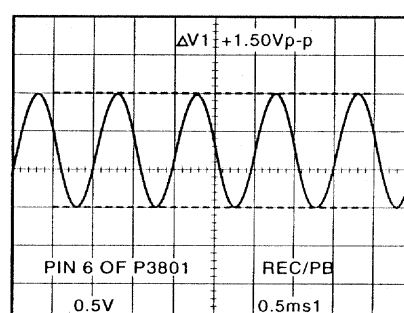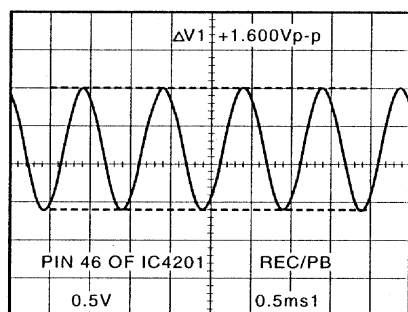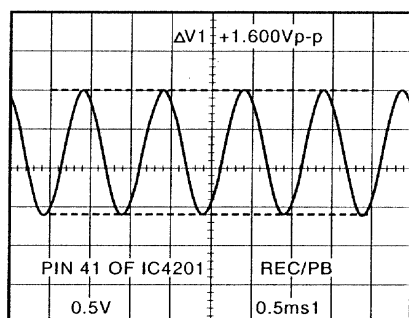        (FOR MODEL VR692HF)  
ADVANCE C.B.A.**WF39**(FOR MODELS  
VR632HF, VR692HF)**WF43**(FOR MODELS  
VR632HF, VR692HF)**WF55****WF56****WF40**(FOR MODELS  
VR632HF, VR692HF)**WF44**(FOR MODELS  
VR632HF, VR692HF)**WF57****WF41**(FOR MODELS  
VR632HF, VR692HF)**WF42**(FOR MODELS  
VR632HF, VR692HF)


# HEAD AMPLIFIER CIRCUIT BOARD WAVEFORMS

 **(FOR MODEL VG4043)  
HEAD AMP C.B.A.**

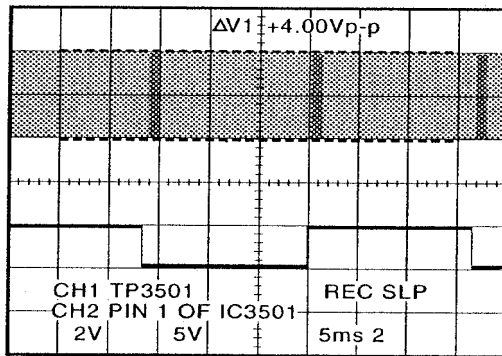

**CH1 WF47  
CH2 WF48**

 **(FOR MODELS  
VR632HF, VR692HF)  
Hi-Fi AUDDIO/VIDEO  
HEAD AMP C.B.A.**

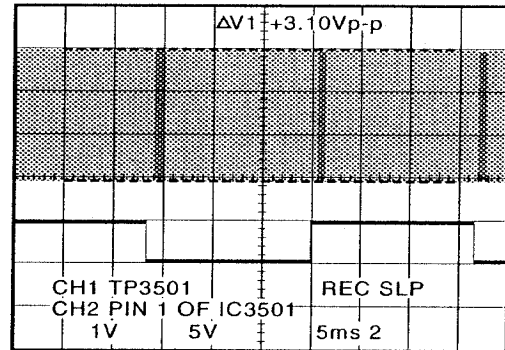

**CH1 WF49  
CH2 WF50**