

VOLTAGE CHARTS

(FOR MODEL
VR692HF)

ADVANCE CIRCUIT

| MODE PIN NO. | REC | PLAY |
|-----------------|-----|------|
| IC3801 | | |
| 1 | 5.0 | 5.0 |
| 2 | 1.0 | 0.9 |
| 3 | 2.9 | 3.0 |
| 4 | 2.9 | 3.0 |
| 5 | 2.3 | 2.3 |
| 6 | --- | --- |
| 7 | 3.0 | 3.0 |
| 8 | 0 | 0 |
| 9 | --- | --- |
| 10 | 3.0 | 3.0 |
| 11 | 4.9 | 4.9 |
| 12 | 1.3 | 1.3 |
| 13 | 1.3 | 1.3 |
| 14 | --- | --- |
| 15 | --- | --- |
| 16 | 4.7 | 4.7 |
| 17 | --- | --- |
| 18 | 0.6 | 0.6 |
| 19 | --- | --- |
| 20 | --- | --- |
| 21 | 3.2 | 3.2 |
| 22 | 1.7 | 1.7 |
| 23 | --- | --- |
| 24 | 1.7 | 1.7 |
| 25 | 4.9 | 4.9 |
| 26 | --- | --- |
| 27 | --- | --- |
| 28 | 2.9 | 2.9 |
| 29 | --- | --- |
| 30 | 3.1 | 3.1 |
| 31 | 3.0 | 3.1 |
| 32 | 2.3 | 2.4 |
| 33 | 2.8 | 2.8 |
| 34 | 2.9 | 2.9 |
| 35 | 5.0 | 5.0 |
| 36 | 0 | 0 |
| TP3801 | 3.1 | 3.1 |
| TP3802 | 2.9 | 2.9 |
| TP3803 | 3.0 | 3.0 |