

VOLTAGE CHARTS

(FOR MODELS
VR632HF, VR692HF)
Hi-Fi AUDIO/VIDEO
HEAD AMP CIRCUIT

MODE PIN NO.	REC	PLAY	MODE PIN NO.	STOP	FF	REW
IC2601			IC2601			
1	13.0	13.0	1	13.0	13.0	13.0
2	13.0	13.0	2	13.0	13.0	13.0
3	13.5	13.5	3	13.5	13.5	13.5
4	1.2	1.2	4	1.2	1.2	1.2
5	5.1	5.1	5	5.1	5.1	5.1
6	0.9	0.9	6	0.9	0.9	0.9
7	1.0	1.0	7	1.0	1.0	1.0
8	0.7	0.7	8	0.7	0.7	0.7
9	2.6	2.6	9	2.6	2.6	2.6
10	1.5	1.5	10	1.5	1.5	1.5
11	0	0	11	0	0	0
12	3.9	3.9	12	3.9	3.9	3.9
13	3.9	3.9	13	3.9	3.9	3.9
14	3.9	3.9	14	3.9	3.9	3.9
15	0.1	0.1	15	0.1	0.1	0.1
16	13.2	13.2	16	13.2	13.2	13.2
IC3501						
1	2.6	2.6				
2	0	4.2				
3	0.3	1.4				
4	0	0.7				
5	0	0				
6	0	0.7				
7	0.2	1.4				
8	0	0				
9	0	0				
10	0.2	2.2				
11	0	0				
12	0	0				
13	0	0				
14	0.2	2.2				
15	---	---				
16	6.3	0				
17	6.3	0				
18	6.3	0				
19	---	---				
20	---	---				
21	---	---				
22	---	---				
23	---	---				
24	---	---				
25	11.9	0.5				
26	5.0	5.0				
27	0	0				
28	0	0				
29	0	0				
30	2.7	2.3				
31	5.1	0.1				
32	0.1	0.1				
33	0	0				
34	0.1	0.7				
35	12.0	12.0				
36	0.1	5.0				
IC4401						
1	0	2.6				
2	4.0	0				
3	0.6	0				
4	0	0				

MODE PIN NO.	REC	PLAY
IC4401		
1	0	2.6
2	4.0	0
3	0.6	0
4	0	0
5	0.6	0.7
6	4.0	0
7	1.0	1.0
8	---	---
9	2.6	2.6
10	5.1	5.1
11	0	0
12	0	0
13	3.9	3.9
14	3.9	3.9
15	0.1	0.1
16	13.0	13.0
TP3501	0	0
TP4402	4.0	0
TP4405	3.9	3.9
TP4406	2.6	2.6