

SONY

Video Products  
Service Bulletin

Sony Service Company Technical Services  
A Division of Sony Corporation of America  
Sony Drive Park Ridge, New Jersey 07656

Model: SLV-353UC/555UC/757UC

No.108

Subject: RKB Cam Gear Alignment Correction Date: February 12, 1990

Symptom:  
(\*\*)

Please correct paragraph 3-25 on page 19 of the VHS Adjustment Manual II to read as follows:

Solution: 3-25. RKB CAM GEAR (Fig. 3-31)

- 1) Remove the adjuster arm ass'y. (Refer to 3-22.)
  - 2) Remove washer 2 ①, then pull out the RKB cam gear ②.
- [Precautions on remounting] (EJECT MODE)
- When the limiter arm ③ is pushed in the direction of the arrow, the pin must fit into the notch on the RKB cam gear ②.
  - The ○ mark on rotary switch ④ must match up with the ◀ mark on the RKB cam gear ② as shown in Fig. A.
  - Apply 1/2 drop of lubricant to shaft ⑤.
  - Match up the holes ⑥ on the RKB cam gear ② and the mode slide plate.

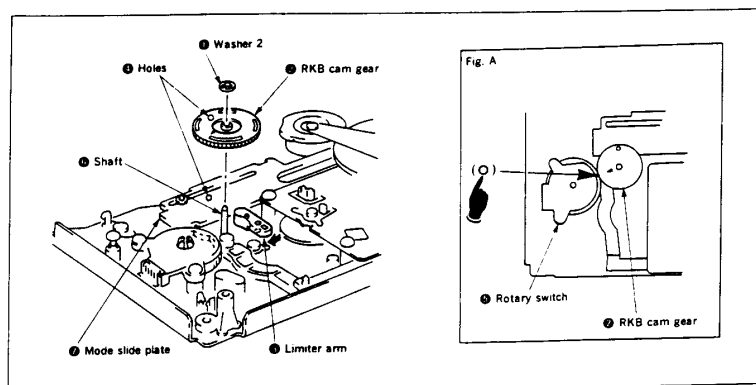


Fig. 3-31.

Reference:

PRINTED IN U.S.A.  
CSV-2290-2

CSV-2 VHS