

<div style="border: 3px double black; padding: 10px; display: inline-block;"> 1996 </div>	<b>TOSHIBA AMERICA CONSUMER PRODUCTS, INC.</b>		Date: MAR 96
	<div style="border: 2px solid black; padding: 5px; display: inline-block;"> <b>TECHNICAL BULLETIN</b> </div>		No. VCR9605
<b>Product: VCR</b>		<b>Countries affected: USA, CANADA, PANAMA</b>	

MODEL	VCR						
USA	M-250			M-444			
CANADA	M-250C	M-260C	M-430C	M-444C			
PANAMA	M-250L				M-450L	M-X70M	M-X70N

**NOTE:** The information listed below should only be used if you encounter the symptom(s) listed:

**Subject:**
Channel button.

**Ref.#** 13A-9508

**Symptom:**
In some rare cases, the channel buttons, located on the front of the VCR, may be inoperative or work with difficulty.

**Required part(s):**

Location	Part No.	Description
1001-3	BZ780572	Channel push button

**Corrective Action:**
If the above symptom occurs, replace the channel push button with the one listed above. New part will be marked with a 1 or 4 on the channel down button. (See fig. 1 below)

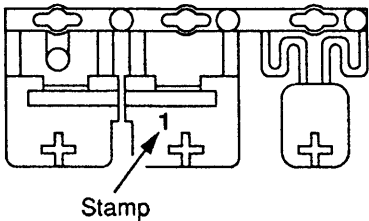


FIG. 1