

1996

TOSHIBA AMERICA CONSUMER PRODUCTS, INC.

Date: June 96

## TECHNICAL BULLETIN

No. VCR9610

Product: VCR

## MODELS

M261	M456	M461	M471	M656
M661	M261C	M461C	M471C	M656C
M661C	M462	M472	M662	M672

**NOTE:** The information in this bulletin should only be used if you encounter the symptom(s) listed.

**Subject:** When a person operating the remote control pushes the TV button to switch modes of operation they may also push the channel 2 button just below it at the same time. This automatically reprograms the remote, and it won't operate the TV. However, the remote still operates the VCR. **Ref.#** VC9605

**Symptom:** The remote won't operate the TV, but it operates the VCR.

**Part(s) required:** None

**Corrective Action:** If a Toshiba TV is being used, remove then replace the batteries to reset the remote. If the TV is a different brand, reprogram the remote for that TV.

**PRODUCT SAFETY PRECAUTIONS**

Product safety precautions are covered in the Toshiba service manual(s) pertaining to the model(s) covered in this bulletin. All safety precautions and checks shall be complied with before returning the equipment to the customer. Servicers who defeat safety features or fail to perform safety checks may be liable for any resulting damages and may expose themselves and others to possible injury.