


REVISION HISTORY				
ZONE	REV	DESCRIPTION	SIGNATURE	DATE
	A	RELEASE		8/17/93
	B	ADD POT BUSS + SCREWS		

NOTES

1. INSTALL HEATSINK L-BRACKET BEFORE STUFFING PCB
INSTALL COMPLETED HEATSINK ASSEMBLY BEFORE
SOLDERING
2. SCUFF THE TOP OF THE POTS BEFORE INSTALLING, SO
THAT THEY WILL ACCEPT SOLDER FOR THE
GROUND BUSS REMOVE INDEX TABS, IF ANY ARE PRESENT.

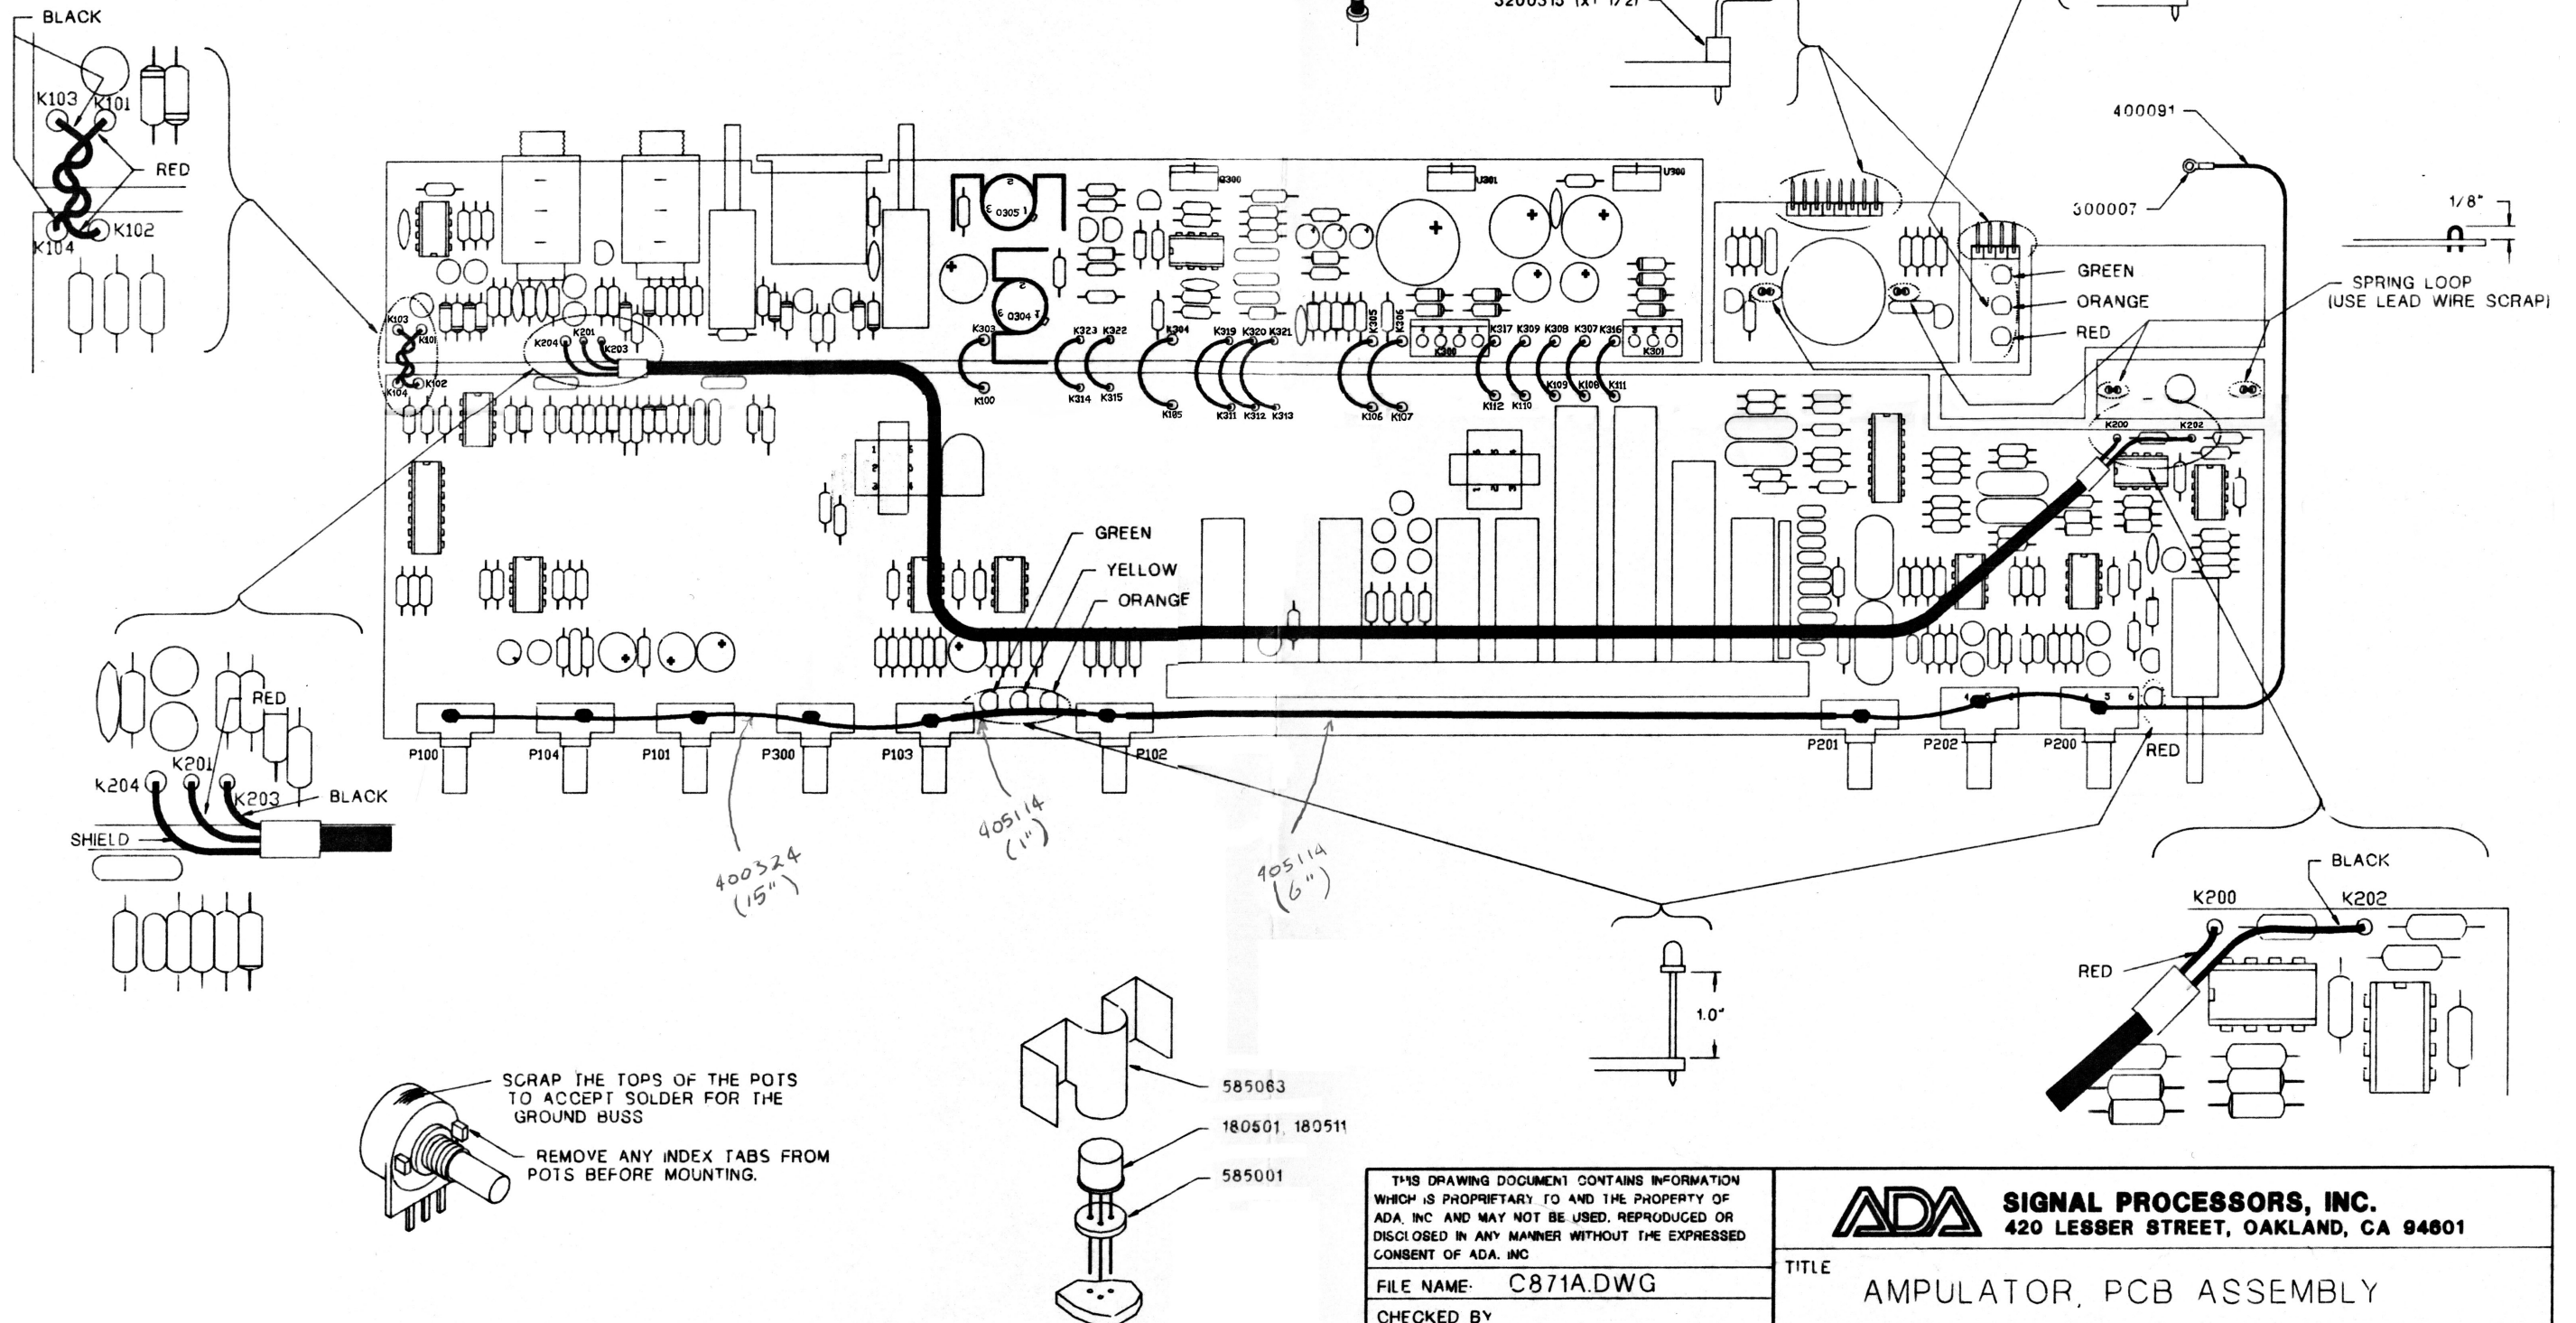

THIS DRAWING DOCUMENT CONTAINS INFORMATION WHICH IS PROPRIETARY TO AND THE PROPERTY OF ADA, INC. AND MAY NOT BE USED, REPRODUCED OR DISCLOSED IN ANY MANNER WITHOUT THE EXPRESSED CONSENT OF ADA, INC.

FILE NAME: C871A.DWG

CHECKED BY

DATE

APPROVED BY

DATE



SIGNAL PROCESSORS, INC.
420 LESSER STREET, OAKLAND, CA 94601

TITLE

AMPULATOR, PCB ASSEMBLY

DRAWN BY D WIRT

ENGR

© COPYRIGHT 1993

SIZE

C

DATE

8/17/93

SCALE

DRAWING NO

871

REV

BA

SHEET

1 OF 1



<http://www.adadepot.com>