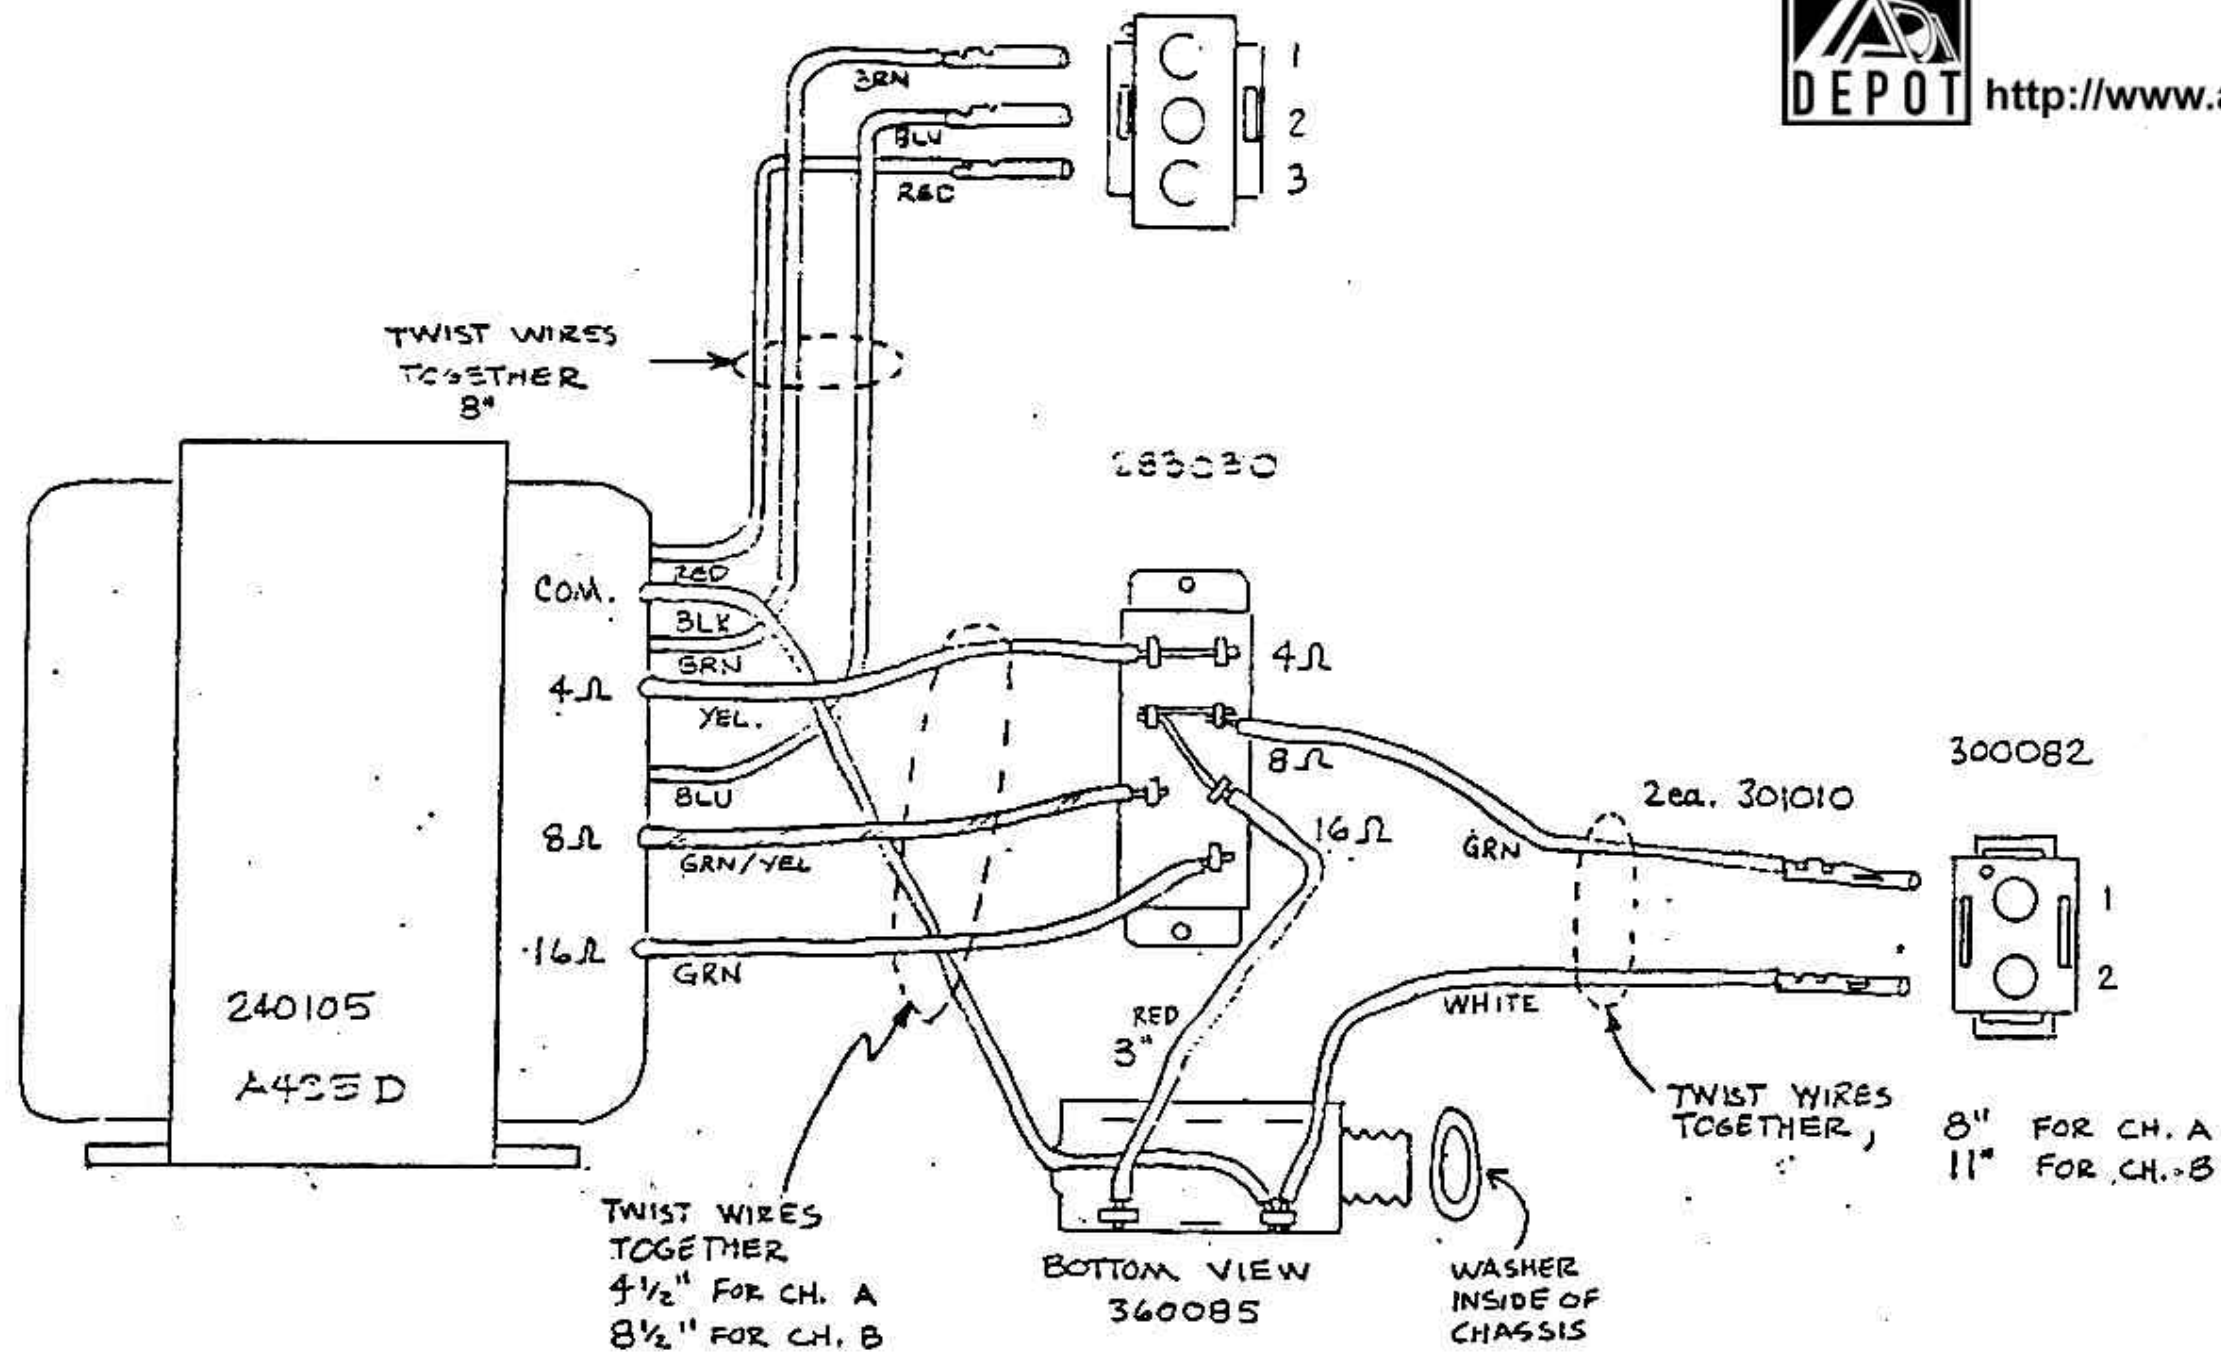


300083


<http://www.adadepot.com>


1. USE AMP TOOL NO. 603545-1 FOR CRIMPING ADA 301010 CONNECTORS.

2. USE J-1016 WIRE (18/16)

RED = 400252

GRN = 400255

WHT = 400259

3. NOTE WIRE LENGTH DIFFERENCES FOR CH. A & CH. B.

SUBASSEMBLY 780153,
HARNESS

SCALE: NONE

APPROVED BY:

DATE: 8-24-89

ADA