




A-Board TNP2AH071

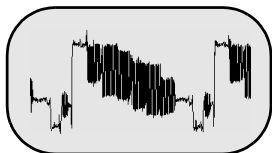


① 1.0 Vp-p
TNR001 (MAIN VIDEO)

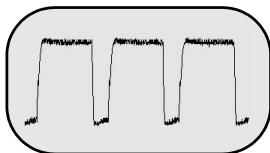


② 3.5 Vp-p
A8 PIN 1(H DAF)

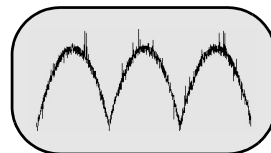


③ 0.86 Vp-p
A8 PIN 3 (V-DAF)

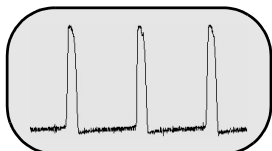


④ 3.3 Vp-p
A8 PIN 13 (FBP)

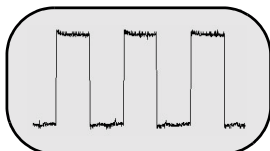


⑤ 12.9 Vp-p
A8 PIN 16 (H DRIVE)

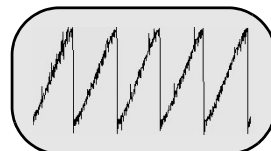


⑥ 1.58 Vp-p
A7 PIN 4 (V_DRIVE)

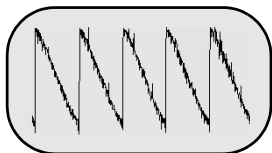

⑦ 2.08 Vp-p
A7 PIN 7 (VL)

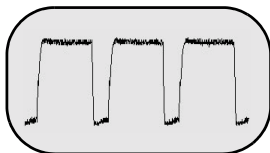


⑧ .224 Vp-p
A7 PIN 9

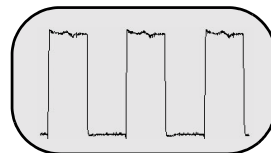


⑨ 12.4 Vp-p
A6 PIN 4 (B DRIVE)


L-Board TNP2AA232

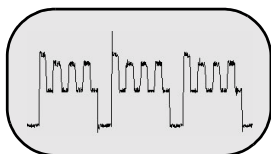

① 3.32 Vp-p
L1 PIN 2 (BLUE OUT)

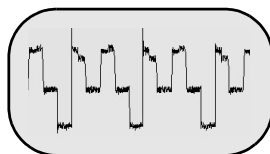

② 2.82 Vp-p
L1 PIN 4 (RED OUT)

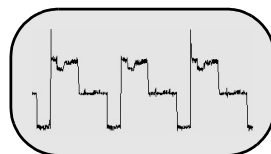

③ 2.76 Vp-p
L1 PIN 6 (GREEN OUT)